 
 
 


tv



PHILIPS





Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS product. So complete and return the Warranty Registration Card enclosed with your purchase at once, and take advantage of these important benefits.

Warranty Verification	Owner Confirmation	Model Registration
Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS warranty.	Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.	Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome-and thanks for investing in a PHILIPS product.

Sincerely,

Lawrence J. Blanford
President and Chief Executive Officer

P.S. Remember, to get the most from your PHILIPS product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!



Know these safety symbols



⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No., which is located on the rear of the cabinet. Retain this information for future reference.


Model No. _____
Serial No. _____




Visit our World Wide Web Site at <http://www.philips.com>

IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead or mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinets design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unsuspectingly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall Mounting** - The appliance should be mounted to a wall only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mats and supporting structure grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See Figure below.
21. **Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE (NEC)

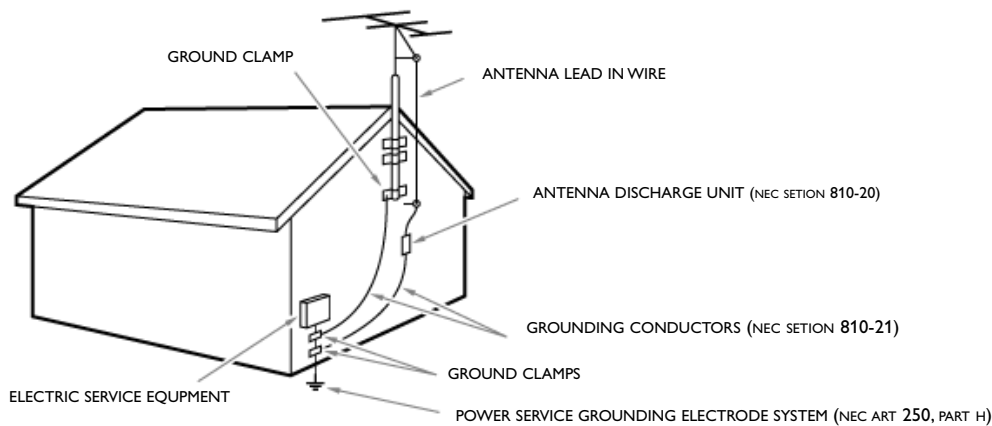

Note to the CATV system installer: this reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Contents

Installation

Preparation	2
Buttons on top of the TV	2
Use of the remote control	3-4
To use the menus	4
Select the menu language	5
Store TV channels	5
Select TV settings	6-7
Demo menu	8

Operation

TV menu	
Picture menu	8-9
Sound menu	10
Features menu	10
Closed Captions	10
Channels menu	11-13

Connect Accessory Devices

Connecting accessory devices	14-18
Selecting connected devices	18
Audio and Video equipment buttons	19
Record with your recorder	19
Setting the Remote Control to work accessory devices ...	20
Remote Control Direct Entry Codes for accessory devices	20-22
Before Calling Service	23-24
Tips	24
Service/Warranty Information	25-27

Help?

If this instruction manual does not give an answer or if 'Before Calling Service' do not solve your TV problem, you can call your Local Philips Customer or Service Centre. See the supplied World-wide guarantee booklet. Please, have the Model and Product number which you can find at the back of your television set or on the packaging, ready, before calling the Philips helpline. (800-531-0039)

Model: 42PF9936/37

Product No:



End of life directives

Philips is paying a lot of attention to producing environmentally-friendly in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of.

Please ensure you dispose of your old TV according to local regulations.


English

Français

Español

Preparation

Do not insert the power plug in a wall socket before all connections are made.

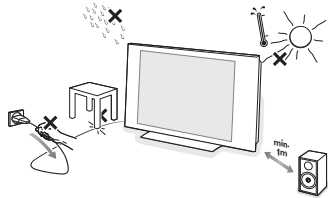


1 Wall mounting instructions

For the wall mounting instructions follow the illustrated steps printed on the separate template. Make sure that the wall mount is being fixed securely enough so that it meets safety standards. The weight of the TV (excl. packaging) is about 87 Lbs. How to mount the supplied stand, see the separate leaflet.

Note: not supplied stands are optional accessories. Consult your dealer.

2 Place or hang the TV wherever you want, but make sure that air can circulate freely through the ventilation slots. Do not install the TV in a confined space such as a book case or a similar unit.

 
To prevent any unsafe situations, no naked flame sources, such as lighted candles, should be placed on or in the vicinity. Avoid heat, direct sunlight and exposure to rain or water. The equipment shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.

3 Insert the aerial plug firmly into the aerial socket  at the bottom of the TV. For best picture quality use the suppressor-aerial cable supplied.


4 To connect your computer, see p. 17. To connect other accessory devices, see p. 14. In order to obtain the best result, please use only the supplied aerial cables between the TV and videorecorder, and between videorecorder and aerial socket.

5 Insert the power plug supplied into the mains at the bottom of the TV and in the wall socket. Refer to the rear of the TV set for the correct operation voltage. Consult your local dealer if your AC power supply is different. To prevent damaging the power (AC) cord which could cause a fire or electric shock, do not place the TV on the cord.

6 **Remote control:** Insert the 2 batteries supplied (Type R6-1,5V).

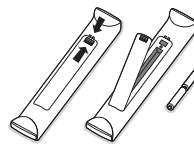


The batteries supplied do not contain the heavy metals mercury and cadmium. Please check on how to dispose of exhausted batteries according to local regulations.

7 **Turn the TV on:** Press the power button  at the right side of the TV.

A green LED and the screen light on.


The green LED blinks every time you press a button on the remote control. When you turn on your set for the first time, the menu language automatically appears on the screen. Alternately the explanation appears in different languages.

Buttons on top of the TV

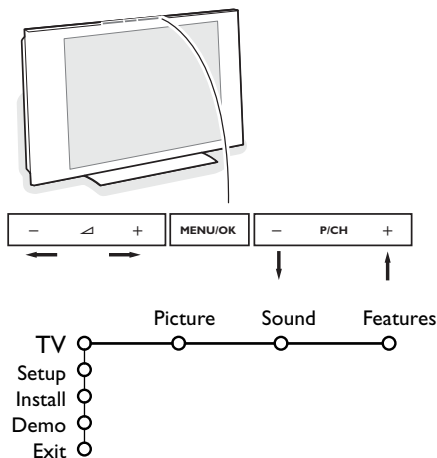


Should your remote be lost or broken you can still change some of the basic settings with the buttons on top of your TV.

Press:

- the  - or + button to adjust the volume;
- the -P/CH+ buttons to select the TV channels or sources.

The **MENU/OK** button can be used to summon the main menu without the remote control.

 Use:


- the  - and + buttons and the P/CH- and P/CH+ buttons to select menu items in the directions as shown;
- the **MENU/OK** button to confirm your selection.

Note:

*When activated via the **MENU/OK** button on top of the TV, only **Exit** lets you remove the menu. Navigate to **Exit** and press the **MENU/OK** button.*

Use of the remote control RC4305


 
Note: For most buttons pressing a button once will activate the function. Pressing a second time will de-activate it. When a button enables multiple options, a small list will be shown. Press repeatedly to select the next item in the list. The list will be removed automatically after 4 seconds or press **OK** to remove immediately.


 Press this button repeatedly to select **AV1, AV2, AV3, AV4, DVI** or **TV channels** when in TV mode, according to where you connected the accessory devices (p. 18).

CBL VCR DVD SAT AMP

Press the **Select** button repeatedly to select one of the system modes in which the remote control can be used. If no action is being undertaken within 2 seconds, the remote control returns to TV mode. After an action in the selected system mode the remote control will remain in this mode for 60 seconds and will then return to TV mode.

  Backlighting button

Press the **Select** button more than 2 seconds. The backlighting of the buttons , **CH**,  and the digit buttons stays on for 5 seconds after pressing the button.

 no function

OK Press this button to activate your choice or to confirm when in the menus.

Freeze


To freeze the picture. Dependent on the input signal, the function may not be possible.

Volume

Press + or - to adjust the volume.

0/9 Digit buttons

To select a TV channel. To select a TV channel. For a two digit program number, enter the second digit before the dash disappears. To switch immediately to a selected one digit TV channel, keep the digit button pressed a bit longer.

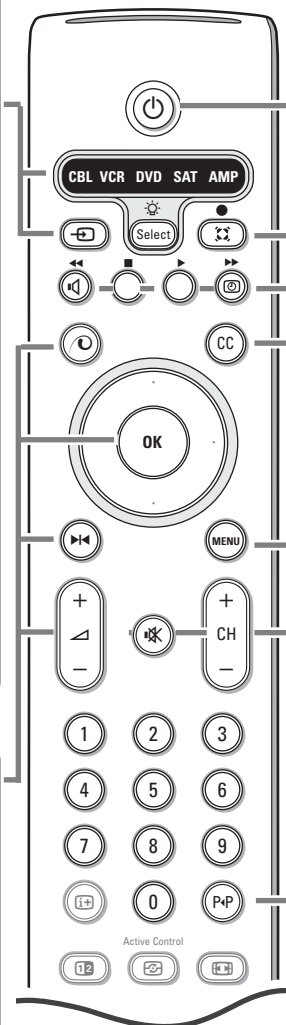

Power

Press to turn on/off the TV. The TV is never powered off completely unless it is physically unplugged.



Audio and Video equipment buttons See p. 19.

Time display

Sound mode Incredible surround

With stereo transmission, and when Incredible surround is selected, it seems as though the loudspeakers are spread further apart from one another.

Virtual Dolby surround

Optimal with Dolby surround signals. Enables you to experience the effect of Dolby surround Pro Logic, reproducing a rear sound effect. See Sound menu, 3D effect, p. 10.

Note: You can make the same selection in the Sound menu, Sound mode, p. 10.

Alternate audio

When you tune a channel where SAP (Second Audio Program) is available, you can toggle between **Main** and **SAP**. If not available, only **Main** can be selected.

CC Closed Caption

On/Off/On during mute see p. 10

MENU Main menu on/off see p. 8.

Mute

Interrupt the sound or restore it.

CH Channel selection

To browse through the TV channels or sources stored.

P/P Previous TV channel

Press to display the previously selected TV channel.



i+ **Display information**

Press to display (when available) information about the selected TV channel and program.

Menu/Remote control info

When a menu is on screen, press **i+** to display info on the selected menu item. While the menu info is displayed, press any button to display remote control info. The normal function of the button is not executed.

12 **Dual screen**

- 1 Press the **12** or **13** button.
Press the **12** button to show Teletext or Teletext Guide on the right half of the screen.
- 2 Move the puck to the blue ball in the left screen.
Press **+P-** to select another TV channel.
- 3 Press the **13** button to select a vertical squeezed or a non vertical squeezed picture size.
- 4 Press the **12** button to switch off Dual screen.

Active screen selection


When in dual screen picture, enter the desired page number with the **-P+** button, then press the **MENU** button, then select the left screen (with the blue ball at the top).

You can now select a compressed or full screen view of picture with the **13** button.

Active control see p. 9.


13 **Picture format**

Press this button to summon a list of available display formats for showing video images in the traditional 4:3 proportions. Press this button repeatedly or press the cursor up/down to select another picture format: Automatic, Super zoom, 4:3, Movie expand 14:9, Movie expand 16:9, 16:9 subtitle or Wide screen.

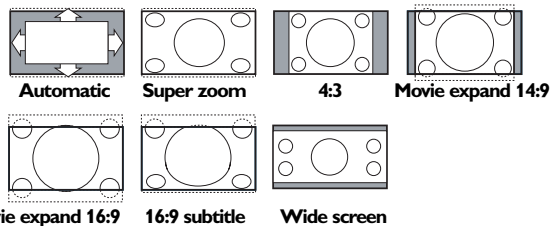

Automatic makes the picture fill the screen as much as possible. Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion. When in Movie expand 14:9, Movie expand 16:9 or Super zoom picture format, you can make subtitles visible with the cursor up/down.

To use the menus

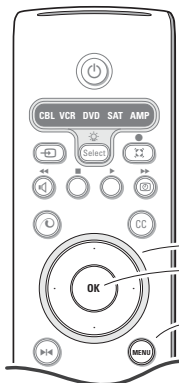

cursor to select adjustments
OK button to activate
return or switch main menu on/off

- 1 Press the **MENU** button on the remote control to summon the main menu. At any moment you can exit the menu by pressing the **MENU** button again.
- 2 Use the cursor in the up/down direction to select the **TV, Settings, Demo** or **Install** menu.
Note: Sometimes not all the menu items are visible on the screen (indicated by a cluster of blue balls). Press the cursor down to reveal all items.
- 3 Use the cursor in the left/right direction to select the menu item.
- 4 Use the cursor up/down again to select the control you want to select or to adjust.

Note: Items temporary not available or not relevant are displayed in a light grey color and cannot be selected.


Installation

Language Autoprogram

The installation menu contains the following items:


Install ○ — ○ — ○

Select the menu language

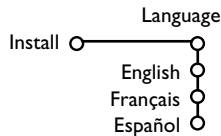

- ❶ Press the **MENU** button on the remote control.
- ❷ Use the cursor down to select **Install**.
- ❸ Use the cursor right to select **Language**. Follow the instructions on screen.
- ❹ Use the cursor up/down to select your preferred language and press the **OK** button to confirm your selection.
- ❺ Proceed with the **Install** menu.

Store TV channels

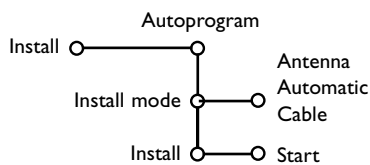

- ❶ Select **Autoprogram** in the Install menu.
- ❷ Press the cursor down to select **Install mode**.
- ❸ Press the cursor right.

*Note: It is recommended to keep the predefined **Automatic** way of autoprogramming. In case of difficulties in autoprogramming with the automatic method, choose for **Antenna** or **Cable** whether antenna or cable signals are present.*

When **Automatic** is selected, the TV will automatically detect whether or not cable signal input is present.

When **Antenna** is selected, the TV will detect antenna signals and will search for all antenna TV channels available in your local area.

When **Cable** is selected, the TV will detect cable signals and will search for all cable TV channels available in your local area.

- ❹ Press the cursor down to select **Install**.

Note: All channels must be unlocked in order to autoprogram. If requested, enter your PIN code to unlock all channels. (See Channels in the TV menu, p. 11.)

- ❺ Press the cursor right.

- ❻ The message **Searching** appears and the progress of autoprogramming is displayed.

When Autoprogramming is complete, the puck navigates to **Stop**. A message appears confirming the completion together with the total number of channels found.


Note: when you navigate to Stop before autoprogramming is complete, you are given the option to continue.

Available channels:

- with cable: max. from 1 to 125
- off air: max. from 2 to 69

Note: In case a particular channel is too weak for the autoprogramming to identify, after installation is complete, you should tune to that channel by using the digit buttons on the remote control. If the channel is not acquired, a message will appear that the channel is not available.

Settings menu

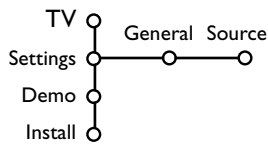


The **General** menu allows you to change settings that will typically be accessed only occasionally.

The **Source** menu allows you to select a source.

General

This menu allows you to change various settings that are presumably adjusted less frequently than most other settings.

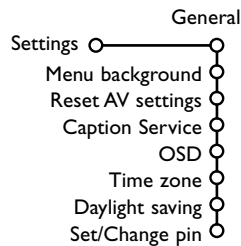

Menu background

- ❶ Select **Menu Background** with the cursor down and press the cursor right.
- ❸ Select **On** or **Off** to turn the menu background on or off.

Reset AV settings

This function allows you to reset most of the picture and sound settings to their predefined factory states.

- ❶ Select **Reset AV settings** with the cursor down.
- ❷ Press **OK** to erase settings and reset them to their default values.

Caption Service

Closed Captioning allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen 'text boxes' to show dialogue and conversations while the TV program is in progress. Captions will appear on the screen during captioned broadcasts.

Note: The captions do not always use correct spelling and grammar. Not all TV programs and product commercials are made for broadcast with Closed Caption information included. Refer to your area's TV program listings for the TV channels and times of Closed Caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

- ❶ Select **Caption service** with the cursor down.

- ❷ Press the cursor right.

- ❸ Select the desired **Caption Service**:

- **CC 1, 2, 3 or 4**

Dialogue (and descriptions) for the action on the captioned TV program shows on screen. Usually CC 1 is the most used. CC 2 may be used for alternate languages if they are being transmitted.

- **T 1, 2, 3 or 4**

Often used for channel guide, schedules, bulletin board information for Closed Caption programs, news, weather informations or stock market reports.

Not all Caption Services are necessarily being used by a TV channel during the transmission of a Closed Caption program.

- ❹ See Closed Captions in the TV, Features menu, see p. 10, to turn the **Caption service On** or **Off**.

Note: This television provides display of television closed captioning conforming with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.

OSD (On Screen Display)

- ❶ Select **OSD** with the cursor down.

- ❷ Press the cursor right to select **Normal** or **Minimum**.

Normal to activate the continuous display of the channel number and extended display of TV channel and channel information on screen.

Minimum to activate the display of reduced channel information.

See Use of the Remote Control, p. 4, Display information.

Note: When Closed Captions is switched on, see Features, p. 10, continuous display of the channel number is not possible

Time zone

This function allows you to select your local time zone. Broadcasted time information will correct the clock display for your local time.

- ❶ Select **Time zone** with the cursor down.
- ❷ Press the cursor right to select your local time zone.

Daylight saving

Daylight saving time is automatically set by specially broadcasted signals. This menu item allows you to disable the automatic setting of daylight saving time. This is useful if you live in an area or state where daylight saving is not applied, but you receive channels from other areas where daylight saving signals are broadcasted.

- ❶ Select **Daylight saving** with the cursor down.
- ❷ Press the cursor right to select **Automatic** for automatic clock correction for daylight saving time, based on specially broadcasted signals.
- ❸ Select **Off** to disable automatic clock correction based on the specially broadcasted signals.


Set/Change PIN

 
 
- ❶ Select **Set** or **Change PIN** with the cursor down.
- ❷ If no PIN-code exists yet, the menu item is set to **Set PIN**. Follow the instructions on screen. If a PIN-code has previously been entered, the menu item is set to **Change PIN**. Follow the instructions on screen. All number combinations from 0000 to 9999 are valid numbers.
- ❸ The General menu reappears with a message confirming that the PIN has been created.

Important: You have forgotten your PIN !

- ❶ Select **Change PIN** in the General menu and press **OK**.
- ❷ Press the cursor right to enter the overriding PIN-code 0-7-1-1.
- ❸ Press the cursor again and enter a new personal 4-digit PIN code. The previous code is erased and the new PIN-code is stored.

Source

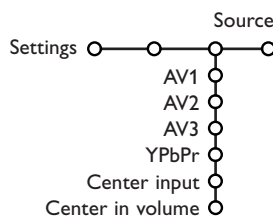


- ❶ Select **Source** with the cursor right.
- ❷ Press the cursor down to select one of the external AV inputs.
- ❸ Press the cursor right to enter the list of types of devices attached to the selected input.
- ❹ Select the accessory device with the cursor up/down. Once you have named the source, e.g. VCR, this source will automatically be selected when your remote control is in VCR mode, see p. 3, and when you press the  button on the remote control.
- ❺ Press the **MENU** button on the remote control to turn off all menus on screen.
- ❻ Press the  button on the remote control. The Source Select menu appears in which you may select a source or peripheral connected to be displayed on screen.

Center input - Center in volume

When you have connected a multichannel surround receiver to the TV, the loudspeakers of the monitor can act as center speaker, making a separate center speaker unnecessary; Select **Center input On**.

When having selected **On** you can adjust the Center in volume with the cursor left/right to correct volume level differences of the external audio receiver and speakers.

Demo

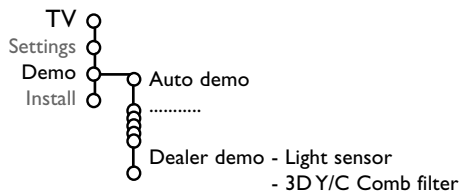

- ❶ Select **Demo** in the Main menu with the cursor down.
- ❷ Select **Auto demo** or one of the features with the cursor right and press the **OK** button on the remote control.

If **Auto demo** has been selected the demo will automatically present all the features sequentially in a loop. Press one of the cursor buttons to stop the Auto demo.

If one of the features has been selected, this particular feature demo will run one time only, until activated again, and the Demo menu will reappear.

Light sensor and 3D Y/C Comb filter On or Off

Select **Light sensor** and **3D Y/C Comb filter On** or **Off** to really see the difference in picture quality.

In Dealer Demo mode it is possible to change channels with - **CH +** and to adjust the volume.

Note: the Dealer Demo is not part of the automatic sequence and can only be activated separately.


TV menu

Press the **MENU** button on the remote control to summon the main menu.

Note: Dependent on the input signal, one or more menu items may not be selectable.

Press the **i+** button on the remote control to get information about the selected menu item.

Picture menu

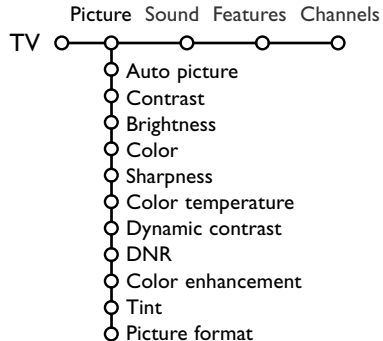

- ❶ Press the cursor right to select **Picture**.
- ❷ Select the menu items in the Picture menu with the cursor up/down.
- ❸ Adjust the settings with the cursor left/right or enter the list of submenu items with the cursor right. Select a submenu item with the cursor up/down.


Note: To remove the menu background before adjusting the picture settings, see Select TV setup, General, p. 6.

Auto picture

Select **Auto picture** to display a list of predefined picture settings, each corresponding with specific factory settings. **Personal** refers to the personal preference settings of picture in the picture menu.

Note:

Dynamic Contrast, DNR, Color enhancement, Tint and Picture format are not available for HD sources.

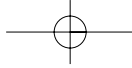

Dynamic contrast

Automatically makes the contrast in the darker and the brighter picture areas more noticeable as the image on the screen changes.

Normally, select **Medium**. It may be preferred to select **Minimum**, **Maximum** or **Off**.

- ❶ Press the cursor right to enter the list.
- ❷ Select one of the settings with the cursor up/down.
- ❸ Press the cursor left to return to the picture menu.

DNR (Digital Noise Reduction)

Automatically filters out and reduces the image noise and improves picture quality when receiving weak video signals.

- ❶ Press the cursor right to enter the list.
- ❷ Select **Off**, **Minimum**, **Medium** or **Maximum** according to the image noise.
- ❸ Press the cursor left to return to the picture menu.

Color enhancement


When activated, this feature automatically controls green enhancement and blue stretch. It makes the colors more vivid.

- ❶ Press the cursor right.
- ❷ Select **On** or **Off** in order to activate/de-activate Color enhancement with the cursor right.

Tint


Allows you to select the color mix (hue) of the picture.


Picture format

 
This menu item performs the same as the  button on the Remote Control. See Use of the Remote Control, p. 4.

Active Control


The TV continuously measures and corrects all incoming signals in order to provide the best picture possible.

- ❶ Press the  button on the remote control.
- ❷ The Active Control menu appears.
- ❸ Press the cursor up/down to select the Active Control values **Off**, **Minimum**, **Medium** (recommended) or **Maximum**.
The picture settings are being optimized continuously and automatically which is displayed by bars. The menu items can not be selected.
- ❹ Press the cursor right to select **Auto Picture**.
- ❺ Press the cursor up/down to select one of the predefined picture settings.
- ❻ Press the cursor right to select **Active Display**.

- ❼ Press the cursor up/down to select **Show bars**, one of the Dual screen demos or **Off**.
When you select Dynamic contrast or Digital Noise Reduction, the TV screen is divided into two parts: in the left part the selected picture quality setting is switched off; in the right part it is switched on.
Note: Dependent on the input signal, one or more Dual screen demos may not be selectable.
- ❽ Press the  button again to switch off the Active Control menu.



Sound

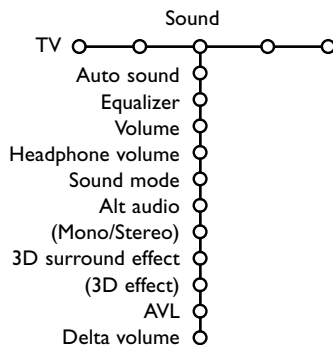

- ❶ Press the cursor right to select **Sound**.
- ❷ Select the menu items in the Sound menu with the cursor up/down and adjust the settings with the cursor left/right. Remember, control settings are at normal mid-range levels when the bar scale is centered.

Auto sound

Select Auto sound to display a list of predefined sound settings, each corresponding with specific factory settings of Treble and Bass.


Press the cursor right to enter the list.

Press the cursor up/down to select a predefined sound setting.

Personal refers to the personal preference settings of sound in the Sound menu.

Note: the moment you are in a predefined Auto sound setting and you modify a setting in the Sound menu, all values of the menu will overwrite the previously made personal setting.

Features menu

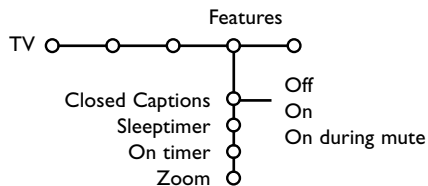

- ❶ Press the cursor right to select **Features**.
- ❷ Select the menu items with the cursor up/down and adjust the settings with the cursor left/right.

Use the on-screen Menu-Info  for more information about the menu items.

Closed Captions

See also Caption Service, Settings menu, General, p. 6.

- ❶ Select **Closed Captions** with the cursor down.
- ❷ Press the cursor right.
- ❸ Select **On**, **Off** or **On during mute**

When **On** is selected, the TV will display the currently display Caption Service, assuming that the service is available in the broadcast.

When **Off** is selected, the TV will not display Closed Captions information;

When **On during Mute** is selected, the TV will display the currently selected Caption Service when the mute function is active.

When the mute function is not active, the TV will not display Closed Captions informations.

Sleeptimer

With the Sleeptimer function you can set a time period after which the TV will turn itself off.

- ❶ Select **Sleeptimer** with the cursor down.

- ❷ Press the cursor right to set the time
The cursor runs from 0 up to 180 mins (in 5-min increments). When set to 0, the sleeptimer is turned off.

One minute before the sleeptimer expires, a message appears that the TV will turn off in 60 seconds or you may cancel the sleeptimer by pressing the **OK** button. You can always turn off your TV earlier or change the set time.

On timer

Note: The On timer function is only available if time information is available via the local PBS channel.


- 1 Select **On timer** with the cursor down.
- 2 Press the cursor right and select **On** or **Off** to set the On timer On or Off.
- 3 When you have selected **On** press the cursor right.
- 4 Select the TV channel or external source you want the On timer to activate with the cursor up/down.
- 5 Press the cursor right to select the day you would like the On timer to become active. Select **Daily** to set the On timer for daily operation on the selected TV channel or source.
- 6 Press the cursor right to select **AM** or **PM**.
- 7 Press the cursor right to enter the time with the digit buttons or with the cursor up/down, left/right.
- 8 Press the **OK** button to confirm.
- 9 Press the **MENU** button to turn off all menus on screen.

Zoom


Note: Dependent on the input signal, Zoom may not be selectable.

- 1 Select **Zoom** with the cursor down and press the **OK** button.
- 2 Press the **OK** button to select one of the zoom magnifications (x1, x4, x9, x16).
- 3 Additionally you can shift the selected zoom window over the screen with the cursor buttons up/down, left/right.
- 4 Press the **MENU** button to turn off the zoom function.

Channels menu

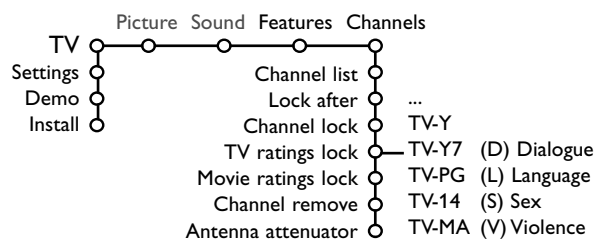

- 1 Press the cursor right to select **Channels**.
- 2 Select the menu items with the cursor up/down and adjust the settings with the cursor left/right.

Use the on-screen **Menu-Info**  for more information about the menu items.

TV Ratings Lock

Your TV is equipped with a V-chip. This allows you to control access to individual programs based on their movie and TV ratings. All settings apply to all AV inputs, except AV3 and YPbPr. The program content advisory data are sent by the broadcaster or program provider.

- 1 Select **TV ratings lock** with the cursor down. A list appears, showing the age-based TV ratings and a corresponding content-based ratings list.
- 2 Press the cursor right to enter the list.
- 3 Select an age-based TV rating with the cursor up/down, and enter, if present, the list with content-based ratings with the cursor right, and select one content-based rating.
- 4 Press **OK** to activate/de-activate the selected rating. You are asked to enter your PIN. (See Set/Change PIN, p. 7). If the code is correct, the TV ratings lock menu reappears.
- 5 Select another content-based rating if you like and press **OK** again. You need only enter your PIN-code once while the menu is active. You can lock/unlock any number of ratings on the list without re-entering your code.

Each ratings item has a box-graphic in front of it to indicate whether or not programs carrying that rating are currently locked:

- a yellow-colored box: all items in the contents-based list are locked as well;
- a grey-colored box: the item is unselected;
- a half grey, half yellow-colored box: some content-based ratings are selected/unselected.

When **All** has been selected, all items in the age-based and in the contents-based lists are locked. If, while **All** is selected, any other item, either an age-based or content-based item, is unselected, then **All** is automatically unselected.

None is the selection for items that either have no rating information or have a rating of None. Both will be locked.

When an item on the age-based list is selected, all items below that item of the same group are locked as well.

When you select a content-based rating, all identical content-based ratings in the younger age-based categories are also selected.

Age-based Rating	Content-based Rating
All	none
None	none
TV-Y	none
TV-Y7	(FV) Fantasy Violence
TV-G	none
TV-PG	(D) Dialog (L) Language (S) Sex (V) Violence
TV-14	(D) Dialog (L) Language (S) Sex (V) Violence
TV-MA	(L) Language (S) Sex (V) Violence

TV-Y appropriate for children of all ages with themes and elements suitable for children aged 2-6

TV-Y7 programs designed for children age 7 and older

TV-Y7-FV programs include fantasy violence more intense than other programs in the TV-Y7 category

TV-G programs suitable for all ages. These programs contain little or no violence, no strong language and little or no sexual dialogue or situations


TV-PG programs contain elements that some parents may find unsuitable for younger children and which may need parental guidance.

The program may contain moderate violence, sexual dialogue and/or situations and some strong language.

TV-14 programs contain elements that may not be suitable for children under 14 years of age. These programs include one or more of the following: intense violence, intense sexual situations, suggestive dialogue and strong language.

TV-MA programs are designed to be viewed by adults and may be unsuitable for children under the age of 17. These programs may contain graphic violence, explicit sexual activity and/or crude or indecent language.

Movie Ratings Lock

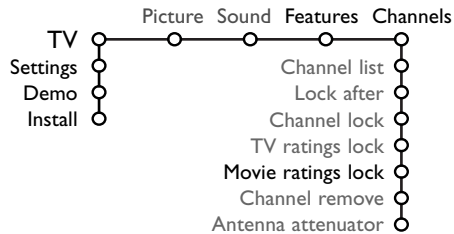

This function allows you to control access to individual movies based on their MPAA ratings (Motion Picture Association of America).

- ❶ Select **Movie ratings** lock with the cursor down. A list appears, showing all valid MPAA content ratings.
- ❷ Press the cursor right to enter the list.
- ❸ Select a movie rating with the cursor up/down.
- ❹ Press **OK** to activate/de-activate the selected rating.
You are asked to enter your code. (See Set/Change PIN, p. 7.) If the code is correct, the Movie ratings lock menu reappears.

Each rating item has a box-graphic in front of it to indicate whether or not programs carrying that rating are currently locked:

- a yellow-colored box: movies with this rating are locked;
- a blue-colored box: movies with this rating are unlocked.

When **All** has been selected, all items on the movie ratings list become selected. (All movies are locked.)


If, while **All** is selected, any other item is unselected, then **All** is automatically unselected.

When **NR** has been selected, no other item is selected.

When any other item has been selected, all ratings below are selected as well, thus all movies with those ratings will be locked.

- NR** not rated
- G** movies with a mild content, suitable for all ages
- PG** movies for which parental guidance is recommended.
They may contain a few racy or violent scenes or maybe some bad language
- PG-13** movies for which parental guidance may be recommended if under age 13
- R** restricted. The movies usually contain offensive sex or bad language and may be unsuitable for children under the age of 17. Parental guidance or permission needed.
- NC-17** even with parental permission, forbidden under age 17.
More offensive sex, violence or bad language.
- X** movies which generally focus on sex, violence and/or bad language. Also known as pornography.

Channel remove

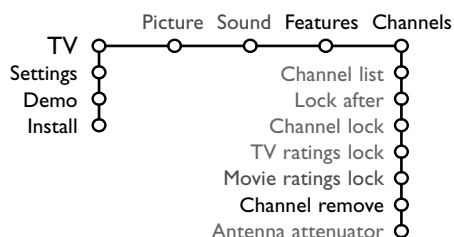

This feature provides the ability to remove a channel number from the channel list.

- ❶ Select **Channel remove** with the cursor down.
- ❷ Press the cursor right to enter a list with all stored channel numbers.
- ❸ Select the channel you want to remove with the cursor down.
- ❹ Press **OK**.
- ❺ Repeat to remove other channels.


Connect Accessory Devices

There is a wide range of audio and video devices that can be connected to your TV. The following connection diagrams show you how to connect them to the TV.

AV1 IN can handle CVBS; **AV2 IN** CVBS and Y/C; **AV3 IN** CVBS and Y/C; and **AV4 IN** YPbPr 480p, YPbPr 1080i.

Recorder (VCR-DVD+RW)

Note: Do not place your recorder too close to the screen as some recorders may be susceptible to signals from the display. Keep a minimum distance of 20" from the screen.

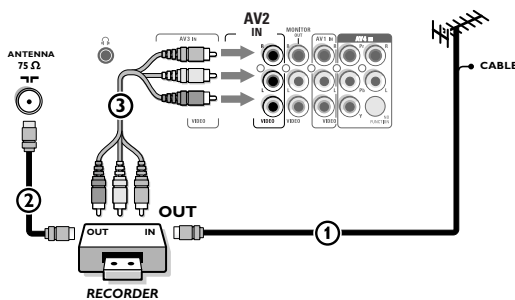


- 1 Connect the RF Antenna or Cable TV cable (also possible via an optional two-way signal splitter and/or Cable TV converter box) ① to the **RF IN** socket of your recorder.
- 2 Connect another RF cable ② from the output **OUT** of your recorder to the TV's input 75 Ω jack.
- 3 Better playback quality can be obtained if you also connect the Video, Audio Left and Right (only for stereo devices) AV cables ③ to the **VIDEO, AUDIO L** and **R** input jacks of **AV2 IN**.

If your recorder has an S-VHS video jack:

For improved picture quality, connect an S-video cable with the **S-VIDEO** input instead of connecting the recorder to the **VIDEO** jack of **AV2 IN**.

S-Video does not provide audio, so audio cables must still be connected to provide sound.

Recorder and other A/V devices

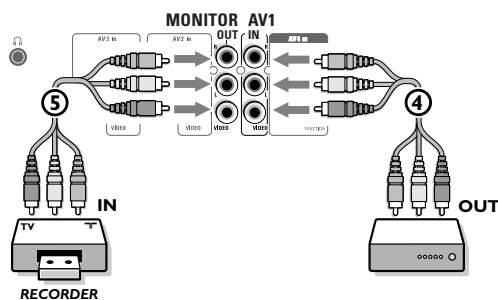

Recorder


- 1 Connect your recorder as described above ③.
- 2 The **MONITOR OUT** connectors can be used for daisy chaining or to record programs from your TV ⑤. See Record with your recorder, p. 19.

Other AV devices

- 3 Connect the Video, Audio left and Audio right (only for stereo devices) cables to the **VIDEO, AUDIO L** and **R** input jacks of **AV1** ④.


Note: in case of mono equipment, only the left loudspeaker reproduces sound. Use a mono to stereo adapter (not supplied) for sound reproduction via all internal loudspeakers.

Recorder and Cable Box with RDF output

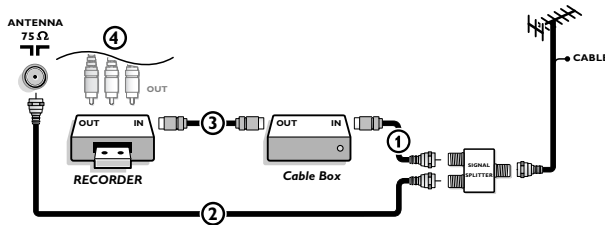

- ❶ Use an optional signal splitter.
- ❷ Connect one of the cable TV signal splitter outputs ❶ to the cable box's **IN** jack.
- ❸ Connect the other cable TV signal splitter output ❷ to the 75 Ω plug on the back of the TV.
- ❹ Connect the cable box's **OUT** jack ❸ to the recorder's **RF IN** socket.
- ❺ Connect the Video, Audio Left and Right (only for stereo sound) AV cables ❹ to the **VIDEO**, **AUDIO L** and **R** input **AV2 IN** jacks on the TV.

Satellite Receiver / Cable Box with AV outputs

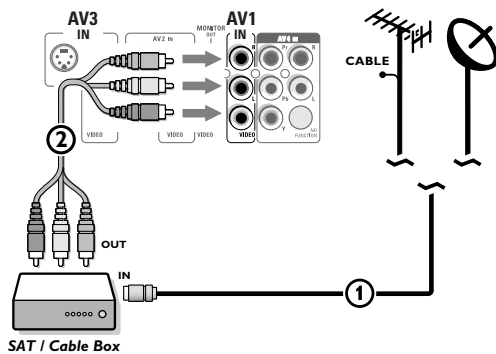


- ❶ Connect the satellite antenna cable or the Cable TV cable ❶ to the satellite receiver's or cable box's **IN** jack.
- ❷ To hear stereo sound on your TV connect the Video, Audio left and right AV cables ❷ to the **VIDEO**, **L AUDIO** and **R AUDIO** input jacks of **AV1 IN** or **AV3 IN**.

If your satellite receiver or cable box has an S-Video jack:

For improved picture quality, connect an S-Video cable to the **S-VIDEO** input of **AV3 IN** instead of connecting the satellite receiver or cable box to the **VIDEO** jack.


Connect the audio cables to the device's **AUDIO L** and **R** jacks and to the **L AUDIO** and **R AUDIO** **AV3** jacks on the TV.

Recorder and Satellite Receiver / Cable Box with AV outputs

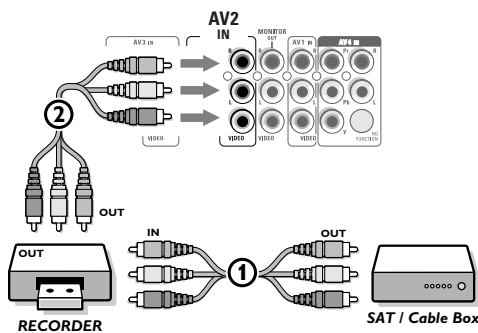

- ❶ Connect your satellite receiver or cable box as described above.
- ❷ Connect your recorder as described on the previous page.
- ❸ Connect the AV cables ❶ to the satellite receiver's or cable box's **AV OUT** jacks and to the recorder's **AV IN** jacks.
- ❹ Connect the recorder's **AV OUT** jacks ❷ to the TV's **AV2 IN** jacks.

DVD Player or other accessory digital source devices

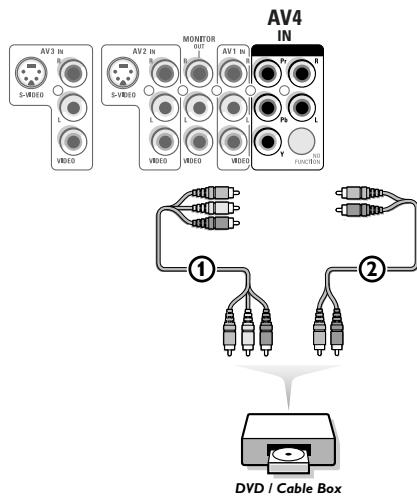

Devices with AV connectors only

- ① Connect the video cables to the device's **AV OUT** jacks and to the TV's **AV1, AV2** or **AV3 IN** jacks.
- ② Connect the audio cables to the device's **AUDIO L** and **R** jacks and to the **L AUDIO** and **R AUDIO AV1, AV2** or **AV3** jacks on the TV. (According to where you connected the video cables, to **AV1, AV2** or **AV3**.)

Devices with an S-Video connector

- ① Connect an S-Video cable to the **AV2** or **AV3 S-VIDEO** input.
Note: When using the S-VIDEO connector do not connect any device to the AV2 or AV3 VIDEO input.
- ② Connect the audio cables to the device's **AUDIO L** and **R** jacks and to the **L AUDIO** and **R AUDIO AV2** or **AV3** jacks on the TV. (According to where you connected the **S-VIDEO** cable, to **AV2** or **AV3**.)

Devices with Component Video Output Connectors (DVD, Set Top Box,...)

- ① Connect the cables of your **YPbPr** equipment ① to the **YPbPr** input sockets of **AV4 IN** on the TV.
- ② Connect the Audio left and right (only for stereo devices) cables ② to the **AUDIO L** and **R** input of **AV4**.

Devices with Progressive scan output (e.a. a digital Set Top box, a video game console or a Progressive scan DVD player (480p or 1080i))


Connect the device with 2Fh YPbPr output to the **YPbPr** jacks of **AV4** and to the **L** and **R AUDIO** jacks of **AV4**.

Notes:

- The labels for the component video sockets may differ depending on the DVD player. Although the abbreviations may vary, the letters B and R stand for the blue and red component signals, respectively, and Y indicates the luminance signal. Refer to the DVD player's instructions for use for definitions and connection details.
- This television is designed to accept high definition signal standards 1080i and 480p as specified by the Electronic Industries Association standard EIA770.3. Digital devices from different manufacturers have the possibility of differing output standards which may cause difficulties for the television to properly display.

Warning: in case you notice scrolling images, wrong colors or no color, no picture, or even combinations of these on your screen, check if the connections are done in the correct way or move your digital device further away from your TV.

DVI connector (AV5)

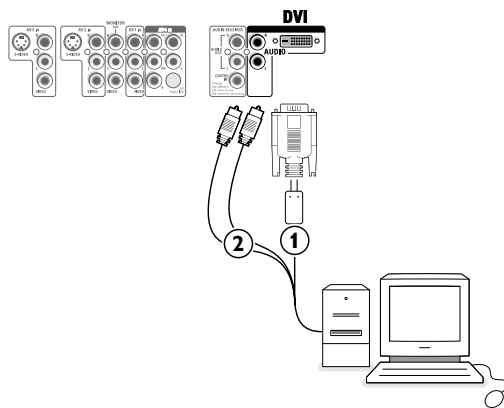

DVI is a specific digital input allowing encrypted transmission of uncompressed HD content. DVI includes HDCP (high-bandwidth digital content protection), which is supported by Hollywood, satellite providers, and most of the consumer electronics industry. DVI is gaining momentum and quickly becoming an industry standard for the consumers to view high-definition material while keeping content protected.

The **DVI IN** connector allows

- the following TV and monitor display modes:

EDTV 640/720 x 480p
720 x 576p
HDTV 1920 x1080i
VGA 640 x 480 60 Hz
SVGA 800 x 600 60 Hz

- uncompressed HD content
- encrypted or non encrypted signals.


Note: Only Single Digital Link DVI is supported.

- ① Connect the digital DVI output of your HD device (e.g. PC, DVD player, Set Top Box..) to the **DVI IN** connector of your TV.
- ② Connect the audio cable ② of your HD device (if audio is present) to the **AUDIO** inputs of your HD device and to the **AUDIO R** (right) and **L** (left) inputs next to the **DVI IN** connector.

Notes:

- Proper working is only guaranteed with DVI compliant consumer products.
- Digital devices from different manufacturers have the possibility of differing output standards which may cause difficulties for the television to properly display;
- If the set is cold, there may be a small "flicker" when the set is turned on. this is normal, there is nothing wrong with the set.

Multi channel Surround receiver

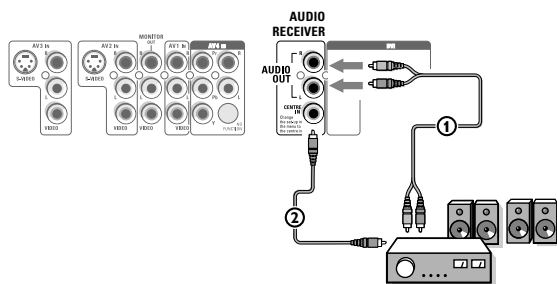

- ① Connect the audio cable to the multi channel Surround receiver and to **AUDIO OUT L** and **R** above the **CENTER IN** connector of your TV ①.


Note: turn off the TV and your surround receiver before connecting them. Set the Surround receiver's volume to minimum.



- ② If you want the loudspeakers of your monitor to act as center speaker, also connect an audiocable to the multi channel Surround receiver and to the **CENTER IN** of your TV ②.
- ③ Select **Center Input On** in the Source menu. See p. 7.

The loudspeakers of the TV will now only produce center sound, the loudspeakers connected to the audio receiver will produce Surround Sound. The volume has to be controlled via the multi channel Surround receiver.


Note: No sound will be heard when a TV channel or external source is blocked via the Channel Lock menu (see TV, Channels menu, p. 11).

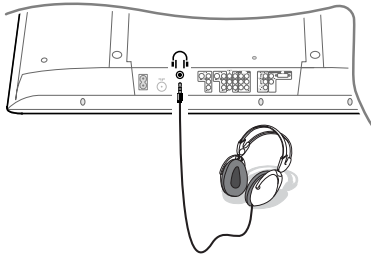
Headphone



- ❶ Insert the plug into the headphone socket  as shown.
- ❷ Press  on the remote control to switch off the internal loudspeakers of the TV.
The headphone impedance must be between 8 and 4000 Ohm. The headphone socket has a 3.5 mm jack.
In the Sound menu select **Headphone volume** to adjust the headphone volume.

 To select connected devices

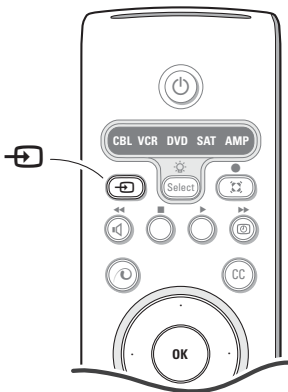

- ❶ Press the  button repeatedly or select **SOURCE** in the Settings menu (see p. 7) to select **AV1, AV2, AV3, AV4, DVI** or **TV channels**, according to where you connected your devices.
- ❷ Press the cursor up/down.
- ❸ Press **OK**.

Remark: Most equipment (decoder, video recorder) carries out the switching itself. This is however never the case with a computer connected to the DVI input.

If you want to change to TV channels?

Enter the channel number of the TV channel which you want to watch with the digit buttons.

Audio- and video equipment buttons



Most of the audio and video equipment from our range of products can be operated with the remote control of your TV.

Press one of the buttons after you pressed the **Select** button repeatedly according to the equipment you want to operate with this remote control. See Use of the remote control, p. 3.

- | | | | |
|--------|--|--------|--|
| ⏻ | to switch to standby (VCR) | 0 to 9 | digit entry, |
| ⏸ | for pause (DVD, CD) | P/P | tape index (VCR),
select a DVD chapter,
select a frequency (AMP) |
| ● | for record, | ⏻ | VCR timer |
| ⏮ | for rewind (VCR, CD);
search down (DVD, AMP) | ⏮ | surround on/off (AMP, CD) |
| ■ | for stop, | ⏮ | cursor up/down
to select the next or the
previous disc (CD) |
| ▶ | for play, | ⏮ | cursor left/right
to select the previous or
following track (CD) |
| ⏭ | for fast forward (VCR, CD);
search up (DVD/AMP) | | |
| i+ | display information | | |
| MENU | to switch the menu on or
off | | |
| - CH + | for chapter, channel, track
selection | | |

Notes:

- If no action is being undertaken within 60 seconds, the remote control returns to TV mode.
- After an action in the selected system mode, the remote control will remain in this mode for 60 seconds and will then return to TV mode or press the **Select** button to return to TV mode immediately.

Record with your recorder

To record S-VHS quality, connect an S-VHS peripheral directly to the recorder.

Record a TV program

You can record a TV program using your recorders tuner without affecting your TV.

- 1 Select the channel number on your recorder.
- 2 Set your recorder to record.
See the handbook for your recorder.

Switching channel numbers on your TV does not disturb recording!

Record a recorder from MONITOR OUT

You can record a program on your recorder from the TV tuner via **MONITOR OUT**.


- 1 Switch on the device.
- 2 Select the correct channel on your TV and the correct input on your recorder.
- 3 Set your recorder to record.
You record the tuner channel of the TV, even when you switch to an AV input using the **AV** button on the remote control.

*Do not switch channels or turn off your TV when you are recording through **MONITOR OUT**.*

Note: When a TV channel or AV source is blocked because of a rating set via the Channels menu (see p. 11), also the record output picture and sound are muted.

Setting the remote control to work accessory devices



 
 
Your remote control is set to work your TV and many infrared remote (IR) control VCRs, Cable TV Converter Boxes, DVD players, Satellite Receivers, etc.

Press the **Select** button repeatedly to select **CBL, VCR, DVD, SAT** or **AMP** according to the accessory device you want to operate with this remote control. See Use of the Remote control, p. 3. Press the  button.

If the function buttons on the remote control also work the selected accessory device, then the remote is ready and no further steps are needed.

If the function buttons do not work with the selected accessory device, according to the device(s) you own, you may make your remote control ready for them by a direct entry code. Proceed as following.

Code setup

- ❶ Press the **Select** and  buttons at the same time, then release.
- ❷ **NOTE:** When inputting the digits as described below, you must not allow more than 20 seconds to pass between the input of each digit or you will need to return to step 1 and begin the programming process again. Input the appropriate digit provided below for the type of accessory device you want to operate:
 - 1 Cable (CBL)
 - 2 VCR
 - 3 DVD
 - 4 Satellite (SAT)
 - 5 Amplifier (AMP).
- ❸ Input the 4-digit code for the type and brand of accessory device. The codes are listed on pages 21-22.
- ❹ The green light behind the  button will blink for 3 seconds to show that a valid code was input. If a valid code was not entered, the light will stay on continuously for 3 seconds. If that occurs, go back to step 1 and begin the programming process again.
- ❺ Now you will try to use the TV remote with the accessory device. Press the **Select** button on the remote to cycle across the accessory mode dial. Stop pressing the button when the mode you desire is lighted. The light will stay on for 2 seconds and then begin blinking. The blinking means that the remote is in the accessory mode you have selected.
- ❻ Within 60 seconds from the time the blinking starts, point the remote toward the accessory device and press the  button. If the device does not respond to the  command, follow the steps for programming the remote again using a different setup code for the type and brand of accessory device you wish to operate. Refer again to the code list on pages 21-22. If no more codes are listed for the type and brand of accessory device, the remote likely will not operate your particular model of accessory device.

Notes:

- Your TV remote is not necessarily capable of being programmed to operate all models of the brands of accessory devices listed on pages 21-22. You may want to try the programming process again. Try using the number(s) that are listed for your type and brand of device to be sure you did not make a mistake in inputting the digits during your first attempt at programming.

- If the remote control is in one of the accessory modes (a mode light is flashing) — CBL, VCR, DVD, SAT, AMP — and you don't press any of the remote buttons for sixty seconds, a "time-out" occurs, returning the remote to TV mode.

Remote Control Direct Entry Codes for Accessory Devices

Amplifier			
Carver	.0296	Tocom	.0039
Curtis Mathes	.0327	Toshiba	.0027
GE	.0105	Tusa	.0042
JVC	.0358	Unika	.0180
Linn	.0296	United Artists	.0034
Magnavox	.0296	Universal	.0180, 0218
Marantz	.0296	Viewstar	.0090
Optimus	.0422, 0327	Zenith	.0027, 0552, 0926
Philips	.0296	Zentek	.0427
Pioneer	.0327		
Polk Audio	.0296	Surround Sound Receiver	
RCA	.0327	ADC	.0558
Realistic	.0422	Aiwa	.0148
Sony	.0716, 0247	Capetronic	.0558
Soundesign	.0105	Carver	.0069, 1116, 1216
Victor	.0358	Casio	.0222
Wards	.0105	Clarinette	.0222
Yamaha	.0381	Denon	.1187, 1131
		Fisher	.0069
		Garrard	.0490
		Harman/Kardon	.0137
Cable Box		JVC	.0101
ABC	.0030, 0034, 0035	Kenwood	.1054, 0069, 0213, 1340
Allegro	.0180, 0342		.1596, 1597
Americast	.0926	Lloyd's	.0222
Archer	.0180, 0824	MCS	.0066
BellSouth	.0926	Magnavox	.0418, 1116, 0558, 1216
Century	.0180		.0222
Citizen	.0180, 0342	Marantz	.1116, 1216, 0066
Comtronics	.0067	Modulaire	.0222
Contec	.0046	Nakamichi	.0124
Emerson	.0824	Onkyo	.0162
Everquest	.0042, 0067	Optimus	.1050, 0213, 0558, 0069
Focus	.0427	Panasonic	.0066, 1545
Garrard	.0180	Penney	.0222
Gemini	.0042	Philips	.1116, 1216, 1296, 0418
General Instrument	.0503, 0837	Pioneer	.0177, 0558, 1050
GoldStar	.0067, 0171	Proscan	.1281
Goodmind	.0824	Quasar	.0066
Hamlin	.0047, 0036, 0286, 0061	RCA	.1281, 0558, 1050
Hytex	.0034	Realistic	.0222
Jasco	.0042, 0180, 0342	Sansui	.1116
Jerrold	.0030, 0039, 0503, 0042, .0837	Sharp	.0213
Memorex	.0027	Sherwood	.0529
Motorola	.1133	Sony	.1185, 1085, 1285
Movie Time	.0090	Sunfire	.1340
NSC	.0090	Teac	.0490
Oak	.0046, 0034	Technics	.0066, 1335, 1545, 1336
Optimus	.0048	Thorens	.1216
Panasonic	.0048, 0134, 0027	Victor	.0101
Paragon	.0027	Yamaha	.0203, 0213, 1203
Philips	.0180, 0332, 0344	Yorx	.0222
Pioneer	.0171, 0560, 0904		
Popular Mechanics	.0427	Satellite Receiver	
Pulsar	.0027	AlphaStar	.0799
Quasar	.0027	Echostar	.1032, 0802
RCA	.0048	Expressvu	.0802
Radio Shack	.0042, 0910, 0342, 0824	GE	.0593
Recoton	.0427	General Instrument	.0388, 0896, 0654
Regal	.0047, 0286	HTS	.0802
Runco	.0027	Hitachi	.0846
SL Marx	.0067	Hughes Network Systems	.0776
Samsung	.0067, 0171	JVC	.0802
Scientific Atlanta	.0035, 0504, 0904	Jerrold	.0388, 0654
Signal	.0042, 0067	Magnavox	.0749, 0751
Sprucer	.0048	Memorex	.0751
Starcom	.0030, 0042	Next Level	.0896
Stargate	.0067, 0042, 0824	Panasonic	.0728
Starquest	.0042	Philips	.1103, 0749, 0751
TV86	.0090	Primestar	.0654, 0388
Television	.0067	RCA	.0593, 0170, 0419, 0882
		Radio Shack	.0896
		Samsung	.1136
		Sony	.0666
		Star Choice	.0896
		Toshiba	.0776, 0817
		Uniden	.0751, 0749
		Zenith	.0883
		VCR	
		Admiral	.0075, 0236
		Adventura	.0027
		Aiko	.0305
		Aiwa	.0027, 0064
		Akai	.0068
		America Action	.0305
		American High	.0062
		Asha	.0267
		Audiovox	.0064
		Beaumarck	.0267
		Bell & Howell	.0131
		Broksonic	.0148, 0211, 0029, 0236, 0506
		CCE	.0099, 0305
		Calix	.0064
		Canon	.0062
		Carver	.0108
		Cineral	.0305
		Citizen	.0305, 0064
		Colt	.0099
		Craig	.0064, 0099, 0074, 0267, 0298
		Curtis Mathes	.0062, 0068, 0087, 0189
			.0787
		Cybernex	.0267
		Daewoo	.0305, 0072
		Denon	.0069
		Dynatech	.0027
		Electrohome	.0064
		Electrohome	.0064
		Electrohome	.0064
		Emerex	.0059
		Emerson	.0211, 0029, 0236, 0305, .0148, 0506, 0027, 0064, .0070
		Fisher	.0074, 0131
		Fuji	.0062
		Funai	.0027
		GE	.0062, 0087, 0075, 0267, .0787
		Garrard	.0027
		Go Video	.0459, 0553
		GoldStar	.0064, 0065
		Gradiente	.0027
		Hi-Q	.0074
		Harley Davidson	.0027
		Harman/Kardon	.0065, 0108
		Harwood	.0099
		Hitachi	.0069, 0027, 0068
		Hughes Network Systems	.0069
		JVC	.0094, 0068
		Jensen	.0068
		KEC	.0064, 0305
		KLH	.0099
		Kenwood	.0068, 0094, 0065
		Kodak	.0062, 0064
		LXI	.0064
		Lloyd's	.0027
		Logik	.0099
		MEI	.0062
		MGA	.0070, 0267
		MGN Technology	.0267
		MTC	.0027, 0267
		Magnasonic	.0305
		Magnavox	.0062, 0108, 0027, 0066, 0176

Remote Control Direct Entry Codes for Accessory Devices

VCR (continued)

Magnin	.0267
Marantz	.0108, 0062
Marta	.0064
Matsushita	.0062, 0189
Memorex	.0131, 0074, 0506, 0027 .0064, 0075, 0062, 0267 .0066, 0189, 0236, 1189
Minolta	.0069
Mitsubishi	.0070, 0075, 0094
Motorola	.0062, 0075
Multitech	.0027, 0099
NEC	.0065, 0068, 0094, 0131
Nikko	.0064
Noblex	.0267
Olympus	.0062
Optimus	.0189, 1189, 0075, 0064, .0131, 0459
Orion	.0506, 0029, 0211, 0236
Panasonic	.0062, 0189, 1189, 0643
Penney	.0062, 0267, 0064, 0069, 0065
Pentax	.0069
Philco	.0062, 0236, 0506
Philips	.0108, 0062, 0645
Pilot	.0064
Pioneer	.0094
Polk Audio	.0108
Profitronic	.0267
Proscan	.0087, 0787
Protec	.0099
Pulsar	.0066
Quasar	.0062, 0189, 1189
RCA	.0087, 0176, 0069, 0062, .0075, 0267, 0787
Radio Shack	.0027
Radix	.0064
Randex	.0064
Realistic	.0027, 0131, 0074, 0075, .0064, 0062
ReplayTV	.0641, 0643
Runco	.0066
STS	.0069
Samsung	.0072, 0267
Sanky	.0066, 0075
Sansui	.0068, 0506, 0027, 0094, 0236, 0298
Sanyo	.0074, 0131, 0267
Scott	.0211, 0148, 0070, 0072
Sears	.0064, 0069, 0027, 0062, .0074, 0131
Semp	.0072
Sharp	.0075
Shintom	.0099
Shogun	.0267
Singer	.0099
Sony	.0059, 0027, 0062, 0063
Sylvania	.0062, 0108, 0027, 0070
Symphonic	.0027
TMK	.0267
Tatung	.0068
Teac	.0027, 0068
Technics	.0062, 0189
Teknika	.0027, 0062, 0064
Thomas	.0027
Tivo	.0645, 0663
Toshiba	.0072, 0070
Totevision	.0064, 0267
Unitech	.0267
Vector	.0072
Vector Research	.0065
Video Concepts	.0072
Videosonic	.0267
Wards	.0062, 0087, 0027, 0074, .0267, 0069, 0075, 0099 .0108, 0176, 0787 .0099, 0305, 0236 .0099, 0027, 0062 .0065 .0066, 0027, 0236, 0506

Digital Video Disc (DVD)

Apex	.0699
Denon	.0517
Fisher	.0697
GE	.0549
Hitachi	.0691
Hiteker	.0699
JVC	.0650, 0585
Kenwood	.0709, 0561
Konka	.0746, 0738, 0747, 0748
Magnavox	.0530, 0702
Marantz	.0566
Mitsubishi	.0548
Onkyo	.0530
Optimus	.0598
Oritron	.0678
Panasonic	.0517, 0659
Philips	.0566, 0530
Pioneer	.0598, 0552, 0659
Proscan	.0549
RCA	.0549, 0598
Samsung	.0600
Sharp	.0657
Sony	.0560
Technics	.0517
Theta Digita	.0598
Toshiba	.0530
Yamaha	.0517, 0572
Zenith	.0618, 0530

Regulatory Notices - Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications -

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Philips Consumer Electronics may void the user's authority to operate the equipment.

Cables -

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Canadian notice -


This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien -

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Before Calling Service

Ambient temperature	Do not hang up the monitor above a central heating or other heating sources.
Care of the screen	Clean the anti-reflex coated flat glass screen with a slightly damp soft cloth. Do not use abrasives solvents as it can damage the glass surface of the screen.
Plasma Display characteristics	<p>Caution: A video source (such as a video game, DVD, or video information channel) which shows a constant non-moving pattern on the monitor screen, can cause damage to the screen. When your Flat-Monitor is continuously used with such a source, the pattern of the non-moving portion of the game (DVD, etc.) could leave an image permanently on the screen. When not in use, turn the video source Off.</p> <p>Regularly alternate the use of such video sources with normal viewing. When switching over to another picture after having displayed the same still picture for a long time (many hours), it may happen that some parts from the previous picture will remain on screen due to a kind of memory effect. This ghost picture will disappear after some time. To avoid this effect change the pictures regularly or for PC use you can turn on a screen saver in your computer. Philips has built in an automatic shift of the picture in video mode every 5 minutes to avoid this effect and to prolong the life of the screen.</p> <p>Very incidentally and after a longer period of unuse (approx. 1 year) the screen may display some strange color deficiencies. This is quite normal for plasma displays and these effects will disappear after the set has been turned on for some time. A plasma display consists of a high number of color pixels. It is within industry standards that very few pixels (< 0.001%) may be defective, even for a new set. There is however no reason to doubt about the quality of the set. The plasma display technology operates with rare gases which are being influenced by air pressure.</p> <p>Up to an altitude of 2000 m above sea-level (local air pressure equal or above 800 hPa), the display is functioning fine. Operating the set at a higher altitude (lower air pressure), the picture becomes unstable and the picture performance is deteriorating. The plasma display might then also produce a humming sound. Bringing the set below 2000 m (local air pressure equal or above 800 hPa) it works fine again. Transportation has no influence.</p>
Control of accessory devices	The infrared signals of the screen may influence the reception sensibility of other peripherals. Solution: replace the batteries of the remote control of other devices. E.g. keep away a wireless headphone from within a radius of 50".
Transport	Keep the original packaging to transport the monitor if needed.
"Ghost" or double images	This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	<ul style="list-style-type: none"> • Check that the TV's AC power cord is plugged into the mains socket. • Unplug the television, wait for 60 seconds. <p>The re-insert plug into the mains socket and turn on the television again.</p>
No picture	<ul style="list-style-type: none"> • Check antenna connections at the rear of the TV to see if it properly connected to the TV. • Possible broadcast station trouble. Try another channel. • Adjust the contrast and brightness settings. Try another auto picture setting. • Check the Closed Captions control. Some TEXT modes could block the screen. • Switch your DVI-source to a correct display mode.
No picture and switched on	<ul style="list-style-type: none"> • Your TV has a protective mode in case there is too much heat build-up. Check the clearance around the vents of the device to be certain there are no blocking walls or cabinets which would limit the air flow.

No sound	<ul style="list-style-type: none"> • Increase the VOLUME. • Check that the TV is not muted, press the  button on the remote control. • When no signal is detected, the TV automatically switches off the sound. This is proper operation and does not indicate a malfunction.
Good sound but poor color or no picture	<ul style="list-style-type: none"> • Adjust the contrast, color, tint and brightness setting. Try another auto picture setting.
Poor picture	<ul style="list-style-type: none"> • Check the DVI connection.
Snowish picture and noise	<ul style="list-style-type: none"> • Check the antenna connection.
Television not responding to remote control	<ul style="list-style-type: none"> • Check whether the batteries are working. Replace if necessary. • Clean the remote control sensor lens on the monitor. • Operating range between TV and the remote control should not be > 240". • You can still use the buttons on top of your TV.
Miscellaneous	<ul style="list-style-type: none"> . Ambient temperature: + 5~ + 40°C . Maximum operating altitude: 2000 m / 6562 ft (min. air pressure 800 hPa) . Mains: AC 95-264V 50/60 Hz . Power consumption: around 290W . Standby consumption: < 2W . Weight (excl. packaging) Display: 87 lbs . Dimensions (wxhxd): 42.3 x 25.9 x 3.5 inch (42") . Wall mounting bracket included

If your problem is not solved

Turn your TV off and then on again once.

Telephone number Philips Customer

Care Center: 800-531-0039

Never attempt to repair a defective TV yourself.

Check with your dealer or call a TV technician.

Tips

End of life directives

We are paying a lot of attention to using environmentally-friendly production methods. Your new TV contains materials which can be recycled and reused. At the end of its life specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials that must be disposed. Please ensure that you dispose of your old TV according to local regulations.

How to dispose of batteries?

The batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless in many areas batteries may not be disposed of with your household waste. Please ensure you dispose of batteries according to local regulations.

LIMITED WARRANTY

One Year Free Labor

One Year Free Service on Parts

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, all parts will be repaired or replaced and labor is free. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay

if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP ...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product. Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE...

Repair must be performed by an authorized service center or a factory service center. If you do not live near a factory service center, contact your dealer. If your dealer is an authorized service center, he will arrange repair. If your dealer is not an authorized service center he will direct you to the authorized service center engaged by him to service the products he sells.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

IF YOU HAVE QUESTIONS IN CANADA

Please contact Philips at:
1-800-661-6162 (French speaking)
1-800-363-7278 (English speaking)

REMEMBER...


Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL #
SERIAL #

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips Consumer Electronics Company, P.O. Box 520890, Miami, FL 33152, (402) 536-4171

FACTORY SERVICE LOCATIONS

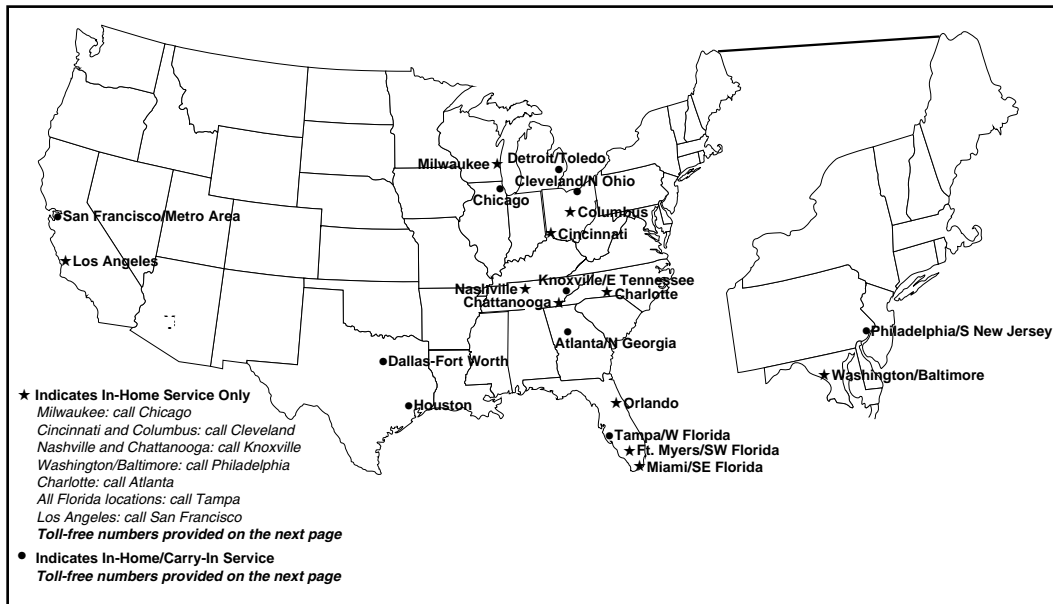

Note: If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

Nota: Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le center le plus près de chez vous.

Nota: Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

In Canada

How you can obtain efficient and expedient carry-in, mail-in, or in-home service for your product
 Please contact Philips at
 1-800-661-6162 (French speaking)
 1-800-531-0039 (English or Spanish speaking)

Au Canada

Comment obtenir le service après-vente pour les produits apportés ou envoyés par la poste à notre center de service ou le service à domicile
 Veuillez contacter philips à:

1-800-661-6162 (Francophone)
 1-800-531-0039 (Anglais ou Espagnol)

En el Canadá

Cómo recibir servicio eficiente para su producto, en persona, por correo o a domicilio
 Favor de comunicarse con Philips al:
 1-800-661-6162 (Francés)
 1-800-531-0039 (Inglés o Español)

FACTORY SERVICE LOCATIONS

Quality service is as close as your telephone! Simply look over the list below for the number of a Factory Service Center near you.

Your product will receive efficient and expedient carry-in, mail-in, or in-home service, and you will receive peace of mind, knowing your product is being given the expert attention of Philips' Factory Service.

Comment obtenir notre service après vente rapide et efficace soit par courrier, à domicile, ou en se présentant à un centre de service Philips. Plus de 600 centres de réception de produits à réparer à travers le pays: contacter le centre de service aux consommateurs le plus proche pour savoir l'emplacement de ces dépôts dans un rayon de 50 à 75 miles (80 km à 120 km) du centre de service local.

Cómo obtener un servicio oportuno y eficiente por correo, en casa o en persona para su producto a través de un centro Philips de servicio. Mas de 600 sitios por todo el país para la recepción de productos necesitados de reparaciones: comunicarse con el centro de servicio de fabrica mas cercano para estos lugares dentro de un radio de 80 a 120 km (50 a 75 millas) del centro de servicio local.

ATLANTA

Philips Factory Service
550 Franklin Road., Suite F
Marietta, GA 30067
800-273-1501

TAMPA

Philips Factory Service
1911 US Highway 301 North
Tampa, FL 33619
800-442-2027

SAN FRANCISCO

Philips Factory Service
681 East Brokaw Rd.
San Jose, CA 95112
800-300-9103

HOUSTON

Philips Factory Service
1110 N. Post Oak Rd., Suite
100
Houston, TX 77055
800-952-3254

CLEVELAND

Philips Factory Service
950 Keynote Circle
Brooklyn Heights, OH 44131
800-331-7037

DETROIT

Philips Factory
25173 Dequindre
Madison Heights, MI 48071
800-438-1398

DALLAS-FORT WORTH

Philips Factory Service
415 N. Main Street, #107
Eules, TX 76040
800-952-3254

CHICAGO

Philips Factory Service
1279 W. Hamilton Pkwy.
Itasca, IL 60143
800-531-2922

KNOXVILLE

Philips Factory Service
6700 D Papermill Rd.
Knoxville, TN 37919
800-821-1767

PHILADELPHIA

Philips Factory Service
352 Dunks Ferry Rd.
Bensalem, PA 19020
800-847-9320

