Register your product and get support at

www.philips.com/welcome



42PFL9509/93 47PFL9509/93 52PFL9509/93 42PFL7409/93 47PFL7409/93

EN User manual

PHILIPS

Contents

1	Notice	3
2	Important	4
3	Your TV	6
	Side controls and indicators	6
	Remote control	6
4	Use your TV	8
	Switch yourTV on/off or to standby	8
	Switch channels	8
	Watch connected devices	9
	Adjust TV volume	9
	Use Ambilight	9
5	Use more of your TV	11
	Access TV menus	11
	Change picture and sound settings	11
	Change Ambilight settings	14
	Create and use lists of favourite channels	15
	Use timers	16
	Use child control and rating locks	16
	Use the TV clock	17
	View photos, play music and watch video	47
	from a USB storage device	17
	Use Scenea to display a picture as TV	19
	wallpaper	20
	Update the TV software Change TV preferences	20
	Start a TV demo	21
	Reset the TV to factory settings	21
	reset the 1 v to factory settings	<u> </u>
6	Connect devices	22
	Back connectors	22
	Side connectors	22
	Connect a computer	23
	Assign devices	26
	Use Philips EasyLink	24
	Use a Kensington lock	25

7	Install channels	26
	Automatically install channels	26
	Manually install channels	26
	Rename channels	26
	Rearrange channels	27
8	Product information	28
8	Product information	28
8		28
9	Product information Troubleshooting	
9		

LCD TV

Environmental Information

产品中有毒有害物质或元素的名称及含量

Names and Contents of Toxic or Hazardous Substances or Elements

	有毒有害物质或元素 Hazardous/Toxic Substance					
部件名称 Name of the Parts	铅 (Pb, Lead)	汞 (Hg,Mercury)	镉 (Cd,Cadmium)	六价铬 (Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	О	О	О	О	О	О
LCD Panel 液晶面板	X	X	О	O	O	O
PWBs 电路板组件	X	О	О	O	О	О
Accessories (Remote control & cables) 附件(遥控器,电 源线,连接线)	X	0	0	0	O	O
Batteries in Remote Control 遥控器电池	X	О	0	0	0	О

- 〇:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 2006 标准规定的限量要求以下。
- O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 2006.
- ×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。
- X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 2006.



环保使用期限 Environmental Protection Use Period

此标识指期限(十年),电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

1 Notice

2009 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Philips cannot be held responsible either for any errors in the content of this document or for any problems as a result of the content in this document. Errors reported to Philips will be corrected and published on the Philips support website as soon as possible.

Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Philips Service Centres and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorised in this manual, shall void the warranty.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.

® Kensington and Micro Saver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world.



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

Portions of this software are copyright © The FreeType Project (www.freetype.org).

2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

- Risk of electric shock or fire!
 - Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
 - Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight.

To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.



- Never insert objects into the ventilation slots or other openings on the TV
- When the TV is swivelled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Risk of short circuit or fire!
 - Never expose the remote control or batteries to rain, water or excessive heat.

- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- Risk of injury or damage to the TV!
 - Two people are required to lift and carry a TV that weighs more than 25 kg.
 - When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
 - When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that result in accident, injury or damage.
- Risk of injury to children!Follow these precautions to prevent the TV from toppling over and causing injury to children:
 - Never place the TV on a surface covered by a cloth or other material that can be pulled away.
 - Ensure that no part of the TV hangs over the edge of the surface.
 - Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
 - Educate children about the dangers of climbing on furniture to reach the TV.
- Risk of overheating! Never install the TV in a confined space. Always leave a space of at least 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.
- Risk of damage to the TV! Before you connect the TV to the power outlet, ensure that the power voltage matches

the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

- Risk of injury, fire or power cord damage!
 Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the power outlet and aerial before lightning storms. During lightning storms, never touch any part of the TV, power cord or aerial cable.
- Risk of hearing damage! Avoid using earphones or headphones at high volumes or for prolonged periods of time.
- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheeled bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:




Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences for the environment and human health.

3 Your TV


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Side controls and indicators

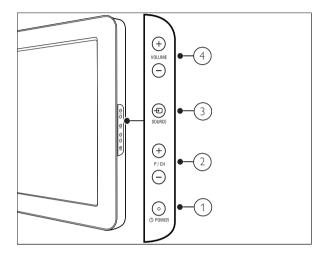

- ① POWER: Switches the TV on or off.
 The TV is not powered off completely unless it is physically unplugged.
- 2 P/CH +/-: Switches to the next or previous channel.
- 3 SOURCE: Selects connected devices.
- 4 VOLUME +/-: Increases or decreases volume.

Remote control

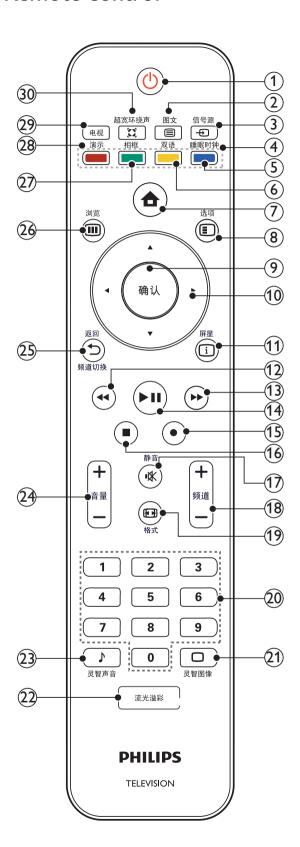

① (Standby-On)

- Switches the TV to standby if the TV is on.
- Switches the TV on if the TV is in standby.

② ■ (TELETEXT)

Not used.

(3) → (信号源)

Selects connected devices.

(4) Colour buttons

Selects tasks or options.

(5) 睡眠时钟

Sets a delay after which the TV switches to standby.

(6) 双语

Switches Stereo and Nicam Stereo to Mono. Selects first language (Dual I) or second language (Dual II) in bilingual programmes.

(7) **a** (Home)

Toggles the home menu on or off.

8 🗈 (选项)

Accesses options relating to the current activity or selection.

(9) 确认

Confirms an entry or selection. Displays a matrix of channels.

(10) ▲▼◀▶ (Navigation buttons)

Navigates through the menus.

(11) ① (屏显)

Displays programme information, if available.

(12) **◄** (Backward)

Searches backward.

(13) **▶▶** (Forward)

Searches forward.

(14) ► II (Play/Pause)

Starts, pauses or resumes playback.

(15) ● (Record)

Starts or stops video recording.

(16) ■ (Stop)

Stops playback.

(17) 🕸 (静音)

Mutes or restores audio output.

(18) 频道 +/-

Switches to the next or previous channel.

(19) (格式)

Selects a picture format.

20 0-9 (Numeric buttons)

Selects a channel or setting.

21) □ (灵智图像)

Launches the smart picture menu.

(22) 流光溢彩

Switches Ambilight on or off. The Ambilight button is not used in selected models.

23 ♪ (灵智声音)

Launches the smart sound menu.

(24) 音量 +/-

Increases or decreases volume.

(25) ★ (返回/频道切换)

Returns to a previous screen. Toggles between the current channel and the last viewed channel.

(26) Ш (浏览)

Displays a matrix of channels.

(27) 相框

Displays wallpaper on your TV screen.

(28) 演示

Toggles the demonstration menu on or off.

(29) 电视

Switches back to the antenna source from EasyLink mode.


(30) ☎ (超宽环绕声)

Enables Incredible Surround for stereo sources. Enables spatial mode for mono sources.

4 Use your TV

This section helps you perform basic TV operations.

Switch your TV on/off or to standby

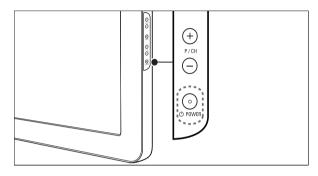



To switch on

- If the standby indicator is off, press \circ **POWER** at the side of the TV.
- If the standby indicator is red, press \circ (Standby-On) on the remote control.

To switch to standby

Press (Standby-On) on the remote control. → The standby indicator switches to red.


To switch off


- Press OPOWER at the side of the TV.
 - → The standby indicator switches off.



• Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, disconnect the TV power cable from the power outlet.

Switch channels

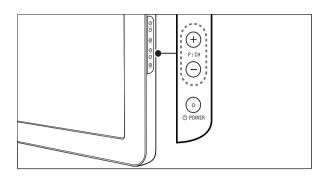

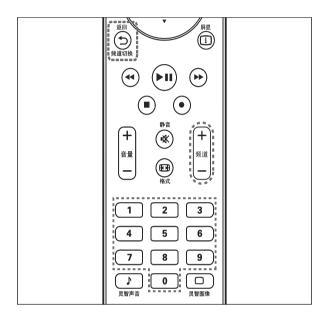

- Press **つ** (返回/频道切换) on the remote control to return to the previously viewed channel.
- Press 频道 +/- on the remote control or P/CH +/- on the side of the TV.
- Press 确认 to use the channel grid.
- Enter a channel number using the Numeric buttons.



Note

When you use a favourite list, you can only select those channels in the list (see 'Select a favourite list' on page 15).

Watch connected devices



Note


 For easy access, add new devices to the home menu before selecting them.

Use the source button



- **1** Press → (信号源).
 - → The source list appears.
- 2 Press ▲ or ▼ to select the connected device.
- **3** Press 确认 to confirm selection.

Use the home menu

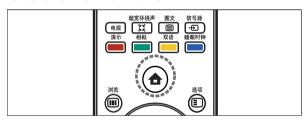





Note

- You can add new devices to the home menu for easy access.
- 1 Press ♠ (Home).
 - → The home menu appears.
- 2 Press ▲▼◀▶ to select the device.
- **3** Press 确认 to confirm selection.

 Adjust TV volume

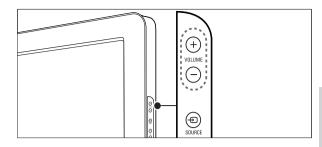



To increase or decrease volume

- Press 音量 +/-.
- Press VOLUME +/- on the side of the TV.

To mute or unmute sound

 
- Press 咻 (静音) to mute audio.
- Press 啄 (静音) again to restore audio.

Use Ambilight



Note

• Ambilight is not available in all models.



- 1 Press 流光溢彩.
 - → Ambilight switches on.
- 2 Press 流光溢彩 again to switch off Ambilight.



Note

• Instructions on how to change Ambilight settings are available (see 'Change Ambilight settings' on page 14).

Use Ambilight in standby mode

- 1 In standby mode, press 流光溢彩.
 - → Ambilight switches on.
- **2** To switch to a pre-defined colour setting, press and hold 流光溢彩 for at least three seconds.
- **3** Press 流光溢彩 to switch off Ambilight.


5 Use more of your TV

Access TV menus

Menus help you to install channels, change picture and sound settings and access other features.

Access the home menu

The home menu gives you easy access to connected devices, picture and sound settings as well as other useful features.

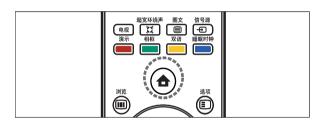

1 Press ♠ (Home).

→ The home menu appears.




- Press ▲▼◀▶ to select an option.
 - **[Watch TV]** Switches to TV mode.
 - **[Setup]** Accesses menus to adjust picture, sound and other TV settings.
 - [Add new device] Adds new devices to the home menu for easy access.

- **3** Press 确认 to confirm your choice.
- 4 Press ♠ (Home) to exit.

Remove devices from the home menu

If a device is no longer connected to the TV, remove it from the home menu.

- 1 Press ♠ (Home).
 - → The home menu appears.

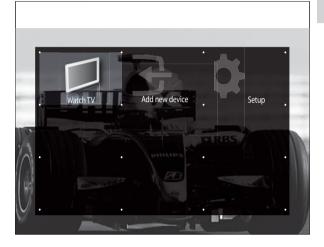

2 Press (选项).

→ The [Remove] menu appears.

3 Press ▲▼◆▶ to select an icon.

4 Press 确认 to remove the icon.

→ The selected icon is removed from the home menu.

Change picture and sound settings

Change picture and sound settings to suit your preferences. You can apply pre-defined settings or change settings manually.

Use settings assistant

Use the settings assistant to guide you through the best picture settings.

1 Press 春 (Home).

→ The home menu appears.

- Press ▲▼◀▶ to select [Setup] > [Picture] > [Settings assistant] > [Start].
- **3** Press 确认.
 - → The [Settings assistant] menu appears. Follow the on-screen instructions to choose your preferred picture settings.

Use smart picture

Use smart picture to apply pre-defined picture settings.

 
- 1 Press □ (灵智图像).→ The [Smart picture] menu appears.
- Press ▲▼ to select from the following smart picture settings:
 - [Personal]Lists customised personal picture settings.
 - [Vivid] Maximises picture settings.
 - [Standard] Adjusts picture settings to suit most environments and types of video.
 - [Movie] Applies picture settings ideally suited for movie viewing.
 - **[Game]**Applies picture settings maximised for fast-moving games.
 - **[Energy saving]**Applies low-energy picture settings.
- **3** Press 确认 to confirm your choice.

Manually adjust picture settings

- 1 Press ♠ (Home).
- Press ▲▼◀► to select [Setup] > [Picture].
 - \hookrightarrow The **[Picture]** menu appears.
- 3 Press ▲▼◀► to select from the following settings and adjust:
 - [Smart picture] Accesses pre-defined smart picture settings.
 - [Contrast] Adjusts the intensity of bright areas, keeping dark areas unchanged.
 - [Brightness] Adjusts the intensity and details of dark areas.
 - [Colour] Adjusts colour saturation.

- [Hue]Compensates colour variations in NTSC encoded transmissions.
- [Sharpness] Adjusts the level of sharpness in image details.
- [Noise reduction] Filters and reduces noise in an image.
- [Colour temperature]Introduces more orange tones ([Warm]) or blue tones ([Cool]) to the picture.
- [Pixel Precise HD] Fine-tunes each pixel to match surrounding pixels. This produces a brilliant, high-definition image.
- [HD Natural Motion] Reduces field and line flicker to display movement smoothly. You can switch HDNM on or off.
- [100Hz LCD] Sets the TV refresh rate to a maximum of 100Hz to provide superior motion sharpness, better black level, high contrast with a flicker-free, quiet image and a larger viewing angle.
- [Advance sharpness] Enables superior sharpness, especially on lines and contours in the picture.
- [Dynamic contrast] Automatically enhances contrast in an image.
- [Dynamic backlight] Adjusts the brightness of the TV backlight to match lighting conditions.
- [MPEG artifact reduction] Smooths out transitions on digital pictures. You can switch this feature on or off.
- [Colour enhancement] Makes colours more vivid and improves the resolution of details in bright colours. You can switch this feature on or off.
- [PC mode] Adjusts picture settings when a PC is connected to the TV.
- [Light sensor] Dynamically adjusts picture settings to match lighting conditions.
- [Picture format] Changes the picture format.
- [Horizontal Shift] Adjusts the picture horizontally for PC-VGA or HD input.
- **[Vertical Shift]**Adjusts the picture vertically for PC-VGA or HD input.

Change picture format



- 1 Press (格式).
 - → A picture format bar appears.
- 2 Press ▲▼ to select a picture format.→ The selected picture format is

Summary of picture formats

 
previewed.

The following picture settings can be configured.



Vote

• Depending on the format of the picture source, some picture settings are not available.



[Auto format] (Not for PC mode.) Enlarges the picture automatically to best fit the screen. The subtitles remain visible.



[Super zoom] (Not for HD and PC mode.) Removes the black bars on the side of 4:3 broadcasts. There is minimal distortion.



[4:3] Shows the classic 4:3 format.



[Subtitle zoom] (Not for HD and PC mode.) Displays 4:3 pictures over the full area of the screen, with sub-titles visible. Part of the top of the picture is clipped off.



[Movie expand 14:9] (Not for HD and PC mode.)
Scales 4:3 format to 14:9.



[Movie expand 16:9] (Not for HD and PC mode.) Scales 4:3 format to 16:9.



 
[Wide screen] Stretches the classic 4:3 format to 16:9.



[Unscaled] For HD and PC mode only, and in selected models only. Allows maximum sharpness. Some distortion may be present due to the broadcaster's systems. Set your PC resolution to wide screen mode for best results.

Use smart sound

Use smart sound to apply pre-defined sound settings.



- **1** Press ♪ (灵智声音).
 - → The [Smart sound] menu appears.
- 2 Press ▲▼ to select a smart sound setting:
 - [Standard] Adjusts sound settings to suit most environments and types of audio.
 - [News] Applies sound settings ideally suited for spoken audio, such as the news.
 - **[Movie]**Applies sound settings ideally suited for movies.
 - [Personal] Applies the settings that were customised in the sound menu.
- **3** Press 确认 to confirm your choice.

Adjust sound settings

- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] > [Sound].

 → The [Sound] menu appears.
- **3** Press ▲▼◀▶ to select and adjust:
 - [Smart sound]Accesses pre-defined smart sound settings.
 - [Bass] Adjusts the bass level.
 - **[Treble]**Adjusts the treble level.
 - **[Volume]**Adjusts the volume.
 - [Balance] Adjusts the balance of the right and left speakers to best suit your listening position.
 - [Dual I-II]Selects between audio languages if dual sound is broadcast.
 - [TV speakers] Sets the TV speakers on or off, or outputs sound to an EasyLink-compliant device.
 [EasyLink] must be activated in the [Preferences] menu to make the [TV speakers] menu available.

- [Surround] Enables spatial sound.
- [Headphone volume]Adjusts headphone volume.
- [Auto volume] Automatically reduces sudden volume changes, for example, when switching channels.
 When enabled, this produces a more consistent audio volume.
- [Delta volume] Corrects volume differences between TV channels and connected devices (switch to your connected device when adjusting [Delta volume]).

Change Ambilight settings

You can adjust Ambilight colour, brightness and mode to your taste.



Note

- Ambilight is not available in all models.
- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] > [Ambilight].
 - → The [Ambilight] menu appears.
- 3 Press ▲▼◀► to select from the following settings and adjust:
 - [Ambilight]Turns Ambilight on or off.
 - [Active mode] Sets an Ambilight setting between relaxed and dynamic levels. This feature is only available when Ambilight [Colour] is set to [Active mode].
 - [Brightness] Changes the light output from Ambilight.
 - [Colour] Selects a predefined colour setting or a customised colour setting.
 - [Custom colour]Customises a colour setting.
 - [Separation] Sets the level of Ambilight on the left and right side of the TV.

Create and use lists of favourite channels

You can create lists of your preferred TV channels so that you can find those channels easily.



 You can create and store up to four favourite lists on your TV.

Select a favourite list



- **1** When watching TV, press 确认.
 - → The channel grid appears.
- 2 Press (选项).
 - → The options menu appears.
- 3 Press ▲▼ to select [Show favorite channels].
 - → The favourite lists appear.
- 4 Press ▲▼ to select a favourite list or [AII].
- **5** Press 确认.
 - If you selected a favourite list, only channels in the list appear in the channel grid; if you selected [All], all installed channels appear in the channel grid.
- 6 Press © (选项) to exit the options menu.

Add a channel to a favourite list



- View all channels before adding a channel to a favourite list.
- When watching TV, switch to the channel you want to add to a favourite list (see 'Switch channels' on page 8).

- **2** Press **(**选项).
 - → The channel options menu appears.
- 3 Press ▲▼ to select [Mark as favorite].
- **4** Press 确认.
- 5 Select a favourite list to add the channel to.
- 6 Press 确认.
 - → The channel is added to the favourite list.
- 7 Press **与** (返回/频道切换) to exit the channel options menu.
 - → The channel grid appears.

Remove a channel from a favourite list



Note

- Select the favourite list to edit, before removing a channel.
- **1** When watching TV, press 确认.
 - → The channel grid appears.
- Press ▲▼◀▶ to select a channel.
- **3** Press (选项).
 - ightharpoonup The channel options menu appears.
- 4 Press ▲▼ to select [Unmark as favourite].
- **5** Press 确认.
 - → The channel is removed from the favourite list.
- 6 Press → (返回/频道切换) to exit the channel options menu.
 - → The updated channel grid appears, displaying the current channels in the favourite list.

Use timers

You can set timers to switch the TV on or switch to standby at a specified time.

Set the time

- 1 Press ♠ (Home).
- 2 Select [Setup] > [Features] > [Clock].
- **3** Press 确认.
- 4 Press ▲▼◀▶ to set the time.
- 5 Select [Done].
- 6 Press 确认.

Automatically switch the TV to standby (sleeptimer)

Sleeptimer switches the TV to standby after a pre-defined period of time.



- You can always switch off your TV earlier or reset the sleeptimer during the countdown.
- 1 Press ♠ (Home).
 - → The home menu appears.
- Press ▲▼◀► to select [Setup] > [Features] > [Sleep timer].
 - → The [Sleep timer] menu appears.
- 3 Press **◆►** to set the sleep time.
 - → The sleeptimer can be up to 180 minutes in steps of five minutes. If set to zero minutes, the sleeptimer is switched off.
- 4 Press 确认.
 - → The TV switches to standby after the pre-defined period of time.

Automatically switch the TV on (on timer)

You can switch the TV to a specified channel at a specified time, from standby.

- 1 Press **(Home)**.
- 2 Select [Setup] > [Features] > [On timer] > [Activate].
- **3** Press 确认.
- 4 Press ▲▼◀► to set the frequency, time and channel.

* Tip

 To switch off [On timer], select [Off] in the [On timer] menu.

Set or change your PIN code

- 1 Press ♠ (Home).
- Press ▲▼◀▶ to select [Setup] > [Features] > [Change code].
 The [Change code] menu appears.
- 3 Enter a four-digit PIN using the **Numeric** buttons.
 - If you have a PIN, enter your current PIN.
 - If you do not have a PIN or if you have forgotten your PIN, enter '0711'.
- 4 Enter your PIN again to confirm.

Use child control

You can prevent your children from watching certain programmes or certain channels by locking the TV controls.

Lock or unlock all channels and connected devices

- 1 Press **(Home)**.
- Press ▲▼◀▶ to select [Setup] > [Features] > [TV lock].
 - → A message appears prompting you to enter your PIN code.
- 3 Enter your PIN code with the **Numeric** buttons.
 - → The [TV lock] menu appears.

- 4 Press ▲▼ to select [Lock] or [Unlock].
- **5** Press 确认.
 - → All channels and connected devices are locked or unlocked.

Lock or unlock one or more channels

- **1** When watching TV, press 确认.
 - → The channel grid appears. The active channel is highlighted.
- 2 Press (选项).
- 3 Press ▲▼ to select [Lock/Unlock chan.].
- **4** Key in your PIN code.
 - → The channel displays the lock icon.

Use the TV clock

You can display a clock on the TV screen. The clock displays the current time using time data received from your TV service operator.

Display the TV clock

- **1** When watching TV, press © (选项).
 - → The TV options menu appears.
- 2 Select [Clock].
- **3** Press 确认.
 - → The clock is displayed.



• The clock is disabled automatically after ten minutes. To disable the clock before that, repeat this procedure.

View photos, play music and watch video from a USB storage device



Caution

• Philips is not responsible if the USB storage device is not supported nor is it responsible for damage or loss of data from the device.

YourTV is fitted with a USB connector that enables you to view photos, listen to music or watch movies stored on a USB storage device.

Supported file formats

Pictures	JPEG (non-progressive only)
Music	MP3
Video	H.264, MPEG4



Note

- Only FAT or DOS-formatted USB storage devices are supported. File names must not exceed 128 characters.
- Your TV only supports USB flash drives in FAT/FAT32 format. It does not support other devices that can be connected to the USB port including but not limited to the following: portable storage devices such as external hard drives and mini hard drives, MP3 player, digital camera, phone, portable video player, portable multimedia player.

Connect a USB storage device and enter the content browser

- 1 Turn on the TV.
- 2 Connect the USB device to the USB port on the side of the TV.
- 3 Press ♠ (Home).
 - → The home menu appears.
- 4 Press ▲▼◀▶ to select [Browse USB].
 - Press 确认 to confirm.→ The USB content browser appears.



• If you connect multiple USB storage devices via USB hub, a message appears prompting you to select a device. Press ▲▼ to select the device, then press 确认 to confirm.



• Press **(回)** (浏览) to switch between thumbnail and file browsing views.

Disconnect a USB storage device

Caution

- Follow this procedure to avoid damage to your USB storage device.
- **1** Press **→** (返回/频道切换) to exit the **[USB]** menu.
- Wait for five seconds before disconnecting the USB storage device.

View photos

- 1 In the USB content browser, press ▶ to enter the [Picture] folder.
- Press ▲▼◀▶ to select a photo.
- **3** Press 确认 to view a full screen image of the photo.



• When in full screen mode, press ◆▶ to move between photos.

View a slide show of your photos

- 1 When a full screen image of a photo is displayed, press ►II or 确认.
 - → A slide show begins from the selected image.
- 2 Press:
 - II to pause the slide show.
 - **◄** or **▶** to go back or move forward to the next image.
 - **⑤** (返回/频道切换) or to stop the slide show and return to the USB content browser.

Change slide show settings

- 1 When viewing a slide show, press ② (选项).

 → The slide show options menu appears.
- Press ▲▼◀▶ to select from the following settings and adjust:
 - [Start/Stop slide.] Starts or stops a slide show.
 - **[Slideshow transitions]** Displays a list of transition styles.
 - [Slideshow frequency] Sets the amount of time that a picture is shown.
 - [Rotate mage] Rotates a picture.
 - [Show info] Displays the picture name, date, size and next picture in the slide show.
- **3** Press 确认 to confirm the setting change.

Listen to music

- 1 Connect a USB storage device to the USB port on the side of the TV.
- 2 Press ▶ to enter the menu.
- 3 Select [Music], and then press ▶ to enter the [Music] folder.
- 4 Press ▲ or ▼ to select a song or a music album.
- **5** Press 确认 to play the selected song or album.

Music settings

- [Show info] Displays the file name.
- [Repeat] Repeats a song or an album.
- [Shuffle] Plays songs randomly.


Watch video from a USB device

- 1 In the USB content browser, press ▶ to enter the [VIDEO] folder.
- Press ▲▼◀▶ to select a video.
- **3** Press 确认 to play the video.

Use Scenea to display a picture as TV wallpaper

You can use the Scenea feature to display a still picture as wallpaper on your TV. This feature is for home mode only.

Activate Scenea

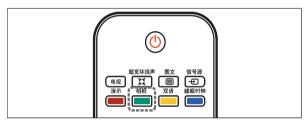

Single-picture wallpaper

Press 相框 on your remote control.

→ The default or pre-loaded picture is displayed.



Vote

- To deactivate the wallpaper, press any remote control button except ①, ♪ (灵智声音), and □ (灵智图像).
- The wallpaper is also deactivated when you connect a USB storage device to the TV or start an EasyLink-compliant device through one-touch play.

Wallpaper slide show

Make sure the wallpaper is not yet activated.

- 1 Connect a USB storage device to the TV.
- 2 Press 相框.
 - → All pictures in the USB storage device are displayed.



• The wallpaper display duration is determined by the pre-defined sleeptimer settings (see 'Automatically switch the TV to standby (sleeptimer)' on page 16). When sleeptimer is off, the wallpaper is displayed for a maximum of 120 minutes.

Upload a wallpaper picture from a USB device

Before performing this procedure, be sure to have available a USB storage device containing the picture you intend to use as wallpaper.

- 1 Connect the USB storage device to the TV.
- 2 Press ♠ (Home).

- → The home menu appears.
- 3 Press ▲▼◀▶ to select [Browse USB].
- 4 Press ▲▼◀▶ to select a picture.
- **5** Press **(**选项).
- 6 Select [Set as wallpaper].
- / Press 确认.

Update the TV software

Philips continuously tries to improve its products and we recommend that you update the TV software when updates are available. Check www.philips.com/support for availability.

Update software (analogue broadcasts)

Before performing this procedure be sure to:

- Set aside some time to complete the entire update.
- Have available a USB storage device with at least 64MB of storage space.
- Have access to a computer with a USB port and internet access.

Step 1 Download the TV identification file

- 1 Press ♠ (Home)
- Select [Setup] > [Software update] >
 [Update assistant] > [Action].
- 3 Select [Start].
- 4 Follow the on-screen instructions to download the TV identification file to the USB storage device.

Step 2 Download the latest software

- 1 Connect the USB storage device to a computer with internet connection.
- 2 Locate and open the file update.htm on your USB storage device.

Read the on-screen instructions and click the **Send ID** button.

If a new software is available, the update

is downloaded to the USB storage device.

4 Disconnect the USB storage device.

Step 3 Update the TV software

!

Caution

- Do not disconnect the USB storage device from the TV during the software update.
- If a power failure occurs during the update, do not remove the USB storage device from the TV. The TV will continue the update as soon as power comes back.
- 1 Connect the USB storage device to the TV.
 - → An on-screen message prompts you to update your TV software.
- 2 Select [Update].
- 3 Select [Start].
- 4 Follow the on-screen instructions to update the TV software.

Change TV preferences


The [Preferences] menu allows you to customise various features and functions.

- **1** Press **♠** (**Home**).
- 2 Select [Setup] > [Installation] > [Preferences].
 - **[Location]**Optimises TV settings for your location home or shop.
 - **[Volume bar]** Displays the volume bar when adjusting the volume.
 - [Channel info.] Displays information about the TV channel every time you switch channels.
 - [EasyLink] Enables one-touch play and one-touch standby between EasyLink-compliant devices.

- [Pixel Plus Link] Overrides the settings of connected devices and uses the settings of the TV.
- **[E-sticker]** For shop mode only. Sets the location of the e-sticker.

Start a TV demo

You can use demonstrations to better understand the features of your TV. Some demos are not available on certain models. When a demo is available, it is displayed in the menu list.

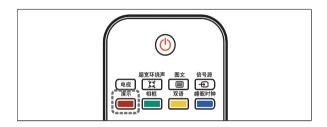

- 1 Press 演示.
- Press ▲ or ▼ to select a demo.
- **3** Press 确认 to start the demo.
- **4** Follow on-screen instructions to view the demo.
- **5** Press 演示 to exit.

Reset the TV to factory settings

You can restore the default picture and sound settings of your TV. Channel installation settings remain the same.

- 1 Press ♠ (Home).
- Select [Setup] > [Installation] > [Factory settings].
- 3 Press ▶ to enter the [Factory settings] menu.
 - → [Reset] is highlighted.
- 4 Press 确认 to reset to default settings.
- 5 Press ♠ (Home) to exit.


6 Connect devices

This section describes how to connect various devices with different connectors and supplements examples provided in the Quick Start.



 Different types of connectors may be used to connect a device to your TV, depending on availability and your needs.

Back connectors

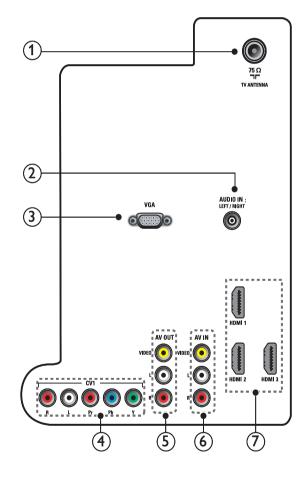

- 1 TV ANTENNA
 Signal input from an antenna, cable or satellite.
- (2) AUDIO IN L/R
 Audio input from devices that require a separate audio connection, such as a computer.

- 3 VGA
 Video input from a computer.
- 4 CVI (Y Pb Pr and AUDIO L/R)
 Analogue audio and video input from analogue or digital devices such as DVD players or game consoles.
- (5) AV OUT (VIDEO OUT and AUDIO OUT L/R)

Audio and video output to analogue devices such as another TV or a recording device.

- 6 AV IN (VIDEO IN and AUDIO IN L/R)
 Analogue audio and video input from analogue or digital devices such as DVD players, satellite receivers and VCRs.
- 7 HDMI 1/2/3
 Digital audio and video input from high-definition digital devices such as Blu-ray players.

Side connectors



1 AUDIO IN L/R

Audio input from analogue devices connected to VIDEO or S-VIDEO.

(2) VIDEO

Composite video input from analogue devices such as VCRs.

(3) S-VIDEO

Video input from analogue devices such as satellite receivers. When you use this connector, do not use connector for video signals.

Stereo audio output to headphones or earphones.

(5) USB

Data input from USB storage devices.

(6) HDMI

Digital audio and video input from highdefinition digital devices such as Blu-ray players.

7 SERV. U

For use by service personnel only.

Connect a computer

Before you connect a computer to the TV

- Set the monitor refresh rate on your computer to 60Hz.
- Press 🖭 (格式) and change the TV picture format to [Unscaled].


Connect a computer with one of the following connectors:




Note

• Connections via DVI or VGA require an additional audio cable.


HDMI cable

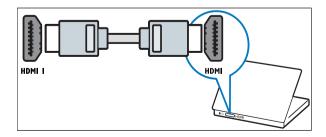


DVI-HDMI cable

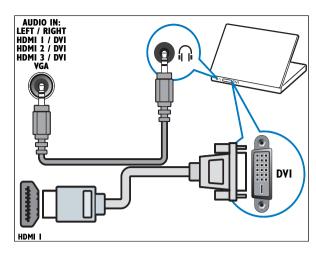

HDMI cable and HDMI-DVI adaptor

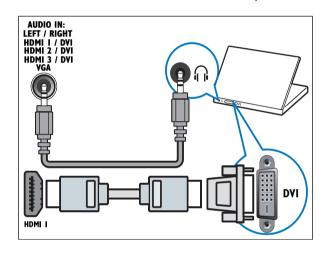

VGA cable

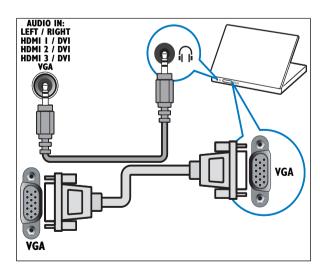

Use Philips EasyLink

Your TV supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



Note

 Philips does not guarantee 100% interoperability with all HDMI CEC devices.



Vote

 The EasyLink-compliant device must be switched on and selected as the source.

EasyLink features

One-touch play

When you connect your TV to devices that support one-touch play, you can control your TV and the devices with one remote control. For example, when you press Play on your DVD remote control, your TV automatically switches to the correct channel to show the DVD content.

One-touch standby

When you connect your TV to devices that support standby, you can use your TV remote control to put your TV and all connected HDMI devices in standby mode.

System audio control

When you connect your TV to HDMI CEC compliant devices, your TV can switch automatically to play audio from the connected device.

To use one-touch audio, you must map the audio input from the connected device to your TV.

You can use the remote control from the connected device to adjust the volume.

Remote control (RC) key forwarding

RC key forwarding allows you to control EasyLink-compliant devices using your TV remote control.

EasyLink buttons

You can control EasyLink-compliant devices with the following buttons on the remote control of your TV.

Button	EasyLink function
► II (Play/	Starts, pauses or resumes
Pause)	playback on your EasyLink device.
■ (Stop)	Stops playback on your EasyLink
	device.
	Starts or stops video recording
(Record)	on your EasyLink device.
◄ (Fast	Searches backward.
Reverse)	
▶▶ (Fast	Searches forward.
Forward)	
0-9	When EasyLink is enabled, selects
(Numeric	a title, chapter or track.
buttons)	
▲▼∢ ▶	Navigates through the menus of
	the EasyLink-compliant device.
确认	Activates a selection or accesses
	the menu of the EasyLink-
	compliant device.
᠍ (选项)	Displays the menus of the
	EasyLink-compliant device. Note
	that when a (Home) is pressed,
	the TV menu is displayed.
Ф	When EasyLink is enabled,
(Standby-	switches the TV and all EasyLink
On)	devices to standby. Note that you
	must press and hold \circ (Standby-
	On) for at least 3 seconds for this
	to occur.



Lip

 Press 电视 to switch back to the antenna source from EasyLink mode.

Enable or disable EasyLink



Note

- Do not enable Philips EasyLink if you do not intend to use it.
- 1 Press ♠ (Home).
- Select [Installation] > [Preferences] > [EasyLink].
- 3 Select [On] or [Off].

Enable or disable remote control key forwarding

- 1 Press ♠ (Home).
- 2 Select a device that is connected to an HDMI connector.
- **3** Press **(**选项).
- 4 Select [En./Dis. RC pass.].
- **5** Press 确认.
- 6 Press ▲ or ▼ to highlight an HDMI connector.
- 7 Press 确认 to enable RC key forwarding for the selected HDMI connector.


Set TV speakers to EasyLink mode

When enabled, this feature automatically turns off TV speakers when content from an EasyLink-compliant home theatre system is played. Audio is played only from the home theatre system's speakers.

- 1 Press **★** (Home).
- Press ▲▼◀► to select [Setup] > [Sound].
 - → The **[Sound]** menu appears.
- 3 Select [TV speakers].
 - \hookrightarrow The **[TV speakers]** menu appears.
- 4 Select [Auto (EasyLink)].
 - ightharpoonup TV speakers are set to EasyLink mode.

Use a Kensington lock

There is a Kensington security slot at the back of the TV. Prevent theft by looping a Kensington lock between the slot and a permanent object, such as a heavy table.

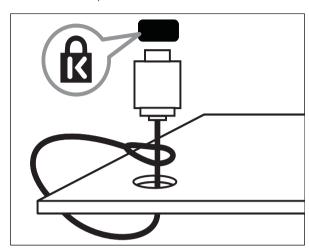

7 Install channels

The first time you set up your TV, you are prompted to select a menu language and to install TV and digital radio channels (if available). This chapter provides instructions on how to reinstall and fine-tune channels.

Automatically install channels

This section describes how to search and store channels automatically.

- 1 Press **(Home)**.
- Select [Setup] > [Installation] >
 [Channel install.] > [Channel assistant].
- **3** Press 确认.
- 4 Follow the on-screen instructions to install channels.

Manually install channels

This section describes how to search and store analogue TV channels manually.

Step 1 Select your system



Note

- Skip this step if your system settings are correct.
- 1 Press ♠ (Home).
- Select [Setup] > [Installation] >
 [Channel install.] > [Analog: Manual].
- 3 Press ▲ or ▼ to select [Colour system]. Press ▶.
- 4 Press ▲ or ▼ to select a system from the list. Press ▶.

- 6 Press ▲ or ▼ to select [Sound system].
 Press ▶.
- 7 Press ▲ or ▼ to select a system from the list. Press 确认.

Step 2 Search and store new TV channels

- 1 Press ♠ (Home).
- Select [Setup] > [Installation] >
 [Channel install.] > [Analog: Manual].
- Press ▲ or ▼ to select [Search], and press ▶.
- 4 Press ▲ or ▼ to search for channels, and press ▶.
- 5 Press ▲ or ▼ to fine-tune, and press ▶.
- 6 Press 确认 to store channel.

Rename channels

Channels can be renamed so that a name of your choice appears whenever the channel is selected.

- **1** When watching TV, press 确认.
- 2 Press ▲▼◀▶ to highlight a channel in the channel grid.
- **3** Press (选项).
- 4 Press ▲ or ▼ to select [Rename channel].
- 5 Press ▲▼◀▶ to highlight a letter and 确认 to select it.



- Highlight [Aa] and press 确认 to change case.
- **6** Repeat the previous step until the name is formed.
- 7 Select [Done].
- **8** Press 确认.

Rearrange channels

After you install channels, you can rearrange the order in which they appear.

- **1** When watching TV, press 确认.
- **2** Press 🗈 (选项).
- **3** Select [Reorder] and press 确认.
- 4 Press ▲▼◀▶ to highlight a channel and press 确认.
- 5 Press ▲▼◀▶ to move the channel in the channel grid.
- 6 Press 确认.
- **7** Press 🗈 (选项).
 - → [Done reordering] appears.
- 8 Press 确认.

8 Product information

Product information is subject to change without notice. For detailed product information, go to www.philips.com/support.

Supported display resolutions

Computer formats

HDMI:

Resolution	Refresh rate (Hz)
640 × 480 720 × 400 800 × 600 1024 × 768 1280 × 1024 1360 × 768 1600 × 1200 1920 × 1080	60, 72, 75 70 60, 72, 75 60, 70, 75 60 60 60 50, 60

VGA:

Resolution	Refresh rate (Hz)
640 × 480 720 × 400 800 × 600 1024 × 768 1280 × 768 1280 × 1024 1360 × 768	60, 72, 75, 85 70, 85 60, 72, 75, 85 60, 70, 75, 85 60 60

Video formats

Resolution	Refresh rate (Hz)
640 × 480p	60
720 (1440) × 480i	60
720 (1440) × 576i	50
720 × 480p	60
720 × 576p	50
1280 × 720p	50, 60
1920 × 1080i	50, 60
1920 × 1080p	24, 25, 30, 50, 60

Tuner/Reception/Transmission

- Antenna input: 75ohm coaxial (IEC75)
- TV system: PAL BG, SECAM BG, PAL I,
 PAL DK. SECAM DK. NTSC M
- Video playback: NTSC, PAL, SECAM

Multimedia

- Connection: USB
- Playback formats: H.264, MPEG4, JPEG, MP3

Container	Video Codec	Audio Codec	File extension
AVI	MPEG 4 SP, MPEG 4 ASP, MP4S,MP4V	MPEG Layer 2/3, AC3	.avi
mpeg	MPEG-1	MPEG 1 Layer 2	.mpg, .mpe, .mpeg, .vob, .dat
mpeg4	MPEG-4 AVC (h.264, L2- CIF), MPEG-4 AVC (h.264, L4-HD)	AAC-LC	.m4v, .mp4, .mov

Remote control

Batteries: 2 x AAA (LR03 type)

Connections

- Headphone out (stereo mini-jack)
- TV antenna
- S-Video
- CVBS in
- CVBS out
- YPbPr: Component video (CVI in)
- VGA in
- HDMI
- VGA Audio in
- USB
- Service connector

Power

- Mains power: AC 110-240V, 50-60Hz (+/- 10%)
- Standby power: < 0.15W
- Ambient temperature: 5 to 35 degrees Celsius



Note

• In case you need a stand for your TV, please contact Philips Customer Care Center at 4008 800 008 for assistance.

9 Troubleshooting

This section describes commonly encountered issues and accompanying solutions.

General TV issues

The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.

The remote control is not working properly:

- Check that the remote control batteries are correctly inserted according to the +/- orientation.
- Replace the remote control batteries if they are flat or weak.
- Clean the remote control and TV sensor lens.

The standby light on the TV blinks red:

• Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

You forgot the code to unlock the child lock feature

Enter '0711'.

The TV menu is in the wrong language

• Change the TV menu to your preferred language.

When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

 No action is required. The creaking sound is normal expansion and contraction of the TV as it cools and warms up. This does not impact performance.

TV channel issues

Previously installed channels do not appear in the channel list:

Check that the correct channel list is selected.

Picture issues

The TV is on, but there is no picture:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.

There is sound but no picture:

 Check that the picture settings are correctly set.

There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loudspeakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality.
 If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

The TV did not save your picture settings:

 Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings.

The picture does not fit the screen; it is too big or too small:

Try using a different picture format.

The picture position is incorrect:

 Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.

Sound issues

There is a picture but no sound from the TV:



Note

If no audio signal is detected, the TV automatically switches the audio output off
 — this does not indicate malfunction.

- Check that all cables are properly connected.
- Check that the volume is not set to 0.
- Check that the sound is not muted.

There is a picture but the sound quality is poor:

 Check that the sound settings are correctly set.

There is a picture but sound comes from one speaker only:

 Verify that sound balance is set to the centre.

HDMI connection issues

There are problems with HDMI devices:

- Note that HDCP support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.
- If a HDMI-to-DVI adaptor or HDMI to DVI cable is used, check that an additional audio cable is connected to AUDIO L/R or AUDIO IN (mini-jack only).

USB connection issues

USB device content is not displayed:

- Check that the USB storage device is set to 'Mass Storage Class' compliant, as described in the storage device's documentation.
- Check that the USB storage device is compatible with the TV.
- Check that the audio and picture files are supported by the TV.

Audio and picture files do not play or display smoothly

• The transfer performance of the USB storage device may limit the data transfer rate to the TV, causing poor playback.

Computer connection issues

The computer display on the TV is not stable:

- Check that a supported resolution and refresh rate is selected on the computer.
- Set the TV picture format to unscaled.

Contact us

If you cannot resolve your problem, refer to the FAQs for this TV at www.philips.com/ support.

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in this User Manual.



Warning

 Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.



Note

 Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

Download an electronic copy

To obtain an electronic copy of this manual:

- 1 Point your browser to www.philips.com/ support.
- 2 Choose your country of location.
- Enter the model number or a keyword in the "Find your product" field.
 Alternatively, you can browse the catalogue.
- **4** Click the description or model.
- 5 Under Product support, click User manuals.

10 Index

		enable	25
		Environmental care	5
В			
Batteries	4, 30	F	
		Factory settings	21
C		Favourite list	
Channel list		select	15
favourite	15	set up	15
troubleshooting	30		
update	15	H	
Channels		• •	
favourite list	15	HDMI cable	24
install		troubleshooting	31
automatic	26	Home mode	20
manual	26		
rearrange	27		
rename	26	Installation	
Clock	17	automatic	26
Computer format		manual	26
technical specifications	28		
Connections		1/	
HDMI		K	
troubleshooting	31	Kensington lock	25
mains cord	22		
technical specifications	28	1	
troubleshooting	31	Languago	
USB		Language troubleshooting	30
troubleshooting	31	Location	20
Connectors		Lock	20
assign devices	26	Kensington ()	25
		TV	16
D			10
Demo	21	M	
Devices		M	
assign	26	Menu	
watch	9	child lock	16
Display	•	language	30
resolution	28	main menu	11
screen saver	19	troubleshooting	30
		Multimedia	
		technical specifications	28

Ε

EasyLink

disable

25

Music		menu	11
USB	18	position	25
with slideshow	17	safety	4
		screen care	5
D		software	20
P		standby	8
Parental control		switch channels	8
TV lock	16	switch off	8
Picture format		switch on	8
troubleshooting	30	transporting	4
Picture settings	11	troubleshooting	30
PIN code	30	tuner technical specifications	28
Power	5, 30	TV overview	6
		wall mount	4
D		TV lock	'
R	2.0	lock channels	17
Reception	30	lock connected devices	16
Remote control		PIN code	30
overview	6	TIIN CODE	30
technical specifications	28		
troubleshooting	30	U	
		USB	
S		listen to music	18
	4	upload a picture from	19
Safety		view photos	18
Screen saver	19 11		
Settings assistant			
Sleep timer	16	V	
Slideshow	47	Video format	
with music	17	video format technical specifications	28
Smart settings	12, 14	Volume	
Sound settings	14	adjust	9
Standby			
troubleshooting	30	\^/	
		W	4.0
Т		Wallpaper	19
Technical specifications	28		
Timer			
on timer	16		
sleeptimer	16		
standby	16		
Transmission	10		
troubleshooting	30		
9	30		
Troubleshooting	30		
TV	0		
adjust volume	9		
controls	6		



Document order number: 3139 125 41043