

PHILIPS

Hospitality Television

32HF9385D/42HF9385D



Installation of your Philips Hotel TV

1. Introduction

This addendum has been designed to help you install programmes on this Digital TV and activating the hotel mode.

Use this addendum in conjunction with the User Manual of this television.



Please handle the TV with care and wipe with a soft cloth to ensure your TV keeps looking new.

2. The benefits of the Philips hotel TV

This TV is specially designed for hotels. The Philips hotel TV offers all kind of features to Maximise the convenience for the hotel and meet the needs for the guest

- Welcome message to give a friendly welcome to your guest when activating the tv
- Remote control features like low battery detection and an anti-theft screw for preventing of theft for batteries
- Access to the user menu can be blocked. This prevents users (e.g. guests) from deleting or changing program settings and/or modifying picture and sound settings. This ensures that TVs are always set up correctly.
- A *switch-on* volume and programme can be selected. After switching on, the TV will always start on the specified program and volume level.
- The maximum volume can be limited in order to prevent disturbance.
- The television keys VOLUME +/- , PROGRAM +/- and MENU can be blocked.
- Screen information can be suppressed.
- Programmes can be blanked

3. Installing the channels

Installing Digital Programs (only applicable for 20/26/32HF5335D)

Ensure the TV is in Digital mode. If it is in Analogue mode, press the **A/D** (Analogue/Digital) key on the Remote Control to enter the Digital mode.



1. Press the **(Menu Digital)** key on the Remote Control
2. Press the Up/Down Arrow Key to scroll to the item called INSTALLATION and press the Right Arrow Key
3. Press the Up/Down Arrow Key to scroll to the item called SERVICE SETUP and press the Right Arrow Key
4. Press the Up/Down Arrow Key to scroll to the item called REINSTALL ALL SERVICES and press the Right Arrow Key
5. Press the Up/Down Arrow Key to scroll to the item called SEARCH and press OK to start the scan. *The TV will now start to scan and install all available (Digital) TV channels and Radio stations automatically. When the scan is completed, the TV menu will indicate the number of digital services found.*
6. Press the OK key again to Store all the services that have been found.

Installing Analogue Programs

Ensure the TV is in Analogue mode. If it is in Digital mode, press the **A/D** (Analogue/Digital) key on the Remote Control to enter the Analogue mode.



1. Press the **(Menu TV)** key on the Remote Control
2. Press the Up/Down Arrow Key to scroll to the item called **INSTALL** and press OK
3. Press the Up/Down Arrow Key to scroll to the item **AUTO STORE** and press OK

The TV will now start to scan and install all available (Analogue) TV channels automatically. This operation will take a few minutes. The TV display will show the progress of the scan and the number of programmes found.

Refer to the chapter on *Automatic Tuning of Analogue Programmes* in the User Manual for more details. You can also refer to the chapter on *Manual Tuning of Analogue Programmes* in the User Manual if a manual scan is preferred.

4. Activating the Hotel Mode Setup menu (BDS)

1. Switch on the television and select an **analogue** channel
2. On the Remote Control, press keys: **[3, 1, 9, 7, 5, 3, MUTE]**
3. The **BDS HOTEL MODE SETUP MENU** becomes visible
4. Use the cursor keys to select and change any of the following settings:

Function	Possible selections
BDS MODE	ON /OFF
SWITCH ON SETTINGS	
SWITCH ON VOLUME	0-100, LAST STATUS
MAXIMUM VOLUME	0-100
SWITCH ON CHANNEL	USER DEFINED, LAST STATUS
POWER ON	ON/STANDBY/LAST STATUS
DISPLAY MESSAGE	ON/OFF
WELCOME MESSAGE	LINE 1/LINE 2/CLEAR
CONTROL SETTINGS	
LOCAL KEYBOARD LOCK	ON/OFF/ALL
REMOTE CONTROL LOCK	ON/OFF
OSD DISPLAY	ON/OFF
HIGH SECURITY MODE	ON/OFF
AUTO SCART	ON/OFF
MONITOR OUT	ON/OFF
BLANK CHANNEL	ON/OFF
STORE	>

5. Select **"STORE"** and press **[CURSOR RIGHT]** to save the settings and exit BDS Hotel Mode setup. Press **[MENU]** to exit without saving.
6. For BDS Hotel Mode settings to take effect, you must turn the TV set Off, then back On.

BDS Hotel Mode Functions

This paragraph describes the functionality of each item in the BDS Hotel Mode Setup menu.

BDS MODE

ON BDS Hotel Mode is ON:

- The user menu is blocked.
- All settings of the Hotel Mode Setup menu are in effect.

- OFF** BDS Hotel Mode is OFF:
- The TV operates as a normal consumer TV

SWITCH ON VOL

When the user switches the TV ON, it will play at the specified volume level. There are 2 options:

- **LAST STATUS** Upon start-up, the TV volume will be set to the level before the TV set was last turned off.
- **USER DEFINED** As specified by installer

Remark: "SWITCH ON VOL" cannot exceed the MAXIMUM VOL level. This is the volume level with which the Hotel Mode Setup menu was entered.

MAXIMUM VOL

The TV Volume will not exceed the selected volume level.

SWITCH ON CHANNEL

When the user switches the TV ON, it will tune to the specified channel. There are 2 options:

- **LAST STATUS** The TV will switch on to the last channel that was shown before the TV set was turned off
- **USER DEFINED** Any analogue channel can be chosen to be the first channel to switch on

POWER ON

The Power On function allows the TV to enter a specific mode of operation (On or Standby) after the mains power is activated.

- ON** When set, the TV will always turn ON after the mains power is enabled.
- STANDBY** When set, the TV will always turn to STANDBY after mains power is enabled
- LAST STATUS** When set, the TV will always turn to the last power status before the mains power was disabled.

DISPLAY MESSAGE

- ON** Enables display of the Welcome Message for 30 seconds after the TV set is turned on
- OFF** Disables the display of the Welcome Message.

If OSD DISPLAY is set to OFF, then the Welcome Message is automatically disabled.

WELCOME MESSAGE

The Welcome Message function allows the TV to show a customized greeting to the hotel guest whenever the TV is switched on. This helps to personalize the hotel experience for guests.

The Welcome Message can consist of 2 lines of text, with each line containing a maximum of 20 alphanumeric characters. Use the Remote Control arrow keys to create the Welcome Message.

To enable the display of the Welcome Message, the DISPLAY MESSAGE option must be ON
To clear the Welcome Message from the TV's memory, select **CLEAR**

LOCAL KEYBOARD LOCK

- ON** The television keys VOLUME +/-, PROGRAM +/- and MENU are blocked.
- OFF** The television keys VOLUME +/-, PROGRAM +/- and MENU function normally
- ALL** The television keys VOLUME +/-, PROGRAM +/-, MENU and POWER are blocked.

REMOTE CONTROL LOCK

- ON** Standard Remote Control keys are disabled.
- OFF** All Remote Control keys will function normally.

OSD DISPLAY

- ON** Normal screen information is displayed (e.g. programme information)
- OFF** Screen information is suppressed.

HIGH SECURITY MODE

- ON** Allows access to the BDS Hotel Mode Setup Menu via the special BDS Setup Remote only. (RC2573/01)
- OFF** Allows access to the BDS Hotel Mode Setup Menu via BDS Setup Remote or via normal Remote Control (using special key code sequence).

AUTO SCART

The Auto Scart function enables auto-detection of AV devices that are connected to the TV's Scart connector.

- ON** Enables Auto Scart switching in BDS Hotel Mode.
- OFF** Disables Auto Scart switching in BDS Hotel Mode.

MONITOR OUT

- ON** Allows audio & video output from TV via relevant AV connectors (if available).
- OFF** Disables both Audio & Video output from the TV (to prevent illegal copying).

BLANK CHANNEL

The Blank Channel function disables the display of video on the TV, but does not affect the audio output. This function can be used for audio applications (example: Off-air radio transmission, music channels, and so on), which do not necessarily require the display of video.

- ON** The current programme is blanked
- OFF** The current programme is not blanked (normal visible; DEFAULT value)

BLANK CHANNEL can be set for every channel. Use [**P+** / **P-**] to go through all the programmes and set the desired status per channel. The programme number is visible in the top left corner.

Low Battery Check

This television set has a special feature which checks the battery power level of a TV Remote Control, and indicates if the battery is low and requires changing.

(Note: The Low Battery Check function works only with certain models of Remote Controls. Please check with the Philips sales representative if the Remote Control used with this TV supports this function)

To activate the Low Battery Check function, hold the TV Remote Control in front of the TV, and **press and hold** the **OK** button on the Remote Control for at least 5 seconds. A message will appear on the TV screen to indicate if the battery power level is OK, or if it is Low. If the message indicates that the battery level is low, it is recommended to change the batteries of the Remote Control immediately.

5. Cloning of settings

Cloning of analogue TV channels and TV settings as described in the chapter
Hotel Mode Set-up menu

For 15/20HF5234

- Wireless cloning with the SmartLoader 22AVI 120 or 22AVI 135
- Cloning off all adjustable TV settings + analogue channel table

For 20/26/32HF5335D


- Wired cloning with the SmartLoader 22AVI 135 using the wire packed with the SmartLoader
- Cloning off all adjustable TV settings + analogue channel table (digital channel table via automatic installation)

Instruction for cloning of settings between TVs Philips SmartLoader (22AVI 135/00)


The Philips SmartLoader is an installation tool especially designed for easy and fast installation and copying of TV settings on Philips Institutional TV's.

The Philips SmartLoader works in 2 modes – Wireless and Wired:

Wireless mode ---- through infrared sensor (15/20HF5234)

Switch the SmartLoader to “Wireless” mode by sliding the side-switch to the  icon on the SmartLoader device. Point the Wireless SmartLoader to the TV’s infrared receiver (optimal distance of 5-30cm) and proceed with the Installation procedure listed below.

Wired mode ---- using the by-packed accessory cable(s) (20/26/32HF5335D)

Switch the SmartLoader to “Wired” mode by sliding the side-switch to the  icon on the SmartLoader device.

Examine the rear connectors of the TV set to determine if the 3-pin or 4-pin female connector wire (packed with the Wireless SmartLoader) should be used. Plug in the correct connector wire to the corresponding opening on the TV set (usually marked as SERV C), and then connect the RJ11 jack end of the accessory wire to the RJ11 socket on the SmartLoader.

The Installation Procedure consists of three simple steps:

1. Choosing a Master TV

The Master TV is the TV set whose installation and configuration settings are to be copied into other TV’s (of the same type only).

2. Programming the SmartLoader with the settings from the Master TV

Follow these steps to program the SmartLoader with the settings of the Master TV.

- a) Wireless method
 - Set the SmartLoader to “Wireless” mode using the side switch.
 - Turn on the TV, and while holding the SmartLoader, point it in the direction of the TV. Press the “MENU” Key on the SmartLoader.
- b) Wired method
 - Connect the SmartLoader to the TV using the appropriate accessory cable.
 - Set the SmartLoader to “Wired” mode using the side switch.
 - Turn on the TV, and while holding the SmartLoader, point it in the direction of the TV. Press the “MENU” Key on the SmartLoader.

The Master TV will show the following menu:

SMARTLOADER TO TV >
TV TO SMARTLOADER >

On the TV screen, highlight the menu option “TV TO SMARTLOADER”

Press the right arrow key on the SmartLoader to start the programming process

A number display (from 0~100) will be shown on screen, indicating the percentage of the programming progress from the TV to the SmartLoader. When the programming is completed, “##” will show “100” and the message “DONE” will appear.

TV TO SMARTLOADER ## (0-100)

The SmartLoader is programmed and can be used to install and configure other TVs.

Copying the settings of the Master TV to other TVs with the SmartLoader

Follow these steps to install and configure the settings of a Philips TV with the SmartLoader.

a) Wireless method

- Set the SmartLoader to “Wireless” mode using the side switch.
- Turn on the TV, and while holding the SmartLoader, point it in the direction of the TV. Press the “MENU” Key on the SmartLoader.

b) Wired method

- Connect the SmartLoader to the TV using the appropriate accessory cable.
- Set the SmartLoader to “Wired” mode using the side switch.
- Turn on the TV, and while holding the SmartLoader, point it in the direction of the TV. Press the “MENU” Key on the SmartLoader.

On the TV screen, highlight the menu option “SMARTLOADER TO TV”

Press the right arrow key on the SmartLoader to initiate the copying process

- ▷ A number display (from 0~100) will be shown on screen, indicating the percentage of the installation progress from the SmartLoader to the TV. When the data transfer is completed, “##” will show “100” and the message GOODBYE will appear.

SMARTLOADER TO TV ## (0-100)

- ▷ The TV will go to Standby mode. When the TV is next powered on, it will be configured with the settings from the Master TV, and ready for use.

Problems and Solutions:

1. *The message “**I2C ERROR**” is displayed on the screen.*
 - Bad connection of RJ11 wire or wrong data transmission has occurred. Try again.
2. *The message “**WRONG VERSION**” is displayed on the screen.*
 - The program contained in the SmartLoader has a software code incompatible with the actual TV. Reprogram the Wireless SmartLoader from a Master TV whose software code is compatible with the actual TV.
3. *TV doesn't respond to the SmartLoader.*
 - Check if the LED on the SmartLoader lights up in green when pressing any button. If the LED is red, it means that the batteries are low and should be replaced.
 - Bring the SmartLoader closer to the TV infrared receiver and try again.

Notes:

- ① Make sure that the 3 R6/AA sized batteries are placed correctly in the bottom compartment of the SmartLoader. The LED on the SmartLoader should light up in green when pressing any button, indicating operational batteries. When the LED shows red, the batteries need to be replaced.
- ① ***The SmartLoader can only copy the settings between 2 TVs of the same type. Once the SmartLoader is programmed with the settings from a Master TV of a certain type or model, then these settings can be installed on another TV of the same model only.***
- ① ***The SmartLoader cannot be used to copy the (digital) channel table of a Digital TV set.***
- ① ***If the SmartLoader is used with a DVB (European Digital) TV set, then the TV set must first be switched to Analog mode.***



Disposal of your old product.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 22002/96/EC. Please find out more about the separate collection system for electrical and electronic products in your local neighborhood.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



The packaging of this product is intended to be recycled. Apply to the local authorities for correct disposal.



2007© Koninklijke Philips Electronics N.V. all rights reserved
Specifications are subject to change without notice
Trademarks are property of Koninklijke Philips Electronics N.V. or their respective owners.

Table of contents

1 Important 3	7 Connections (DVD, receiver, ...) 30
1.1 Safety 3	7.1 Connections overview 30
1.2 Care of the screen 3	7.2 About connecting 31
1.3 Recycling 3	7.3 Connect your devices 33
	7.4 Connections setup 37
	7.5 Preparing for digital services 38
2 Your TV 4	8 Technical data 39
2.1 Television overview 4	
2.2 Product highlights 5	9 Troubleshooting 40
3 Getting started 5	10 Index 42
3.1 Position the TV 5	
3.2 Wall mounting - VESA 5	
3.3 Remote control batteries 7	
3.4 Antenna cable 7	
3.5 Connect the mains 7	
3.6 First time installation 7	
4 Use your TV 8	
4.1 Switch on or off - Standby 8	
4.2 Watch TV 9	
4.3 Watch channels from a digital receiver 9	
4.4 Watch connected devices 9	
4.5 Watch a DVD 10	
4.6 Select a Teletext page 10	
4.7 Change Ambilight mode 11	
5 Use more of your TV 12	
5.1 Remote Control overview 12	
5.2 TV menu overview 13	
5.3 Picture and sound settings 15	
5.4 Ambilight 18	
5.5 Teletext 19	
5.6 Create favourite channel lists 20	
5.7 Electronic Programme Guide 21	
5.8 Timers and locks 22	
5.9 Subtitles 23	
5.10 View and play photos, MP3... 24	
5.11 Listen to digital radio channels 26	
5.12 Software update 26	
6 Channel installation 27	
6.1 Automatic channel installation 27	
6.2 Manual channel installation 28	
6.3 Rearrange stored channels 28	
6.4 Automatic channel management 29	
6.5 Digital reception test 29	
6.6 Factory settings 29	

Register your product and get support at
www.philips.com/welcome.

2007 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Warranty

No components are user-serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Philips Service Centres and official repairshops. Failure to do so shall void any warranty, stated or implied. Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorised in this manual shall void the warranty.

Pixel characteristics

This LCD product has a high number of colour pixels. Although it has effective pixels of 99,999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Open source software

This television contains open source software. Philips hereby offers to deliver or make available, upon request, for a charge no more than the cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code on a medium customarily used for software interchange.

This offer is valid for a period of 3 years after the date of purchase of this product. To obtain the source code, write to Philips Innovative Applications N.V. Ass. to the Development Manager Pathoekeweg 11 B-8000 Brugge Belgium

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects.

Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

Mains fuse (UK only)

This TV is fitted with an approved moulded plug. Should it become necessary to replace the mains fuse, this must be replaced with a fuse of the **same value as indicated** on the plug (example **10A**).

1. Remove fuse cover and fuse.
2. The replacement fuse must comply with BS 1362 and have the ASTA approval mark. If the fuse is lost, contact your dealer in order to verify the correct type.
3. Refit the fuse cover.

In order to maintain conformity to the EMC directive, the mains plug on this product must not be detached from the mains cord.

Copyrights



VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.



Manufactured under license from Dolby Laboratories. 'Dolby', 'Pro Logic' and the double D symbol are trademarks of Dolby Laboratories.



Manufactured under license from BBE Sound, Inc. Licensed by BBE, Inc under one or more of the following US patents: 5510752, 5736897. BBE and BBE symbol are registered trademarks of BBE Sound Inc.

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries

® Kensington and MicroSaver are registered US trademarks of ACCO World Corporation with issued registrations and pending applications in other countries throughout the world. All other registered and unregistered trademarks are the property of their respective owners.

1 Important

Read this user manual before you start to use this product.

Pay attention to this section and closely follow the instructions. The warranty does not apply to damage caused by not taking into account the instructions.

- **Stationary images**
Avoid stationary images as much as possible. If you can not, reduce screen contrast and brightness to prevent damage to the screen. Stationary images are images that remain on the screen for a long time. Examples of stationary images are: on screen menus, teletext pages, black bars, stock market information, TV channel logos, time displays, and so on.

1.1 Safety

- To avoid short circuit, do not expose the product to rain or water.
- To avoid a risk of fire or electric shock do not place naked flame sources (e.g. lighted candles) close to the TV.
- Leave a space of at least 10cm (4 inches) all around the TV for ventilation.
- Keep away from radiators or other heat sources.
- Do not install the TV in a confined space such as a book case. Make sure that curtains, cupboards and so on cannot obstruct the air flow through the ventilation slots.
- Make sure the TV can not fall down. Place the TV on a solid and flat surface and only use the stand provided with the TV.
- To prevent damaging the mains cord which may cause a fire or electric shock, do not place the TV on the cord or anything else that can pinch the cord.
- When mounted on a swivel stand or VESA wall bracket avoid force coming on the mains plugs. Partly loosened mains plugs can cause arcing or fire.

1.3 Recycling

- Take the packaging to your local recycling centre.
- Dispose old batteries safely according local regulations.
- This product is designed and manufactured for material recycling and re-use.
- This product should not be disposed with other household waste. Inform yourself or ask your dealer about local environmentally safe recycling and local regulations. Uncontrolled waste disposal harms the environment and human health. (EEC 2002/96/EC)



1.2 Care of the screen


- Unplug the TV before cleaning.
- Clean the surface with a soft damp cloth. Do not apply any other substance (chemical or household cleaning agent). This may damage the screen.
- Do not touch, push or rub or strike the screen with anything hard as this may scratch, mar or damage the screen permanently.
- To avoid deformations and colour fading, wipe off water drops as soon as possible.

2 Your TV

This section gives you an overview of the controls and functions of this TV.


2.1 Television overview

Side controls

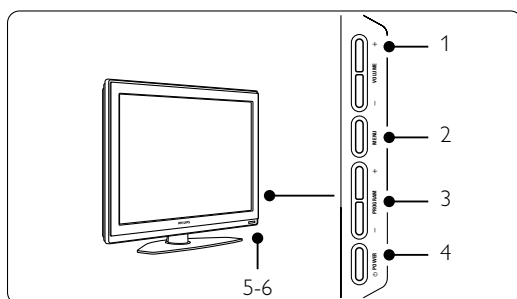


- 1 Volume up and down
- 2 Menu
- 3 Program or Channel up and down
- 4 Power switch
- 5 Led indicator (Blue: On; Red: Standby)
- 6 Remote control sensor

Side connectors

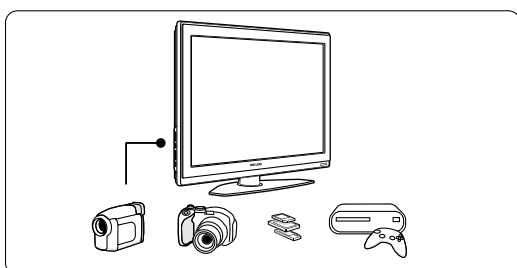


To connect a camera, game console, headphone or a USB memory device.

Back connectors

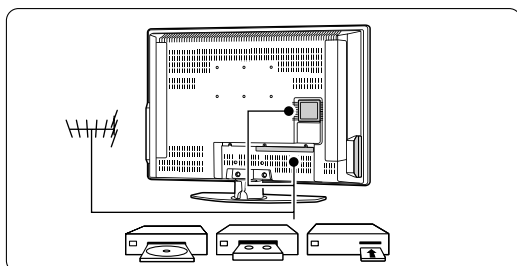

To connect the antenna, DVD, VCR or other device.

Remote control

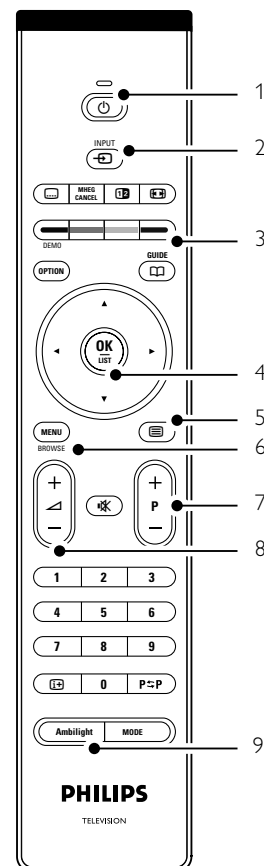

- 1 Standby or On
- 2 DVD, VCR, ... device selection
- 3 Colour keys
- 4 Navigation key (up ▲, down ▼, left ◀, right ▶) OK and LIST
- 5 Teletext key
- 6 Menu key
- 7 Programme up or down
- 8 Volume up or down
- 9 Ambilight on or off

Find more on your remote control in section **5.1 Remote control overview**.

2.2 Product highlights

Your new TV is equipped with some of the most modern audio or video innovations.

Your TV offers the following advantages ...

Ambilight

For a more relaxed viewing experience and improved perceived picture quality.

Perfect Pixel HD

Offers perfect picture quality from any source.

100Hz Clear LCD

100Hz Clear LCD results in superior sharpness of motion reproduction, better black level, high contrast with a flicker-free, quiet image and a larger viewing angle.

DVB-T integrated tuner

Next to normal analogue TV broadcast your TV receives digital terrestrial TV and radio broadcasts.

Electronic Programme Guide - EPG

The EPG shows the scheduled digital TV programmes on screen. The guide can remind you when programmes start, switch the TV on, etc.

HDMI connectors

3 HDMI connectors for highest quality high definition connectivity.

USB connection

Multimedia connection for instantly view or play your photos or music.

3 Getting started

This section helps you with the positioning and the first time installation of the TV.

3.1 Position the TV

⚠ Warning

Carefully read the safety precautions in section 1.1 Safety before you position the TV.

Large screen TVs are heavy. Carry and handle the TV with at least two persons.

Connect your devices first before you position your TV or mount it on the wall.

The ideal viewing distance for watching TV is three times its screensize.

For ideal viewing conditions, position the TV where light does not fall directly on the screen.


Best Ambilight effect is watched in a room with dimmed lighting conditions.

For the best Ambilight effect, position the TV 10 to 20cm away from the wall. Position the TV where sunlight does not fall directly on the TV.

Kensington Security Slot

Your TV is equipped with a Kensington Security Slot at the back of the TV for an anti-theft lock.

An anti-theft Kensington lock has to be purchased separately.

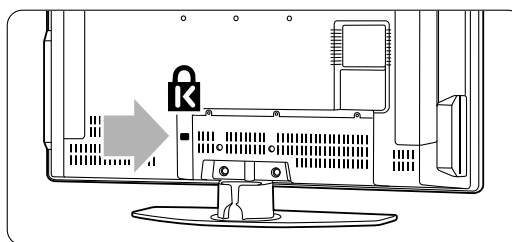

3.2 Wall mounting - VESA

⚠ Caution

Consider the TV's weight if you wall mount it. Improper mounting could result in severe injury or damage. Koninklijke Philips Electronics N.V. bears no responsibility for improper mounting or mounting that results in accident or injury.


Your TV is prepared for VESA compliant wall mounting. This bracket is not included.

Use a VESA compliant bracket with code **VESA MIS-E, 200, 100 M4**.

Consult your dealer for more VESA information.


The VESA fixation points

Locate the 6 fixation points at the back of the TV. Use these screw holes for fixing the VESA bracket.

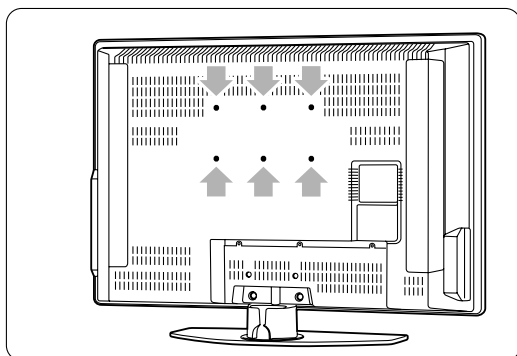


Unmount the TV stand


1 Locate the 4 screws of the TV stand.

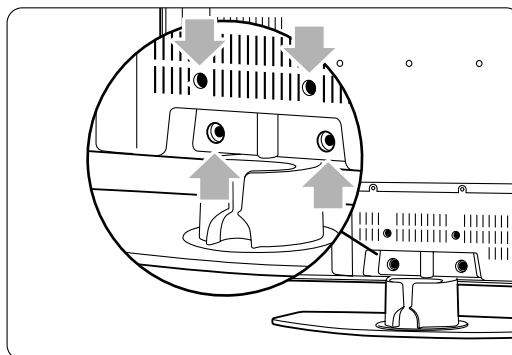

2 Unscrew the 4 screws.

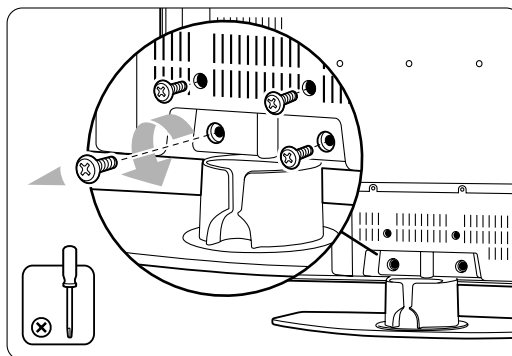


3 Lift the TV off the stand.

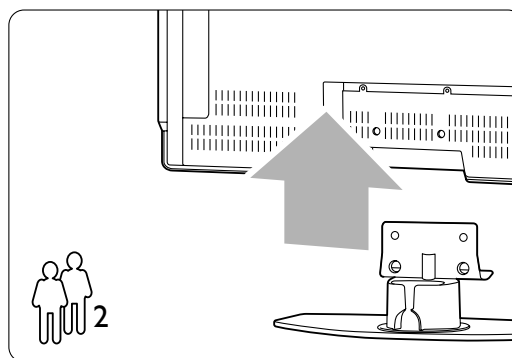

⚡ Tip

Make all connections at the back of the TV before you wall mount the TV. See section **7 Connections**.

3.3 Remote control batteries

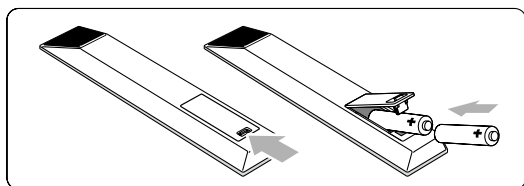


- 1** Open the battery cover on the back of the remote control.
- 2** Insert the 2 batteries supplied (Type AA-R6-1,5V). Make sure the **+** and **-** ends of the batteries line up correctly (inside of case is marked.)
- 3** Close the cover.

Note

Remove the batteries if you don't use the remote control for a long time.


3.4 Antenna cable

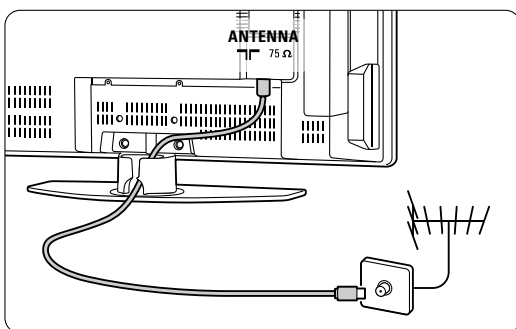

- 1** Locate the antenna connection at the back of the TV.
- 2** Insert the antenna cable tightly into the antenna socket **Antenna**.

3.5 Connect the mains cord

- 1** Verify that your mains voltage corresponds with the voltage printed on the sticker at the back of the TV. Do not insert the mains cord if the voltage is different.
- 2** Insert the mains cord tightly.

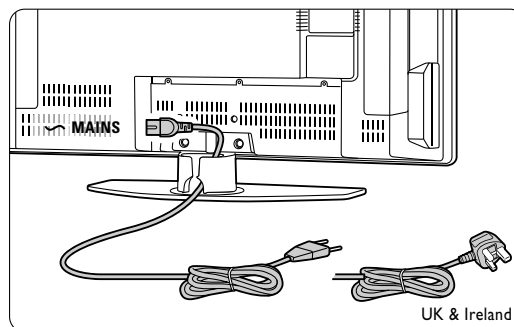

The TV is never powered off completely unless the mains cord is physically unplugged. Therefore the mains plug must be accessible at all time.

3.6 First time installation

The first time, and only the first time, the mains cord is inserted, the installation procedures starts up automatically. Follow the instructions on screen.



Tips



- If you notice you have selected a wrong language, press the red key on the remote control to return to the language selection menu.
- To rearrange the stored channels, see section **6.3 Rearrange stored channels**.

4 Use your TV


Learn how to operate your TV for daily use.

4.1 Switch on or off - Standby



To switch on the TV:


- Press  **Power** at the right side of the TV if the standby led is off.
- Press  on the remote control if the standby led is on.

To switch to standby:


- Press  on the remote control.

To switch on from standby without remote control:

- Press  **Power** at the side of the TV to switch off first and press  **Power** again to switch on.

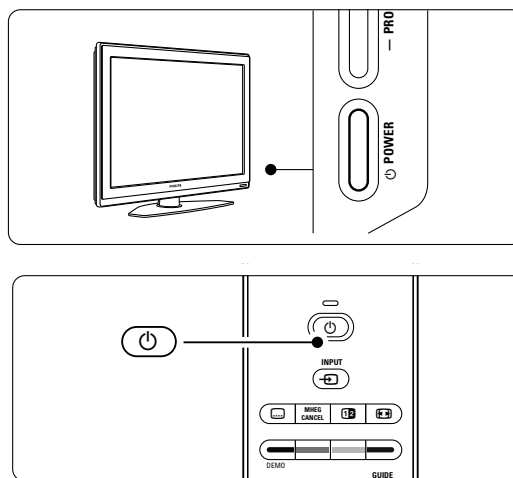

To switch off:

- Press  **Power** at the side of the TV.


Note

Energy consumption contributes to air and water pollution. As long as the mains cord is plugged in, the TV consumes energy. This TV has a very low standby power consumption.

4.2 Watch TV


4.2.1 Switch channels

- 1** To switch TV channels:
 - Press a number (1 to 999) or press **P+** or **P-** on your remote control.
 - Press **Program/Channel** - or **+** on the side controls of the TV.
- 2** Press **P=P** to return to the previously viewed TV channel.

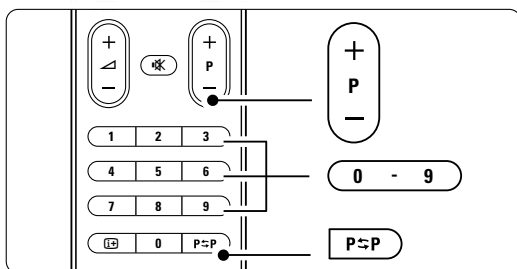

4.2.2 Adjust volume

- 1** To adjust the volume:
 - Press **+** or **-** on the remote control
 - Press **Volume** **+** or **-** on the side controls of your TV.
- 2** To mute the sound:
 - Press **Mute** on the remote control
 - Press **Mute** again to restore the sound.

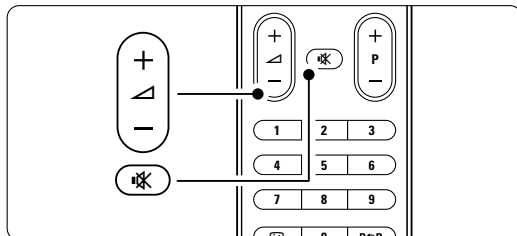


4.3 Watch channels from a digital receiver

- 1** Switch on the digital receiver.
The picture from your receiver might appear automatically on your screen.
- 2** Use the remote control of your digital receiver to select TV channels.

If the picture does not appear:

- 1** Press **Input** on the remote control.

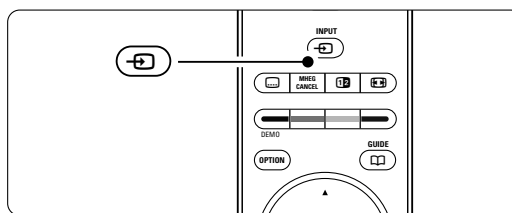

- 2** Press **Input** repeatedly to select the device. Wait a few seconds until the picture appears.
- 3** Press **OK**.
- 4** Use the remote control of the digital receiver to select TV channels.

4.4 Watch connected devices

- 1** Switch on the device.
The picture from your device might appear automatically.

 
If the picture does not appear:


- 2** Press **Input** on the remote control.
- 3** Press **Input** repeatedly to select the device. Wait a few seconds until the picture appears.
- 4** Press **OK**.
- 5** Use the remote control of your device to select TV channels.


4.5 Watch a DVD

- 1** Insert a DVD disc in your player.
 - 2** Press **Play** ►.
- The picture from your player appears automatically on your screen.

If the picture does not appear:

- 1** Press  on the remote control.

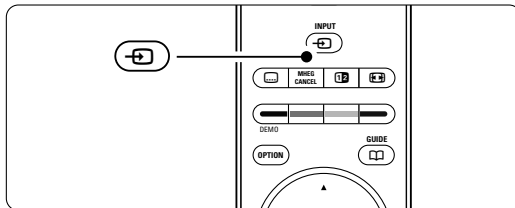


- 2** Press  repeatedly to select the DVD player. Wait a few seconds until the picture appears.
- 3** Press **OK**.
- 4** Press **Play** ►.

4.6 Select a Teletext page

Most TV channels broadcast information via Teletext.

To watch Teletext:


- 1** Press .
- The main index page appears.

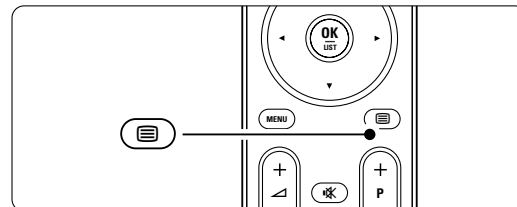

- 2** To select a page of your choice:
 - Enter the page number with the number keys.
 - Press **P-** or **P+** or **▲**, **▼** to view the next or the previous page.
 - Press a colour key to select one of the colour coded items at the bottom of the screen.

Tip

Press **P↔P** to return to the previously viewed page.

- 3** Press  again to switch Teletext off.

Note

Only for UK: some digital TV channels offer dedicated digital text services (for example BBC1).

For more information on teletext, see section **5.5 Teletext**.


4.7 Change Ambilight mode

You can choose among four Ambilight modes:

- **Colour**
Sets Ambilight to a constant colour.
- **Relaxed**
Sets Ambilight to change soft and smoothly with the images on screen.
- **Moderate**
Sets Ambilight between Relaxed and Dynamic.
- **Dynamic**
Sets Ambilight to change quick and responsive.

To change the Ambilight mode:

- 1** Press **Ambilight** to switch on or off.

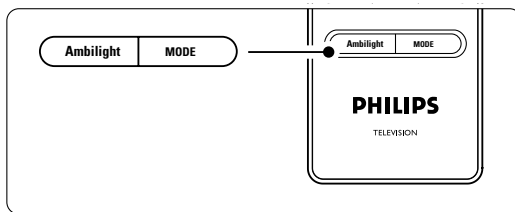

- 2** Press **Mode** repeatedly to toggle through the Ambilight modes.
- 3** Press **OK**.

For more information on Ambilight, see section **5.4 Ambilight**.

Tip


To fully enjoy Ambilight, switch off or dim the room lights.

5 Use more of your TV



This section deals with the more advanced use of your TV:

- how to use the menus
- to adjust the picture, sound and Ambilight settings
- more about Teletext
- how to create favourite channel lists
- the advantages of Electronic Programme Guide
- how to set locks and timers
- to set subtitles and select a subtitle language
- how you can view your photos or play your favourite music from a USB memory device.

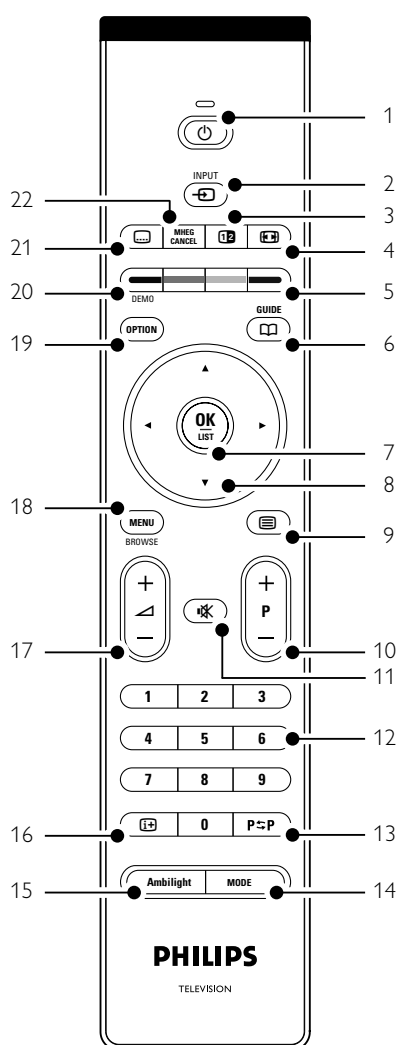5.1 Remote control overview



- Standby** To switch the TV on or back to standby.
- Input** To select a connected device or to return to TV.
- Dual screen** To show teletext on the right and the picture on the left of the screen.
- Widescreen Picture format** To select a picture format.
- Colour keys**
 - Easy selection of teletext pages.
 - Easy selection of tasks.
- Guide** To switch on or off the Electronic Programme Guide.
- OK/List**
 - To display the channel list.
 - To activate a setting.
- Navigation keys** To navigate the menu.
- Teletext** To switch teletext on or off.
- +P- Channel up or down** To switch to the next or previous channel in the channel list.
- Mute** To mute the sound or restore it.
- Number keys** To select a TV channel.
- Previous channel P<P** To return to the previously viewed channel.
- Mode** To toggle through the Ambilight modes
- Ambilight** To switch Ambilight on or off.
- On screen information** To show channel or programme information if available.

- 17 **Volume up or down** 
 - To adjust the volume.
- 18 **Menu**
 - To switch the menu on or off.
- 19 **Option**
 - To switch the Quick access menu on or off.
- 20 **Demo**
 - To switch the Demo menu on and to get a demonstration of the features of the TV.
- 21 **Subtitles** 
 - To activate or deactivate the subtitle mode.
- 22 **MHEG cancel (only for UK)**
 - To cancel only Digital text or Interactive services.


See section **10 Index** to find the section in the manual about a specific remote control key.

5.2 TV menu overview

With the on screen menus you install your TV, adjust picture, sound and Ambilight settings and access features. This section gives an overview of the menus and describes how to navigate.

5.2.1 The menu

- 1** Press **Menu** on the remote control to show the main menu.
- 2** Press **Menu** to quit the menu.

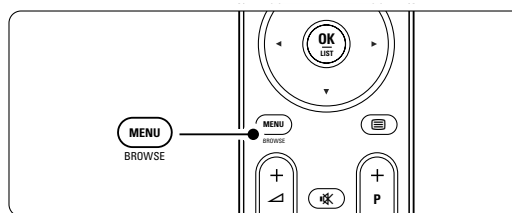

Television	TV menu
	Channel list
	Programme guide
Multimedia	


The main menu offers the following items:

- **TV menu**
 - Select this menu for installation, picture and sound settings, Ambilight and other feature settings.
- **Channel list**
 - Select this item to show the Channel list. Create your Favourite channel lists here.
- **Programme guide**
 - Available when digital channels are installed, this item shows information about the digital programmes. According to the type of Electronic Programme Guide, you can also access the table of scheduled Digital TV programmes and easily select and tune to a desired programme. See section **5.7 Electronic Programme Guide**.
- **Multimedia**
 - Select this item to view photos or play music stored on a USB device. See section **5.10 View and play photos, MP3, ...**

5.2.2 Use of the menu

Learn to use the menus with this example.

1 Press **Menu** on the remote control.

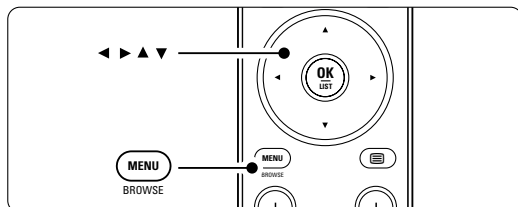

The main menu appears on the screen.

Television	TV menu
	Channel list
	Programme guide
Multimedia	

2 Press **►** to enter the **TV menu**.

TV menu	TV settings
TV settings	Settings assistant
Features	Reset to standard
Installation	Picture
Software update	Sound
	Ambilight

3 Press **►** to enter the TV settings menu.

TV settings	Settings assistant
Settings assistant	Start now
Reset to standard	
Picture	
Sound	
Ambilight	

4 Press **▼** to select **Picture**.

TV settings	Picture
Settings assistant	Contrast
Reset to standard	Brightness
Picture	Colour
Sound	Hue
Ambilight	Sharpness
	Tint
	Perfect Pixel HD
	...


5 Press **►** to enter the picture settings.

Picture	Contrast
Contrast	90
Brightness	47
Colour	52
Hue	0
Sharpness	4
Tint	
Perfect Pixel HD	
Dig...Nat...Motion	

6 Press **▼** to select **Brightness**.

Picture	Brightness
Contrast	98
Brightness	47
Colour	52
Hue	0
Sharpness	4
Tint	
Perfect Pixel HD	
Dig...Nat...Motion	

7 Press **►** to enter the Brightness setting.

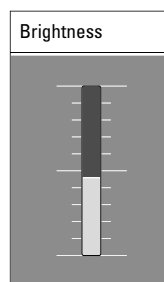

8 Press **▲** or **▼** to adjust the setting.

9 Press **◀** to return to the Picture settings or press **Menu** to quit the menu.

Note:


More choices come available when digital channels are installed and broadcasted.

5.2.3 Quick access menu

The Quick access menu gives direct access to some often needed menu items.

When digital channels are installed and broadcasted the relevant digital options are shown in the menu.

- 1** Press **Option** on the remote control.
- 2** Press **▲** or **▼** to select an option.
- 3** Press **OK** to show the selected option menu.
- 4** Press **▲**, **▼**, **◀**, **▶** to adjust the settings in the menu.
- 5** Press **Option** to quit the menu.

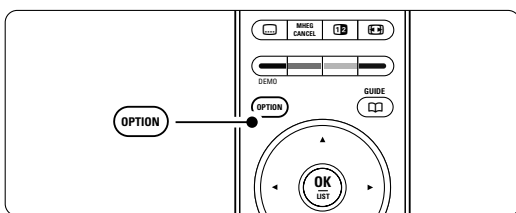

- **Audio language**
See section 5.3.5 Adjust sound settings.
- **Subtitle language**
See section 5.9.3 Select a digital subtitle language.
- **Subtitles**
See section 5.9 Subtitles.
- **Picture format**
See section 5.3.4 Widescreen picture format.
- **Equalizer**
See section 5.3.5 Adjust sound settings.
- **Clock**

Display the clock

- 1** Press **OK** to display the clock permanently.
- 2** Press **Option** and press **▲** or **▼** to select Clock again.
- 3** Press **OK** to hide the clock.

Quick access
Audio language
Subtitle language
Subtitle
Picture format
Equalizer
Clock

5.3 Picture and Sound settings

This section describes how to adjust picture and sound in the menus.

5.3.1 Settings assistant

Use the Settings assistant to guide you through basic picture, sound and Ambilight settings in an easy way.

- 1** Press **Menu** on the remote control and select TV menu > TV settings > **Settings assistant** and press **▶** to enter.
- 2** Press **OK**.
- 3** Press the green key on the remote control to start the assistant.
- 4** Press **◀** or **▶** to select the left or right side to make your choice.
- 5** Press the green key to go to the next setting. You will go through several settings. When finished the TV will ask you to store these settings.
- 6** Press the green key to store all your settings.

5.3.2 Reset to standards

Sets the TV to one of the predefined settings. Each setting combines picture, sound and Ambilight.

- 1** Press **Menu** on the remote control and select TV menu > TV settings > **Reset to standard** and press **▶** to enter the list.
- 2** Press **▲** or **▼** to select a setting.
- 3** Press the green key to store your selection.

Standard settings: Current, Natural, Vivid, Movie

5.3.3 Picture settings

This section describes how to adjust all picture settings.

1 Press **Menu** on the remote control and select TV menu > TV settings > **Picture** and press ► to enter the list.

2 Press ▲ or ▼ to select a setting.


TV settings	Picture
Settings assistant	Contrast
Reset to standard	Brightness
Picture	Colour
Sound	Hue
Ambilight	Sharpness
	Tint
	Pixel Plus
	Dig. Nat. Motion
	100 Hz Clear LCD
	Dynamic contrast
	Noise reduction
	MPEG artefact red.
	Colour enhanc ...
	Active control
	Light sensor
	Picture format


- **Contrast**
Changes the level of bright parts in the picture but keeps the dark parts unchanged.
- **Brightness**
Changes the level of light of the total picture.
- **Colour**
Changes the level of saturation.
- **Hue**
If NTSC is broadcasted, this level compensates the colour variations.
- **Sharpness**
Changes the level of sharpness of fine details.
- **Tint**
Sets the colours to Normal, Warm (reddish) or Cool (bluish). Select Custom to make a setting of your own in the Custom tint menu.
- **Custom tint**
If Custom is selected in the Tint menu you can make a setting of your own here.
Press the green key to select each bar to change the value of:
 - R-WP red whitepoint
 - G-WP green whitepoint
 - B-WP blue whitepoint
 - R-BL red blacklevel
 - G-BL green blacklevel




- **Perfect Pixel HD**
Enables or disables Perfect Pixel HD, the most ideal picture setting.
- **Digital Natural Motion**
Reduces the field and line flicker and reproduces smooth movement especially in movies.
Set the level to Minimum, Maximum or Off.
- **100Hz Clear LCD**
Switches 100Hz Clear LCD on or off.
- **Dynamic contrast**
Enhances the contrast in the picture as the image on the screen changes.
Set the level to Minimum, Medium, Maximum or Off. The level medium is recommended.
- **Noise reduction**
Filters out and reduces the noise in the picture.
Set the level to Minimum, Medium, Maximum or Off.
- **MPEG artefact reduction**
Smoothens the transitions on digital pictures.
Switches MPEG artefact reduction on or off.
- **Colour enhancement**
Makes the colours more vivid and improves the resolution of details in bright colours.
Set the level to Minimum, Medium, Maximum or Off.
- **Active control**
Corrects all incoming signals in order to provide the best picture possible.
Switches Active control on or off.
- **Light sensor**
Adjusts the picture and Ambilight settings on the lighting conditions in the room.
Switches Light sensor on or off.
- **Picture format**
See section **5.3.4 Widescreen picture format**.

5.3.4 Widescreen picture format

Avoid black bars on the sides or on top and bottom of the picture. Change the picture format to a format that fills the screen.

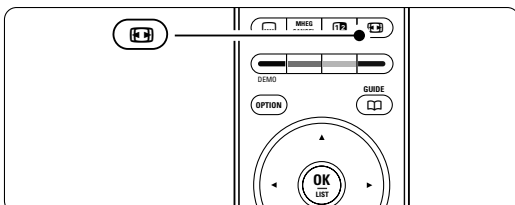
- 1 Press  to switch on the Picture format menu.



- 2 Press  or  to select an available picture format.
- 3 Press  to shift the picture upwards to make partly covered subtitles visible.

Tip

 The Auto format setting is recommended for minimal distortion.



Auto format (Not for PC.)

Enlarges the picture automatically to fill the screen. Subtitles remain visible.



Super zoom (Not for HD.)

Removes the black bars on the side of 4:3 broadcasts. There is a minimal distortion.




4:3 (Not for HD.)

Shows the classical 4:3 format.



Movie expand 14:9

(Not for HD.)
Scales classical 4:3 format to 14:9.

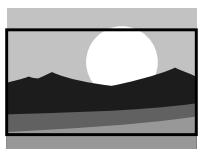


Movie expand 16:9

(Not for HD.)
Scales classical 4:3 format to 16:9.



Wide screen

 Stretches 4:3 format to 16:9.



Unscaled


(Only for HD and PC.)
Maximum sharpness.
Distortion may appear on borders. Black bars may appear with pictures from your PC.


 
Note

Do not forget to name the connection in the Connection menu. See section 7.4.3 Naming your devices.

5.3.5 Sound settings

This section describes how to adjust all sound settings.

- 1 Press **Menu** on the remote control and select TV menu > TV settings > **Sound** and press  to enter the list.

- 2 Press  or  to select a setting.



TV settings	Sound
Settings assistant	Equalizer
Reset to standard	Volume
Picture	Balance
Sound	Audio language
Ambilight	Dual I/II
	Mono/Stereo
	Surround mode
	Headphone volume
	Auto volume level...
	Delta volume
	Auto surround


 

• Equalizer

Changes the bass and treble of the sound. Select each bar to change the setting. See also section 5.2.3 Quick access menu.

• Volume

Changes the volume.

When adjusting the volume with  a volume bar appears. If you don't want it to appear go to TV menu > Installation > **Preferences** and press  to enter the list and select Volume bar off.

- 1 Press  or  to select **Volume bar**.
- 2 Press  to enter:
- 3 Select **On** to activate the temporarily display of the volume bar when adjusting the volume.

• Balance

Sets the balance of the left and right loudspeakers to fit best your listening position.

- **Audio language**

A list of audio languages for the current programme may be available when digital channels are installed and broadcasted. See also section 5.2.3 Quick access menu. To permanently change the audio language, see section 6 Channel installation.

- **Dual I/II**

If broadcasted, you can choose between two different languages.


- **Mono/stereo**

If stereo broadcasting is available, you can select Mono or Stereo per TV channel.

- **Surround mode**

To select a more spatial sound if broadcasted or if available from a connected device.

- **Headphone volume**

Changes the volume of the headphone. You can mute the TV speakers with  on the remote control.

- **Automatic volume leveller**

Reduces sudden volume differences like at the beginning of commercials or when switching from one channel to another. Select on or off.

- **Delta volume**

Levels out volume differences between channels or connected devices.

1 Switch to the channel or device you want to level out the volume difference.


2 Select **Delta volume** in the Sound menu and change the volume level.

- **Auto surround**

Switches the TV automatically to the best surround sound mode broadcasted. Select on or off.

5.4 Ambilight

This section describes how to adjust Ambilight settings.

1 Press **Menu** on the remote control and select TV menu > TV settings > **Ambilight** and press  to enter the list.

2 Press  or  to select a setting.

TV settings	Ambilight
Settings assistant	Ambilight
Reset to standard	Brightness
Picture	Mode
Sound	Colour
Ambilight	Separation
	Balance

- **Ambilight**

Switches Ambilight on or off.

- **Brightness**

Changes the light output of Ambilight.

- **Mode**

You can choose among four Ambilight modes: **Colour, Relaxed, Moderate, Dynamic**. See section 4.7 Change Ambilight mode.

- **Colour**

If Colour is selected in the Mode menu you can select a constant colour from the list or make a custom colour of your own.

- **Warm white**

- **Cool white**

- **Blue**

- **Custom**

When Custom is selected in the Colour menu you can customise your colour.

1 Select **Saturation** first and set the value high.

2 Select **Palette** and slide from 0 to 100 to go from red over yellow, green to blue.

- **Separation**

Sets the level of difference in colour between the left and right side of the TV if Relaxed, Moderate or Dynamic is selected in the Mode menu. Separation off shows a dynamic but mono colour Ambilight.

- **Balance**

Like stereo sound balance, sets the level of Ambilight for the left and right side of the TV.


⚠ Caution

To avoid bad infrared remote control reception, place your devices out of sight of Ambilight.

TV standby with Ambilight

When the TV is standby, you can switch Ambilight on. In this case Ambilight is only available as constant colour.

- 1 Press **Ambilight** on the remote control when the TV is in standby.
- 2 Press **Mode** repeatedly to select an available colour.

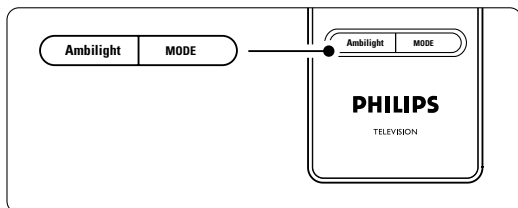




5.5 Teletext

Your TV has a 1200 pages memory that stores broadcasted teletext pages and subpages to reduce waiting time.

To select a teletext page see section 4.6 Select a Teletext page.


 




5.5.1 Select pagenumber subpages


A teletext page number can hold several subpages. The pages are shown on a bar next to the main pagenumber.

- 1 Press .
- 2 Select a teletext page.
- 3 Press  or  to select a subpage.

 5.5.2 Select T.O.P. teletext broadcasts




T.O.P. teletext (Table of Pages) is not broadcast by all TV channels. You can easily jump from one subject to another without using pagenumbers.

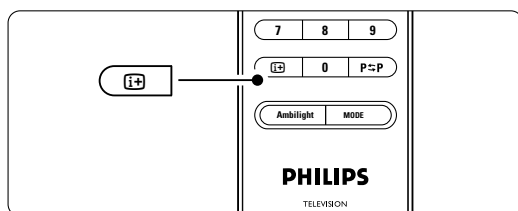- 1 Press .
- 2 Press .
- The T.O.P. overview appears.
- 3 Use  or  or  or  to select a subject.
- 4 Press **OK** to view the page.





 



5.5.3 Dual screen teletext

View the TV channel and teletext next to each other.

- 1 Press  for Dual screen teletext.
- 2 Press  again to show normal teletext.
- 3 Press  to switch off teletext.




5.5.4 Search teletext


Quickly jump to a subject linked to a series of pagenumbers or search for specific words in teletext pages.

- 1 Press .
- 2 Press **OK** to highlight the first word or number.
- 3 Press ,  or ,  to jump to the next word or number on the page.
- 4 Press **OK** the search a page which holds the highlighted word or number.
- 5 Press  until no word or number is highlighted to quit Search.

5.5.5 Enlarge teletext pages

For a more comfortable reading, you can enlarge the teletext page.

- 1 Press  and select a teletext page.
- 2 Press **Option** on the remote control to enlarge the top part of the page.
- 3 Press **Option** again to view the enlarged lower part of the page.
- 4 Press  or  to scroll through the enlarged page.
- 5 Press **Option** again to return to the normal page size.

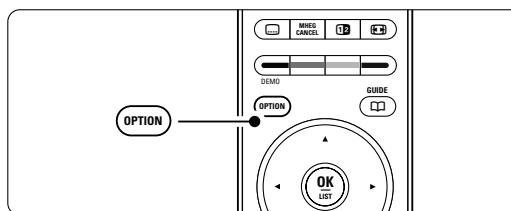

5.5.6 Teletext menu

With the options in the teletext menu you can reveal hidden info, let cycle subpages automatically and change the character setting.

- **Reveal**

Hide or unhide hidden information on a page, such as solutions to riddles or puzzles.

- **Cycle subpages**


If subpages are available for the selected page, you can make subpages cycle automatically.

- **Language**

Some languages use a different set of characters. Switch to the other group to show the text correctly.

1 Press .


2 Press **Menu**.

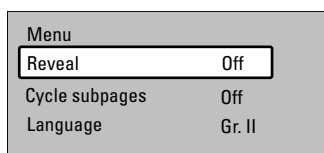

3 Press **▲** or **▼** to select an option.

4 Press **OK** to change a setting.

5 Press **Menu** to quit the teletext menu.

6 Press  to switch off teletext.

5.5.7 Digital text services (UK only)

Some digital TV broadcasters offer dedicated digital text or interactive services (for example BBC1) on their digital TV channels. These services work as normal Teletext with the number, colour and navigation keys to select and navigate.

1 Press .

2 Press **▲**, **▼** or **◀**, **▶** to select or highlight items.

3 Press one of the colour keys to select an option.

4 Press **OK** to confirm or activate.

5 Press **MHEG Cancel** to cancel Digital text or interactive services.

Caution

Digital text services are blocked when subtitles are broadcasted and Subtitle On is set in the Features menu. See section **5.9 Subtitles**.

5.5.8 Teletext 2.5

If broadcasted by the TV channel this teletext offers more colours and better graphics.

Teletext 2.5 is switched on as a factory setting.

1 Press **Menu** on the remote control and select TV menu > Installation > Preferences >

Teletext 2.5 and press **▶** to enter the list.

2 Select on or off.

5.6 Create favourite channel lists


View the All channels list or set up a Favourite list of your own with your preferred TV channels and radio stations. For example, each member of your family can create his or her own favourite list.

5.6.1 Select a favourite list

Learn how to select one of the favourite channel lists.

1 Press **OK**.

The first time after you have finished the installation, the All channels list is shown. In other situations, it brings up the last selected favourite list.

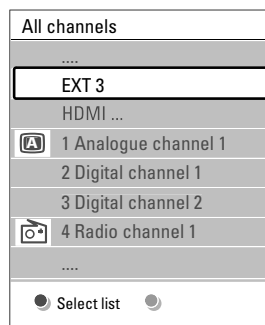

2 Press the red key to show all favourite lists.

3 Press **▲** or **▼** to select a list.

4 Press **OK**.

The selected favourite list appears.

5 Press **OK** again to quit.

5.6.2 To set up a favourite list

Create or modify your own favourite list.


- 1** Press **OK**.
The last selected list appears.
- 2** Press the red key to show all favourite lists.
- 3** Press **▲** or **▼** to select a list.
- 4** Press **OK**.
- 5** Press the green key to enter the Edit mode.
The selected list brings up a full channel list.
- 6** Press **▲** or **▼** to highlight a channel.
- 7** Press **OK** to mark (or unmark) the highlighted channel.
The channel is added to (or removed from) the selected list.
- 8** Press the green key again to leave the Edit mode.
The modified channel list appears again.

5.6.3 Select a channel from a favourite list

- 1** Press **OK**.
The last selected channel list appears.
- 2** Use **▲** or **▼** to highlight a channel.
- 3** Press **OK**.
The TV tunes to that channel.

Tip

- Use **-P+** to go through the TV channels of the selected favourite list.
- With the number keys you can still select channels which are not marked as favourite.

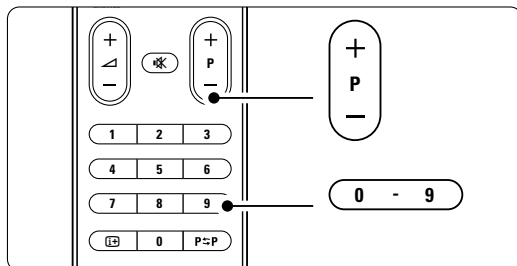

5.7 Electronic Programme Guide - EPG -

The Electronic Programme guide is an on screen guide to scheduled digital TV programmes. You can navigate, select and view programmes by time, title or genre. There are two types of EPG, 'Now and Next' and '7 or 8 day' EPG.


When digital channels are installed and broadcasted, EPG is available. 'Now and Next' is always available but the '7 or 8 day' EPG is only available in some countries.

With the EPG menu you can ...

- see a list of current broadcasted programmes
- see the next programme
- group programmes by genre
- set reminders when programmes will start
- set up preferred EPG channels
- etc.

5.7.1 Switch on EPG

- 1** Press **BOOK**.

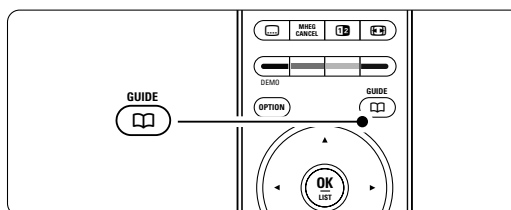

The following type of EPG appears

'Now and Next' EPG

Detailed information about the current programme is shown.

26	BBC1	Tue., 12 Sep	09:17
Title : Commonwealth Games			
Info: 7:50 - 12:30 : 280 min			
.....			
<div> ● Exit ● Next ● ● </div>			
Press -P+ to change channel.			

Or

'7 or 8 day' EPG

It may take some time to receive the EPG data.
The list of TV programmes will show

Programme guide				Tue., 12 Sep	
	Around	09:55	Next		
BBC ONE	07:50	Commonwealth	12:30	Commonwealth	
BBC TWO	09:50	Tweenies	10:15	Something Special	
five	09:00	The Wright Stuff	10:30	Trisha Goddard	
BBC THREE	05:32	This is BBC THREE	12:00	This is BBC THREE	
BBC FOUR	05:32	This is BBC FOUR	12:00	This is BBC FOUR	
abc1	09:20	Moonlighting	10:15	Daddio	
<div><div><div> Remind</div><div> Watch</div><div> Jump to ...</div><div> Info</div></div><div><div>13:50 Anastasia</div><div>0010 - EEN</div></div></div>					

- 2 Use the colour keys to activate the available actions at the bottom of the screen.
 - **Next:** to show information about the next programme.
 - **Remind:** to mark or unmark a programme as a reminder.
 - **Watch:** to watch or listen to a current programme.
 - **Jump to...:** to jump to the next or previous day.
 - **Info:** to display information on a selected programme (if available).
- 3 Press to quit the EPG.

5.7.2 More on '7 or 8 day' EPG

Search by genre, scheduled reminders, etc. are managed in the Programme guide menu.

- 1 Press on the remote control.
 - 2 Press **Menu**.
- The Programme guide menu appears.

Programme guide	What's on
What's on	12:30 South Today
Search by genre	11:50 Working Lunch
Scheduled remind...	11:55 Melrose Place
Preferred EPG ch...	13:00 In aller Freund
Acquire EPG data	

- 3 Press or to select a menu option.
- 4 Press to enter.
- 5 Press or to make a selection.
- 6 Press **OK** to activate or press the green key to watch
- 7 Press to quit the EPG.

Note

Only channels marked as Preferred EPG channels appear in the Programme guide menu.

5.8 Timers and locks

This section describes how to switch the TV on or off at a specified time and to lock or unlock the TV.

5.8.1 Automatically switch to standby

Sleeptimer switches the TV to standby after a time.

- 1 Press **Menu** on the remote control and select TV menu > Features > **Sleeptimer** and press to enter the sleeptimer bar.
- 2 Press or to set the time up to 180 minutes in steps of 5 minutes. If set to 0 minutes, the Sleeptimer is switched off.

You can always switch off your TV earlier or reset the time during countdown.

5.8.2 Automatically switch the TV on

On timer switches the TV on automatically to a specified channel at a specified time, from standby.

- 1 Press **Menu** on the remote control and select TV menu > Features > **On timer** and press to enter the On timer menu.
- 2 Use , , or to select and enter the menu items one by one to set a channel, a day of the week or daily, and a starting time.
- 3 Press **OK** to confirm.
- 4 Press **Menu** to quit the menu.

Tip

To switch off the On timer, select **Off** in the On timer menu.

5.8.3 Lock TV channels and programmes

Lock TV channels and/or programmes from connected devices to prevent children from watching them. Lock and unlock with a four number code.

Set or change your code

- 1 Press **Menu** on the remote control and select TV menu > Features > **Set or Change code** and press to enter your code.
- 2 Enter your code with the number keys.
The **Features** menu reappears with a message confirming that your code has been created or changed.

Did you forget your code ?

- 1** Select **Change code**.
- 2** Press **►**.
- 3** Enter the overriding code 8-8-8-8.
- 4** Enter a new personal code.
- 5** Confirm your new entered code.
The previous code is erased and the new code is stored.

5.8.4 Activate or deactivate Child lock

If your code is set, you can lock all channels and devices, lock a specific channel or device, set a time after which all channels and devices are locked or set the age of your child for parental rating when digital channels are installed and broadcasted.

- 1** Press **Menu** on the remote control and select TV menu > Features > **Child lock** and press **►** to enter your code.
- 2** Enter your code with the number keys.
- 3** Select one of the options.
- 4** Press **►**.

Lock or unlock all channels and connected devices

- 1** Select **Lock** or **Unlock**.
- 2** Press **OK**.

Lock a certain programme or all channels from a certain time

Child lock	Custom lock
Lock	Lock after
Custom lock	Channel lock
Unlock	Parental rating

- 1** Select **Custom lock**.
- 2** Press **►** to enter the Custom lock menu.
- 3** Press **►** again to enter the Lock after menu.
- 4** Select **On** to switch on the Timer lock.
- 5** Press **◀**.
- 6** Select **Time**.
- 7** Press **►**.
- 8** Enter the time with **▲** or **▼** and **►**.
- 9** Press **OK**.

Lock one or more channels and connected devices

- 1** Select **Custom lock**.
- 2** Press **►** to enter:
- 3** Press **▲** or **▼** to select **Channel lock**.
- 4** Press **►**.
- 5** Press **▲** or **▼** to select the channel(s) you want to lock or unlock.
- 6** Each time press **OK** to lock or unlock the channel.

Set an age rating to a digital programme

Some digital broadcasters have their programmes rated (depending on your country). When the rating is higher than your child's age, the programme will be locked.

- 1** Select **Custom lock**.
- 2** Press **►** to enter:
- 3** Press **▲** or **▼** to select **Parental rating**.
- 4** Press **►**.
- 5** Press **▲** or **▼** to select an age rating.
- 6** Press **Menu** to quit the Child lock menu.

5.9 Subtitles

For each TV channel, subtitles can be set, coming from Teletext or DVB-T (digital) broadcasts. If digital channels are installed and broadcasted, you can select your preferred subtitle language.

5.9.1 Subtitling from analogue TV channels

- 1** Select an analogue TV channel.
- 2** Press **≡** to switch on Teletext.
- 3** Enter the three number pagenumber of the subtitle page.
- 4** Press **≡** to switch off Teletext.

Note

The Teletext subtitle page of analogue channels must be stored for each TV channel separately.

5.9.2 Activate or deactivate subtitling

- 1 Press **Menu** on the remote control and select TV menu > Features > **Subtitle** and press **►** to enter the list.

TV menu	Features
TV settings	Subtitle
Features	Subtitle language
Installation	Sleeptimer
Software update	Child lock
	Set/Change code
	On timer
	Common interface
	Demo

- 2 Press **▲** or **▼** to select **On** to show the subtitles always or **On during mute** to show the subtitles only when the sound is muted with the **Mute** key on the remote control.

- 3 Press **◀** to return to the Features menu.

Tip

Select the Subtitle menu directly with **Option** on the remote control. See section 5.2.3 Quick access menu.

5.9.3 Select a digital subtitle language

If subtitle broadcasting is available with digital channels, you can select a preferred subtitle language out of a list of broadcasted languages. The preferred subtitle language set in the Installation menu is overruled temporarily.

- 1 Press **Menu** on the remote control and select TV menu > Features > **Subtitle language** and press **►** to enter the list of available languages.
- 2 Press **▲** or **▼** to select a subtitle language.
- 3 Press **OK**.

Tip

Select the Subtitle language menu directly with **Option** on the remote control. See section 5.2.3 Quick access menu.

5.10 View and play: photos, MP3, ...

Watch pictures or listen to music stored on a USB device (not supplied with the TV). Watch your pictures as a slideshow or listen to a self made music playlist.

Note

Philips can not be held responsible if your USB device is not supported nor shall Philips accept any liability for damage or loss of stored data.

5.10.1 Insert a USB device

Insert a device at the side of the TV while the TV is switched on.

The main menu appears automatically and the name of the USB device is highlighted next to **Multimedia**.

Television	TV menu Channel list Programme guide
Multimedia	

5.10.2 Remove the USB device

Caution

To avoid damaging the USB device always quit the menu on screen and wait five seconds before you remove the USB device.

- 1 Press **Menu** to quit the menu.
- 2 Remove the USB device.

5.10.3 View your pictures

The Multimedia menu shows the files you have stored on your USB device.

- 1 Press **►** to enter the Multimedia menu. **Picture** is highlighted.

USB	Picture
Picture	Afrika_2001
Music	Paris_2006
	My_car.jpg
	Jean.jpg
	Mary.jpg

- 2 Press **►** to enter the Picture folder.
- 3 Press **▲** or **▼** to select a picture or a picture album on the USB device.

Picture	Afrika_2001
Afrika_2001	Kenya.jpg
Paris_2005	Congo.jpg
My_car.jpg	Victoria.jpg
Jean.jpg	Dakar.jpg
Mary.jpg	Cairo.jpg

Afrika_2001	Afrika_2001
Kenya.jpg	
Congo.jpg	
Victoria.jpg	
Dakar.jpg	
Cairo.jpg	

- 4** Press **OK** to view the picture or to start a slideshow of the pictures in the album.
- 5** Press **OK** to pause the slideshow. Press again to restart.
- 6** Press one of the colour keys on the remote control to perform the corresponding function shown at the bottom of the screen.
Press the blue key to stop the show and to see more functions.
If the function bar at the bottom disappeared, press any colour key to let it reappear.
- 7** Press **◀** and select another picture or another album.


Slideshow settings

- **Details / More details**
Shows the picture name, date, size and next picture in the slideshow.
- **Transitions**
Shows the list of available transition styles of the pictures.
Press **▲** or **▼** to select and press **OK** to activate.
- **Slide time**
Sets the time lag for the picture transitions:
Short, Medium or Long.
- **Rotate**
To rotate a picture.
- **Zoom**
Show a list of available zoom magnifications to select.
- **Start/Show**
To stop and restart the slideshow.

5.10.4 Thumbnails

View the pictures of a selected album in an overview.

- 1** Select a picture album.
- 2** Press **▶** to enter the picture list.
- 3** Press the green key.
- 4** Press **▲** or **▼**, **◀** or **▶** to highlight a picture.
- 5** Press **OK** to view the picture.
- 6** Press **◀** to return to the thumbnail overview.
- 7** Press the green key again to go back to the picture list.

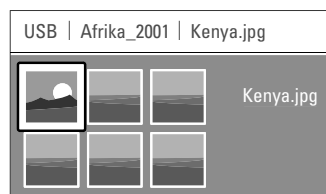

5.10.5 Listen to music

Find your songs in the Music album of the Multimedia menu.

- 1** Highlight **Music** in the Multimedia menu.
- 2** Press **▶** to enter the Music folder.
- 3** Press **▲** or **▼** to select a song or a music album.
- 4** Press **OK** to play the selected song or to play a song followed by the next song in the same album.

Music settings

- **Details**
Shows the file name.
- **Repeat one/all**
Repeat all songs in the album until you stop a song or only repeat the one song selected until you stop the song.
- **Shuffle**
Play songs in a random sequence.

5.10.6 Slideshow with background music

Watch a slideshow of your stored pictures accompanied with your stored background music.

- 1** Select an album of songs first and press **OK**.
- 2** Highlight the Picture folder and select an album of pictures and press **OK**.

5.11 Listen to radio channels

If digital broadcasting is available, digital radio channels will be installed during installation.

To listen to a digital radio channel:

- 1** Press **OK** on the remote control.
The **All channels** menu is displayed.
- 2** Use the number keys to select a radio channel available from channel number 400 onwards.
To reorder see section **6.3.3 Reorder the channels**.
- 3** Press **OK**.

5.12 Software update

Philips continuously tries to improve its products. It may be recommended for you to update the TV's software. Update the software from the internet or activate new software sent to you by digital broadcast.

Software update from the internet

For instructions on how to update the TV software go to www.philips.com/support and look for Software & drivers on the Product support page.

Software update by digital broadcast (DVB-T)

Your TV might receive new software from the digital broadcast system automatically.

If you receive an update message on screen it is strongly advised to update the software immediately - select **Now**.

Select **Later**, if you want to be reminded later on.

Select **Cancel** to quit the update (not recommended). If you cancelled the update you can still update yourself from the TV menu > Software update > Local update.

6 Channel installation

The first time you switched on your TV you've selected the language of the TV menus and all the available channels have been installed.

This chapter will help you if you find it necessary to re-do the initial installation or if you want to tune in a new analogue TV channel.

Notes:

- You do not have to follow every step described if it is not necessary.
- Re-installation will modify the All channels list and new added channels will not be added to any favourite list.

6.1 Automatic installation

This section describes how to search for and store all available channels automatically.

Step 1 Menu language

Sets the language of the TV menus.

Go to a next step if your language settings are correct.

- 1 Press **Menu** on the remote control and select TV menu > Installation > **Languages** and press **▶** to enter **Menu language**.
- 2 Press **▲** or **▼** to select your language.
- 3 Press **OK** to confirm.
- 4 Press **◀** to return to the Installation menu.

Installation	Languages
Languages	Menu language
Country	Preferred audio
Time zone	Preferred subtitles
Channel install...	Hearing impaired
Preferences	
Connections	
...	

The Languages menu also offers the following language settings when digital channels are installed and broadcasted.

• Preferred audio

Select one of the available audio languages as preferred language.

• Preferred subtitles

Select one of the available subtitle languages as preferred language. See section **5.9 Subtitles**.

• Hearing impaired

Select **On** to display the hearing impaired subtitle version of your preferred audio or subtitle language when available.

Step 2 Select your country

Select the country where you are located. The TV will install and arrange the TV channels according to your country.

- 1 Press **▼** to select **Country**.
- 2 Press **▶** to enter the list.
- 3 Press **▲** or **▼** to select your country.
- 4 Press **◀** to return to the Installation menu.

Step 3 Time zone selection

Only available for countries with different time zones.

- 1 Press **▼** to select **Time zone**.
- 2 Press **▶** to enter the list.
- 3 Press **▲** or **▼** to select your time zone.
- 4 Press **◀** to return to the Installation menu.

Step 4 Install TV and radio channels

Your TV will search for and store all available digital and non-digital TV channels and all available digital radio channels.

- 1 Press **▼** to select **Channel installation**.
- 2 Press **▶** to enter the Channel installation menu. **Automatic installation** is highlighted.
- 3 Press **▶** to select **Start now**.
- 4 Press **OK**.
- 5 Press the green key to start. The installation may take a few minutes.
- 6 When the channel search is completed, press the red key to return to the Installation menu.
- 7 Press **Menu** to quit the TV menu.

Tip

When digital TV channels are found, the list of installed channels may show some empty channel numbers.

If you want to rename, reorder or uninstall stored channels, see section **6.3 Rearrange channels**.

6.2 Analogue: Manual installation

You can tune-in analogue TV channels channel by channel manually with Manual installation.

6.2.1 Select the system

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Analogue: Manual installation**.
- 2** Press **►** to enter the Manual installation menu. **System** is highlighted.
- 3** Press **►** to enter the System list.
- 4** Press **▲** or **▼** to select your country or part of the world where you are now located.
- 5** Press **◀** to return to the Manual installation menu.

Channel install...	Analogue: Manual...
Automatic install...	System
Installation update	Search
Digital: Test recept...	Fine tune
Analogue: Manual...	Store current ch...
Rearrange	Store as new ch...

6.2.2 Search for and store a new channel

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > Analogue: manual installation > **Search**.
- 2** Press **►** to enter the Search menu.
- 3** Press the red key to enter the frequency yourself or press the green key to search for a next channel.

Tip

If you know the frequency, enter the three numbers of the frequency with the number keys of the remote control.

- 4** Press **◀** when the new channel has been found.
- 5** Select **Store as new channel** to store the new channel under a new channel number.
- 6** Press **►** to enter.
- 7** Press **OK**. **Done** appears.
- 8** Press **Menu** to quit the channel installation menu.

6.2.3 Fine tune a channel

Fine tune a found channel when the reception is poor.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > Analogue: manual installation > **Fine tune**.
- 2** Press **►** to enter the Fine tune menu.
- 3** Press **▲** or **▼** to adjust the frequency
- 4** Press **◀** when you finished fine tuning.
- 5** Select **Store current channel** to store the fine tuned channel under the current channel number.
- 6** Press **►** to enter.
- 7** Press **OK**. **Done** appears.
- 8** Press **Menu** to quit the Channel installation menu.

6.3 Rearrange stored channels

To rename, reorder, uninstall or reinstall stored channels.

6.3.1 Rename a channel

Assign or change a channel name to a channel for which a name has not yet been entered.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Rearrange**.
- 2** Press **►** to enter the channel list.
- 3** Press **▲** or **▼** in the channel list to select the channel you want to rename.
- 4** Press the red key.
- 5** Press **◀** or **►** to select a character or **▲** or **▼** to change the characters. Space, numbers and other special characters are located between **z** and **A**.
- 6** Press the green key or **OK** to finish.

Tip

With the yellow key all characters can be deleted. With the blue key you can delete the character which is highlighted.

6.3.2 Uninstall or reinstall a channel

To uninstall a stored channel so that it is no longer possible to tune to.

Reinstall an earlier uninstalled channel.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Rearrange**.
- 2** Press **►** to enter the channel list.
- 3** Press **▲** or **▼** in the channel list to select the channel you want to uninstall or reinstall.
- 4** Press the green key to uninstall or reinstall the channel.
- 5** Press **Menu** to quit the menu.

6.3.3 Reorder the channels

Change the order of the stored channels.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Rearrange**.
- 2** Press **►** to enter the channel list.
- 3** Press **▲** or **▼** in the channel list to select the channel you want to reorder.
- 4** Press the yellow key to move up the highlighted channel in your channel list.
- 5** Press the blue key to move down the highlighted channel in your channel list.
- 6** Press **Menu** to quit the menu.

6.4 Automatic channel management

Once a day, at 3 AM, all available TV channels are updated automatically. The update is done if your TV is in standby.

Earlier stored channels not found by the update will be removed from the channel list.

You can do this update yourself anytime.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Installation update**.
- 2** Press **►** to enter the Installation update menu.
- 3** Press **OK**.
- 4** Press the green key to start.
The update starts and may take a few minutes.
- 5** When the update is completed, press the red key to return to the Channel installation menu.
- 6** Press **Menu** to quit the menu.

6.5 Digital reception test

If you receive Digital TV broadcasting you can check the quality and signal strength of a specific channel.

- 1** Select a channel.
- 2** Press **Menu** on the remote control and select TV menu > Installation > Channel installation > **Digital: Test reception**.
- 3** Press **►** to enter
- 4** Press **OK**.
The channel frequency, the network name, the signal quality and strength appear.
- 5** Press the green key to start or directly enter the frequency of the channel you want to test.
If the signal quality and strength are poor, reposition the antenna.
- 6** Press the yellow key to store the frequency if the signal quality and strength are good.
- 7** Press the red key to return to the Channel installation menu.
- 8** Press **Menu** to quit the menu.

Tip

To achieve the best results, contact a specialised antenna installer.

6.6 Factory settings

If you are lost in the picture, sound and Ambilight settings, you can reset the TV to the factory settings of picture, sound and Ambilight


- 1** Press **Menu** on the remote control and select TV menu > Installation > **Factory settings**.
- 2** Press **►** to enter the Factory settings menu.
- 3** Press **OK**.
- 4** Press **Menu** to quit the menu.

Note

The channel installation settings are not changed.

7 Connections

7.1 Connection overview

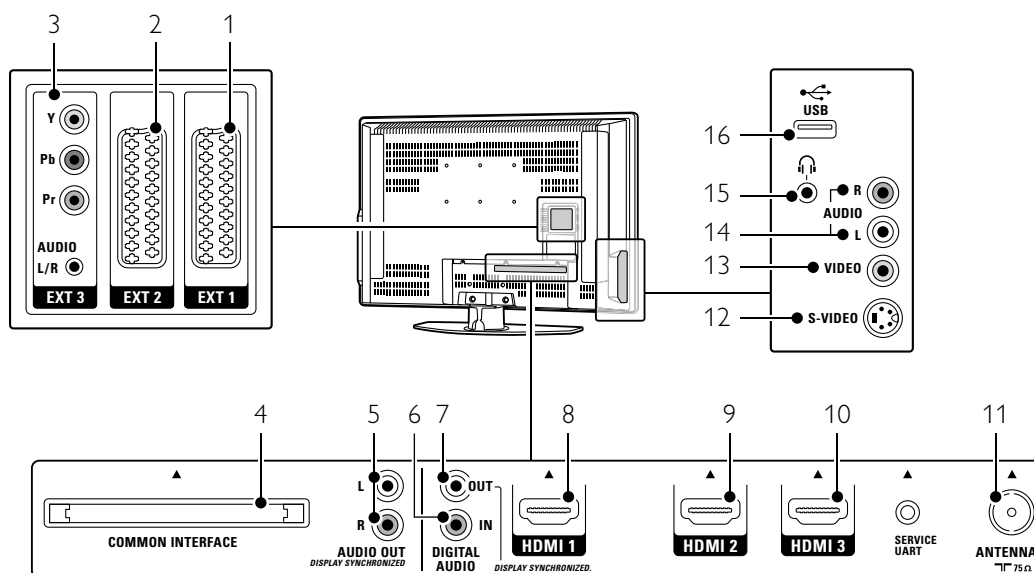

Back connectors

- 1 **EXT1**
Scart connector for DVD, VCR, digital receiver, game console, etc.
- 2 **EXT2**
Second scart connector.
- 3 **EXT3**
Component Video Y Pb Pr and Audio L/R connectors for DVD, digital receiver or game console, etc.
- 4 **Common Interface**
Slot for Conditional Access Modules (CAM)
- 5 **Audio Out L/R**
Sound output cinch connectors for a Home Theatre System, etc.
- 6 **Digital Audio In** (if present)
Sound input cinch connector for use with any of the HDMI connectors with a HDMI to DVI adaptor.
- 7 **Digital Audio Out**
Sound output cinch connector for a Home Theatre System, etc.
- 8 **HDMI 1 In**
HDMI in connector for Blu-ray Disc player, HD digital receiver or HD game console, etc.

- 9 **HDMI 2 In**
Second HDMI in connector.
- 10 **HDMI 3 In**
Third HDMI in connector.
- 11 **Antenna input**

Side connectors

- 12 **S-Video (Side)**
S-Video input connector to be used together with Audio L/R connectors for camcorder, game console, etc.
- 13 **Video (Side)**
Video input cinch connector to be used together with Audio L/R connectors for camcorder, game console, etc.
- 14 **Audio L/R in (Side)**
Audio L/R for camcorder, game console, etc.
- 15 **Headphones**
Stereo Mini Jack.
- 16 **USB**
USB connector.

7.2 About connecting

Learn here how to make the best connection for your device.


Six connections are ready to use at the back of the TV - EXT1, EXT2, EXT3, HDMI1, HDMI2 and HDMI3. Connect your device with the highest possible quality connection. Look for the highest quality connection on your device. Use that connection to your TV.

Connection set up

When connecting is done the TV needs to know what connections you made, which device is connected to which connector. Use the TV menu to do this. See section **7.4 Connection set up**.

7.2.1 HDMI - Highest quality ★★★★★

A HDMI connection has the best picture and sound quality. One cable combines video and audio signals. Use HDMI for HD (High Definition) TV signals. A device connected with HDMI to the TV can only send out audio and video signals to your TV. The device cannot receive or record audio and video from your TV.

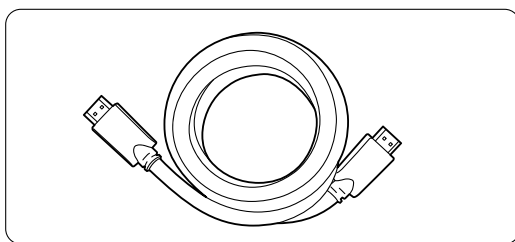

HDMI cable (max. 5m)

Tip

Use a HDMI / DVI adaptor in case your device has only a DVI connection. An extra audio cable is needed to complete this connection.


Note

HDMI supports HDCP (High-bandwidth Digital Contents Protection). HDCP is a copy protection signal that comes with HD content (DVD disc or Blu-ray Disc).


7.2.2 YPbPr - Higher quality ★★★★

Use the Component Video YPbPr connections together with the Audio L/R mini jack. Match the cable colours when you connect.

YPbPr can handle HD TV signals.

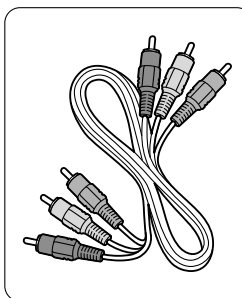


Component Video YPbPr cable
- Red, Green, Blue

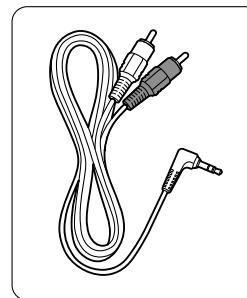

Audio L/R to Stereo mini jack cable

7.2.3 Scart - Good quality ★★★


One cable combines video and audio signals. Scart connectors can handle RGB video but no HD TV signals.

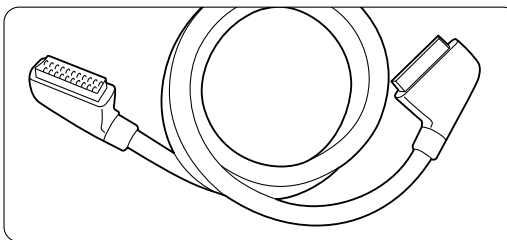


Scart cable

7.2.4 S-Video - Good quality ★★


Use a S-Video cable together with an Audio L/R (cinch) cable. Match the cable colours when you connect.

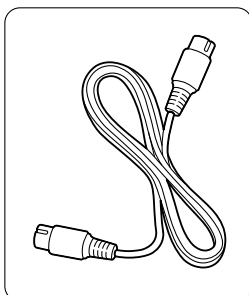

An S-Video cable

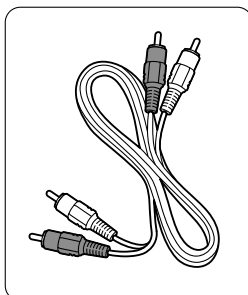Audio L/R cable
- Red, White**7.2.4 Video** - Basic quality ★

Use a Video (cinch) cable together with an Audio L/R (cinch) cable. Match the cable colours when you connect

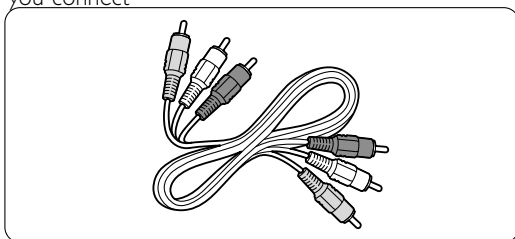Combined Video - yellow and Audio L/R cable
- red and white**7.2.6 Display synchronised audio out**

For the best match of image and sound in speech on screen, connect a Home Theatre System to Audio L/R or Digital Audio outputs.

See diagrams **7.3.4** and **7.3.8**.


Do not connect the audio signal of a DVD player, digital receiver or other audio/video device directly to the Home Theatre System.

7.3 Connect your devices

The connections shown in this section are recommendations for the most used cases. Other solutions may be possible.


7.3.1 DVD player

Use a scart cable to connect the device to the **EXT1** input at the back of the TV.

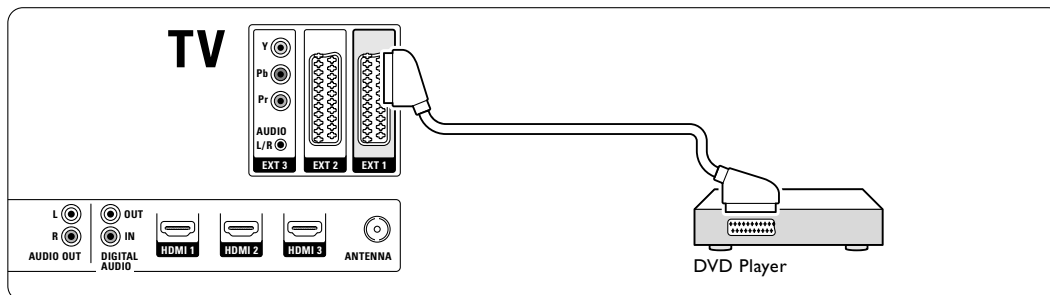


7.3.2 DVD Recorder or Digital Receiver

Use a scart cable and 2 antenna cables.

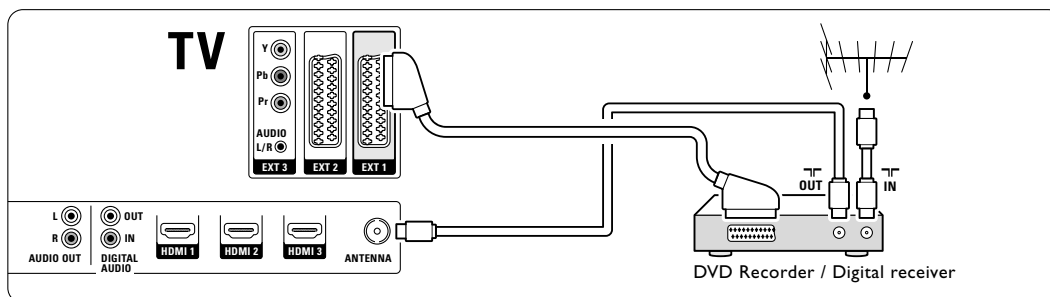


7.3.3 DVD Recorder and Digital Receiver

Use 3 scart cables and 3 antenna cables.

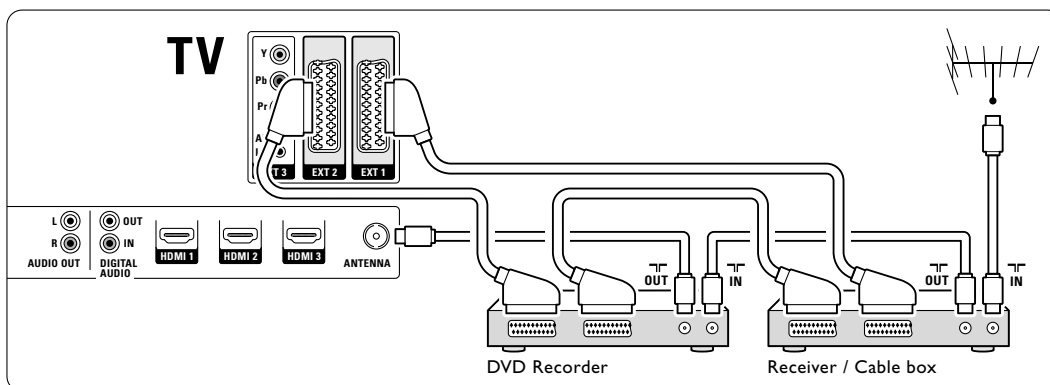


7.3.4 DVD Recorder and Home Theatre System

Use a scart cable, 2 antenna cables and 2 digital audio (cinch) cables.

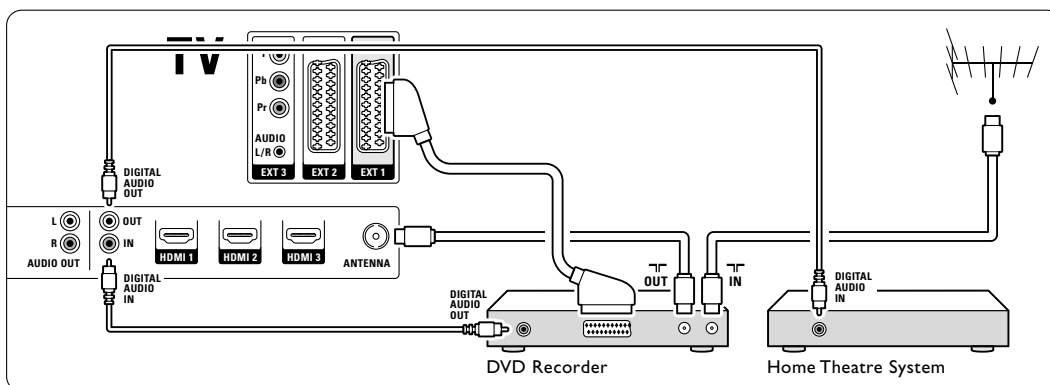


7.3.5 DVD Recorder and DVD Home Theatre System

Use 2 scart cables, 2 antenna cables and 2 digital audio (cinch) cables.

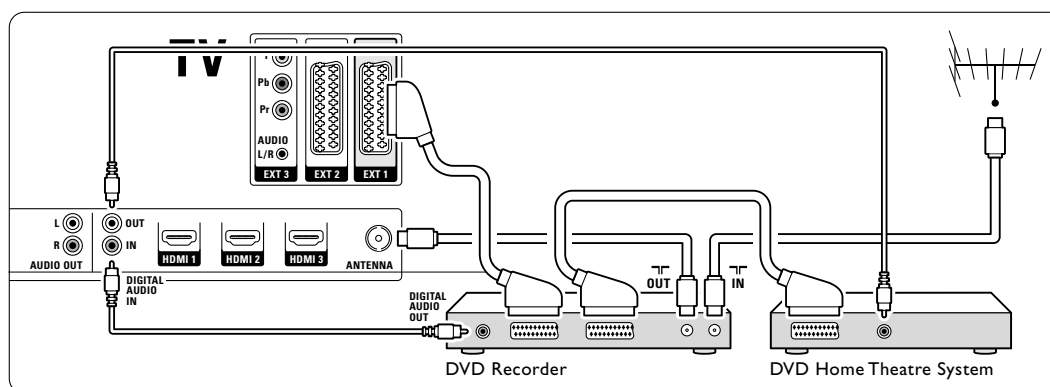


7.3.6 Satellite receiver

Use a scart cable and 2 antenna cables.

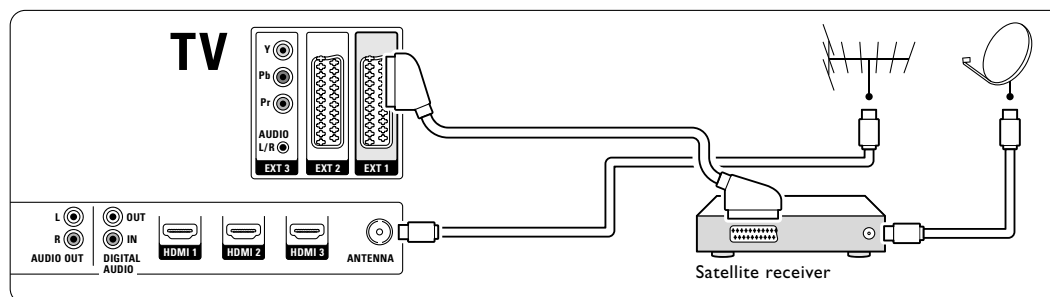


7.3.7 HD Digital receiver / HD satellite receiver

Use a HDMI cable and 2 antenna cables.

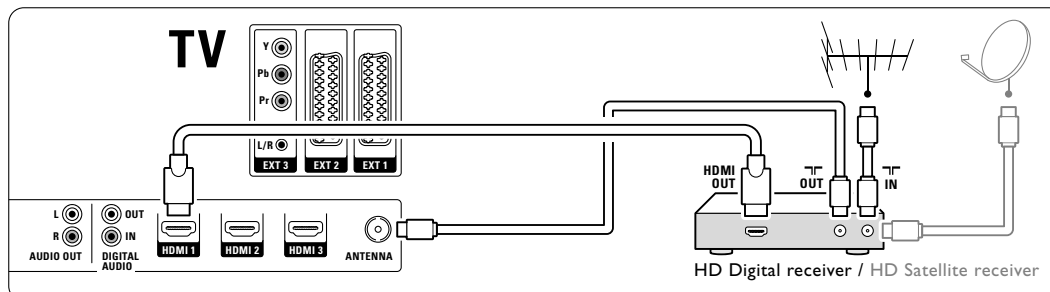


7.3.8 DVD-R, Home Theatre System and Digital receiver

Use 3 scart cables, 3 antenna cables and 2 audio (cinch) cables.

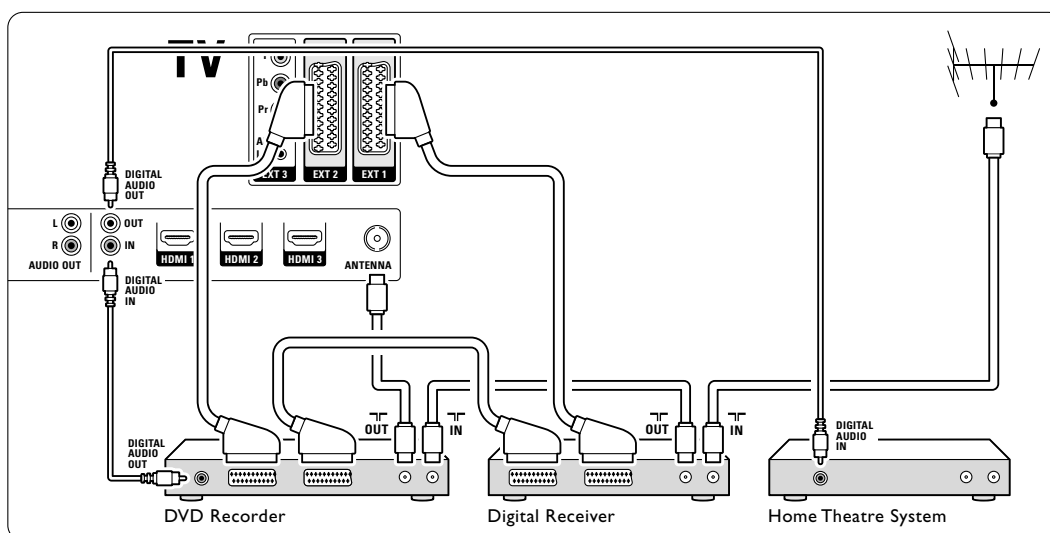

7.3.9 Blu-ray Disc player

Use a HDMI cable.

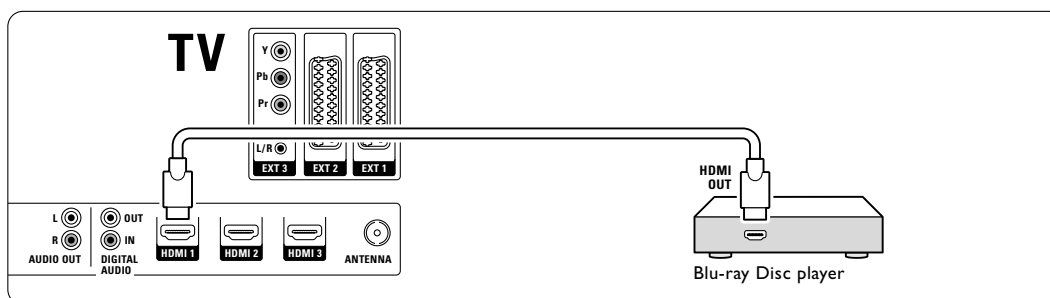


7.3.10 Game console

The most practical connection for a game console is at the side of the TV. More qualitative connections are at the back of the TV.

Connected at the side of the TV

Use the Video and Audio L/R (cinch) connectors.

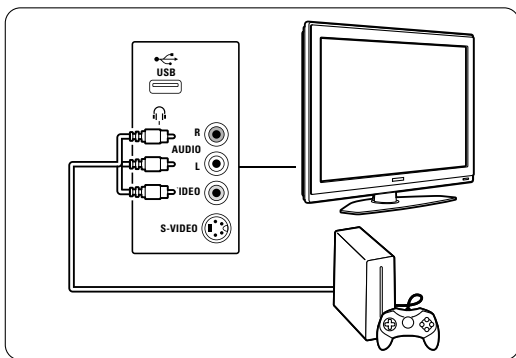

Connected at the back of the TV


Use a HDMI or the YPbPr (EXT3) input for HD quality.

7.3.11 Camcorder

The most practical connection for a camcorder is at the side of the TV. More qualitative connections are at the back of the TV.

Connected at the side of the TV

Use the Video and Audio L/R (cinch) connectors or use the S-Video and Audio L/R connectors.

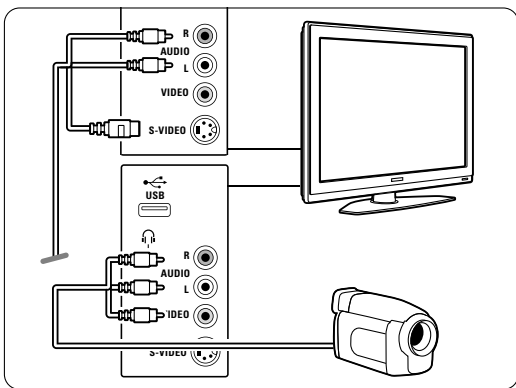

Connected at the back of the TV

Use a HDMI or the YPbPr (EXT3) input for HD quality.

7.3.12 Personal Computer


The best connection for a PC is at the back of the TV. A more practical connection, but only for viewing photos and films from your PC, is the connectin at the side of the TV.

⚠ Caution

Before connecting the PC, set the PC monitor refresh rate to 60Hz.

Connected at the back of the TV

Use the DVI connection of your PC to connect to a HDMI connection of the TV. Use a HDMI to DVI cable or a HDMI-to-DVI adaptor. Add an audio cable with a Stereo mini jack for sound. Connect the Stereo mini jack to **EXT3** on the TV

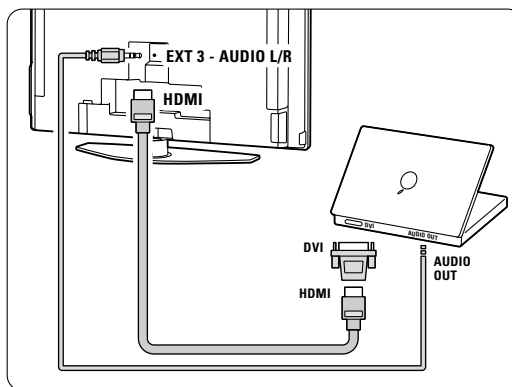

In the Connections menu, link this **EXT3** audio to the HDMI connector you are using. See section **7.4 Connections setup**.

Connected at the side of the TV

If your PC has no DVI connection, use the S-Video and Audio L/R (cinch) connectors at the side of the TV. This connection is only suited for applications like Windows Media Center or similar

💡 Tip

Change the TV picture format to **Unscaled** in the Picture format menu for maximal picture sharpness. See section **5.3.4. Widescreen picture format**.

For supported PC monitor resolutions, see section **8 Technical data**.

7.4 Connections setup

When all devices have been connected the TV needs to know what connections you have made, which device is connected to which connector.

7.4.1 Digital Audio In (if present)

If you use the Digital Audio In connection, assign this connection, in the menu, to the device from where the sound comes from.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Connections > **Digital Audio In**.
- 2** Press **►** to enter the list.
- 3** Press **▼** or **▲** to select the connector used by the device.

Connections	DIGITAL AUDIO IN
...	None
EXT 3	EXT 1
HDMI 1	EXT 2
HDMI 2	EXT 3
HDMI 3	HDMI 1
Side	HDMI 2
AUDIO IN L/R	HDMI 3
DIGITAL AUDIO IN	Side

7.4.2 Audio In L/R

If you use the Audio In L/R connection, assign this connection, in the menu, to the device from where the sound comes from.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Connections > **Audio In L/R**.
- 2** Press **►** to enter the list.
- 3** Press **▼** or **▲** to select the connector used by the device.

Connections	AUDIO IN L/R
EXT 2	None
EXT 3	EXT 3
HDMI 1	HDMI 1
HDMI 2	HDMI 2
HDMI 3	HDMI 3
Side	
AUDIO IN L/R	

7.4.3 Naming your devices

Name the connected devices for easy selection and best signal handling.

Assign the type of device (DVD, VCR, Game ...) to the connector you use for that device.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Connections > **EXT1**.
- 2** Press **►** to enter the list.
- 3** Press **▼** or **▲** to select the type of device.
- 4** Press **Menu** to quit the menu.

Connections	EXT 1
EXT 1	None
EXT 2	DVD
EXT 3	Blu-ray
HDMI 1	HDD/DVDR
HDMI 2	HD rec.
HDMI 3	Game
Side	VCR
...	...

7.4.4 Decoder channels

Decoders that decode an antenna channel are connected to **EXT1** or **EXT2** (scart).

You have to assign the TV channel as a channel to be decoded. Then assign the connection where the decoder is connected.

- 1** Press **Menu** on the remote control and select TV menu > Installation > Decoder > **Channel**.
- 2** Press **►** to enter the list.
- 3** Press **▼** or **▲** to select the channel to decode.
- 4** Press **◀** and go back to select **Status**.
- 5** Press **▼** or **▲** to select the connector used by the decoder.
- 6** Press **Menu** to quit the menu.

7.5 Preparing for digital services


Scrambled digital TV channels can be decoded with a Conditional Access Module (CAM) and a Smart card provided by a digital TV service operator. The CAM may enable several services depending on the operator you choose (e.g. Pay TV). Contact your digital TV service operator for more information and terms.

7.5.1 Insert a Conditional Access Module - CAM

⚠ Warning

Switch off your TV before inserting a CAM. Look on the CAM for the correct inserting direction. Inserting the module incorrectly may damage the CAM and your TV.

- 1** Gently insert the CAM into the **Common Interface** slot at the back of your TV as far as it will go.
- 2** Leave the CAM in the Common Interface slot permanently.

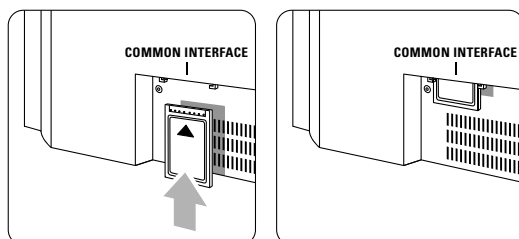

It may take a few minutes before a CAM is activated. Removing the CAM will deactivate the digital TV service.

7.5.2 Common interface menu

From this menu you access the CAM service you have installed. The applications and their function, the content and the messages on screen come from the CAM service provider.

- 1** Press **Menu** on the remote control and select TV menu > Features > **Common interface**. This menu option is available when a CAM is inserted and has made contact with the provider.

8 Technical data

Picture / Display

- Display type: LCD Full HD W-UXGA
- Panel resolution: 1366x768p
- Perfect Pixel HD picture enhancement
- 1080p 24/25/30/50/60Hz processing

Supported display resolutions

- Computer formats

Resolution	Refresh rate
640 × 480	60Hz
800 × 600	60Hz
1024 × 768	60Hz
1280 × 1024	60Hz (with HDMI only)
1360 × 768	60Hz (with HDMI only)
- Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50Hz, 60Hz
1080i	50Hz, 60Hz
1080p	24Hz, 25Hz, 30Hz
1080p	50Hz, 60Hz

Tuner / Reception / Transmission

- Antenna input: 75ohm coaxial (IEC75)
- TV system: DVD COFDM 2K/8K
- Video playback: NTSC, SECAM, PAL
- DVD: DVB Terrestrial
(see selected countries on the TV typeplate)

Dimensions and weights (approx.)

TV model	32PFL9632D/10
- width	823 mm
- height	536 mm
- depth	125 mm
- weight	20 kg
TV + stand	
- width	823 mm
- height	601 mm
- depth	219 mm
- weight	23 kg

Sound

- Sound system:
 - Virtual Dolby Digital
 - BBE

Multimedia

- Connection: USB
- Playback formats: MP3, LPCM, Slideshow (.alb)
JPEG, MPEG1, MPEG2

Remote control

- Type: RC4450
- Batteries: 2 Size AA- R6 type

Connectivity

- EXT1 (scart): Audio L/R, CVBS in/out, RGB
- EXT2 (scart): Audio L/R, CVBS in/out, RGB, S-video in/out
- EXT3: Y Pb Pr, Audio L/R in (mini jack)
- HDMI 1
- HDMI 2
- HDMI 3
- Analog Audio L/R out - display synchronised
- Digital Audio in (coaxial-cinch-S/PDIF) (if present)
- Digital Audio out (coaxial-cinch-S/PDIF) - display synchronised
- Side: Audio L/R in, Video (CVBS) in, S-Video Headphone out (stereo mini jack), USB

Power

- Mains power: AC 220-240V (±10%)
- Power and standby power consumption:
See technical specification on www.philips.com
- Ambient temperature: 5°C - 35°C

Specifications are subject to change without notice.
For more specification details of this product see
www.philips.com/support.

Specifications are subject to change without notice.

9 Troubleshooting

Television and remote control

The TV does not switch on

- Verify the mains cord connection.
- Verify if the batteries of the remote control are flat or weak. Verify their + / - orientation.
You can use the keys on the TV to switch the TV on.
- Unplug the mains cord, wait for one minute and plug in the mains again.

The TV does not react on the remote control

- Verify if the batteries of the remote control are not empty or weak. Verify their + / - orientation.
- Clean the remote control and TV sensor lens.
- Use the side control keys to change some of the basic settings of picture and sound.

1 Press **Volume -** and **+** to adjust the volume.

2 Press **Program/Channel -** and **+** to go through the channels marked as favourites.

3 Press **Menu** to show the main menu.
Press **Program/Channel -** and **+** to select and adjust picture and sound menu items.

The red light on the TV blinks

- Unplug the mains cord for half a minute and insert it again. Verify if there is enough space for ventilation. Wait until the TV has cooled down. When the TV does not restart to standby and the blinking occurs again, call our Customer Support Centre.

You forgot your code to unlock Child lock

- See section **5.8.3 Set code / Change code**.

Wrong language in the TV menu ?

Follow these steps to change the language.

1 Press **Menu** on the remote control.

2 Press **►**.

3 Use **▼** to highlight the third line.

4 Press **►** three times.

5 Press **▼** or **▲** to select your language.

6 Press **OK**.

7 Press **Menu** to quit the menus.

TV channels

Some TV channels are gone

- Verify if the correct channel list is chosen.
- A channel could be uninstalled in the **Rearrange** menu.

No digital channels found during installation

- Verify if the TV supports DVB-T in your country. See the list of countries on the TV typeplate.

Picture

The blue light is on, but there is no picture

- Verify if the antenna is connected properly.
- Verify if the correct device is selected.

The sound is on, but there is no picture

- Verify the contrast or brightness setting in the menu.

The TV picture is poor

- Verify if the antenna is connected properly.
- Loudspeakers, non-earthed audio devices, neon lights, high buildings or mountains can influence the picture quality. Try to improve the picture by changing the antenna direction or place devices away from the TV.
- Verify if the correct TV system is chosen in the Manual installation menu.
- If only a certain channel is poor, try to fine tune this channel in the **Fine tune** menu. See section **6.2.3**.

The picture has poor colour

- Verify the colour settings in the Picture menu.
Select any of the Reset to standard settings in the **Reset to standard** menu. See section **5.3.2**.
- Verify the connections and cables of the connected devices.

The TV did not remember my settings when I switch back on

- Verify if the TV is set to **Home** in the TV menu > Installation > Preferences > **Location** menu.

The picture does not fit the screen, it is too big or too small


- Select a more fitting picture format in the Picture format menu.
See section **5.3.4 Widescreen picture format**.
- Name your connected device in the Connections menu to obtain the best signal handling.
See section **7.4.3 Naming your devices**.

The picture position on screen is not correct

- Some picture signals from some devices do not fit the screen correctly. You can shift the picture with the **◀**, **▶** or **▲**, **▼** keys on the remote control. Check the signal output of the device.

Sound

There is a picture but no sound

- Verify the volume is not set to 0.
- Verify the sound has not been muted with the  key.
- Verify if all cables are connected properly.
- If no sound signal is detected, the TV automatically switches off the sound. This is proper operation and does not indicate malfunction.

The sound is poor

- Verify if the sound is set to Stereo.
- Verify the Equalizer settings.
- Select any of the Reset to standards settings in the **Reset to standard** menu. See section 5.3.2.

The sound comes from one speaker only

- Verify if the Balance is not set to extreme left or right.

HDMI connections

Trouble with devices connected with HDMI

- The HDMI - HDCP procedure might take a few seconds before the TV shows the picture from a device.
- If the TV does not recognise the device and the screen shows no picture, try switching from one device to another and back again to restart the HDCP procedure.
- If sound interruptions occur persistently, see the user manual of the device to verify the output settings. If that does not help, connect an additional audio cable.
- If an HDMI-to-DVI adaptor is used, verify if an additional audio connection is in place to complete the DVI connection.

USB connection

The TV does not show the USB device content

- Set your device (camera) to 'Mass Storage Class' compliant.
- The USB device may need specific driver software. Unfortunately this software can not be downloaded to your TV.

I can not see my files in the Multimedia menu.

- Not all audio and picture files are supported. See section 8 **Technical data**.

Audio and picture files do not playback smoothly

- The transfer performance of the USB device limits the transfer rate.

Personal computer

The PC display on my TV is not stable or is not synchronised

- Verify if the correct resolution mode is selected on your PC. See section 8 **Technical data**.

If your problem is not solved

Switch your TV off and on again. If the problem is not solved, call the Customer Support Centre or consult our website www.philips.com/support.

See the Customer Support Centre telephone numbers on the last page of this user manual.

Please, have the TV Model and Product Number ready before you call.

You can find these numbers on the packaging label or on the typelabel on the back and bottom of the TV.

Warning

Never try to repair the TV yourself.

10 Index

A

Active Control 16
 Ambilight
 2 channel 5
 colour 18
 menu / settings 18
 modes 11
 with TV standby 19
 Analogue
 manual installation 28
 TV channels 28
 Antenna
 cable 7
 connect 7
 with devices 30
 Auto format 17
 Automatic installation 27
 Auto surround 18
 Automatic Volume Leveler 18

B

Balance
 Ambilight 18
 sound 17
 Batteries 3,7
 Blacklevel 16
 Blu-ray 30,31,35
 Brightness 16
 ambilight 18

C

CA module 30,38
 Cable
 HDMI 31
 Scart 32
 YPbPr 31
 S-Video 32
 Video 32
 Camcorder 36
 Camera (photo) 36
 Care of the screen 3
 Change code 22
 Channel
 all channels list 20
 favourite list 20
 installation 27
 lock 20
 management 29
 previous 12
 rearrange 28
 store / install 28

Child lock 23
 Clock 15
 Code 22
 Colour enhancement 16
 Colour
 menu 16
 keys 4,12
 Common interface (CAM)
 menu 38
 slot 30,38
 Connection
 best 31
 overview 30
 set up 31,36
 Contrast 16
 Country
 digital system 29
 selection 27
 Custom colour
 Custom lock 20
 Custom tint 16

D

Decoder
 channel 36
 Delta volume 18
 Device
 connecting 31
 naming 36
 watch 9
 Digital
 audio out 30
 audio language 17
 natural motion 16
 subtitle language 24
 receiver 33
 text services 20
 test reception 29
 Dual I/II 18
 Dual screen 12
 DVB-T 5
 DVD
 connect 33
 playback 9
 player 33
 recorder 33
 Dynamic contrast 16

E

Electronic Programme Guide 21
 Equalizer 17

External 1,2,3 (EXT) 30

F

Factory settings 29
 Favourite channel lists 20
 Fine tune 28

G

Game console 36

H

HDCP 31
 HDMI
 connection 30
 HD digital receiver 35
 Headphone
 connect 4,30
 volume 18
 Hearing impaired 27
 Home
 location 40
 Home theatre system 34
 Hue 16

I

Installation
 automatic 27
 manual 28
 menu 27
 update 29

K

Kensington Security Slot 5
 Key(s)
 colour 12
 on TV 4
 on remote control 4,12

L

Language
 menu 27
 audio 18
 subtitle 19
 Light sensor 16
 Location 40
 Locks 22

M

Mains cord 8
 Menu key 13
 Mono 18

Movie expand 17
 MPEG artefact reduction 16
 Music 25
 Mute key 12

N

Naming devices 36
 Noise reduction 16

O

OK key 12
 On timer 22

P

Perfect Pixel HD 16
 Personal Computer
 connect 36
 display resolutions 39
 Photo viewer 24
 Picture
 format 16
 menu 16
 Position the TV 5
 Power 8
 Programme up/down 12

Q

Quick access menu 15

R

Radio channel 26
 Rearrange channels 28
 Recorder 33
 Recycling 3
 Remote control
 batteries 7
 overview 12
 Rename 28
 Reorder 28
 Reset to standards 15

S

Safety 3
 Satellite receiver 34
 Scart connection 32
 Screen cleaning 3
 Search
 channels 28
 teletext pages 19
 Set code 22
 Settings assistant 15
 Sharpness 16
 Sleptimer 22
 Software update 26

Sound
 menu 17
 surround mode 18
 Standby 22
 Super zoom 17
 Stationary images 3
 Stereo 18
 Subtitle 23
 Switch on 8

T

Table of Pages T.O.P 19
 Technical data 39
 Teletext 19
 teletext 2.5 20
 digital 28
 dual screen 19
 menu 20
 page 19
 Time zone 27
 Timers 22
 Tint 16
 Troubleshooting 40
 TV settings menu 15

U

USB
 connector 30
 device 24
 photo viewer 24

V

VCR
 connect 33
 Video cable 32
 Video formats 39
 Volume
 key 12
 menu 17

W

Whitepoint 16
 Widescreen picture format 17

Y

YPbPr 31

