4000 Series

Register your products and get support at www.philips.com/welcome

Quick start guide





 
English


Before using your product, read all accompanying safety information. (The relevant parameters of instructions are variable, without prior notice, if there is any discrepancy, please in accordance with actual object.)



English What's in the box






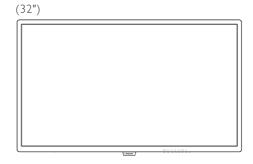






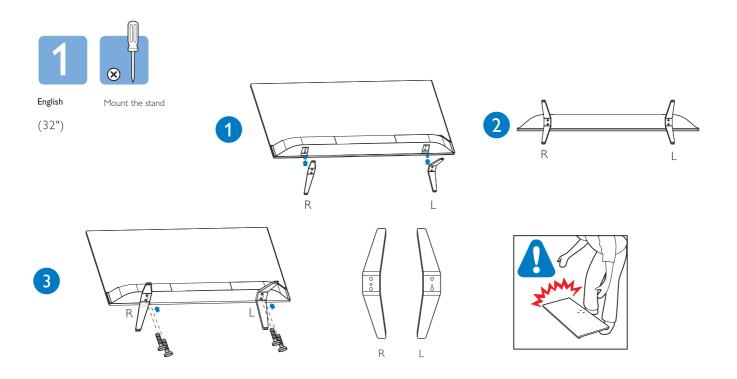





English Connect


(32")

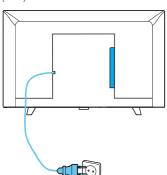





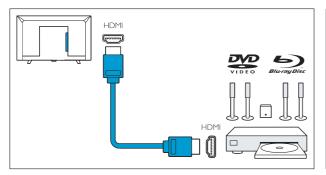


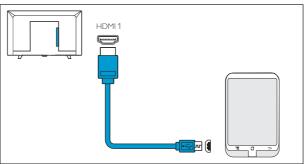

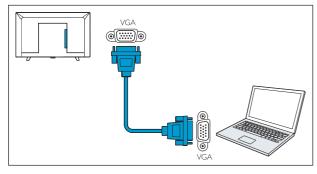

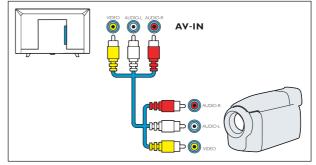

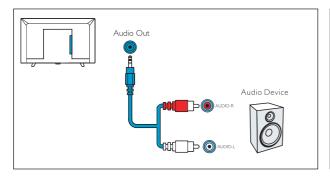


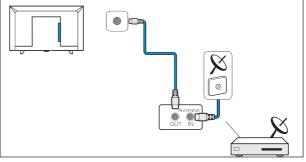






English

Insert batteries

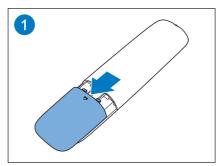

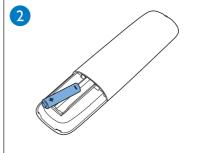

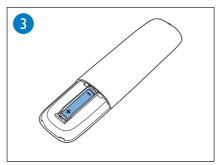


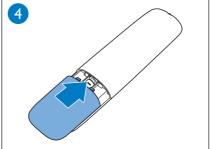



English


To wall mount, purchase a suitable bracket.

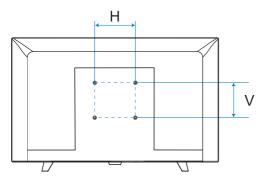

TV	H	V
80 cm/32"	100 mm	100 mm



English Press the 0 key on the side panel of the TV or on the remote control to turn on the TV.

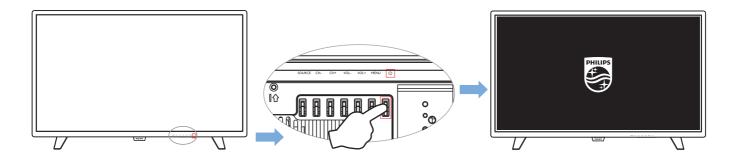



English

Please refer to the User's Manual and the Philips support website for more operating instructions.







All registered and unregistered trademarks are property of their respective owners. Specifications are subject to change without notice. Philips and the Philips' shield emblem are trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

2017 © TPVision Europe B.V. All rights reserved. philips.com

