

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)



22PFL3404/77  
26PFL3404/77

---

EN User manual

---

ES Manual del usuario

---

**PHILIPS**

# Contents

---

<b>1</b>	<b>Notice</b>	2
----------	---------------	---

---

<b>2</b>	<b>Important</b>	3
----------	------------------	---

---

<b>3</b>	<b>TV overview</b>	5
	Side controls and indicators	5
	Remote control	5

---

<b>4</b>	<b>Use your product</b>	7
	Switch your TV on/off or to standby	7
	Switch channels	7
	Watch connected devices	8
	Adjust TV volume	8

---

<b>5</b>	<b>Use more of your product</b>	9
	Access TV menus	9
	Change picture and sound settings	9
	Create and use lists of favorite channels	11
	Use timers	12
	Use TV lock	13
	Use the TV clock	14
	View closed captions (subtitles)	14
	Change TV preferences	14
	Start a TV demo	15
	Reset the TV to factory settings	15

---

<b>6</b>	<b>Install channels</b>	16
	Automatically install channels	16
	Manually install channels	16
	Rename channels	18

---

<b>7</b>	<b>Connect devices</b>	19
	Back connector for 22 inch TV	19
	Back connector for 26 inch TV	19
	Side connector	20
	Connect a computer	20
	Use Philips EasyLink	21
	Use a Kensington lock	21

---

<b>8</b>	<b>Product information</b>	22
	Supported display resolutions	22
	Tuner/Reception/Transmission	22
	Remote control	22
	Power	22
	Supported TV mounts	22

---

<b>9</b>	<b>Troubleshooting</b>	23
	General TV issues	23
	TV channel issues	23
	Picture issues	23
	Sound issues	24
	HDMI connection issues	24
	Computer connection issues	24
	Contact us	24

---

<b>10</b>	<b>Index</b>	25
-----------	--------------	----

# 1 Notice

2009 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Philips warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Philips cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

## **Pixel characteristics**

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

## **Warranty**

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Philips Service Centres and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments, or assembly procedures not recommended or authorised in this manual shall void the warranty.

## **Compliance with EMF**

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardisation for early integration in its products.

## **Copyright**

All other registered and unregistered trademarks are the property of their respective owners.

® Kensington and Micro Saver are registered US trademarks of ACCO World corporation with issued registrations and pending applications in other countries throughout the world.




VESA, FDMI and the VESA Mounting Compliant logo are trademarks of the Video Electronics Standards Association.

Portions of this software are copyright © The FreeType Project ([www.freetype.org](http://www.freetype.org)).

## 2 Important

Read and understand all instructions before you use your TV. If damage is caused by failure to follow instructions, the warranty does not apply.

### Safety

- Risk of electric shock or fire!
    - Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
    - Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight.  
To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 
- 
  - Never insert objects into the ventilation slots or other openings on the TV.
  - When the TV is swiveled ensure that no strain is exerted on the power cord. Strain on the power cord can loosen connections and cause arcing.
- Risk of short circuit or fire!
    - Never expose the remote control or batteries to rain, water or excessive heat.
    - Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire.
- 
- Risk of injury or damage to the TV!
    - Two people are required to lift and carry a TV that weighs more than 55 lbs.
    - When stand mounting the TV, use only the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the combined weight of the TV and the stand.
    - When wall mounting the TV, use only a wall mount that can support the weight of the TV. Secure the wall mount to a wall that can support the combined weight of the TV and wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
  - Risk of injury to children! Follow these precautions to prevent the TV from toppling over and causing injury to children:
    - Never place the TV on a surface covered by a cloth or other material that can be pulled away.
    - Ensure that no part of the TV hangs over the edge of the surface.
    - Never place the TV on tall furniture (such as a bookcase) without anchoring both the furniture and TV to the wall or a suitable support.
    - Educate children about the dangers of climbing on furniture to reach the TV.
  - Risk of overheating! Never install the TV in a confined space. Always leave a space of at least 4 inches or 10 cm around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.
  - Risk of damage to the TV! Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

- Risk of injury, fire or power cord damage! Never place the TV or any objects on the power cord.
- To easily disconnect the TV power cord from the power outlet, ensure that you have full access to the power cord at all times.
- When you disconnect the power cord, always pull the plug, never the cable.
- Disconnect the TV from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the TV, power cord or antenna cable.
- Risk of hearing damage! Avoid using earphones or headphones at high volumes or for prolonged periods of time.
- If the TV is transported in temperatures below 5°C, unpack the TV and wait until the TV temperature matches room temperature before connecting the TV to the power outlet.

---

### Screen care

- Avoid stationary images as much as possible. Stationary images are images that remain on-screen for extended periods of time. Examples include: on-screen menus, black bars and time displays. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- Risk of damage to the TV screen! Never touch, push, rub or strike the screen with any object.
- To avoid deformations and color fading, wipe off water drops as soon as possible.

---

### Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

### 3 TV overview

This section gives you an overview of commonly used TV controls and functions.


#### Side controls and indicators

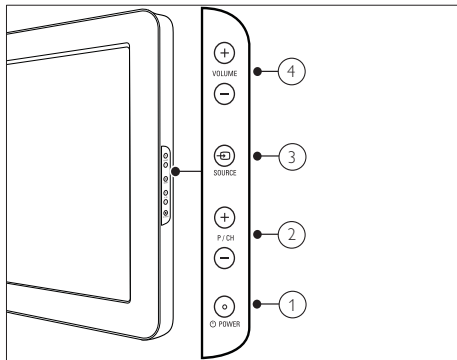

 






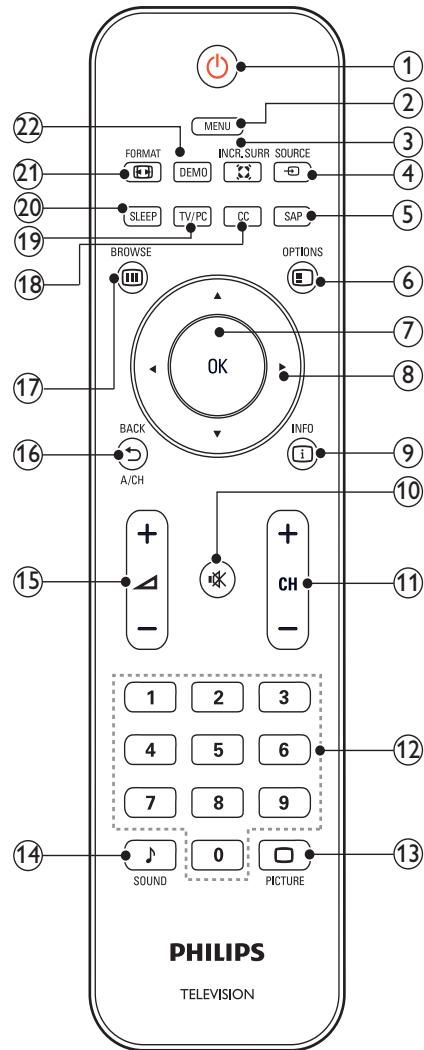





- ① **POWER:** Switches the product on or off. The product is not powered off completely unless it is physically unplugged.
- ② **P/CH +/-:** Switches to the next or previous channel.
- ③ **SOURCE:** Selects connected devices.
- ④ **VOLUME +/-:** Increases or decreases volume.

#### Remote control

English




- ①  **(Standby-On)**
- Switches the TV to standby if it is on.
  - Switches on the TV if it is in standby.
- ② **MENU**  
Toggles the main menu on or off.
- ③  **INCR. SURR**  
Enables Incredible Surround for stereo sources. Enables spatial mode for mono sources.
- ④  **SOURCE**  
Selects connected devices.
- ⑤ **SAP (Secondary audio program)**  
Selects Secondary Audio Program (SAP)/ Stereo/ Mono when SAP and/or Stereo is broadcast.
- ⑥  **OPTIONS**  
Accesses options relating to the current activity or selection.
- ⑦ **OK**  
Confirms an entry or selection and displays the channel grid, when watching TV.
- ⑧  **(Navigation buttons)**  
Navigates through the menus.
- ⑨  **INFO**  
Displays program information, if available.
- ⑩  **(Mute)**  
Mutes or restores audio output.
- ⑪ **CH +/- (CHANNEL +/-)**  
Switches to the next or previous channel. When the TV menu is on, this functions as Page Up/Down.
- ⑫ **0-9 (Numeric buttons)**  
Selects a channel or setting.
- ⑬  **PICTURE(Smart picture)**  
Launches the picture menu.
- ⑭  **SOUND(Smart Sound)**  
Launches the sound menu.
- ⑮  **+/- (Volume +/-)**  
Increases or decreases volume.
- ⑯  **BACKA/CH**
- Returns to a previous screen.
  - Returns to the previously viewed channel.
- ⑰  **BROWSE**  
Switches between channel grid and program list.
- ⑱ **CC**  
Displays closed captions settings.
- ⑲ **TV/PC**  
Toggles between PC mode and previously viewed video mode.
- ⑳ **SLEEP**  
Sets a delay after which the TV switches to standby.
- ㉑  **FORMAT**  
Toggles through available picture formats. Some formats are not available for some picture sources.
- ㉒ **DEMO**  
Toggles the demonstration menu on or off.

## 4 Use your product

This section helps you perform basic operations (see 'Use more of your product' on page 9).

### Switch your TV on/off or to standby

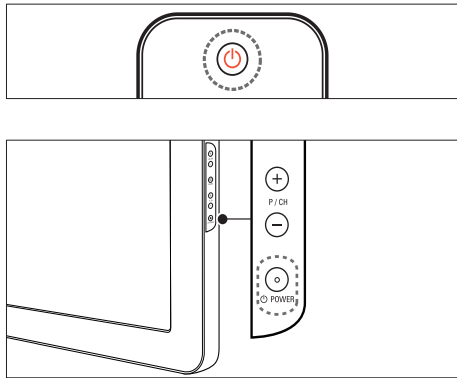

#### To switch on

- If the standby indicator is off, press **POWER** at the side of the TV.
- If the standby indicator is red, press **(Standby-On)** on the remote control.

#### To switch to standby

- Press **(Standby-On)** on the remote control.  
↳ The standby indicator switches to red.

#### To switch off

- Press **POWER** at the side of the TV.  
↳ The standby indicator switches off.

#### Tip



- Though your TV consumes very little power when in standby, energy continues to be consumed. When not in use for an extended period of time, disconnect the TV power cable from the power outlet.

#### Note

- If you cannot locate your remote control and want to switch on the TV from standby, press **P/CH +/-** or **SOURCE** at the side of the TV.

English

### Switch channels

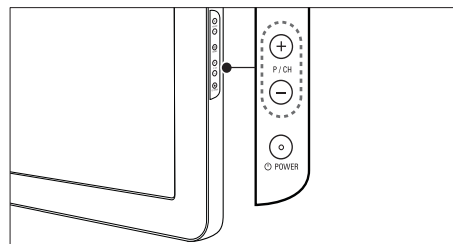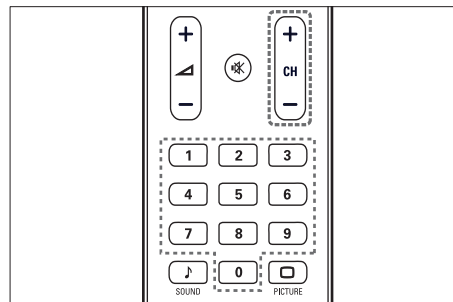

- Press **CH +/-** on the remote control or **P/CH +/-** on the side of the TV.
- Press **OK** to use the channel matrix.
- Enter a channel number using the **Numeric buttons**.

#### Note

- When you use a favorite list, you can only select those channels in the list (see 'Select a favorite list' on page 11).




## Watch connected devices

### Note



- Switch on the device before selecting it as a source on the TV.

## Use the source button

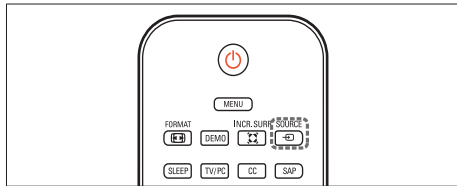

- 1 Press **SOURCE**.  
↳ The source list appears.
- 2 Press the **Navigation buttons** to select a device.
- 3 Press **OK** to confirm your choice.  
↳ The TV switches to the selected device.

## Adjust TV volume

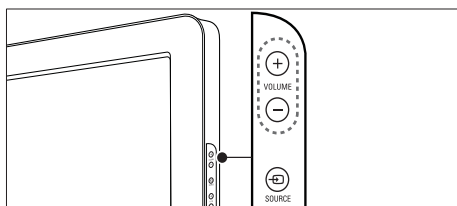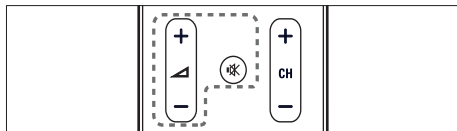

### To increase or decrease volume

- Press **+/-**.
- Press **VOLUME +/-** on the side of the TV.

### To mute or unmute sound

- Press **MUTE** to mute the sound.
- Press **MUTE** again to restore the sound.

### To adjust headphone volume

- Press **+/-**.
- Press **VOLUME +/-** on the side of the TV.

### Note

- When headphones are plugged into the TV, the loud speakers are automatically muted.

## 5 Use more of your product

### Access TV menus

Menus help you to install channels, change picture and sound settings and access other features.

- 1 Press **MENU**.  
↳ The menu screen appears.

Picture	Smart picture	.
	Contrast	.
Sound	Brightness	.
	Color	.
	Sharpness	.
Features	Noise reduction	.
	Tint	.
Installation	Color temperature	.

- 2 Press the **▲▼◀▶** to select and navigate through one of the following menus.
  - **[Picture]** Adjusts the picture setting for optimal viewing.
  - **[Sound]** Adjusts the sound setting.
  - **[Features]** Accesses different features like timer, TV lock, and demo.
  - **[Installation]** Selects channel installation menu, adjusts preferences and resets the TV to factory settings.
- 3 Press **OK** to confirm your choice.

#### Tip

- When the menu is on, **CH +/-** functions as Page Up/Down.
- Press **MENU** at any time to exit the menu.
- Press **↶ BACK A/CH** to move back one screen.

### Change picture and sound settings

Change picture and sound settings to suit your preferences. You can apply pre-defined settings or change settings manually.

#### Use smart picture

Use smart picture to apply pre-defined picture settings.

- 1 Press **□ PICTURE**.  
↳ The **[Smart picture]** menu appears.
- 2 Press **▲▼** to select one of the following smart picture settings.
  - **[Personal]** Lists customized personal picture settings.
  - **[Sports]** Maximizes picture settings.
  - **[Standard]** Adjusts picture settings to suit most environments and types of video.
  - **[Movie]** Applies picture settings ideally suited for movie viewing.
  - **[Game]** Applies picture settings maximized for fast-moving games.
  - **[Energy saving]** Applies low-energy picture settings.
- 3 Press **OK** to confirm your choice.  
↳ The selected smart picture setting is applied.

#### Manually adjust picture settings

- 1 Press **MENU**
- 2 Press **OK** to select **[Picture]**.  
↳ The **[Picture]** menu appears.
- 3 Press **▲▼◀▶** to select one of the following picture settings.
  - **[Smart picture]** Accesses pre-defined smart picture settings.
  - **[Contrast]** Adjusts the intensity of bright areas, keeping dark areas unchanged.
  - **[Brightness]** Adjusts the intensity and details of dark areas.

- **[Color]** Adjusts color saturation.
- **[Sharpness]** Adjusts the level of sharpness in image details.
- **[Noise reduction]** Filters and reduces noise in an image.
- **[Tint]** Adjusts the color balance in an image.
- **[Color temperature]** Adjusts color temperature.
- **[Dig.CrystalClear]** Digitally adjusts picture quality to optimal contrast, color and sharpness.
  - **[Dynamic contrast]** Automatically enhances contrast in an image. A **[Medium]** setting is recommended.
  - **[Dynamic backlight]** Adjusts the brightness of the TV backlight to match lighting conditions.
  - **[MPEG artifact re.]** Smooths out transitions on digital pictures. You can switch this feature on or off.
  - **[Color enhancement]** Makes colors more vivid and improves the resolution of details in bright colors. You can switch this feature on or off.
- **[PC mode]** Adjusts the picture when a PC is connected to the TV via HDMI.
- **[Picture format]** Changes the picture format.
- **[Horizontal shift]** Adjusts the picture horizontally for PC-VGA input.
- **[Vertical shift]** Adjusts the picture vertically for PC-VGA input.

### Change picture format

- 1 Press **FORMAT**.  
↳ A picture format bar appears.
- 2 Press **▲▼** to select a picture format.  
↳ The selected picture format is activated.
- 3 Press **OK** to confirm your choice.

 
### Summary of picture formats

The following picture settings can be configured.



#### Note

- Depending on the format of the picture source, some picture settings are not available.



**[Super zoom]** (Not for HD and PC mode.) Removes the black bars on the side of 4:3 broadcasts. There is minimal distortion.



**[4:3]** Shows the classic 4:3 format.



**[Subtitle zoom]** Displays 4:3 pictures over the full area of the screen, with sub-titles visible. Part of the top of the picture is clipped off.



**[Movie exp.14:9]** (Not for HD and PC mode.) Scales 4:3 format to 14:9.



**[Movie exp.16:9]** (Not for HD and PC mode.) Scales 4:3 format to 16:9.



**[Wide screen]** Stretches the classic 4:3 format to 16:9.



**[Unscaled]** For PC mode and CVI 1920 × 1080 resolution only. Allows maximum sharpness. Some distortion may be present due to the broadcaster's systems. Set your PC resolution to wide screen mode for best results.

## Use smart sound

Use smart sound to apply pre-defined sound settings.

- 1 Press **SOUND**.  
↳ The **[Smart sound]** menu appears.
- 2 Press **▲▼** to select one of the following smart sound settings.
  - **[Standard]** Adjusts sound settings to suit most environments and types of audio.
  - **[News]** Applies sound settings ideally suited for spoken audio, such as the news.
  - **[Movie]** Applies sound settings ideally suited for movies.
  - **[Personal]** Applies the settings that were customized in the sound menu.
- 3 Press **OK** to confirm your choice.  
↳ The selected smart sound setting is applied.

## Adjust sound settings

- 1 Press **MENU**.
- 2 Press **▲▼** to select **[Sound]**.  
↳ The **[Sound]** menu appears.
- 3 Press **▲▼◀▶** to select and adjust:
  - **[Smart sound]** Accesses pre-defined smart sound settings.
  - **[Bass]** Adjusts the bass level.
  - **[Treble]** Adjusts the treble level.
  - **[Volume]** Adjusts the volume.
  - **[Balance]** Adjusts the balance of the right and left speakers to best suit your listening position.
  - **[SAP]** Available for analog channels when a main and second audio program (SAP) is broadcast. Select the main or second audio program.
  - **[Mono/Stereo]** Selects between mono or stereo if stereo is broadcast.
  - **[Surround]** Enables spatial sound.

- **[Vol leveler]** Automatically reduces sudden volume changes, for example, when switching channels. When enabled, this produces a more consistent audio volume.
- **[Delta volume]** Levels out volume differences between channels or connected devices. Switch to the connected device before you change the delta volume.

## Create and use lists of favorite channels

You can create lists of your preferred TV channels and radio stations so that you can find those channels easily.



Tip

- You can create and store up to four favorite lists on your TV.

## Select a favorite list

- 1 When watching TV, press **OK** to display the channel grid.
- 2 Press **OPTION**.  
↳ The channel options menu appears.
- 3 Press **▲▼** to select **[Show favorite ch.]**.  
↳ The favorite lists appear.
- 4 Press **▲▼** to select a favorite list.
- 5 Press **OK**.  
↳ Only channels in the favorite list appear in the channel grid.

## View all channels

You can exit a favorite list, and view all installed channels.

- 1 When watching TV, press **OK** to display the channel grid.

- 2 Press **OPTION**.  
↳ The channel options menu appears.
- 3 Select **[Show favorite ch.] > [All]**.
- 4 Press **OK**.  
↳ All channels display in the channel grid.

#### Note

- All favorite channels are marked by an asterisk in the channel grid.

### Add a channel to a favorite list

#### Tip

- View all channels before adding a channel to a favorite list.

- 1 When watching TV, switch to the channel you want to add to a favorite list (see 'Switch channels' on page 7).
- 2 Press **OPTION**.  
↳ The channel options menu appears.
- 3 Press **▲▼** to select **[Mark as favorite]**.
- 4 Press **OK**.  
↳ The favorite lists appear.
- 5 Press **▲▼** to select a favorite list to add the channel to.
- 6 Press **OK**.  
↳ The channel is added to the favorite list.

### Remove a channel from a favorite list

#### Note

- Select the favorite list to edit, before removing a channel.

- 1 When watching TV, press **OK** to display the channel grid.
- 2 Press **OPTION**.  
↳ The channel options menu appears.

- 3 Press **OK** to enter **[Show favorite ch.]**.
- 4 Press **▲▼** to select a favorite list and press **OK** to enter the list.
- 5 Press **▲▼◀▶** to choose the channel that you wish to remove from the list.
- 6 Press **OPTION**.
- 7 Press **▲▼** to select **[Unmark as fav.]**.
- 8 Press **OK**.  
↳ The channel is removed from the favorite list.

### Use timers

You can set timers to switch the TV to standby at a specified time.

#### Automatically switch the TV to standby (sleep timer)

Sleep timer switches the TV to standby after a pre-defined period of time.

#### Tip

- You can always switch off your TV earlier or reset the sleep timer during the countdown.

- 1 Press **MENU**
- 2 Select **[Features] > [Sleep timer]**.  
↳ The **[Sleep timer]** menu appears.
- 3 Press **◀▶** to set the sleep time.  
↳ The sleep timer can be up to 180 minutes in steps of five minutes. If set to zero minutes, the sleep timer is switched off.
- 4 Press **OK** to activate the sleep timer.  
↳ The TV switches to standby after the pre-defined period of time.

## Automatically switch the TV on (on timer)

You can switch the TV to a specified channel at a specified time, from standby.

- 1 Press **MENU**.
- 2 Select **[Features]** > **[On timer]**.
- 3 Press **▶** to enter the **[On timer]** menu.
- 4 Press **▲▼◀▶** to select **[Activate]** and set a frequency - **[Once]**, **[Daily]** or **[Off]**.
- 5 Press **OK** to confirm.
- 6 Press **▲▼◀▶** to select **[Time]** and set the starting time.
- 7 Press **[Done]** to confirm.
- 8 Press **▲▼◀▶** to select **[Channel no.]** and set the channel.
- 9 Press **OK** to confirm.
- 10 Press **MENU** to exit.

### Tip

- Select **[Off]** to switch off **[On timer]**.
- When **[On timer]** is switched off, only **[Activate]** option is available.
- Set the TV clock before you activate **[On timer]** feature (see 'Set the TV clock' on page 14).

## Use TV lock

You can prevent your children from watching certain programs or certain channels by locking the TV controls.

### Set or change the TV lock code

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Features]** > **[Set code]**.
- 3 Press **▶** to enter the code setup.
- 4 Enter your code with the **Numeric buttons**.

- 5 Re-enter the same code in the new dialog box for confirmation.
  - ↳ If the code is set successfully, the dialog box will disappear. However, if the code cannot be set, you will be prompted to re-enter the code.
- 6 If you want to change the code, select **[Features]** > **[Change code]**.
- 7 Enter your current code using the **Numeric buttons**.
  - ↳ If the code is validated, you will be prompted to enter your new code.
- 8 Enter the new code using the **Numeric buttons**.
  - ↳ You will be prompted to re-enter the new code for confirmation.

### Tip

- If you forget your code, enter '0711' to override any existing codes.

## Lock or unlock the TV

Locking the TV prevents your child from accessing all channels and connected devices.

- 1 Press **MENU**.
- 2 Press **▲▼◀▶** to select **[Features]** > **[TV lock]**.
- 3 Press **▶** to enter **[TV lock]**.
  - ↳ A screen prompting you to enter code appears.
- 4 Enter your code.
- 5 Press **▲▼** to select **[Lock]** or **[Unlock]**.
- 6 Press **OK**.
  - ↳ All channels and connected devices are locked or unlocked.
- 7 Press **MENU** to exit.

### Note

- Restart the TV for the change to take effect.

---

## Lock or unlock one or more channels

- 1 When watching TV, press **OK** to display the channel grid.
- 2 Press **▲▼◀▶** to select a channel to lock or unlock.
- 3 Press **☰** **OPTIONS**.
- 4 Press **▲▼** to select **[Lock channel]** or **[Unlock channel]**.
- 5 For each selection, press **OK** to lock or unlock the channel.

### Note

- Restart the TV for the changes to take effect.

---

## Use the TV clock

You can display a clock on the TV screen.

---

### Set the TV clock

- 1 Press **MENU**.
- 2 Select **[Features]** > **[Clock]**.  
↳ The **[Clock]** menu appears.
- 1 Press **▲▼◀▶** or **Numeric buttons** to enter time.
- 2 Press **[Done]** to confirm.
- 3 Press **MENU** to exit.

### Note

- The clock is disabled automatically after three seconds.

---

## View closed captions (subtitles)

The caption service displays transmitted closed caption text. The captioned text can be displayed permanently or only when the TV is muted.

### Note

- This television provides a display of television closed captioning that conforms with the EIA-608 standard and in accordance with Sections 15.119 of the FCC rules.
- If you connect your set-top box via HDMI or component video input, you cannot select closed caption through the TV. You can select closed caption through the set-top box only.
- The captions do not always use correct spelling and grammar.
- Not all TV programs and product commercials include closed caption information. Refer to your area TV program listings for the TV channels and times of closed caption shows. The captioned programs are usually noted in the TV listings with service marks such as 'CC'.

- 1 Press **MENU**.
- 2 Select **[Features]** > **[Closed caption]**.
- 3 Press **▶** to enter **[Closed caption]**.
- 4 Press **▲▼** to select your preference.
- 5 Press **OK**.
- 6 Press **MENU** to exit.

---

## Change TV preferences

- 1 Press **MENU**.
- 2 Select **[Installation]** > **[Preferences]**.
- 3 Press **▶** to enter **[Preferences]**.
  - **[Location]** Optimizes TV settings for your location - home or shop.
  - **[Volume bar]** Displays the volume bar when adjusting the volume.
  - **[EasyLink]** Enables one-touch play and one-touch standby between EasyLink-compliant devices.

- **[E-sticker]** For shop mode only. Sets the location of the e-sticker.
- 4 Press **▲▼◀▶** to select your preference.
  - 5 Press **OK**.
  - 6 Press **MENU** to exit.

---

## Start a TV demo

- 1 Press **MENU**.
- 2 Select **[Features]** > **[Demo]**.  
↳ The **[Demo]** menu appears.
- 3 Press the **▲▼** to select a demo.
  - **[Dig.CrystalClear]** Digitally adjusts picture quality to optimal contrast, color and sharpness.
  - **[Active Control]** Automatically adjusts the picture setting for optimal picture quality continuously under any signal conditions.
- 4 Press **OK** to start the demo.
- 5 Press **MENU** to exit.

---

## Reset the TV to factory settings

You can restore the default picture and sound settings of your TV. Channel installation settings remain the same.

- 1 Press **MENU**.
- 2 Select **[Installation]** > **[Factory settings]**.
- 3 Press **▶** to enter the **[Factory settings]** menu.  
↳ **[Reset]** is highlighted.
- 4 Press **OK** to reset to factory settings.
- 5 Press **MENU** to exit.



## 6 Install channels

The first time you setup your TV, you are prompted to select a menu language and to install TV and digital radio channels (if available). This chapter provides instructions on how to re-install and fine tune channels.

### Automatically install channels


This section describes how to search and store channels automatically.

#### Step 1 Select your menu language

##### Note

- Skip this step if your language settings are correct.


- 1 Press **MENU**.
- 2 Select **[Installation] > [Menu language]**.
- 3 Press **▶** to enter **[Menu language]**.
- 4 Press **▲▼** to select a language setting.

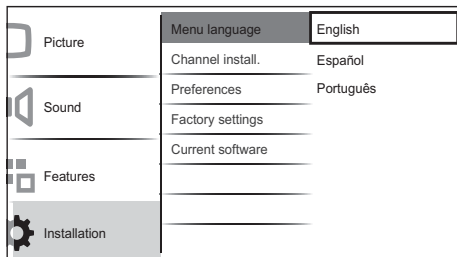

- 5 Press **OK** to confirm.
- 6 Press **MENU** to exit.

#### Step 2 Install Channels

- 1 Press **MENU**.
- 2 Select **[Installation] > [Channel install.] > [Antenna/Cable]**.

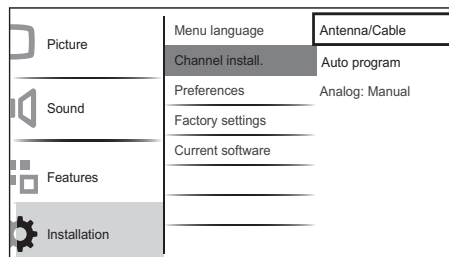

- 3 Press **▶** to enter **[Antenna/Cable]**.
- 4 Press **▲▼** to select the source of TV broadcast - **[Auto]**, **[Antenna]**, or **[Cable]** and press **OK** to confirm the selection.
- 5 Press **▲▼** to select **[Auto program]**.
- 6 Select **[Start]** and press **OK** to re-install channels.

Start automatic installation. This takes a few minutes.

Start?

- ↳ As the system searches for channels, you have the option to **[Stop]** the process.
- 7 If you want to stop searching, select **[Stop]** and press **OK**.
    - ↳ A dialog box appears asking you if you really want to **[Stop]** or **[Continue]** with the process.
  - 8 Press **◀▶** to select **[Stop]** or **[Continue]** and press **OK** to confirm your choice.
  - 9 When done, press **MENU** to exit.

### Manually install channels


This section describes how to search and store analog TV channels manually.

- 1 Press **MENU**.
- 2 Select **[Installation] > [Channel install.] > [Analog: Manual]**
  - ↳ The **[Analog: Manual]** menu appears.

Picture	Menu language	Antenna/Cable
	Channel install.	Auto program
Sound	Preferences	Analog: Manual
	Factory settings	
	Current software	
Features		
Installation		

- Press **▲▼** to select the item you want to adjust.
  - [System]
  - [Channel no.]
  - [Fine-tune]
  - [Skip channel]

### Select your system

 **Note**

- Skip this step if your system settings are correct.

- Press **MENU**.
- Select **[Installation] > [Channel install.] > [Analog: Manual]**  
↳ The **[Analog: Manual]** menu appears.
- Press **▲▼** to select **[System]**.
- Press **▶** to enter **[System]**.
- Press **OK** to confirm.
- Press **MENU** to exit.

### Select your channel

- Press **MENU**.
- Select **[Installation] > [Channel install.] > [Analog: Manual]**  
↳ The **[Analog: Manual]** menu appears.
- Press **▲▼◀▶** to select and enter **[Channel no.]**.
- Press **▲▼** or **Numeric buttons** to adjust channel.
- Press **OK** to confirm.


- Press **MENU** to exit.

### Fine tune analog channels

- Press **MENU**.
- Select **[Installation] > [Channel install.] > [Analog: Manual]**.  
↳ The **[Analog: Manual]** menu appears.
- Press **▲▼◀▶** to select and enter **[Fine-tune]**.
- Press **▲▼** to adjust frequency.
- Press **OK** when done.
- Press **MENU** to exit.

### Skip channels

- Press **MENU**.
- Select **[Installation] > [Channel install.] > [Analog: Manual]**.  
↳ The **[Analog: Manual]** menu appears.
- Press **▲▼◀▶** to select and enter **[Skip channel]**.
- Press **◀▶** to select **[Yes]** and press **OK** to skip current channel.  
↳ The selected channel is skipped when you press **P +/-** on your remote control or view the channel grid.
- Press **MENU** to exit.

 **Note**

- You can restore a skipped channel to your channel listing (see 'Select your channel' on page 17).

---

## Rename channels

Channels can be renamed so that a name of your choice appears whenever the channel is selected.

- 1** When watching TV, press **OK** to display the channel grid .
- 2** Select the channel you want to rename.
- 3** Press **⏏** **OPTIONS**.  
↳ The channel options menu appears.
- 4** Press **▲▼◀▶** to select and enter **[Rename chan.]**.  
↳ A text input box appears.
- 5** Press **▲▼◀▶** to select characters.
- 6** Press **OK** to confirm each of the characters.



- Rename channels - the length of the name is limited to six characters.
- Use **[Aa]** to change uppercase letter to lowercase letter and vice versa.


# 7 Connect devices

This section describes how to connect various devices with different connectors and supplements examples provided in the Quick Start.

**Note**

- Different types of connectors may be used to connect a device to your TV, depending on availability and your needs.


## Back connector for 22 inch TV

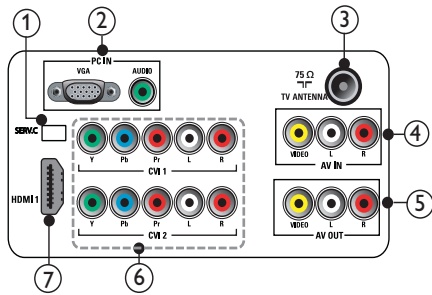

- ① **SERV. C**  
For software update.
- ② **PC IN (VGA and AUDIO IN)**  
Audio and video input from a computer.
- ③ **TV ANTENNA**  
Signal input from an antenna, cable or satellite.
- ④ **AV IN**  
Analog audio and video input from analog or digital devices such as DVD players, satellite receivers and VCRs.
- ⑤ **AV OUT**  
Audio and video output to analog devices such as another TV or a recording device.

- ⑥ **CVI 1/CVI 2 (Y Pb Pr and AUDIO L/R)**  
Analog audio and video input from analog or digital devices such as DVD players or game consoles.
- ⑦ **HDMI 1**  
Digital audio and video input from high-definition digital devices such as Blu-ray players.


## Back connector for 26 inch TV

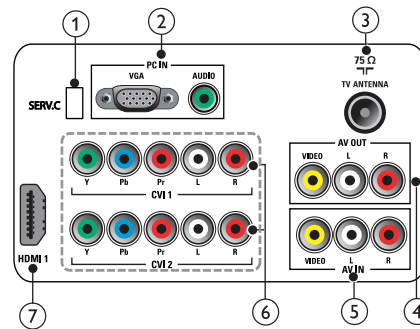

- ① **SERV. C**  
For software update.
- ② **PC IN (VGA and AUDIO IN)**  
Audio and video input from a computer.
- ③ **TV ANTENNA**  
Signal input from an antenna, cable or satellite.
- ④ **AV OUT (VIDEO OUT and AUDIO OUT L/R)**  
Audio and video output to analog devices such as another TV or a recording device.
- ⑤ **AV IN (VIDEO IN and AUDIO IN L/R)**  
Analog audio and video input from analog or digital devices such as DVD players, satellite receivers and VCRs.
- ⑥ **CVI 1/2 (Y Pb Pr and AUDIO L/R)**  
Analog audio and video input from analog or digital devices such as DVD players or game consoles.

- ⑦ **HDMI 1**  
 Digital audio and video input from high-definition digital devices such as Blu-ray players.

## Side connector

 

- ① **Headphones (Only for 26 inch TV)**  
 Stereo audio output to headphones or earphones.
- ② **AUDIO L/R**  
 Audio input from analog devices connected to **VIDEO**.
- ③ **VIDEO**  
 Composite video input from analog devices such as VCRs.
- ④ **HDMI (Only for 26 inch TV)**  
 Digital audio and video input from high-definition digital devices such as Blu-ray players.

## Connect a computer

Before you connect a computer to the TV


- Set the screen refresh rate on your computer to 60Hz.
- Select a supported screen resolution on your computer.

Connect a computer with one of the following connectors:


### Note

- Connections via DVI or VGA require an additional audio cable.


- **HDMI cable**

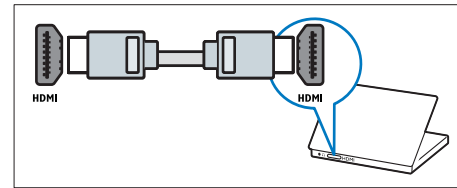


- **DVI-HDMI cable**

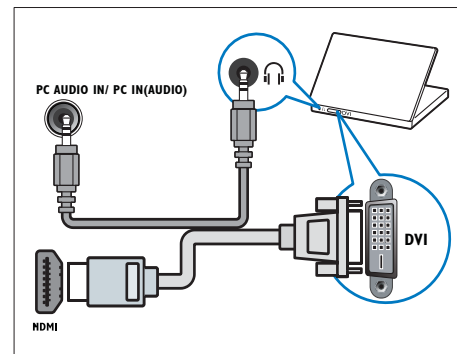

- **HDMI cable and HDMI-DVI adaptor**

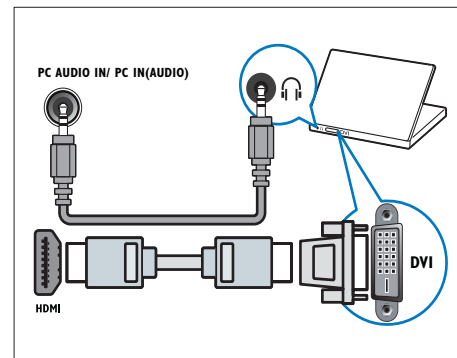

- VGA cable

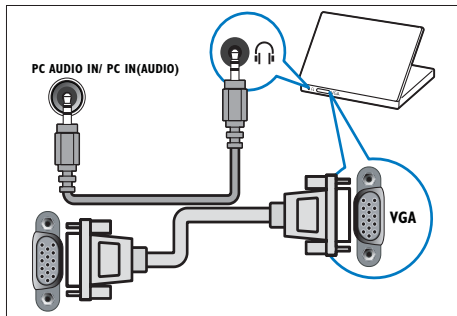

## Use Philips EasyLink

Your TV supports Philips EasyLink, which enables one-touch play and one-touch standby between EasyLink-compliant devices.

### Note

- Compliant devices must be connected to your TV via HDMI.

## Enable or disable EasyLink

### Note

- Do not enable Philips EasyLink if you do not intend to use it.

- 1 Press **MENU**.
- 2 Select **[Installation] > [Preferences] > [EasyLink]**.
- 3 Select **[On]** or **[Off]**.

## Use one-touch play


- 1 After enabling EasyLink, press play on your device.
  - ↳ The TV automatically switches to the correct source.

## Use one-touch standby

- 1 Press and hold **⊖Standby** on the TV's or device's remote control for at least three seconds.
  - ↳ The TV and all connected HDMI devices switch to standby.

## Use a Kensington lock

There is a Kensington security slot at the back of the TV. Prevent theft by looping a Kensington lock between the slot and a permanent object, such as a heavy table.

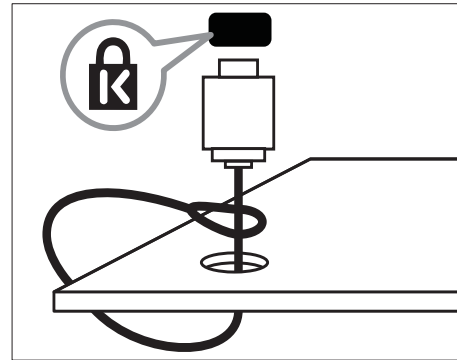

## 8 Product information

Product information is subject to change without notice. For detailed product information, go to [www.philips.com/support](http://www.philips.com/support).

### Supported display resolutions

#### Computer formats for connections using HDMI and VGA

- Resolution - refresh rate:
  - 640 × 480 - 60Hz
  - 800 × 600 - 60Hz
  - 1024 × 768 - 60Hz
  - 1280 × 720 - 60 Hz
  - 1280 × 768 - 60Hz
  - 1280 × 1024 - 60Hz
  - 1360 × 768 - 60Hz
- Video formats**
- Resolution - refresh rate:
  - 480i - 60Hz
  - 480p - 60Hz
  - 576i - 50Hz
  - 576p - 50Hz
  - 720p - 50Hz, 60Hz
  - 1080i - 50Hz, 60Hz
  - 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60Hz

#### Note

- Some formats may not be supported due to compatibility issues between devices.

### Tuner/Reception/Transmission

- Antenna input: 75ohm F-type
- TV system: PAL M, PAL N, NTSC M
- Video playback: NTSC, PAL (all versions)

### Remote control

- Type: PF01L09B
- Batteries: 2 × AAA (LR03 type)

### Power

- Mains power: 110-240V, 50-60Hz
- Standby power: < 0.3 W
- Ambient temperature: 5 to 40 degrees Celsius

### Supported TV mounts

To mount the TV, purchase a Philips TV mount or a VESA-compatible TV mount. To prevent damage to cables and connectors, be sure to leave a clearance of at least 2.2 inches or 5.5cm from the back of the TV.



#### Warning

- Follow all instructions provided with the TV mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper TV mounting that results in accident, injury or damage.

TV screen size (inches)	Required pitch (mm)	Required mounting bolts
19	100 × 100	4 × M4
22	100 × 100	4 × M4
26	100 × 200	6 × M4

## 9 Troubleshooting

This section describes commonly encountered issues and accompanying solutions.

### General TV issues

#### The TV does not switch on:

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it.
- Check that the power cable is securely connected.

#### The remote control is not working properly:

- Check that the remote control batteries are correctly inserted according to the +/- orientation.
- Replace the remote control batteries if they are flat or weak.
- Clean the remote control and TV sensor lens.

#### The standby light on the TV blinks red:

- Disconnect the power cable from the power outlet. Wait until the TV cools down before reconnecting the power cable. If the blinking reoccurs, contact Philips Consumer Care.

#### You forgot the code to unlock the TV lock feature

- Enter '0711'.

#### The TV menu is in the wrong language.

- Change the TV menu to your preferred language.

#### When turning the TV on/off/to standby, you hear a creaking sound from the TV chassis:

- No action is required. The creaking sound is normal expansion and contraction of the TV as it cools and warms up. This does not impact performance.

### TV channel issues

#### Previously installed channels do not appear in the channel list:

- Check that the correct channel list is selected.

### Picture issues

#### The TV is on, but there is no picture:

- Check that the antenna is properly connected to the TV.
- Check that the correct device is selected as the TV source.

#### There is sound but no picture:

- Check that the picture settings are correctly set.

#### There is poor TV reception from an antenna connection:

- Check that the antenna is properly connected to the TV.
- Loud speakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality. If possible, try to improve the reception quality by changing the antenna direction or moving devices away from the TV.
- If reception on only one channel is poor, fine tune this channel.

#### There is poor picture quality from connected devices:

- Check that the devices are connected properly.
- Check that the picture settings are correctly set.

#### The TV did not save your picture settings:

- Check that the TV location is set to the home setting. This mode offers you the flexibility to change and save settings.

#### The picture does not fit the screen; it is too big or too small:

- Try using a different picture format.

#### The picture position is incorrect:

- Picture signals from some devices may not fit the screen correctly. Check the signal output of the device.



---

## Sound issues

There is picture but no sound from the TV:

 Note

- If no audio signal is detected, the TV automatically switches the audio output off — this does not indicate malfunction.

- Check that all cables are properly connected.
- Check that the volume is not set to 0.
- Check that the sound is not muted.

**There is picture but sound quality is poor:**

- Check that the sound settings are correctly set.

**There is picture but sound comes from one speaker only:**

- Verify that sound balance is set to the center.

---

## HDMI connection issues

There are problems with HDMI devices:

- Note that HDCP support can delay the time taken for a TV to display content from a HDMI device.
- If the TV does not recognize the HDMI device and no picture is displayed, try switching the source from one device to another and back again.
- If there are intermittent sound disruptions, check that output settings from the HDMI device are correct.
- If a HDMI-to-DVI adaptor or HDMI to DVI cable is used, check that an additional audio cable is connected to **AUDIO L/R** or **AUDIO IN** (mini-jack only).

---

## Computer connection issues

The computer display on the TV is not stable:

- Check that a supported resolution and refresh rate is selected on the computer.
- Set the TV picture format to unscaled.

---

## Contact us

If you cannot resolve your problem, refer to the FAQs for this product at [www.philips.com/support](http://www.philips.com/support).

If the problem remains unresolved, contact Philips Consumer Care in your country as listed in the Addendum.



**Warning**

- Do not attempt to repair the product yourself. This may cause severe injury, irreparable damage to your product or void your warranty.



**Note**

- Make a note of your TV model and serial number before you contact Philips. These numbers are printed on the back of the TV and on the packaging.

# 10 Index

## A

<b>analog channel</b>	
fine tune	17

## B

<b>batteries</b>	22
<b>bracket</b>	22

## C

<b>Channel list</b>	
favorite	11
troubleshooting	23
update	12
<b>channels</b>	
favorite list	11
install	
automatic	16
manual	16
rename	18
tune	17
<b>computer format</b>	
technical specifications	22
<b>connections</b>	
HDMI	
troubleshooting	24
mains cord	19
technical specifications	22
troubleshooting	24

## D

<b>demo</b>	15
<b>devices</b>	
watch	8
<b>display</b>	
resolution	22

## E

<b>EasyLink</b>	
disable	21
enable	21

one-touch play	21
one-touch standby	21
<b>environmental care</b>	4

## F

<b>factory settings</b>	15
<b>favorite list</b>	
select	11
set up	11

## H

<b>HDMI cable</b>	
troubleshooting	24

## I

<b>install channels</b>	
automatic	16
manual	16

## K

<b>Kensington lock</b>	21
------------------------	----

## L

<b>location</b>	14
<b>lock</b>	
Kensington	21

## M

<b>menu</b>	
main menu	9

## O

<b>One-touch play</b>	21
<b>One-touch standby</b>	21

## P

<b>picture format</b>	
picture format change	10
troubleshooting	23
<b>Picture settings</b>	9

---

<b>R</b>	
reception	23, 17
remote control	
overview	5
technical specifications	22

---

<b>S</b>	
sleep timer	12
Smart settings	9, 11
sound settings	11

---

<b>T</b>	
technical specifications	22
timer	
on timer	13
standby	12
troubleshooting	23
tune channels	17
<b>TV</b>	
adjust volume	8
menu	9
screen care	4
standby	7
switch channels	7
switch off	7
switch on	7
troubleshooting	23
tuner technical specifications	22
wall mount	22
<b>TV lock</b>	
lock channels	14
lock connected devices	13

---

<b>V</b>	
<b>Video format</b>	
video format technical specifications	22
<b>volume</b>	
adjust	8



© 2009 Koninklijke Philips Electronics N.V.  
All rights reserved.  
Document order number: Q41G2202813 5C

