

Tablet 3G  
User Manual  
Philips TLE722G



**PHILIPS**

Congratulations on your purchasing and welcome to Philips!

To get the most of your product and enjoy all Philips offering to you, register your product at:

[www.philips.com](http://www.philips.com)

For getting further information, please access:

[www.philips.com/support](http://www.philips.com/support)

 **Note:**

- Please read the safety instructions in “Safety & Precaution” section before use.

 **Tips:**

- Philips continuously strives to improve its products. Due to software upgrade, some contents in this User Manual Guide maybe different from your product. Philips reserves the rights to revise this guide or withdraw it at any time without prior notice. Please take your product as standard.

## Trademark Declaration

**Android™** Android, Google and Google Play logo are trademarks of Google LLP.

**Bluetooth™** Bluetooth is a trademark owned by Telefonaktiebolaget L M Ericsson, Sweden and licensed to Philips.

 **Note:**

- This guide is protected under Law of copyright. Reproduction in whole or in part without permission is prohibited.

# Your Tablet

Charger/Micro USB  
port connector

Headphone jack

Side  
volume key

Power key

Back key

 
Option key

Home key




# Assembling and Charging


Open the top-back cover

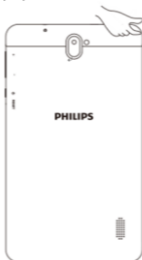

 Insert two SIM cards (Standard card), and SD CARD (Maximum : 32GB).

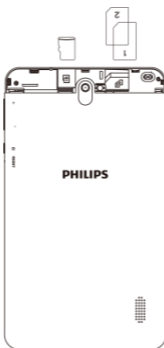

## Charging the battery and insert the headset

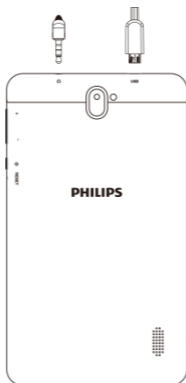 

### Tips:

- You can use the tablet while it is charging.
- Keeping the charger plugged to the tablet when battery is fully charged will not damage the battery.
- If a fully charged battery left unused, it will lost its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.






# Use your tablet

## Turn your tablet on and off

1. To press and hold power key to turn on your tablet.
2. To turn off your tablet, press and hold power key and then select Power off.

## Keys

Learn about the main keys.

Key	Definition	Function
	Power	Press and hold to power on/off. Press to turn on/off the screen display. Hold to access the tablet options, choose Power off, Fly mode or Restart.
	Home key	Return to home screen. Hold to open the list of recent applications.
	Option key	Open a list of options available on the current screen. On the home screen, open the list of recent applications.
	Back key	Return to the previous screen or exit.
	Side volume key	Adjust the ringer volume while it's in standby mode or adjust the voice volume during phone calling. When receiving an incoming call, briefly press down either volume key to mute the ringtone.

## Home screen

From the Home screen, you can view status and access applications of your device.



The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen.

## Notifications panel


When you get a new notification, you can open the Notifications panel to see what event notification or new information you have received.

- To open the Notifications panel, press and hold the status bar ▸ then slide one finger downward. If you have several notifications, you can scroll down the screen to see them all.
- To hide the panel, drag the bottom of the panel upwards.

## Access applications

- To scroll left or right to another screen, selecting an application.
- Press  to return to the previous screen
- Press  to return to the Home screen.



## Manage applications

- In idle screen ▸ tap Settings  > APPS.





Tap running, you can view all the running apps, tap this app to enter it, you can tap Stop to choose stop running.

- Tap Downloaded, you can view all the downloaded apps, tap app to enter it, you can check the detailed information of app, tap Uninstall to unloading it.

## Make a call

1. In the application list.
2. Dial the number directly or choose one number from the filtered list that having matched digits.
3. Make a call. 
4. Tap  to end the call

## Send a message

1. In the application list. 
2. Type a new message.
3. Enter the number or choose the number from phonebook. 
4. Select the text field and enter your message text.
5. Press  to add a subject for the message or attach a file(Picture, Videos, Audio or Slideshow).
6. Tap  to send the message.

### Note:

- Copyright protected pictures and sound cannot be sent by MMS.



# Safety & Precaution

## Precaution

### Keep your tablet away from baby



Keep your tablet and all accessories out of the reach of baby. Small parts may cause choking or serious injury if swallowed.

### Radio Waves



Your tablet transmits/receives radio waves in the GSM(B2/B3/B5/B8)/WCDMA (B1/B8)

Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

### Switch off your tablet...



Turn off the tablet when in aircraft. The use of tablet in an aircraft may be dangerous for the operation of it, disrupt the tablet network and may be illegal.

In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.



In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

### Your tablet and your car



Avoid using your tablet and obey all regulations that restrict the use of tablet while driving. Use hands free accessories to increase your safety when possible. Ensure that your tablet and car kit do not block any air bags or other security devices fitted in your car.

### Handle your tablet carefully and sensibly



For the optimal and satisfactory operation of the tablet you are recommended to use the tablet in the normal operating position.

- Do not expose your tablet to extreme temperatures.
- Do not immerse the tablet in any liquid; if your tablet is damp, switch it off, and let them dry for 24hrs before using them again.
- To clean the tablet, wipe it with soft cloth.
- In hot weather or after prolonged exposure to the sun (e.g., behind a window or a wind screen), the temperature of your tablet's casing might be increased. Be very careful in this case when picking up your tablet and also avoid using it with an ambient temperature over 40°C or under -10°C.

### Protect batteries from damage



You should only use Manufacturer Authentic Accessories, as the use of any other accessories may damage your tablet and may be dangerous, and will make all guarantees for your Philips tablet null and void. The use of an unspecified type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and they are replaced with genuine manufacturer replacement parts.

- Your tablet is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the

battery contacts.

· Avoid under to excessive cold or heat (under  $-20^{\circ}\text{C}$  or over  $60^{\circ}\text{C}$ ), moisture or caustic environments.

### Environmental care



Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old tablet and please promote their recycling. Manufacturer has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



: The labeled packaging material is recyclable.



: A financial contribution has been made to the associated national packaging recovery and recycling system.



: The plastic material is recyclable (also identifies the type of plastic).

### Hearing Protection



When listening to music, adjust the volume to a moderate level. Continuous under to high volume may impair your hearing.

### WEEE Marking in the DFU: "Information to the Consumer" Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from US and other countries. Diversion contrary to law is prohibited.

### Safety Information and Notices

Failure to comply with the following precautions may be dangerous or illegal.

1. Never attempt to disassemble your device. You alone are responsible for how you use your device and any consequences of its use.
2. As the general rule, always switch off your device wherever the use of a device is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.
3. Do not use your device in damp areas (bathroom, swimming pool...). Protect it from liquids and other moistures.
4. Do not expose your device to extreme temperatures lower than  $-0^{\circ}\text{C}$  and higher than  $+40^{\circ}\text{C}$ .

### Distance of operation

This device model has been tested and meets radiofrequency exposure guidelines when used as follows:

- Against the ear: Place or receive a device call and hold the device as you would a wire line telephone.
- Body worn: When transmitting, place the device in a carry accessory that contains no metal and positions the device a minimum of 1.0cm from your body.
- Use of other accessories may not ensure compliance with radiofrequency

exposure guidelines. If you do not use a body worn accessory and are not holding the device at the ear, position the device a minimum of 1.0cm from your body,

- Data operation: When using a data feature, position the tablet a minimum of 1.0 cm from your body for the whole duration of the data transmission.

### **Adapter**

Adapter shall be installed near the equipment and shall be easily accessible.

### **Sound pressure safety**



Use carefully with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

### **Caution**

Risk of explosion if battery is replaced by an incorrect type. Dispose of used battery according to the instructions.

### **Proper use**

As described in this manual, your device can be used only in right location. If possible, please do not touch the antenna area of your device.

## **Tips**

### **Pacemakers**

If you have a pacemaker:

- Always keep the tablet more than 15 cm from your pacemaker when the tablet is switched on, in order to avoid any potential interference.
- Do not carry the tablet in breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your tablet if you suspect that interference is taking place.

### **Hearing aids**

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to make sure your particular device is susceptible to cellular phone interference.

### **How to prolong the battery life of your tablet**

To have your tablet function properly, sufficient battery power is important.

For the power-saving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your tablet.
- Set the backlight level and duration of your tablet as low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration and alerts.
- Establish GPRS connection when needed. Otherwise, your tablet will keep searching for GPRS connection, and drain your battery power.
- Turn off your tablet if there is no signal. Otherwise, the tablet will keep searching for network, and drain your battery power.

## **Troubleshooting**

### **The display shows BLOCKED when you switch on the tablet**

Somebody tried to use your tablet but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

### **The display shows IMSI failure**

This problem is related to your subscription. Contact your local operator.

### **Your tablet cannot be returned to standby mode**

Long press the hang-up key or switch off the tablet, check the SIM card and the

battery are all installed correctly and switch it on again.

#### **The network symbol is not displayed**

The network connection is lost. Either you are in a radio corner (In tunnel or between high buildings) or you are not in the network coverage area. Try to move to another place, try to reconnect the network (especially when you're not in your country), and check the antenna is in place if your tablet has an external antenna, or contact your network operator for assistance/information.

#### **The display doesn't respond (or the display responds slowly) after key pressed**

The display respond is slowly at very low temperature. This is normal and does not affect the operation of the tablet. Take the tablet to warmer place and try it again. In other cases, please contact your tablet supplier.

#### **Your battery seems to over heat**

You might be using a charger that was not intended for using with your tablet. Make sure you always use the manufacturer authentic accessory shipped with your tablet together.

#### **Your tablet doesn't show the phone numbers of incoming call**

This feature is network and subscription dependent. If the network doesn't send the caller's number, the tablet will show "Withheld" to instead. Contact your operator for detailed information on this subject.

#### **You can't send text messages**

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

#### **You can't receive and/or store JPEG pictures**

A picture may not be accepted by your tablet if it is too large, if its name is too long, or if it doesn't have the correct file format.

#### **You feel that you have missed some calls**

Check your call diverts option.

#### **When charging, the battery icon shows no bar**

Only charge the battery in an environment where the temperature does not under 0°C (32°F) or over 50°C (113°F), in other cases please contact your tablet supplier.

#### **The display shows no SIM card**

Check the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

#### **When try to use some functions in the menu, the display shows NOT ALLOWED**

Some functions are only available which depends on the network; so, please check the network or your application in local area can support them. Contact with your operator for detailed information on this subject.

#### **The display shows SIM failure or INSERT YOUR SIM CARD**

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

#### **When attempting to use a feature in the menu, the display shows NOT ALLOWED**

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

#### **Your tablet doesn't work well in your car**

A car contains many metallic parts that absorb electromagnetic waves which can affect the performance of tablet. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

## Note:

- Check with the local authorities whenever you are allowed to use the tablet while driving.

### **Charging feature disabled.**

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging message is showed on the screen.

### **Unclear photo on the device.**

Make sure that the camera lens on both sides is clean.

## Specific Absorption Rate Information

### **International standards**

THIS TABLET MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your tablet is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and the Institute of Electrical and Electronics Engineers (IEEE) that for cast a substantial safety margin for assuring the protection of all persons, regardless of age and health. SAR.

The exposure recommendations for tablet use a matter known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the tablet used by the general public is 2.0W/kg averaged over ten grams of tissue and, is 1.6W/kg averaged over one gram of tissue by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the tablet transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the tablet while operating are generally below the maximum SAR value. This is because the tablet is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output. While there may be differences between the SAR levels of various tablet and at various positions, they all meet the international protection standards for exposure to radio waves.

**The highest SAR value for this Philips TLE722G model tablet when tested at the ear is X.XXX W/kg , and when properly worn on the body is X.XXX W/kg, for ICNIRP recommendation.**

SAR is measured against head and with the device at a separation of 15mm to the body, while transmitting at the highest certified output power level in all frequency bands of the mobile device.

For limiting the radio waves exposure, it is recommended to reduce the tablet phone call duration or to use a headset. The purpose of those precautions is to take the tablet away from the head and the body.

## Limited warranty

### 1. What Does This Limited Warranty Cover?

Manufacturer warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by manufacturer in the sales package ("Product") are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and

pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in manufacturer's intended country of sales of the product.

## 2. How long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

3. What Will Manufacturer do if The Product is Not Free from material defects in Materials and Workmanship during the Limited Warranty Period? During the limited warranty period, manufacturer or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Manufacturer will retain defective parts, modules or equipment. Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at manufacturer's option is your exclusive remedy.

## 4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or
- b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by manufacturer; or
- c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or
- d) Product defects or problems caused by uses with non-Philips products or accessories; or
- e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or
- f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.
- h) Normal wear and tear or Force Majeure.

## 5. How Do You Get Warranty Service?

- a) Return the Product to an authorized service center of manufacturer. You may contact the local manufacturer office for the location of the nearest authorized service center.
- b) The SIM card must be removed from the Product before it is given to manufacturer. Manufacturer assumes no liability for damaged or loss of the SIM card or the data contained therein.
- c) If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.
- d) IMPORTANT - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.

## 6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY

AGREEMENT, MANUFACTURER PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

MANUFACTURER' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT. HOWEVER IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Manufacturer with respect to this cellular Product and it supersedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of manufacturer is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

## Warrantor Statement

This product has been manufactured by Top Victory Investment Ltd. and imported by Metra Computer Group FZCO. which is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.



Register your product and get support at

[WWW.philips.com](http://WWW.philips.com)

©2017 PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips N.V. under license from Koninklijke Philips N.V.

