 
Your Phone



Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

Home screen

Your phone's home screen consists of the following areas:



Keys

Learn about the main keys.

Icons	Definition	Function		
0	Dial	Make or answer a call.		
0	Confirm and	Select or confirm an option;		
	navigation key	Long press to turn on or off the torch.		
[Hang-up/	End a call;		
	Power/	Hold to turn on/off the phone;		
	Exit	Return to home screen.		
٠	Left soft key	Select the options on the screen.		
٠	Right soft key	Select the options on the screen.		
*.0	Lock/unlock	Press \odot (left) and then $$ to lock keys on		
		home screen;		
		Long press 💽 to unlock keys.		

Icons & symbols

Learn about the icons and symbols on the screen.

lcons	Definition	Function					
979	Ringtone	Your phone will ring when receiving a call.					
	Vibration only	ation Your phone will vibrate when receiving a call.					
(Battery	The bars indicate the battery level.					
역역	SMS	You have a new message.					
54 55	Missed call	You have missed a call.					
ର୍ଜ୍ୱ ର୍ଜ୍ୱ	Call diverts	All your incoming voice calls are being forwarded to a number.					
0	Headset	The headset is plugged into the phone.					
ğ	Alarm	The alarm clock is activated.					
	Roaming	Displayed when your phone is registered to a network other than your own (especially when you are abroad).					
ሳ ሳ	Home zone	A zone designated by your network operator. Contact your service provider for details.					
Y.Ar Y.Ar	GSM network	Your phone is connected to a GSM network. The more bars are shown the better the reception is.					
٥	Key lock	The keypad has been locked.					
	Memory card	The memory card is in use.					
Ф	Auto Power	Auto power function is enabled.					
23	Flight Mode	Flight mode is activated.					

 
Getting started

Insert SIM card and Charge the battery

Learn about installing SIM card and charging the battery for the first use.

Insert SIM card

Remove the back cover.





3 Insert the SIM I/SIM 2 card.



4 Install the battery.





5 Replace the back cover.



Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.



🛞 Tips:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lost its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Insert a Micro SD card (Memory card)



You can expand the memory of your phone by adding a micro-SD card.

- Unlock the memory card cover.
- 2 Align your micro-SD card with the slot. Put it in place.
- 3 Press down the card holder and pull it until it is locked.

Using your phone

Use basic call functions

Make a call

- Enter the phone number.
- 2 Press I and select SIMI or SIM2 to dial the number.
- 3 Press I to hang up.

🛞 Tips:

- To dial the number by using SIM 2, press Options, select Call (SIM2 voice call).

Answer and end a call

- Press [®] to answer the call, press the navigation key ▲ or ▼ to adjust the volume).
- 2 Press right soft key to select handsfree mode during a call.
- 3 Press I to hang up.

🛞 Tips:

• You can use the supplied headset to answer or end a call.

Use speed dial

On the home screen, you can call a number by long pressing a numeric key to choose a speed dial number and select SIMI or SIM2 to call out.

To assign a contact to a speed-dial key:

- Select Menu > Contacts > Phonebook settings > Speed dial.
- 2 Select Status to set speed dial On.
- 3 Select Set numbers to add numbers from phonebook.

Make an emergency call

Without a SIM card in phone, you can press numeric keys to make the emergency call. In Europe, the standard emergency number is 112; in the UK, it is 999.

Receive and send messages

You can use the Messaging menu to send text message.

- Select Messaging> Write message.
- 2 Select Text message or Multimedia message, write your message.
- 3 Press Options>Send to to send the message.

Enter text

Your mobile phone supports a number of text entry methods, including English input, numeric input and symbol input.

Keys:	
Keys	Function
#. *	Select a input method.
**	Enter symbols and punctuations.
0+	Insert a space.
⊙ (Right)	Delete the previous character.
⊙ (Left)	Select the character on the screen.
0	Select or confirm a character.
4/>	To browse the candidate character on the previous or next page.

🕽 Note:

 Depending on the language you select for your phone, the supported input methods may vary.

Introduction of input methods:

Input method	Function	
English input	Press the keys that are marked with the letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.	
Smart English input	You need to press only once on the key corresponding to each letter needed to spell a word: keystrokes input are analyzed and the word suggested by input method is displayed at the pop- up window.	
Numeric input	Press the numeric key to enter a number.	

Manage your phonebook

Learn about basic phonebook function.

Add a new contact

- Go to Contacts, select Add new contact.
- 2 Select a location. (To SIM1/To SIM2/To phone).
- 3 Enter the number, and add details as desired.
- 4 Press Options to finish saving.

Search for a contact

- Go to Contacts.
- 2 Enter the first few letters of the name in the search bar.
- 3 Select the contact from the list.

Manage your contacts

You can copy or move contacts between the SIM card and phone, or delete contacts. Go to **Contacts**, press \bullet or \checkmark to select the desired option.

MultiMedia

Audio player

Save MP3 music files to your Micro SD card and then insert the card to your phone.

Play music

- Go to Entertainment>Multimedia>Audio player, go to list to select your desired song in the folder.
 - To refresh the list, press Options> refresh list.
- 2 Press Options> Play to start playing.
- 3 Using the following keys to control playback:

Function	Definition
►II	Pause and resume playback.
H	Select previous track.
₩	Select next track.
1.adl	Press the navigation key 🔺 or 🔻 to adjust volume.
⊙ (Right)	Return to the previous menu.
0	Go to the home screen.

Player settings

Go to Audio player>Options>Settings:

- Pre. playlist : Play audio files from your phone or memory card.
- · List auto gen. : Generate playlist automatically.
- Repeat : Repeat One (Play current file repeatedly); Repeat All (Play all the files in the folder repeatedly).
- · Shuffle: Play music files in the folder randomly.
- Background play : Continue to play music after exiting the audio player.
- · Bluetooth settings : Switch on/off Bluetooth stereo output.

Press • Back or I to turn off the audio player.

😑 Note:

 When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

FM radio

Learn about listening to radio programs by using a FM radio.

Listen to a radio station

- Plug the supplied headset into your phone.
- 2 Go to Multimedia>FM radio, press
 Options>Auto search. It starts scanning automatically and save the available channels.
- 3 Press the navigation key < or > to adjust the frequency.
- 4 Press ▲ or ▼ to adjust the volume.
- 5 Press Back or 1 to turn off FM radio.

FM radio settings

Go to • Options>Settings :

- · Background play: Continue playback after exiting FM radio.
- · Ioudspeaker: Listen to radio through the speaker.

Video recorder

You can record your video and save the file to your phone or SD card.

Record video

- Go to Multimedia>Video recorder.
- 2 press \bigcirc to start recording the video.
- 3 Press Stop to stop recording and save the file.

Camera

Learn about camera function. Let you take photos as desired by using your phone.

Take a photo

- Go to Multimedia>Camera.
- 2 Aim the lens at the subject.

- Press ▲/▼ to zoom in or zoom out, press ◀/▶ to adjust the brightness.

- 4 Press ⊙ (right) to exit.

🛞 Tips:

• All the photos taken are saved to My files >Phone or Memory card >Photos.

View photos

Tap \odot (left), go to **Options>Photos>Image viewer**, tap navigation keys to select a photo.

Camera settings

Go to Camera>Options>Camera settings:

- · Shutter sound : Select the shutter sound.
- EV : Select a explosure value.
- Anti-flicker : Select a band to avoid the impacts on photos caused by flickers from lighting sources.
- · Contrast : Adjust the contrast.
- · Delay timer : Select a time span for auto photographing.
- Cont. shot : Set to take photos continuously.

Tools

Calendar

Go to Tools>Calendar, you can check the calendar.

Alarm

Learn about how to set and use an alarm. You can set up to five alarms.

Set an alarm

- Go to Tools>Alarm.
- 2 Select an alarm, press Edit to edit the alarm.
- 3 Press Done to finish setting the alarm.

Turn off an alarm

- Go to Tools>Alarm.
- 2 Select the alarm you want to turn off, press Edit.
- 3 Press the navigation key < or ► to select Off.

Stop an alarm

When the alarm rings,

- Select Stop: The alarm stops.
- Select Snooze: The alarm will sound again after the set Snooze (min) interval.

Check world clock

Learn about how to check time & date of cities in other countries.

- Go to Tools>World clock.
- 2 Press the navigation key < or > to select a city.
- 3 You can check time & date of the city.

😑 Note:

· Alarms, reminders, programmed events are time zone independent.

Calculator

Use the numeric keys to calculate on the phone.

Set clock

- On the home screen, go to Menu>Settings> Phone settings >Time and date.
- 2 Select Set time/date: use the numeric key to enter the digits.

SNS

To use the SNS (Social Networking Services) function.

SIM settings

- Check that your phone is turned on. Enter the PIN code if required.
- 2 Go to Settings>Dual SIM settings, select Dual SIM open/Only SIMI open/Only SIM2 open.

Profiles

The profiles are defined for several scenes. They consist of the settings for ringtone, volume, and others. With preset profiles, you can easily adjust the settings for incoming calls and messages as desired.

- Go to Settings>User profiles, press Options>Activate to activate the profile.
- 2 Go to **Options>Customize** to modify ringtone, volume and others. To activate **Silent** mode, long press *****. On the home screen.

Settings

SIM settings

Function		Definition
Dual switch	SIM	Select the dual SIM switch mode.
Dual settings	SIM	Select active mode to receive calls or message from a SIM card.

User profiles

Function	Definition
User profiles	Select the desired profile from the list of profiles and tap \bigcirc or \odot Options > Activate to activate it.
	Tap \odot Options > Customize to adjust the profile settings.

Phone settings

Function	Definition		
Flight mode	Select Normal mode or Flight mode.		
Time and date	Set the clock of the phone.		
Auto power	Set time for the phone to be switched on/of automatically.		
Language Select a language for your phone.			
Pref. input method	Select your preferred input method.		
Fast key	Select a navigation key as direct access to a menu.		
Go to	Set the shortcut menu.		
UART settings	Select data from SIM1/SIM2 when connect phone with PC.		

LCD backlight	Select the brightness of backlight.		
Display	Select display options for your phone.		
Wallpaper	Select an image as the wall paper of your phone.		
Screen saver	Enter screen saver mode after a time span.		
Power on display	Select the power on animation.		
Power off display	Select the power off animation.		
Show date and time	Select whether to show date and time on the home screen.		

Network settings

Function	Definition				
Network selection	Select the subscription recommended	dep	,	r phone Automa	

Security settings

This menu allows you to use passwords to protect your SIM card, phone, and information stored on the phone.

Function	Definition
SIM1/SIM2 security	This option allows you to use passwords to protect your SIM card.
PIN lock	Set PIN password protection for your SIM card. (The PIN or PIN2 are provided by the network operator.)
Change PIN/ PIN2	Change your PIN/PIN2 password as desired.
Phone security	This option allows you to use passwords to protect your phone.

Phone lock	Set passowrd protection for your phone. You are required to enter the password each time you turn on the phone or change to a new SIM card (1122 by default).
Change password	Change your phone password as desired.
Auto	Set an time span for the keypad to be locked.

keypad lock

😑 Note:

- The PIN code is preconfigured and communicated to you by your network operator or retailer.
- If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.
- If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

Restore factory settings

Function	Definition
Restore factory settings	Restore your phone settings to the default values. You need to enter your phone lock password (1122 by default).

Call settings

Go to Menu>Calls>Call settings.

Function	Definition
SIMI/SIM2 call settings	Go to SIMI/SIM2 call settings.
Call waiting	Get informed of an incoming call when on the phone (network-dependent).
Call divert	Divert incoming calls to your voice mailbox or another phone number.
Call barring	Set limits to your incoming and outgoing calls.

Line switching	Select a phone line.
Advanced settings	Go to advanced settings.
Blacklist	This option allows you to reject the incoming calls or messages from those included in the blacklist.
Auto redial	Keep redialing the number that fails to go through.
Call time reminder	Get reminded after the call time span once or repeatedly.
Reject by SMS	Reject the incoming call by sending SMS to the number.
Answer mode	Select an answer mode, any key answer or auto answer when headset mode.

Safety & Precaution

Precaution

Keep your phone away from small children

Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves

Your phone transmits/receives radio waves in the GSM frequency (900/1800MHz).

Go Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be

affected by radio energy.

Switch off your phone...

Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.

In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders).In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In guarries or other areas where blasting operations are in progress.

Your mobile phone and your car

AT Avoid using your phone while driving and obey all regulations that restrict the use of mobile boost phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly

For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.
- · Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.

Protect batteries from damage

You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.

Environmental care

Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling. Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

The labeled packaging material is recyclable.

C:A financial contribution has been made to the associated national packaging recovery and recycling system.

 \triangle :The plastic material is recyclable (also identifies the type of plastic).

WEEE Marking in the DFU: "Information to the Consumer"

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Tips

Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breast pocket.
- · Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the powersaving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- · Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS connection, and drain your battery power.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows BLOCKED when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows IMSI failure

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call I or Withheld instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below $0^{\circ}C(32^{\circ}F)$ or above $50^{\circ}C(113^{\circ}F)$.

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

😑 Note:

Check with the local authorities whether or not you are allowed to use the phone while driving.

Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the camera lens on both sides is clean.

Trademark Declaration

Philips PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. Under license from Koninklijke Philips Electronics N.V.

Specific Absorption Rate Information

International standards THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is 2.0WI/kg averaged over ten grams of tissue and, is 1,6WI/kg averaged over one gram of tissue by IEEE Std IS28 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this E122 model phone when tested for compliance against the standard was 0.596 W/kg for ICNIRP recommendation.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

Limited warranty

What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by Philips in the sales package ("Product") are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips' intended country of sales of the product.

2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase. What Will Philips Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Philips will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at Philips option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or

b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by Philips; or

c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or

d) Product defects or problems caused by uses with non-Philips products or accessories; or

e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or

f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or

g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.

h)Normal wear and tear or Force Majeure.

5. How Do You Get Warranty Service?

a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.

b)The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.

c)If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.

d) IMPORTANT - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.

6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLEID (WHETHER BY STATUTE UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TOPIT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT. HOWEVER IN NO EVENT SHALL PHILIPS BE LABLE FOR ANY PUNITVE, SPECIAL, INCIDENTAL INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES; RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED BREMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

Declaration of Conformity

We, Shenzhen Sang Fei Consumer Communications Co., Ltd. I I Science and Technology Road, Shenzhen Hi-tech Industrial Park, Nanshan District, Shenzhen 518057 China

declare under our sole responsibility that the product

E122 Philips GSM/GPRS 900/1800 TAC number: 86313701

to which this declaration relates, is in conformity with the following Standards:

SAFETY : EN 60950-12006+A11:2009 HEALTH: EN 50360:2001 EN 62209-2:2010 ENC: ETSI EN 301 489-1 V1.8.1 ETSI EN 301 489-7 V1.3.1 SPECTRUM: ETSI EN 301 511 V9.0.2

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/S/EC has been followed with the involvement of the following Notified Body:

SIEMIC ,2206 Ringwood Avenue,San Jose,C,USA

Identification mark: 2200 December 13 th, 2011

Quality Manager