


Use your Philips X700 through the external display



Navigate through the external main menu

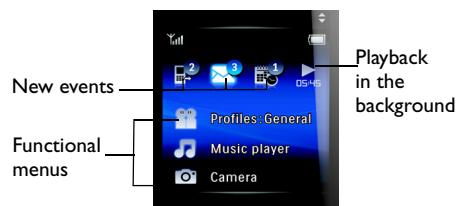


- Press the **Navigation** keys to navigate through the new events and status icon, and functional menus/ sub-menus.
- Current icon or menu bar is highlighted.
- Press the **Select** key to go to the menu.

Get informed of new events



New messages Missed calls

Check and reply to new messages

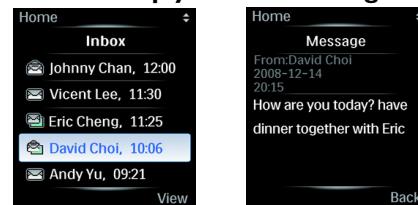

- Press the **Select** key to check a message. If necessary, press the **Navigation** keys to select a message. Press the **Select** key to confirm.
- Open the flip to reply to the message. You will see a synchronous internal display.

Check and reply to missed calls



Headset unplugged
• Press the **Select** key to check call details.

Continue an outgoing call after closing the flip (headset plugged)



Headset plugged
• Open the flip to make a call.
• After the call is accepted, close the flip. The call will continue.

Play music

1. Press the **Navigation** keys to select **Music player**. Press the **Select** key to confirm.
2. Press the **Navigation** keys repeatedly to select a song in a music folder. Press the **Select** key to confirm.

On the music playback screen



Press the **Volume** keys to adjust the volume.
Long press the **Navigation** keys to search for a song.

Press the **Select** key to start or pause playback.

Press the **Home** key to exit the music player.
A message screen appears. Press the **Select** key to continue music playback in the background; press the **Home** key to stop music playback.

For more information about the music player, see the chapter "Media player" in the User Manual.

Listen to the FM radio

Before listening to the FM radio

- To tune to a radio station, always plug the supplied headset into your phone.
 - Edit your preset channel list (see the chapter "Media player" in the User Manual).
1. Press the **Navigation** keys to select **FM radio**.
Press the **Select** key to confirm.
 2. Press the **Select** key repeatedly to select a channel.

On the radio playback screen



Press the **Volume** keys to adjust the volume.


Press the **Select** key to select a preset station.

Press the **Home** key to exit the radio.

A message screen appears. Press the **Select** key to continue radio playback in the background; press the **Home** key to stop radio playback.

Use the camera/video

1. Press the **Navigation** keys to select **Camera**.
Press the **Select** key to confirm.
2. Press the **Navigation** keys to switch between **Camera** and **Video**.
3. Press the **Select** key to take photos, or start or stop video recording.

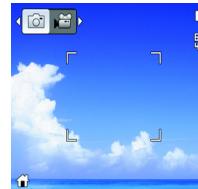

Alarm on/off



- The alarm icon appears on the external display at the set time.
- Press the **Home** key to select **Snooze** (if you have set your Snooze option).
- Press the **Select** key to stop the alarm.

For more information about the camera, video, and alarm, see the chapter "Camera" and "Business" in the User Manual.