

# Your phone



 
---

Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

---



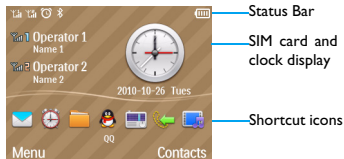

## Home screen



 
 


 


Your phone's home screen consists of the following areas:



## Keys

Learn about the main keys.

Key	Definition	Function
	Dial	Make or answer a call.
	Confirm	Select or confirm an option.
	Hang-up/ Power/ Exit	End a call; Hold to turn on/off the phone; Return to home screen.
	Left soft key	Select the options on the screen.

	Right soft key	Select the options on the screen.
	Lock	On home screen, hold  to lock keys; hold  again to unlock keys.
	Torch	On home screen, hold  to turn on the torch; hold  again to turn off the torch.
	Message	On home screen, press the key to enter message menu.
	Camera	On home screen, press the key to use the camera.

## Shortcut menu





The shortcut on home screen can open the applications you often used.

### Introduction of shortcut applications

Definition	Function
<b>Inbox</b>	Open the inbox folder of SMS.
<b>Audio player</b>	Use the audio player.
<b>UCWEB</b>	Use the UCWEB browser.
<b>Alarm</b>	Set the alarm.
<b>Calendar</b>	Check the calendar and to-do list.
<b>Calulator</b>	Use the calculator.
<b>Call options</b>	Select the call options.
<b>Camera</b>	Use the camera to take a photo or video clip.
<b>Contacts</b>	Go to contact list.
<b>Create Message</b>	Create a new SMS or MMS.
<b>Fake call</b>	Activate virtual call.











<b>My files</b>	Open my files.
<b>FM radio</b>	Listen to FM programs.
<b>Profiles</b>	Change user profile.










Set shortcut menu:

- 1 Go to **Menu > Settings > Phone settings > Shortcuts** to enter shortcut list.
- 2 Press  **Options>Edit** to change shortcut menu.
- 3 Press **▲** or **▼** to select shortcut, and then press  to add the application to shorcut list.
- 4 Press  **Options>Change order** to change the order for shorcut list.
- 5 Press  **OK** to finish settings.

## Icons & symbols

Learn about the icons and symbols on the screen.

Icons	Definition	Function
	<b>Silent</b>	Your phone will not ring when receiving a call.
	<b>Vibration only</b>	Your phone will vibrate when receiving a call.
	<b>Battery</b>	The bars indicate the battery level.
	<b>SMS</b>	You have a new message.
	<b>MMS</b>	You have a new multimedia message.
	<b>Wap message</b>	You have received a Wap push message.
	<b>Missed call</b>	You have missed a call.
	<b>Call diverts</b>	All your incoming voice calls are being forwarded to a number.
	<b>Bluetooth</b>	Bluetooth is activated.
	<b>Bluetooth headset</b>	The Bluetooth headset is connected.

	<b>Headset</b>	The headset is plugged into the phone.
	<b>Alarm</b>	The alarm clock is activated.
	<b>Roaming</b>	Displayed when your phone is registered to a network other than your own (especially when you're abroad).
	<b>Home zone</b>	A zone designated by your network operator. Contact your service provider for details.
	<b>GSM network</b>	your phone is connected to a GSM network. The more bars are shown the better the reception is.
	<b>GPRS attach</b>	Your phone is connected to the GPRS network.
	<b>Blacklist</b>	Indicates that blacklist feature is activated.
	<b>Key lock</b>	The keypad has been locked.
	<b>Memory card</b>	The memory card is in use.

# Table of contents

Getting started .....	5	Virtual call .....	23
Insert SIM card and Charge the battery .....	5	Calculator .....	23
Insert a Micro SD card (Memory card) .....	7	Currency converter .....	23
Remove SIM & Micro SD card .....	7	Web applications & Java .....	24
Connect to your PC .....	8	Browser .....	24
Customize your phone .....	9	Java applications .....	24
Basic function .....	10	Settings .....	26
Use basic call functions .....	10	SIM setting .....	26
Receive and send messages .....	11	Phone setting .....	26
Enter text .....	11	Display setting .....	27
Manage your phonebook .....	12	Sound setting .....	27
MultiMedia .....	15	Connectivity .....	27
Media player .....	15	Safety & Precaution .....	29
Camera .....	16	Precaution .....	29
Video recorder .....	17	Tips .....	30
FM radio .....	18	Troubleshooting .....	30
Business applications .....	19	Trademark Declaration .....	32
Manage your calendar .....	19	Specific Absorption Rate Information .....	32
Alarm .....	19	Limited warranty .....	32
Bluetooth .....	20	Declaration of Conformity .....	34
Read E-books .....	20	Tips & tricks .....	35
File management .....	21	Optimizing your Philips Xenium battery	
Use blacklist .....	22	performance .....	35
Check world clock .....	22		
SMS back-up .....	22		

# Getting started

Congratulations on your purchase and welcome to Philips!

To get the most of your product and enjoy all Philips has to offer, register your product at:

[www.philips.com/mobilephones](http://www.philips.com/mobilephones)

More details about your product, please access:

[www.philips.com/support](http://www.philips.com/support)

## Note:

- Please read the safety instructions in the "Safety & Precaution" section before use.

 
## Insert SIM card and Charge the battery

Learn about installing SIM card and charging the battery for the first use.

### Insert SIM card

Follow the steps below to insert your SIM card. Remember to turn off your mobile phone before removing the back cover.

 
- 1 Remove the back cover.

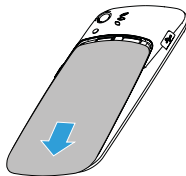

 
- 2 Take out the battery.



 
3 Insert the SIM 1/SIM 2.

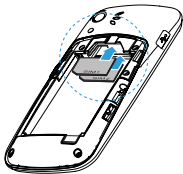

4 Install the battery.

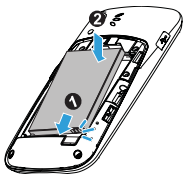 


5 Replace the back cover.

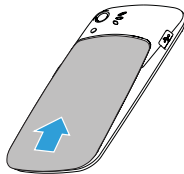

### Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.

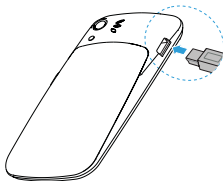



#### Tips:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lose its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

## Insert a Micro SD card (Memory card)

You can expand the memory of your phone by adding a micro-SD card.

 
- 1 Unlock the memory card cover.
- 2 Align your micro-SD card with the slot. Put it in place.



 
## Remove SIM & Micro SD card

Learn about how to remove your SIM card and Micro SD card from your phone.

 
- 1 Remove the back cover and take out the battery.
- 2 Remove SIM.

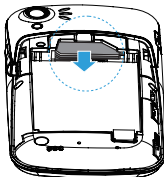

- 3 Pull out the metal bracket and then take out SIM2.

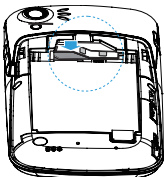

- 4 Remove the Micro SD card.

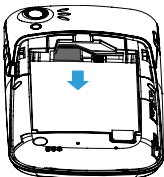

## Connect to your PC

Data communication software (Mobile Phone Tools) offers instant synchronization between your phone and your computer. You can use the software for the data synchronization between your phone and PC, like phonebook, calendar, SMS messages, and audio/video/picture files.

### Install MobilePhoneTools on your PC

- 1 Insert the supplied Data communication software into the CD drive.
- 2 Run the autorun.exe program.
- 3 Make selections as prompted, and installation starts automatically.

### Connecting your Phone to the PC

- 1 Connect your phone to the PC using the supplied USB cable or through the Bluetooth.
- 2 When using the USB cable for connection, select **COM port** on your phone.
- 3 On your PC, double click the MobilePhoneTools icon, then the connected icon is displayed.

## Customize your phone

Customize your phone to match your preferences.

### Set time & date

- 1 On the home screen, go to **Menu>Settings>Phone settings>Time and date**.
- 2 Select **Set time/date**: Enter the digits or long press navigation key ▲ or ▼ until you reach the desired digits.

### SIM settings

- 1 Check that your phone is turned on. Enter the PIN code if required.
- 2 Go to **Settings>SIM settings>SIM1/SIM2 name**, name your SIM card.
- 3 Go to **SIM settings>Dual SIM settings**, select your desired options.




#### Note:

- The PIN code is preconfigured and communicated to you by your network operator or retailer.
- If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.

- If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

### Profiles

The profiles are defined for several scenes. They consist of the settings for ringtones, volume, and others. With preset profiles, you can easily adjust the settings for incoming calls and messages as desired.

- 1 Go to **User profiles**, press  **Activate** to activate the profile.
- 2 Press  **Modify** to modify ringtone, volume and others.  
To activate **Silent mode**, long press  on the idle screen.

#### Note:

 

- If you select Flight mode, you disable the connection between your phone and your mobile phone network.

# Basic function


 
## Use basic call functions

Learn to make or answer a call and use basic call functions.




### Make a call

- 1 Enter the phone number.
- 2 Press  to dial the number.
- 3 Press  to hang up.

#### \* Tips:

- For international calls, press  to enter the "+" sign for the international prefix.
- To dial the number by using SIM 2, press  **Options**, select **Dial (SIM2)**.

### Answer and end a call



- 1 Press  to answer the call (Press the side volume key to adjust the volume).
- 2 Press  to select hands free mode.
- 3 Press  to hang up.

#### \* Tips:

- You can use the supplied headset to answer or end a call.

### Make a conference call


If network applicable, you can handle two or more calls, or make a conference call.

- 1 During a call, enter a phone number, and then press  to dial the number. The second number is dialled.
- 2 The first call is put on hold at this time.
- 3 You can press  **Swap** to toggle between 2 calls.
- 4 To end the call, select **Options>End call** or **End all calls**.


### Use speed dial

On the home screen, you can call a number by long pressing a numeric icon.

To assign a contact to a speed-dial key:

- 1 Select **Settings > Phone settings > Speed dial > Set numbers**.
- 2 Choose a numeric key.
- 3 Press  to add a phone number.

## Make an emergency call


Without a SIM card in phone, you can press  to make the emergency call.

In Europe, the standard emergency number is 112; in the UK, it is 999.



## Receive and send messages

 
You can use the **Messaging** menu to send text message, multimedia message and E-mails.

### Send a SMS message

- 1 Select **Menu**> **Messaging**> **Create Message**>**Text message**.
- 2 Write your text message.
- 3 Press  to send the message.

### Send a MMS message

- 1 Select **Menu**> **Messaging**> **Create Message**>**Multimedia message**.
- 2 Edit contents, and press  **Options** to add multimedia contents (photo, audio, attachment or bookmark text).
- 3 Press  to add a contact.

- 4 Press  **Options**>**Send** to send the Multimedia message.



 
 
 

#### Note:


 



- Copyright protected pictures and sound cannot be sent by MMS.

## Enter text

Your mobile phone supports a number of text entry methods, including T9 input, English input, numeric input and symbol input.

Virtual keypad:

Virtual keypad	Function
	Change input language.
	Select a input method.
	Enter symbols and punctuations.
	Insert a space.
	Enter to a new line.
	Delete the character before.

	Shift key.
	Input A-Z.
	Input 0-9. (You need press the shift key  first and then press the numeric key)
	Select or confirm a character.

 **Note:**

- Depending on the language you select for your phone, the supported input methods may vary.

## Introduction of input methods:

Input method	Function
English input	Press the keys that are marked with the letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.

**T9<sup>®</sup> predictive text input** You need to press only once on the key corresponding to each letter needed to spell a word: keystrokes input are analyzed and the word suggested by T9<sup>®</sup> is displayed at the pop-up window.


**Numeric input** Press the numeric key to enter a number.

## Manage your phonebook

Learn about basic phonebook function.

### Add a new contact

Method one:

- 1 On the home screen, enter a number, select a location. **(To SIM1/To SIM2/To phone).**
- 2 Save the number, and add details as desired.
- 3 Press  to finish saving.

Method two:

- 1 Go to **Contacts**.
- 2 Press  **Options >Add** to add a new contact.



#### Tips:

- For contacts on the smart phonebook, you can add detailed information, like home number, office number, contact pictures and ringtones.

## Search for a contact

- 1 Go to **Contacts**.
- 2 There are four phonebooks above the list: all, phone, SIM1 and SIM2.
- 3 Press ◀ or ▶ to select a desired phonebook.
- 4 Enter the first few letters of the name in the search bar. (For example “John Henry” enter JH)
- 5 Select the contact from the list.

## Manage your contacts

You can copy or move contacts between the SIM card and phone, or delete contacts. Go to **Contacts>Options** to select the desired option.

### 1 Set group:

You can group your contacts as different groups. For different groups, you can use different ringtones for identification, and send messages to a group.


### 2 Add contacts to a group:

- Go to **Contacts**, press ◀ or ▶ to select **View groups**.
- Enter a group.
- In **Group members**, press Ⓞ to add members for the group.

## Back-up your contacts


You can save the important contacts as .udx files in your phone or memory card.

Back up contact information:

- 1 In **Tools > Backup&Restore > Phonebook Backup & Restore**, select **Backup**.
- 2 Press Ⓞ to select your desired contacts.
- 3 Press  **Options > Done**. In **Phone** or **Memory card**, select a folder.
- 4 Enter a file name, and press Ⓞ to finish backing up the file.

Restore contact information:


- 1 In **Tools > Backup&Restore > Phonebook Backup & Restore**, select **Restore**.
- 2 In **My files**, find the back-up file.

- 3 Press  to restore the contact to your desired phonebook.

## Special numbers

You can keep a list of useful numbers on your phone, such as own numbers, service numbers, voicemail and emergency numbers.

Go to **Phonebook>Options>Special numbers**:

Function	Definition
<b>Owner numbers</b>	Edit the phone number and name.
<b>SOS numbers</b>	Edit your emergency phone number.
<b>Voice mail settings</b>	<p>Set your voice mail server number, as well as retrieve your voice mails. Consult the network operator for the account information.</p> <p>On the home screen, long press  to dial the voice mail number.</p>
<b>Service numbers</b>	Contact your network operator for more information.







# MultiMedia

## Media player

Save AMR, MP3, MIDI, WMA, WAV, AAC and AAC<sup>+</sup> music files under the **Audio** folder on your phone and memory card.

### Play music

- 1 Go to **Multimedia>Audio player>Tracks**, select your desired song in the folder.
- 2 Using the following keys to control playback:



Function	Definition
	Pause and resume playback.
	Select previous track.
	Select next track.
	Press side volume key to adjust volume.
	Return to the previous menu.
	Go to the home screen.

### Player settings

Go to **Audio player>Settings**:

- **Music source**: Play audio files from your phone or memory card.
- **Play in background**: Continue to play music after exiting the music player.
- **Shuffle**: Play music files in the folder randomly.
- **Repeat**: **One** (play current file repeatedly); **All** (play all the files in the folder repeatedly).
- **Equaliser**: Select music style suitable to your songs.
- **Refresh list**: Refresh all songs in your list.

To turn off the music player on the home screen

Press , and then press .



### Note:

- When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

## Camera

Learn about camera function. Let you take photos as desired by using your phone.

### Take a photo

- 1 Go to **Menu>Camera**, select camera mode.
- 2 Aim the lens at the subject.
  - Press side volume key to zoom in or zoom out.
  - Press navigation key ▲ or ▼ to increase or decrease the brightness.
- 3 Press  to take a photo.
- 4 Press  to exit.


#### \* Tips:

- All the photos taken are saved to **My files>Phone** or **Memory card>Pictuers**.


### View photos










Go to  > **View picture**,





 
- 1 View photos: press navigation key ◀ or ▶ to select a photo.
- 2 Zoom in/out photos: press side volume key to zoom in or out a photo. After zooming in a photo, press the navigation key ◀ or ▶ to slide the screen.

- 3 Set as full-screen wallpaper: press .

### Camera settings

While using the camera, press  to select settings:

Icon	Option	Function
	<b>View picture</b>	View the photos you have taken.
	<b>Image size</b>	Select image size.
	<b>Quality</b>	Set image quality.
	<b>Timer</b>	Select a time span for auto photographing.
	<b>Continuous shot</b>	Set to take photos continuously.
	<b>Picture mode</b>	Switch the picture mode.
	<b>Scenes</b>	Select a scene to take a photo.
	<b>Storage</b>	Select default storage location.
	<b>Effects</b>	Add special effects to the photos.

	<b>EV</b>	Select a exposure value.
	<b>Shutter</b>	Adjust the shutter sound.
	<b>Banding</b>	Select a band to avoid the impacts on photos caused by flickers from lighting sources.
	<b>Flash</b>	Use the flash to increase the brightness.
	<b>Restore</b>	Restore to default settings.



#### Tips:

- To zoom in or out a photo, please ensure that the photo is taken in a size equal to or greater than 640x480.

## Video recorder

Learn about video recorder function. Let you record a video clip as desired by using your phone.


### Record a video





- Go to **Menu>Camera**, select video recorder mode.
- Aim the lens at the subject.
- Press  to record a video clip.
- Press  to exit.

#### Tips:


- All the videos recorded are saved to **My files>Phone** or **Memory card>Videos**.


 


### Play a video clip

Go to  > **View video**,

- Press  start or pause playing a video clip.
- Press navigation key  or  fast rewind or forward.
- Press side volume key to adjust volume.
- Press  to exit.

### Video recorder settings

While using the video recorder, press  to select settings:

Icon	Option	Function
	<b>View video</b>	View the videos you have recorded.
	<b>Record audio</b>	Turn on or off audio recording.
	<b>Size limit</b>	Select size limit for the file.
	<b>Time limit</b>	Select time limit for recording.

Other settings, see Camera settings on page 16.


 **Tips:**

- To send a video clip via E-mail, the file size should equal to smaller than 100K.

## FM radio

Learn about listening to radio programs by using a FM radio.

### Listen to a radio station

- 1 Plug the supplied headset into your phone.
- 2 Go to **Multimedia>FM radio**, press  **Options>Auto search**. It starts scanning automatically and save the available channels.
- 3 Press ◀ or ▶ to select a channel.
- 4 Press the navigation key ▼ to turn off FM radio.

### FM radio settings

Go to **Options>Settings**:



- **Background play:** Continue playback after exit FM radio.
- **Loudspeaker:** Listen to radio through the speaker.

- **RDS:** Activate RDS services (depend on the radio station service).

When you are listening to a RDS station, your phone displays the following details: station name, program type (for example, News, Sports and Info), and frequency.



- **Record storage:** Select default storage location for recording file.

To turn off the FM radio on the home screen

Press , and then press .

### Record radio programs

You can record a radio program when listen to it.

- 1 Go to **Options>Record** to start recording.
- 2 Press  to stop recording.
- 3 Press  to save the file.

 **Tips:**




- The files recorded are saved to **My files>Phone** or **Memory card>Audio**.

# Business applications


## Manage your calendar

You can create your to-do list and make a plan on your calendar.

### Create your to-do list

- 1 Go to **Tools>Calendar** select a date, and then press  **Options>Add event**.
- 2 Edit reminder settings.
- 3 Press  **Done** to save the task.
- 4 To change your to-do list, select the task, and then press  **Options** to edit the task.

### Check your to-do list

You can check your to-do list in weekly or monthly view. Go to **Tools>Calendar**, press  **View** to check your to-do list.



### Check the calendar

Go to **Tools>Calendar**, you can check the calendar.


## Alarm

Learn about how to set and use an alarm. You can set up to five alarms.

### Set an alarm

- 1 Go to **Tools>Alarm**.
- 2 Select an alarm, press  to edit the alarm.
- 3 Press  to finish setting the alarm.

### Turn off an alarm

- 1 Go to **Tools>Alarm**.
- 2 Select the alarm you want to turn off.
- 3 Press  to select **Inactive**.

### Stop an alarm

When the alarm rings,

- Select **Stop** : The alarm stops.  
Or turn over your phone to mute the alarm.
- Select **Snooze**: The alarm will sound again after the set **Snooze** interval.



## Bluetooth

Your phone can connect to a compatible Bluetooth device for exchanging data.

### Connect to a Bluetooth device


- 1 Go to **Bluetooth>Power**, turn on the Bluetooth function.
- 2 Select **Find devices**, a list of available Bluetooth devices appears.
- 3 Select the device you wish to connect.
- 4 Enter your Bluetooth password to start pairing (0000 by default). The pairing is made if your pairing request is accepted by the other part.

### Send files via Bluetooth

- 1 Go to **My files**, select the file you want to send.
- 2 Press  **Options>Send>Via Bluetooth**.
- 3 Select a device.
- 4 Press  to start sending the file.

### Receive files via Bluetooth

- 1 Go to **Bluetooth>Setting>Visibility**, make your phone visible to other Bluetooth devices.
- 2 Enter the password and accept the request.

- 3 Press  to start receiving the file. The files received are saved to **My files>Phone or Memory card>Others**.


#### \* Tips:

- If you do not use the Bluetooth feature for some time, you should deactivate it in order to conserve battery power.

## Read E-books

You can read E-books (.txt file) on your phone.

### Start reading an E-book

- 1 Go to **Tools>Text reader**.
- 2 Select the .txt file you wish to read.
- 3 Press  to start reading.

Go to **Options>Settings>Encoding**, select the encoding suitable to your language.

### Reading setup

Go to **Options**, you can setup the following:



- **Find:** Find specific words in the file.
- **Add bookmark:** Add current page to bookmark.
- **Go to bookmark:** Read the page saved as bookmark.

- **Settings:** Set font size, scroll screen automatically or read E-book on full screen.

## File management

Learn about how to use and manage your files and folders.

### Use your files

- 1 Set a photo as contact picture:
  - Open **My files>Pictures**, select a photo.
  - Press  **Options>Use as>Wallpaper** or **Contact picture**.
- 2 Set an audio file as ringtone:
  - Select an audio file.
  - Press  **Options>Set as ringtone**.

#### Tips:

- To set photos you have taken as contact picture, select **320x240** in **Image size**.

### Share your files

You can share your photos, audio or video files with others via MMS, E-mail or Bluetooth.



- 1 Select your desired photos, audio or video files.
- 2 Press  **Options>Send**.

#### Tips:

- To send files via E-mail, the file size should smaller 90K.

### Manage your files

You can copy, move or delete a file in a folder.

- 1 Open a folder, press  **Options>Select multiple** to enter multiple selection list.
- 2 press  **Select** or **Unselect**.
- 3 Go to **Options** to finish copying, moving or deleting.


#### Note:

- The insecurity audio, video files and pictures are not recommended to save to your phone.

## Use blacklist

Learn about how to set the blacklist; you can reject the incoming calls or messages from those included in the blacklist.

### Activate blacklist

- 1 Go to **Tools>Black list>Mode**.
- 2 Press  **On** to activate blacklist function.

### Add a phone number to blacklist

- 1 Go to **Black list>Blacklist numbers**.
- 2 Edit the blacklist, add contacts by entering a phone number or select a contact from phonebook.


## Check world clock

Learn about how to check time & date of cities in other countries.

### Set world clock

Select **Tools>World clock**,

- 1 In **Local settings/Foreign settings**, press the navigation key ◀ or ▶ to select a city.

- 2 Press  **Options** to turn on/off **Daylight saving**.

- 3 In **Switch local/foreign**, switch clock.


#### Note:

- Alarms, reminders, programmed events are time zone independent.

## SMS back-up

You can save the messages as .txt files in your phone or memory card.

### Back up message

- 1 In **Tools > Backup&Restore > SMS backup**, select the desired SMS folder.
- 2 In **Phone** or **Memory card**, select a folder.
- 3 Press  to finish backing up the messages.

### Check SMS back-up file

Go to **My files**, find the SMS\_Backup folder, and then open the .txt file to read the SMS.

## Virtual call

You can make a virtual incoming call for yourself in some special circumstances. On the home screen, hold ▼ to activate virtual call.


### Select ringtone for virtual call

- 1 Go to **Tools>Fake call**.
- 2 Press the navigation key ▲ or ▼ to choose the desired ringtone.

## Calculator

Use the numeric keys to calculate on the phone.

### Currency converter

- 1 Go to **Tools>Currency converter**, enter the rate.
- 2 Enter the sum of money in **Local**. Press  **Done** to confirm.

#### Note:


- The result of the calculator is indicative only.

# Web applications & Java

## Browser

You can use this function to browse the Internet. Consult your network operator for the service subscription, data account information, and WAP settings.

### Access web sites

- 1 Go to **Browser>WAP**.
- 2 Select **Input address**, enter your desired websites.
- 3 Press  **OK** to access the website.

### Set homepage

- 1 Go to **Browser>WAP**, browse a website.
- 2 Select **Homepage**, you can browse the homepage.

### Add bookmarks

- 1 Go to **Browser>WAP**, browse a website.
- 2 Select **Options**, add current website to bookmark. You can add your favorite websites to bookmarks.


## Java applications

Learn about how to use Java applications and play games. Your phone is preloaded with some Java games and applications.

### Install Java games

- 1 Connect your phone to a PC via supplied USB cable.
- 2 Save .jar file to **My files>Others**.
- 3 Install the Java games.

### Play Java games

- 1 Go to **Applications>Java**
- 2 Select a game from the list.
- 3 Press  **Launch** to start playing the game.

#### Note:

- To run some Java applications (entrusted third party software) on your phone, you may need to adjust the Java settings. Go to **Options>Settings**.

## Java settings

Go to **Settings>Connectivity>Java settings**,

Function	Definition
<b>Java audio</b>	Set the volume level.
<b>Java vibration</b>	Turn the vibration on or off.
<b>Select SIM</b>	Select SIM1 or SIM2.
<b>Java SIM1/ SIM2 Profile</b>	Select a Java network (service subscription-dependent).
<b>Heap size</b>	Display allowed maximum size for Java memory.

# Settings

## SIM setting

Function	Definition
<b>SIM1/SIM2 name</b>	Set SIM card name.
<b>Dual SIM settings</b>	Select active mode to receive calls or message from a SIM card.
<b>Ask when power on</b>	Display SIM setting screen or not while power on the phone.

## Phone setting

Function	Definition
<b>Language</b>	Select a language for your phone.
<b>Time and date</b>	Set the clock of the phone.
<b>Shortcuts</b>	Set shortcut menu on the home screen.
<b>Speed dial</b>	Call a contact by long pressing a numeric key.
<b>Security settings</b>	This menu allows you to use passwords to protect your SIM card, phone, and information stored on the phone.

<b>PIN protection</b>	Set PIN or PIN2 password protection for your SIM card. (The PIN or PIN2 are provided by the network operator.)
<b>Change PIN/PIN2</b>	Change your PIN and PIN2 passwords as desired.
<b>Phone lock</b>	Set password protection for your phone. You are required to enter the password each time you turn on the phone (1122 by default).
<b>Safeguard</b>	Set password protection for the information stored on your phone.
<b>Memory status</b>	Check the memory occupancy of information of different memory storage.
<b>Auto keypad lock</b>	Set an time span for the keypad to be locked. automatically.
<b>Restore factory settings</b>	Restore your phone settings to the default values. You need to enter your phone lock password (1122 by default).

## Display setting


Function	Definition
<b>Wallpaper</b>	Select an image as the wall paper of your phone.
<b>Themes</b>	Define the theme for your phone.
<b>Backlight level</b>	Select the brightness of backlight.
<b>Backlight duration</b>	Select the duration of backlight.
<b>Greeting text</b>	Select whether to show greetings when your phone is turned on.
<b>Show operator name</b>	Select whether to show operator name on the home screen.

## Sound setting

Function	Definition
<b>Alert type</b>	Select alert types.
<b>Tone settings</b>	Select a ringtone for incoming calls and messages.
<b>Ringtone</b>	Adjust the volume of rings.

<b>Keypad</b>	Select whether the key sounds when pressed.
<b>Shutter sound</b>	Select shutter sounds for your camera.
<b>Battery low</b>	Select whether a warning tone is emitted when the battery level is low.

## Connectivity

Function	Definition
<b>Call options</b>	Select call options for your phone.
Predictive dialing	Quick search and list your phone number while entering a number on the home screen.
Headset answer	Use headset to answer an incoming call.
Any key answer	Answer an incoming call by pressing any keys (except  ).
Call time reminder	Get reminded after the call time span once or repeatedly.
Call services	Set call services.
Call divert	Divert incoming calls to your voice mailbox or another phone number.
Call barring	Set limits to your incoming and outgoing calls.
Auto redial	Keep redialling the number that fails to go through.

Fixed dial	Restrict your outgoing calls to certain numbers (PIN2 code required).
Reject by SMS	Reject the incoming call by sending a SMS to the number.
<b>Message settings</b>	Set settings for SMS and MMS.
<b>Network settings</b>	Set network settings for your phone.
Network selection	Select the network for your phone (service subscription dependent). <b>Automatic</b> is recommended.
Preferences	Select your preferred network.
<b>Browser</b>	See “Browser” on page 24.
<b>Connections</b>	The menu allows you to define the Internet access profiles of your phone. Consult your network operator for details.
<b>Java settings</b>	See “Java settings” on page 25.

# Safety & Precaution

## Precaution

### Keep your phone away from small children



Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

### Radio Waves



Your phone transmits/receives radio waves in the GSM frequency (900/1800/1900MHz).



Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

### Switch off your phone...



Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.



In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

### Your mobile phone and your car



Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

### Handle your phone carefully and sensibly



For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.

- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C.

### Protect batteries from damage



You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.

### Environmental care



Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling. Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



The labeled packaging material is recyclable.



A financial contribution has been made to the associated national packaging recovery and recycling system.



The plastic material is recyclable (also identifies the type of plastic).

## WEEE Marking in the DFU: "Information to the Consumer"

### Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

## Tips

### Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your phone if you suspect that interference is taking place.

### Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

### How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the power-saving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS connection, and drain your battery power.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

## Troubleshooting

### The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

### The display shows **BLOCKED** when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

### The display shows **IMSI failure**

This problem is related to your subscription. Contact your operator.

### Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

### The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

### The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

**Your battery seems to over heat**

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

**Your phone doesn't display the phone numbers of incoming calls**

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call 1 or Withheld instead. Contact your operator for detailed information on this subject.

**You can't send text messages**

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

**You can't receive and/or store JPEG pictures**

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

**You feel that you have missed some calls**

Check your call divert options.

**When charging, the battery icon shows no bar and the outline is flashing**

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

In other cases please contact your phone supplier.

**The display shows SIM failure**

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

**When attempting to use a feature in the menu, the display shows NOT ALLOWED**

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

**The display shows INSERT YOUR SIM CARD**

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

**The autonomy of your phone seems lower than indicated on the user guide**

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

**Your phone doesn't work well in your car**

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

 **Note:**

- Check with the local authorities whether or not you are allowed to use the phone while driving.

**Your phone is not charging**

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

**The picture captured with the phone camera is not clear**

Make sure that the camera lens on both sides is clean.

## Trademark Declaration

T9 <sup>®</sup>	T9 <sup>®</sup> is a registered trademark of Nuance Communications, Inc..
JAVA	JAVA is a trademark of Sun Microsystems, Inc.
Bluetooth <sup>™</sup>	Bluetooth <sup>™</sup> is a trade-mark owned by telefonaktiebolaget L M Ericsson, Sweden and licensed to Philips.
Philips	PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. Under license from Koninklijke Philips Electronics N.V..

## Specific Absorption Rate Information

### International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is **2.0W/kg averaged over ten grams of tissue and, is 1.6W/kg averaged over one gram of tissue** by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of

the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

**The highest SAR value for this Xenium F322 model phone when tested for compliance against the standard was 0.874 W/kg for ICNIRP recommendation.**

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

## Limited warranty

### 1. What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by Philips in the sales package ("Product") are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips' intended country of sales of the product.

### 2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

### 3. What Will Philips Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge

for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Philips will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at Philips' option is your exclusive remedy.

#### 4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or
- b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by Philips; or
- c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or
- d) Product defects or problems caused by uses with non-Philips products or accessories; or
- e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or
- f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.
- h) Normal wear and tear or Force Majeure.

#### 5. How Do You Get Warranty Service?

a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.

b) The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.

c) If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.

d) **IMPORTANT** - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.

6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TOPIT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

HOWEVER IN NO EVENT SHALL PHILIPS BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL

**APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.**

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

**Declaration of Conformity**

We,  
**Shenzhen Sang Fei Consumer Communications Co., Ltd.**  
**11 Science and Technology Road,**  
**Shenzhen Hi-tech Industrial Park,**  
**Nanshan District, Shenzhen 518057**  
**China**

declare under our sole responsibility that the product

**Xenium F322**  
Philips GSM/GPRS 900/1800/1900  
TAC number: 35704804

to which this declaration relates, is in conformity with the following Standards:

SAFETY : EN 60950-1:2006/A11:2009  
HEALTH: EN 50360:2001  
          EN 62209-1:2006  
EMC:    EN301 489-1 v1.8.1  
          EN 301 489-7 v1.3.1  
          EN 301 489-17 v2.1.1  
          EN 55013:2001+A2:2006, EN 55020:2007  
Radio :   EN 301 511 v9.0.2  
          EN 300 328 v1.7.1

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

British Approvals Board for Telecommunications TUV SUD Group  
Balfour House Churchfield Road-walton-on-Thames Surrey - KT12 2TD  
United Kingdom

Identification mark: **CE0168**

February 22nd, 2011

  
Quality Manager

## Tips & tricks

### Optimizing your Philips Xenium battery performance

Here are some steps to help you optimize your Philips Xenium's battery performance.

#### How to optimize the standby and talk time of your phone?

- Always ensure that your phone profile is appropriately set to meet your actual usage. Profile setting significantly impacts the phone's battery performance. In general, Outdoor Mode is the most power-draining setting while Silent Mode consumes the least amount of power.
- If you're using a Xenium phone with a dual SIM feature, try to activate the 2 SIM cards only when absolutely necessary. If you are in a country with single coverage, deactivate the non-covered SIM to prolong battery usage.
- If you're not using applications like Bluetooth, WIFI, GPS and JAVA, turn them off. And be sure to lock your phone to prevent accidental pressing of the keys with the auto-lock feature.
- Adjust the intensity and duration of your display screen's backlight to low or medium level and for the shortest duration. In general, the lower

the backlight level and the shorter the duration, the more power you will save.

- Avoid using or placing your phone near magnetic objects (eg. a radio or television) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.

#### How to extend your battery's life?

- Full charging and full running down of your battery will extend its life. Charge the battery once the low-battery warning comes on.
- Temperature will impact battery usage. Over time, heat will degrade your battery's performance. Keep your phone out of the sun or a hot car. If in low temperature, place your phone in a warmer place (eg. your pocket), as battery capacity decreases as the temperature drops.
- Always use authentic accessories as they enable your battery to perform at its peak. Non-authentic accessories (eg. chargers) can damage your battery and even your phone.