Your Phone



Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

Home screen

Your phone's home screen consists of the following areas:



Keys

Learn about the main keys.

Icons	Definition	Function
-1	Dial	Make or answer a call.
	Confirm and navigation key	Select or confirm an option.
8	Hang-up/	End a call;
	Exit/	Return to home screen;
	Power	Hold to turn on/off the phone.
	Left soft key	Select the options on the screen.
	Right soft key	Select the options on the screen.
.0	Lock/unlock	Press \blacksquare and then $\textcircled{.a}$ to lock/unlock keys.

Icons & symbols

Learn about the icons and symbols on the screen.

Icons	Definition	Function
S	Ringtone	Your phone will ring when receiving a call.
	Vibration only	Your phone will vibrate when receiving a call.
×	Silent	Your phone will not ring when receiving a call.
(Battery	The bars indicate the battery level.
\sim	SMS	You have a new message.
A	Headset	The headset is plugged into the phone.
O	Alarm	The alarm clock is activated.
0 all 2 all	GSM network	Your phone is connected to a GSM network. The more bars are shown the better the reception is.
5	Flight Mode	Flight mode is activated.
8	Bluetooth	Bluetooth is activated.

Getting started

Insert SIM card and Charge the battery

Learn about installing SIM card and charging the battery for the first use.

Insert SIM card

Remove the back cover.



3 Insert the SIM card.



5 Replace the back cover.



2 Take out the battery.



4 Install the battery.



Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.



😚 Tips:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lost its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Insert a Micro SD card (Memory card)



You can expand the memory of your phone by adding a micro SD card. The phone can support Micro SD card up to 16 GB.

- Push down the card holder and lift it up. Align your micro SD card with the slot. Put it in place.
- Press down the card holder and pull it until it is locked.

Customize your phone

Customize your phone to match your preferences.

Set clock

- On the home screen, go to Menu>Settings> Phone settings > Time and date.
- 2 Select Set time/date: use the numeric key to enter the digits.

SIM Settings

- Check that your phone is turned on. Enter the PIN code if required.
- 2 Go to Menu>Settings>Dual SIM Settings to activate both cards or one card only.

😑 Note:

- The PIN code is preconfigured and communicated to you by your network operator or retailer.
- If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.
- If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

Using your phone

Use basic call functions

Make a call

- Enter the phone number.
- 2 Press 🖃 to dial the number.
- 3 Press 🔊 to hang up.

Answer and end a call

- Press _____to answer the call.
- 2 Press 🖃 to select handsfree mode.
- 3 Press To hang up.

Make an emergency call

Without a SIM card in phone, you can press numeric keys to make the emergency call. In Europe, the standard emergency number is 112; in the UK, it is 999.

Receive and send messages

You can use the Messaging menu to send text message.

New SMS

- Select Messaging> Write message.
- 2 Write your text message.
- 3 Press Options>Send to to send the message.

Enter text

Your mobile phone supports a number of text entry methods, English input, numeric input and symbol input.

Keys:

Keys	Function
	Select an input method.
*.8	Enter symbols and punctuations.
0+,	Insert a space.
_	Delete the previous character.
-7	Select the character on the screen.
	Select or confirm a character.
• •	To browse the candidate character on the previous or
	next page.

😑 Note:

 Depending on the language you select for your phone, the supported input methods may vary.

Manage your phonebook

Learn about basic phonebook function.

Add a new contact

Method one:

- On the home screen, enter a number. Press Options>Save to ohpnebook>To SIM I/To SIM 2/To phone.
- 2 Save the number, and add details as desired.
- 3 Press left soft key ->Save to finish saving.

Method two:

- Go to Phonebook, select Add new contact.
- 2 Select a location. (To SIMI/To SIM2/To Phone).
- 3 Enter the number, and add details as desired.
- 4 Press Options>Save to finish saving.

Search for a contact

- Go to Phonebook.
- 2 Enter the letters of the name in the search bar. (For example "John Henry" enter "J H")
- 3 Select the contact from the list.

Manage your contacts

You can copy or move contacts between the SIM card and phone, or delete contacts. Go to **Phonebook>Options**, press \bullet or \checkmark to select the desired option.

Multimedia

Media player

Save MP3 music files under the My Music folder on your memory card.

Play music

- Go to Multimedia>Audio Player, select your desired song in the folder.
- 2 Using the following keys to control playback:

Function	Definition
	Pause and resume playback.
 or ► 	Press the navigation key to select previous or next track.
▲ or ▼	Press the navigation key \star or \checkmark to adjust the volume.
<u>\-</u>	Return to the previous menu.
8	Return to the home screen.

Player settings

Go to Audio player>List>Options>Settings:

- · Pre.playlist: Play audio files from your phone or memory card.
- · List auto gen.: Refresh all audio files in your list.
- Repeat: Choose to repeat current file/all the audio files.
- · Shuffle: Play audio files in the folder randomly or not.
- Background play: Continue to play music after exiting the music player.

To turn off the music player on the home screen

Press 🔲 .

😑 Note:

 When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

FM radio

Listen to a radio station

- Plug headset into your phone.
- 2 Go to Menu>FM radio>Options>Auto search. It starts scanning automatically and save the available channels.
- 3 Press 🗍 to turn off FM radio.

FM radio settings

Go to Options>Settings:

- · Background play: Continue playback after exiting FM radio.
- · Loudspeaker: Listen to the radio without putting on a headset.

Manage your calendar

You can create your to-do list and make a plan on your calendar.

Create your to-do list

- Go to Organizer>Calendar select a date, and then press — Options>Add.
- 2 Edit reminder settings.
- 3 Press Options>Save to save the event.

Check the calendar

Go to Organizer>Calendar, you can check the calendar.

Tools

Alarm

Learn about how to set and use an alarm. You can set up five alarms.

Set an alarm

- Go to Organizer>Alarm.
- 2 Select an alarm, press =7 to edit the alarm.
- 3 Press left soft key 🖃 to save it.

Turn off an alarm

- Go to Organizer>Alarm.
- 2 Select the alarm you want to turn off.

Stop an alarm

When the alarm rings,

- Select Stop: The alarm stops.
- Select Snooze: The alarm will sound again after the set Snooze (Five Mins) interval.

Internet

You can use this function to browse the Internet. Consult your network operator for the service subscription, data account information, and WAP settings.

Access web sites

- Go to Connectivity>Internet service>Search or Input URL, enter your desired websites.
- 2 Press 🔲 to access the website.

Browse settings

Go to **Connectivity>Internet service>Settings**, you can set the default homepage, choose the card for accessing the websites, choose the data account, and set other options to customize the browse.

Settings

Dual-SIM

See "Customize your phone" on page 6.

User profiles

The profiles are defined for several scenes. They consist of the settings for ringtone, volume, and others. With preset profiles, you can easily adjust the settings for incoming calls and messages as desired.

- Go to Menu>Settings>Profiles, press Options>Activate to activate the profile.
- 2 To activate Meeting/Silent mode, long press ... on the home screen.

Call settings

Function	Definition
Call waiting	Get informed of an incoming call when on the phone
	(network-dependent).
Call divert	Divert incoming calls to your voice mailbox or
	another phone number.
	•
Call barring	Set limits to your incoming and outgoing calls.
Line switching	Switch between Line 1 & Line 2.
Blacklist	Turn on/off blacklist function and set the numbers to
	be rejected.
Auto redial	Keep redialing the number that fails to go through.
Call time	Set reminder when the call time reaches the setting
reminder	time.
Answer mode	Set your answer mode.

Phone settings

Function	Definition
Time and date	Set the clock of the phone.
Screen auto	Set the time duration of screen auto lock.
lock	
Schedule	Set time for the phone to be switched on/off
power on/off	automatically.
Language	Select a language for your phone.
Pref.input	Set your preferred input method.
method	
Shortcuts	Select a navigation key as direct access to a menu.
Dedicated keys	Set the detailed function of the keys.
Flight mode	Switch from normal mode to flight mode.
LCD backlight	Set the brightness and time duration of backlight.

Display

Function	Definition
Wallpaper	Select an image as the wall paper of your phone.
Show date and time	Choose whether to show date & time or not.

Other settings

Function	Definition
Security	This menu allows you to use passwords or pin lock to
Settings	protect your phone.
Network settings	Select the network for your phone (service subscription dependent). Automatic search mode is recommended.
Restore settings	Restore your phone settings to the default values. You need to enter your phone lock password (1122 by default).

Safety & Precaution

Precaution

Keep your phone away from small children

Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves

Your phone transmits/receives radio waves in the GSM (900/1800MHz).

Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be (mag) affected by radio energy.

Switch off your phone ...

Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous of the operation of the aircraft, disrupt the mobile phones network and may be illegal.

In hospitals, clinics, other health care centers and anywhere else where you may be in the close

In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the are contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

Your mobile phone and your car

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly

For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- In hot weather or after prolonged exposure to the sun (e.g., behind a window or a wind screen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40°C or under -0°C.

Protect batteries from damage

You should only use Manufacturer Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips bonon null and void. The use of an unspecified type of battery may also cause an exolosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine manufacturer replacement parts.

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive cold or heat (under -0⁶C or over 40°C), moisture or caustic environments.

Environmental care

Remember to observe the local regulations regarding the disposal of the packaging materials, what was a subset of the state of the stat

The labeled packaging material is recyclable.

2:A financial contribution has been made to the associated national packaging recovery and recycling system.

A :The plastic material is recyclable (also identifies the type of plastic).

Hearing Protection

When listening to music, adjust the volume to a moderate level.

Continuous exposure to high volume may impair your hearing. It is recommended to keep Lit away from your body and head at least 15mm during operation.

WEEE Marking in the DFU: "Information to the Consumer"

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Safety Information and Notices

Failure to comply with the following precautions may be dangerous or illegal.

Never attempt to disassemble your device. You alone are responsible for how you use your device and any consequences of its use.

As a general rule, always switch off your device wherever the use of a device is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

Do not use your device in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your device to extreme temperatures lower than - 0°C and higher than + 40°C.

Do not leave your device within the reach of small children (certain removable parts may be accidentally ingested). Please carefully read and observe the terms below:

Distance of operation

This device model has been tested and meets radiofrequency exposure guidelines when used as follows:

· Against the ear: Place or receive a device call and hold the device as you would a wire line telephone.

Body worn: When transmitting, place the device in a carry accessory that contains no metal and
positions the device a minimum of 1. Ocm form your body. Use of other accessories may not ensure
compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and
are not holding the device at the ear, position the device a minimum of 1.0cm from your body.

 Data operation: When using a data feature, position the phone a minimum of 1.0 cm from your body for the whole duration of the data transmission.

Adapter

Adapter shall be installed near the equipment and shall be easily accessible.

Sound pressure safety

Use carefully with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Proper use

As described in this manual, your device can be used only in right location. If possible, please do not touch the antenna area on your device.

Tips

Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the powersaving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- · Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS connection, and drain your battery power.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows BLOCKED when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows IMSI failure

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the manufacturer authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call 1 or Withheld instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below -0°C or above 40°C .

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

😑 Note:

· Check with the local authorities whether or not you are allowed to use the phone while driving.

Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the camera lens on both sides is clean.

Specific Absorption Rate Information

International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Jonizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health. The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is 2.0WIkg averaged over ten grams of tissue and, is 1.6WIkg averaged over one gram of tissue by IEEE Std IS28 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this Philips Xenium E162 model phone when tested at the ear is 0.607 W/kg (10g), and when properly worn on the body is 0.883 W/kg (10g), for ICNIRP recommendation.

SAR is measured against head and with the device at a separation of 15mm to the body, while transmitting at the highest certified output power level in all frequency bands of the mobile device.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

Limited warranty

What Does This Limited Warranty Cover?

Manufacturer warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by manufacturer in the sales package ("Product") are free from defects in materials, design and workmaship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in manufacturer's intended country of sales of the product.

2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

3. What Will Manufacturer Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, manufacturer or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Manufacturer will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at manufacturer's option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

 a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or

b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by manufacturer; or

c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or

d) Product defects or problems caused by uses with non-Philips products or accessories; or

 Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or

g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.

h)Normal wear and tear or Force Majeure.

5. How Do You Get Warranty Service?

a) Return the Product to an authorized service center of manufacturer. You may contact the local manufacturer office for the location of the nearest authorized service center.

b)The SIM card must be removed from the Product before it is given to manufacturer. Manufacturer assumes no liability for damaged or loss of the SIM card or the data contained therein.

c)If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.

d) IMPORTANT - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.

6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, MANUFACTURER ROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR HTNESS FOR A PARTICULAR PURPOSE.

MANUFACTURER' TOTAL LUBUITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

HOWEVER IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES; RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT MANUFACTURER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Manufacturer with respect to this cellular Product and it supercedes all prior agreements between the parties, or all or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of manufacturer is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.