 
Your Phone



Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

Home screen

Your phone's home screen consists of the following areas:



Keys

Learn about the main keys.

Icons	Definition	Function
	Dial	Make or answer a call.
0	Confirm and	Select or confirm an option;
	navigation key	Long press to turn on or off the torch.
72	Hang-up/	End a call;
	Power/	Hold to turn on/off the phone;
	Exit	Return to home screen.
<u>-</u>	Left soft key	Select the options on the screen.
7=1	Right soft key	Select the options on the screen.
*.0	Lock/unlock	Long press 🐱 to lock keys on home screen;
		Press 🔁 and then 🕶 to unlock keys

Icons & symbols

Learn about the icons and symbols on the screen.

		,
Icons	Definition	Function
F	Ringtone	Your phone will ring when receiving a call.
	Vibration only	Your phone will vibrate when receiving a call.
	Battery	The bars indicate the battery level.
🖂 🗠	SMS	You have a new message.
	MMS	You have a new multimedia message.
	Wap message	You have received a Wap push message.
1313	Missed call	You have missed a call.
情情	Call	All your incoming voice calls are being
	diverts	forwarded to a number.
₽\$	Bluetooth	Bluetooth is activated.
0	Headset	The headset is plugged into the phone.
貿	Alarm	The alarm clock is activated.
RM _E RM _E	Roaming	Displayed when your phone is registered to a network other than your own (especially when you're abroad).
1 1	Home zone	A zone designated by your network operator. Contact your service provider for details.
¥.āi ¥.āi	GSM network	your phone is connected to a GSM network. The more bars are shown the better the reception is.
G ₁ G ₂	GPRS attach	Your phone is connected to the GPRS network.
ᢙ	Key lock	The keypad has been locked.
B	Memory card	The memory card is in use.

Getting started

Insert SIM card and Charge the battery

Learn about installing SIM card and charging the battery for the first use.

Insert SIM card

Remove the back cover.



3 Insert the SIM card 1/2.



5 Replace the back cover.



2 Take out the battery.



4 Install the battery.



Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.



Tips:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socker.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lost its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Remove SIM card



Tips:

 To remove the SIM card, use one finger to pull the SIM card, and then use another finger to push out the SIM card.

Insert a Micro SD card (Memory card)



You can expand the memory of your phone by adding a micro-SD card.

- Align your micro-SD card with the slot. Put it in place.
- 2 To remove the micro-SD card, press the card to release it.
- Note:
 - To transfer files from your PC, please insert a Micro SD card first.

Using your phone

Use basic call functions

Make a call

- I Enter the phone number.
- 2 Press to dial the number.
- 3 Press I to hang up.
- Tips:
- For international calls, long press ___ to enter the "+" sign for the international prefix.
- To dial the number by using SIM 2, press Options, select Call(SIM2).

Answer and end a call

- Press to answer the call (Press the navigation key ▲ or ▼ to adjust the volume).
- 2 Press To select handsfree mode.
- 3 Press I to hang up.
- Tips:
- You can use the supplied headset to answer or end a call.

Use speed dial

On the home screen, you can call a number by long pressing a numeric key.

To assign a contact to a speed-dial key:

- | Select Contacts > Speed dial > Status, select On.
- 2 Go to Speed dial > Set number, choose a numeric key.
- 3 Press 🖅 to add a number.

Make an emergency call

Without a SIM card in phone, you can press \supset to make the emergency call. In Europe, the standard emergency number is 112; in the UK, it is 999

Receive and send messages

You can use the **Messaging** menu to send text message, multimedia message and E-mails.

- | Select Messaging> Write message> Text message.
- 2 Write your text message.
- 3 Press © to send the message.

Send a MMS message

- Select Messaging> Write message> Multimedia message.
- 2 Edit contents, and press Options to add multimedia contents (photo, audio, attachment or bookmark text).
- 3 Press (a) to enter a number or select a contact from phonebook.
- 4 Press Toptions to send the Multimedia message.
- Note:
- Copyright protected pictures and sound cannot be sent by MMS.

Enter text

Your mobile phone supports a number of text entry methods, including Sougou input, English input, numeric input and symbol input.

Keys:

Keys	Function
#.*	Select a input method.
*.0	Enter symbols and punctuations.
0+	Insert a space.
<u>_</u>	Delete the previous character.
	Select the character on the screen.
0	Select or confirm a character.
_/▼	To browse the candidate character on the previous or next page.

- Note:
- Depending on the language you select for your phone, the supported input methods may vary.

Introduction of input methods:

Input method	Function
English input	Press the keys that are marked with the letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.
Sougou predictive text input	You need to press only once on the key corresponding to each letter needed to spell a word: keystrokes input are analyzed and the word suggested by Sougou is displayed at the pop-up window.
Numeric input	Press the numeric key to enter a number.

Manage your phonebook

Learn about basic phonebook function.

Add a new contact

Method one:

- On the home screen, enter a number. Go to Options > Save to phonebook.
- Select a location. (To SIMI/To SIM2/To phone).
- 3 Save the number, and add details as desired.
- 4 Press To finish saving.

Method two:

- Go to Contacts, select New contact.
- 2 Press To start adding a new contact.

᠃ Tips:

 For contacts on the smart phonebook, you can add detailed information, like home number, office number, contact pictures and ringtones.

Search for a contact

- Go to Contacts, select View contacts.
- 2 There are four phonebooks above the list: all, phone, SIM1 and SIM2.
- 3 Press the navigation key

 or

 to select a desired phonebook.
- 4 Enter the first few letters of the name in the search bar. (For example "John Henry" enter JH)
- 5 Select the contact from the list.

Manage your contacts

You can copy or move contacts between the SIM card and phone, or delete contacts. Go to **Contacts**, press ▲ or ▼ to select the desired option.

Set group:

You can group your contacts as different groups. For different groups, you can use different ringtones for identification, and send messages to a group.

- 2 Add contacts to a group:
 - Select Contacts > Caller groups, enter a group.
 - In **View members**, press 🖅 to add members for the group.

Media player

Save MP3, MIDI and AMR music files under the **Audio** folder on your phone and memory card.

Play music

- Go to Multimedia>Audio player, go to List select your desired song in the folder.
- 2 Press TOptions> Play to start playing.
- 3 Using the following keys to control playback:

Function	Definition
©	Pause and resume playback.
•	Select previous track.
•	Select next track.
Lull	Press the navigation key ▲ or ▼ to adjust volume.
7-1	Return to the previous menu.
	Go to the home screen.

Player settings

Go to List>Options>Settings:

- Pre. playlist: Play audio files from your phone or memory card.
- · List auto gen.: Refresh all songs in your list.
- Repeat: One (play current file repeatedly); All (play all the files in the folder repeatedly).
- Shuffle: Play music files in the folder randomly.
- Background play: Continue to play music after exiting the music player.

To turn off the music player on the home screen

Press I, and then press I Yes.

Note:

 When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

Camera

Learn about camera function. Let you take photos as desired by using your phone.

Take a photo

- Go to Multimedia>Camera.
- 2 Aim the lens at the subject.
- 3 Press

 to take a photo.
- 4 Press 🔁 to exit.
- Tips:
- All the photos taken are saved to My files>Phone or Memory card>Pictures.

Camera settings

While using the camera, press for to select Camera settings:

_	
Option	Function
Shutter sound	Adjust the shutter sound.
Anti-flicker	Select a band to avoid the impacts on photos caused by
	flickers from lighting sources.
Delay timer	Select a time span for auto photographing.
Cont. shot	Set to take photos continuously.

FM radio

Lear about listening to radio programs by using a FM radio.

Listen to a radio station

- Plug the supplied headset into your phone.
- 2 Go to Multimedia>FM radio, press Options>Preset auto search. It starts scanning automatically and save the available channels.

- 4 Press the navigation key ▲ or ▼ to adjust the volume.
- 5 Press (a) to turn off FM radio.

FM radio settings

Go to **Options>Settings**:

- · Background play: Continue playback after exiting FM radio.
- · Loud speaker: Listen to radio through the speaker.
- Record format: select file format.
- · Audio quality: select audio quality.

To turn off the FM radio on the home screen

Press I, and then press I Yes.

Record radio programs

You can record a radio program when listen to it.

- Go to GOptions>Record to start recording.
- 2 Press \(\subseteq \text{ to stop recording.} \)
- 3 Press Options to save the file.
- Tips:
- The files recorded are saved to My files>Phone or Memory card>Audio.

Manage your calendar

You can create your to-do list and make a plan on your calendar.

Create your to-do list

- Go to Tools>Calendar select a date, and then press Toptions>Add task.
- 2 Edit reminder settings.
- 3 Press \(\subseteq \) to save the task.
- 4 To change your to-do list, select the task, and then press

 Options to edit the task.

Check the calendar

Go to Tools>Calendar, you can check the calendar.

Alarm

Learn about how to set and use an alarm. You can set up to five alarms.

Set an alarm

- Go to Tools>Alarm.
- 2 Select an alarm, press To edit the alarm.
- 3 Press \(\sum \) to finish setting the alarm.

Turn off an alarm

- I Go to Tools>Alarm.
- 2 Select the alarm you want to turn off, press F Edit.
- 3 Press the navigation key ◆ or ▶ to select Off.

Stop an alarm

When the alarm rings,

- · Select Stop: The alarm stops.
- Select Snooze: The alarm will sound again after the set Snooze (mins) interval.

Bluetooth

Your phone can connect to a compatible Bluetooth device for exchanging data.

Connect to a Bluetooth device

- Go to Settings>Bluetooth>Power, turn on the Bluetooth function.
- 2 Select My device>Search new device, a list of available Bluetooth devices appears.
- 3 Select the device you wish to connect.
- 4 Enter your Bluetooth password to start pairing (0000 by default). The pairing is made if your pairing request is accepted by the other part.

Send files via Bluetooth

- Go to My files, select the file you want to send.
- 2 Press Options>Send>Via Bluetooth.
- 3 Select a device.
- 4 Press To start sending the file.

Receive files via Bluetooth

- I Go to Bluetooth>Visibility, make your phone visible to other Bluetooth devices.
- 2 In Advanced>Storage, select memroy card.
- 3 Enter the password and accept the request. The phone start receiving the file. The files received are saved to My files> Memory card>Received.
- A Note:
- If you do not use the Bluetooth feature for some time, you should deactivate it in order to conserve battery power.

File management

Learn about how to use and manage your files and folders.

Use your files

- I Set a photo as contact picture or wallpaper:
 - Open My files>Pictures, select a photo.
 - Press T Options>Set to>Wallpaper or Caller picture.
- 2 Set an audio file as ringtone:
 - Select an audio file.
 - Press Options>Set to>User profiles.
 - Go to Settings>User profiles, select the desired audio file in Ringtones.

Share your files

You can share your photos, audio or video files with others via MMS, Email or Bluetooth.

- I Select your desired photos, audio or video files.
- 2 Press Options>Send.

Manage your files

You can copy, move or delete a file in a folder.

- Open a folder.
- 2 Go to TOptions to finish copying, moving or deleting.
- Note:
- The insecurity audio, video files and pictures are not recommended to save to your phone.
- ⊕ Tips:
- To copy files on your phone to PC, please copy those file to the Micro SD card first.

Customize your phone

Customize your phone to match your preferences.

Set clock

- On the home screen, go to Menu>Settings> Gerneral >Time and date.
- 2 Select Set time/date: use the numeric key to enter the digits.

SIM settings

- Check that your phone is turned on. Enter the PIN code if required.
- 2 Go to Settings > Dual SIM > SIM I / SIM2 setup, name your SIM card.
- 3 Select SIMI or SIM2 to be the main SIM card.
- Note:
- The PIN code is preconfigured and communicated to you by your network operator or retailer.
- If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.
- If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

Profiles

The profiles are defined for several scenes. They consist of the settings for ringtone, volume, and others. With preset profiles, you can easily adjust the settings for incoming calls and messages as desired.

- Go to Settings>User profiles, press Options>Activate to activate the profile.
- 2 Go to Customize to modify ringtone, volume and others.
 To activate Silent mode, long press on the home screen.

Settings

Display settings

Function	Definition
Wallpaper	Select an image as the wall paper of your phone.
Screen saver	Enter screen saver mode after a time span.
LCD	Select the brightness of backlight.
backlight	
Show date	Select whether to show date and time on the home
and time	screen.
Show	Select whether to show operator name on the home
operator	screen.
name	
Greeting	Select whether to show greetings when your phone is
text	turned on.

Call settings

Function	Definition
SIM I/2 cal settings	Select SIM1/SIM2 call settings.
Callder ID	Set how to show your number to the called party (network-dependent).
Call waiting	Get informed of an incoming call when on the phone (network-dependent).
Call divert	Divert incoming calls to your voice mailbox or another phone number.
Call barring	Set limits to your incoming and outgoing calls.
Advanced	Set advanced settings of calling.
settings	
Auto redial	Keep redialing the number that fails to go through.
Call time display	Display the call time on the screen.
Call time reminder	Get reminded after the call time span once or repeatedly.

General settings

Function	Definition
Time and date	Set the clock of the phone.
Schedule	Set time for the phone to be switched on/off
power on/off	automatically.
Language	Select a language for your phone.
Input	Select your preferred input method.
methods list	
Fast key	Select a navigation key as direct access to a menu.
Auto update	Update the time and date automatically.
of date and	
time	
Go to	Set shortcut menu.

Network settings

Function	Definition
Network selection	Select the network for your phone (service subscription dependent). Automatic is
Sciection	recommended.
Preferences	Select your preferred network.

Security settings

This menu allows you to use passwords to protect your SIM card, phone, and information stored on the phone.

Function	Definition	
SIM I/SIM2 lock	Set PIN or PIN2 password protection for your SIM card. (The PIN or PIN2 are provided by the network operator.)	
Fixed dial	Restrict your outgoing calls to certain numbers (PIN2 code required).	
Barred dial	Prohibit some outgoing call (network-dependent).	

Phone lock	Set password protection for your phone. You are required to enter the password each time you turn on the phone (1122 by default).
Auto	Set an time span for the keypad to be locked.
keypad lock	
Change	Change your PIN, PIN2, phone lock passwords as
password	desired.
Certificate	Check your authority and user certificate.
manager	

Restore factory settings

Restore your phone settings to the default values. You need to enter your phone lock password (1122 by default).

Tips & tricks

Optimizing your Philips Xenium battery performance

Here are some steps to help you optimize your Philips Xenium's battery performance.

How to optimize the standby and talk time of your phone?

- Always ensure that your phone profile is appropriately set to meet your actual usage. Profile setting significantly impacts the phone's battery performance. In general, Outdoor Mode is the most powerdraining setting while Silent Mode consumes the least amount of power.
- If you're using a Xenium phone with a dual SIM feature, try to activate the 2 SIM cards only when absolutely necessary. If you are in a country with single coverage, deactivate the non-covered SIM to prolong battery usage.
- If you're not using applications like Bluetooth, WIFI, GPS and JAVA, turn them off. And be sure to lock your phone to prevent accidental pressing of the keys with the auto-lock feature.
- Adjust the intensity and duration of your display screen's backlight to low or medium level and for the shortest duration. In general, the lower the backlight level and the shorter the duration, the more power you will save.
- Avoid using or placing your phone near magnetic objects (eg. a radio or television) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.

How to extend your battery's life?

- Full charging and full running down of your battery will extend its life. Charge the battery once the low-battery warning comes on.
- Temperature will impact battery usage. Over time, heat will degrade your battery's performance. Keep your phone out of the sun or a hot car. If in low temperature, place your phone in a warmer place (eg. your pocket), as battery capacity decreases as the temperature drops.
- Always use authentic accessories as they enable your battery to perform at its peak. Non-authentic accessories (eg. chargers) can damage your battery and even your phone.

Safety & Precaution

Precaution

Keep your phone away from small children

Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves

Your phone transmits/receives radio waves in the GSM frequency (900/1800MHz).

Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

Your cellular telephone complies with all applicable safety standards and the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Switch off your phone...

Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.

In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.

In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

Your mobile phone and your car

Avoid using your phone while driving and obey all regulations that restrict the use of mobile that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly

For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.

Protect batteries from damage

You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

- Your phone is powered by a rechargeable battery.
 - Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
 - Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.

Environmental care

Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling. Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

:The labeled packaging material is recyclable.

2:A financial contribution has been made to the associated national packaging recovery and recycling system.

WEEE Marking in the DFU: "Information to the Consumer"

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

X

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities terbnology or software subject to export laws and resulations.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Tips

Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
 - Do not carry the phone in a breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- · Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

EN 60950 Norm

In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C.

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the power-saving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Establish GPRS connection when needed. Otherwise, your phone will keep searching for GPRS
 connection, and drain your battery power.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows BLOCKED when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows IMSI failure

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network concertion is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you reo outside the network coverage area. Try from another place, try to reconnect to the network (especially when about 10 to the network (especially when about 10 to the network (especially when about 10 to the network 10 to

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call 1 or Withheld instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below $0^{\circ}C$ (32°F) or above $50^{\circ}C$ (113°F).

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.



Check with the local authorities whether or not you are allowed to use the phone while driving.

Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the camera lens on both sides is clean.

Trademark Declaration

Sogou Sogou is a registered trademark of Sohu.com Inc.

|AVA | AVA is a trademark of Sun Microsystems. Inc.

Bluetooth™ Bluetooth™ is a trade-mark owned by telefonaktiebolaget L M Ericsson, Sweden

and licensed to Philips.

Philips PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke

Philips Electronics N.V. manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. Under license from Koninklijke Philips Electronics N.V..

Specific Absorption Rate Information

International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAYES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-lonizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety marnin for assuring the protection of all Deserons. recardless of are and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is 2.0Wlkg averaged over ten grams of tissue and, is 1,6Wlkg averaged over one gram of tissue by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this Xenium X116 model phone when tested for compliance against the standard was 0.805 W/kg for ICNIRP recommendation.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

Limited warranty

What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by Philips in the sales package ("Product") are from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips' intended country of sales of the product.

How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (I) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

 What Will Philips Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working conditions or Product and return such repaired or replaced Product to the Consumer in working conditions or pairs of the product of the product of the product of the Consumer in working conditions or pairs of the Product of the Pr

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Renair or replacement of Product, at Phillios option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or b) Product that has been damaged due to repair, alteration, or modification by among not authority.
- by Philips; or
 c) Product that has reception or operation problems caused by signal conditions, network reliability
- or cable or antenna systems; or d) Product defects or problems caused by uses with non-Philips products or accessories; or
- e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illerible: or
- f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.

h)Normal wear and tear or Force Majeure.

- 5. How Do You Get Warranty Service?
- a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.
- b)The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.
- c)If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.
- d) IMPORTANT you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.
- 6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE

PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TOPIT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT. HOWEVER IN NO EVENT SHALL PHILIPS BE LIABLE FOR ANY PUNITIVE, SPECIAL INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE LOSS OF TIME, INCONVENIENCE, COMMERIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

Declaration of Conformity

We, Shenzhen Sang Fei Consumer Communications Co., Ltd. 11 Science and Technology Road, Shenzhen Hi-tech Industrial Park, Nanshan District, Shenzhen 518057 China

declare under our sole responsibility that the product

Xenium X116 Philips GSM/GPRS 900/1800 TAC number: 86450100

to which this declaration relates, is in conformity with the following Standards:

SAFETY: EN 60950-1:2006+A11:2009
HEALTH: EN 50360:2001
EN 62209-1:2006
EMC: ETSI EN 301 489-1 v1.8.1
ETSI EN 301 489-7 v1.3.1
ETSI EN 301 489-17 v1.3.2
SPECTRUM: ETSI EN 301 511 v9.0.2
ETSI EN 301 39 v1.7 i

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

British Approvals Board for Telecommunications TUV SUD Group Balfour House Churdhfield Road-walton-on-Thames Surrey - KT12 2TD United Kingdom

Identification mark: 0168 October 21th, 2010

Connie Shen