 



Your phone

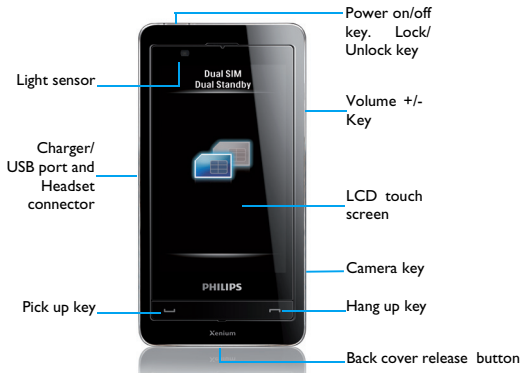

Philips continuously strives to improve its products. Due to software upgrading, some contents in this user guide may be different from your product. Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

Home screen

 Your phone's home screen consists of the following areas:

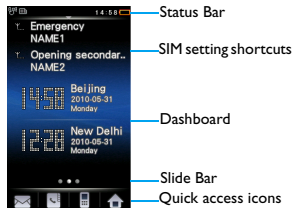

Keys

Learn about the main keys.

Key	Definition	Function
	Dial	Make or answer a call.
	Hang-up; Exit	End a call; Return to idle screen.
	Power; Lock/ Unlock Key	Hold to turn on/off the phone; Lock/Unlock screen.

Quick access icons

The four quick access icons on home screen lead you directly to four functional displays.

Icons	Function
	Quick access to messaging.
	Quick access to phonebook.
	Quick access to dial pad.
	Quick access to main menu.

Dashboard Displays

On the home screen, you can slide the sidebar to switch between different displays.

Customize shortcuts in dashboard displays:











- 1 Go to > **Settings** > **General** > **Shortcuts** to enter shortcuts list.
- 2 Tap **Edit** to change the shortcuts.
- 3 Press to return the home screen.

Stylus

While the first time you turn on the phone, you are asked to do calibration for the stylus. Thus, strokes or taps by the stylus will be precisely displayed on the screen. (Or go to **Settings** > **Pen calibration**).

Icons & symbols

Learn about the icons and symbols on the screen.

Icons	Definition	Function
	Silent	Your phone will not ring when receiving a call.
	Vibration only	Your phone will vibrate when receiving a call.
	Battery	The bars indicate the battery level.
	SMS	You have a new message.
	MMS	You have a new multimedia message.
	Wap message	You have received a Wap push message.
	Missed call	You have missed a call.
	Call diverts	All your incoming voice calls are being forwarded to a number.
	Bluetooth	Bluetooth is activated.
	Bluetooth headset	The Bluetooth headset is connected.








	Headset	The headset is plugged into the phone.
	Alarm	The alarm clock is activated.
	Roaming	Displayed when your phone is registered to a network other than your own (especially when you're abroad).
	Home zone	A zone designated by your network operator. Contact your service provider for details.
	GSM network	your phone is connected to a GSM network. The more bars are shown the better the reception is.
	Blacklist	Indicates that blacklist feature is activated.
	Memory card	The memory card is in use.

Table of contents

Getting started	4	Calculator	22
Insert SIM card and Charge the battery	4	Currency converter	22
Insert a Micro SD card (Memory card)	6	Web applications & Java	23
Connect to your PC	7	Browser	23
Customize your phone	7	Java applications	23
Basic function	9	Settings	25
Use basic call functions	9	Pen calibration	25
Receive and send messages	10	SIM settings	25
Enter text	11	General	25
Manage your phonebook	12	Call settings	25
MultiMedia	14	Network settings	26
Media player	14	Security settings	26
Camera	15	Restore factory settings	27
Video recorder	16	Safety & Precaution	28
FM radio	17	Precaution	28
Business applications	19	Tips	29
Manage your calendar	19	Troubleshooting	29
Alarm	19	Trademark Declaration	30
Bluetooth	20	Specific Absorption Rate Information	31
Read E-books	20	Limited warranty	31
File management	21	Declaration of Conformity	33
Use blacklist	22	Tips & tricks	34
Check world clock	22		

Getting started

Congratulations on your purchase and welcome to Philips!

To get the most of your product and enjoy all Philips has to offer, register your product at:

www.philips.com/welcome

More details about your product, please access:

www.philips.com/support

Note: Please read the safety instructions in the "Safety & Precaution" section before use.

Insert SIM card and Charge the battery

 
Learn about installing SIM card and charging the battery for the first use.

Insert SIM card


Follow the steps below to insert your SIM card. Remember to turn off your mobile phone before removing the back cover.

1 As the Figure shown, press down the lock button of the phone by using your thumb. Hold


the front and back cover in each hand and open the back cover in the direction as the arrow shown.

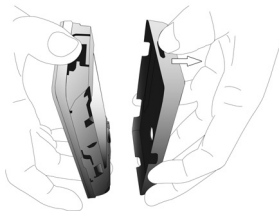

2 Take out the battery.

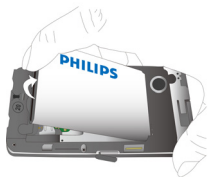 

3 Insert SIM1/SIM2.

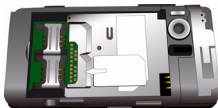 

4 Install the battery.



5 Replace the back cover.



Charge the battery

A new battery is partially charged. The battery icon in the upper-right corner shows the battery level of charging status.



Note:

- You can use the phone while it is charging.
- Keeping the charger plugged to the mobile phone when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so it is advisable to use an easily accessible power socket.
- If you do not intend to use your phone for several days, we recommend that you remove the battery.
- If a fully charged battery left unused, it will lose its charge over time.
- If a battery is being used for the first time or the battery has not been used for a prolonged period, it may take longer time to recharge.

Insert a Micro SD card (Memory card)

You can expand the memory of your phone by adding a micro-SD card.

- 1 Align your micro-SD card with the slot. Put it in place.
- 2 To remove the micro-SD card, press the card to release it.



Connect to your PC

Data communication software (Mobile Phone Tools) offers instant synchronization between your phone and your computer. You can use the software for the data synchronization between your phone and PC, like phonebook, calendar, SMS messages, and audio/video/picture files.

Install Mobile Phone Tools on your PC

- 1 Insert the supplied Data communication software into the CD drive.
- 2 Run the `autorun.exe` program.
- 3 Make selections as prompted, and installation starts automatically.


Connecting your Phone to the PC

- 1 Connect your phone to the PC by using supplied USB cable or through the Bluetooth.
- 2 When using the USB cable for connection, select **COM port** on your phone.
- 3 On your PC, double click the Mobile Phone Tools icon, then the connected icon is displayed.

Customize your phone

Customize your phone to match your preferences.

Set time & date

- 1 On the home screen, go to  **>Settings>General>Time and date.**
- 2 Select **Set time/date**: enter the desired digits by virtual keyboard.
- 3 Tap on **Ok** to confirm the setting.

SIM settings

X809 is a touch-screen mobile phone with dual SIM cards loaded at dual durations in the double standby mode. As you wish, choose one of SIM cards as the primary.

If the option **Query On Power Up** is enabled in **Settings>SIM settings**, the phone will ask you to configure the SIM card setup or not once the device is turned on:

- 1 Check that your phone is turned on. Enter the PIN code if required.
- 2 Go to **SIM settings>Slot 1 Setup/Slot 2 Setup**. Tap on **Done** to confirm your settings.
- 3 Select SIM1 or SIM2 to be the primary card.

Note:

- The PIN code is preconfigured and communicated to you by your network operator or retailer.
- If you enter an incorrect PIN code three times in succession, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.
- If you enter an incorrect PUK code ten times in succession, the SIM card will be locked permanently. When this happens, please contact your network operator or retailer.

Profiles

The profiles are defined for several scenes. They consist of the settings for ringtones, volume, and others. With preset profiles, you can easily adjust the settings as desired.

- 1 Go to **Profiles**, tap on **Activate** to activate the profile.
- 2 Enter into **Options** to modify ringtones, volume and others.




Note: If you select Flight mode, you disable the connection between your phone and your mobile phone network.


Basic function

Use basic call functions



Learn to make or answer a call and use basic call functions.

Make a call

- 1 Tap on  to display dial pad, and tap on the numeric icons to enter the phone number.
- 2 Press  to dial the number.
- 3 Press  to hang up.

Note: For international calls, long press  to enter the "+" sign for the international prefix.


Answer and end a call

- 1 Press  to answer the call (Press the side volume key to adjust the volume).
- 2 Tap on **H-free** to turn on Hand free mode.
- 3 Press  to hang up.

Note: You can use the supplied headset to answer or end a call.

Make a conference call

If network applicable, you can handle two or more calls, or make a conference call.

- 1 During a call, enter a phone number, and then press  to dial the number. The second number is dialled.
- 2 The first call is put on hold at this time.
- 3 Select **Options>Swap** to toggle between 2 calls.
- 4 To end the call, select **Options>End** or **End all**.

Quick call dashboard

On the quick call dashboard, long tap on one preset contact icon to make a call.

To assign a number to a contact icon:

- 1 Select **Settings > General > Quick Call Dashboard**.
- 2 Tap on blank icon to choose a phone number from contact list.
- 3 Tap on **Add**, the contact name will display under the contact icon.
- 4 Select **Options** to change or delete the contact number.

Make an emergency call


Without a SIM card in phone, you can tap on **SOS** to make the emergency call.

In Europe, the standard emergency number is 112; in the UK, it is 999.


Receive and send messages

You can use the **Messaging** menu to send text message, multimedia message and E-mails.

Send a SMS message

- 1 Tap  > **Messaging** > **Create message** > **SMS**.
- 2 Write your text message.
- 3 Tap on **Send** to send the message.

Send a MMS message

- 1 Tap  > **Messaging** > **Create message** > **MMS**.
- 2 Edit contents, and tap on **Options** to add multimedia contents (photo, audio, video, attachment or bookmark text).
- 3 Tap on **Send** to enter number.
- 4 Tap on **Send** to send the Multimedia message.

Note: Copyright protected pictures and sound cannot be sent by MMS.

Send an E-mail

- 1 Go to **E-mail** > **Email accounts** > **Options** > **New account**. After setting up a new account, tap on **Activate** to activate it.
- 2 Go to **Write Email**, enter the address (**To**), a copy (**Cc**), a blind copy (**Bcc**), subject and attachment.
- 3 Edit the E-mail contents.
- 4 Tap on **Done** to send the E-mail.

Note: Consult your mail service provider for the mail server configuration.

Receive E-mails

Select **E-mail** > **Send and receive**, you can receive E-mails from the Internet.








To receive E-mails automatically:



- 1 Go to **E-mail** > **Email accounts** > **Options** > **Edit** > **Advance settings**.
- 2 In **Account settings**, select your desired check interval. Your mail box will be checked automatically after each time span.

Enter text

Your mobile phone supports a number of text entry methods, including T9 input, English input, numeric input and symbol input.

Keys:

Keys/Virtual keypad	Function
	Use virtual keypad or stylus to enter text.
	To use the QWERTY keypad, counterclockwise your phone by 90° if it is in the vertical position.
	Long press to switch T9 English input on or off.
	Select a input method.
	Enter symbols and punctuations.
	Insert a space.
	Change to a new line.

	Toggle between upper and lower cases.
	Tap to delete the character before the cursor.

Note: Depending on the language you select for your phone, the supported input methods may vary.

Introduction of input methods:

Input method	Function
English input	Press the keys that are marked with the letter you wish to enter. Press once to get the first letter on the key, press twice quickly to get the second letter and so on until the letter you want is displayed on the screen.
T9 [®] predictive text input	You need to press only once on the key corresponding to each letter needed to spell a word: keystrokes input are analyzed and the word suggested by T9 [®] is displayed at the pop-up window.


Numeric input	Press the numeric key to enter a number.
Pinyin input	Input pinyin and select a character.
Stroke input	Press the keys corresponding to the required strokes according to sequence to get the desired character. The stroke input method classifies a Chinese character into 5 basic strokes: (horizontal, vertical, left falling stroke, right falling stroke and over-down) as well as a special stroke. When the stroke you need does not correspond to the 5 basic strokes, replace it with the special strokes.

Manage your phonebook

Learn about basic phonebook function.


Add a new contact

Method one:

- 1 On the home screen, tap on  to display dial pad, enter the number you want to save.

- 2 Go to **Save > Add new contact**, select a location. (**To primary SIM/To secondary SIM/To phone**).
- 3 Add details as desired.
- 4 Tap on **Done** to finish saving.

Method two:

- 1 Tap on  > **Contacts**.
- 2 Go to **Options> Add** to add a new contact.

Note: For contacts on the smart phonebook, you can add detailed information, like home number, office number, contact pictures and ringtones.

Search for a contact

- 1 Go to **Contacts>View contacts**.
- 2 There are four phonebooks above the list: all, phone, SIM1 and SIM2.
- 3 Select a desired phonebook.
- 4 Enter the first few letters of the name in the search bar. (For example "John Henry" enter JH)
- 5 Select the contact from the list.

Manage your contacts

You can copy or move contacts between the SIM card and phone, or delete contacts. Go to **Contacts>Options** or **Phonebook settings**, select the desired option.

- 1 Set group:
You can group your contacts as different groups. For different groups, you can use different ringtones for identification, and send messages to a group.
- 2 Add contacts to a group:
 - Select **Contacts>Options**, enter into one of **Caller groups**.
 - Go to **Options** to add members for the group.

Use my vCard

You can send your personal information as vCard via the SMS, MMS, E-mail or Bluetooth.

Edit your vCard:

- 1 Go to **Contacts**.
- 2 Tap on **Options>Phonebook settings>My vCard>Edit my card**.
- 3 Edit the detail information.

- 4 Tap on **Done** to finish the settings.

Send your vCard:

- 1 Go to **Contacts>Options>Send vCard**
- 2 Send vCard via the SMS, MMS, E-mail or Bluetooth.

Special numbers

You can keep a list of useful numbers on your phone, such as own numbers, service numbers and emergency numbers.

- 1 Go to **Contacts**.
- 2 Tap on **Options>Phonebook settings >Special number**.
- 3 Select Special number (**Primary SIM**) or Special number (**Secondary SIM**) to access the following options:

Function	Definition
My numbers	Edit the phone number and name.
Emergency numbers	Edit your emergency phone number.
Service numbers	Contact your network operator for more information.







MultiMedia

Media player

Save AMR、AAC、MIDI and MP3 music files under the **Audio** folder on your phone and memory card.

Play music

- 1 Go to **Media player>Music player>Tracks**, select your desired song in the folder.
- 2 Using the following keys to control playback:


Function	Definition
	Resume playback.
	Pause playback.
	Select previous track.
	Select next track.
	Press side volume key to adjust volume.
Back	Return to the previous menu.
	Go to the home screen.

Player settings

Go to **Media player>Music player>Settings**:

- **Music in background**: Continue to play music after exiting the music player.
- **Equalizer**: Select music style suitable to your songs.
- **Play mode**: **Repeat one** (play current file repeatedly); **Repeat all** (play all the files in the folder repeatedly); **Shuffle** (Play music files in the folder randomly).
- **Refresh all lists**: Refresh all songs in your list.

To turn off the music player on the home screen



Press , and then tap on **Yes**.

Note: When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing.

Camera

Learn about camera function. Let you take photos as desired by using your phone.






Take a photo

- 1 Go to  > **Camera**, select camera mode.
- 2 Aim the lens at the subject.
- 3 Press camera key to take a photo.
- 4 Tap on icon  to exit.


All the photos taken are saved to **My files>Phone** or **Memory>Pictures**.



 






View photos



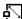



Go to **Pictures**,

- 1 View photos: tap on icon  or  to select a photo.
- 2 Zoom in/out photos: tap on icon  or  to zoom in or out a photo. After zooming out a photo, slide the screen to browse the details on different parts of the photo.
- 3 Set as full-screen wallpaper: tap on icon .

Camera settings

While using the camera, tap on icon  to select settings:

Icon	Option	Function
	Photo album	View the photos you have taken.
	Scene mode	Select a scene to take a photo.
	Image size	Select image size.
	Flash	Use the flash to increase the brightness.
	Self-timer	Select a time span for auto photographing.
	White balance	Remove the effects on colors by surroundings.
	Effects	Add special effects to the photos.
	Storage	Select default storage location.
	Image quality	Set image quality.



	Sharpness	Sharpen or blur the borders between objects.
	Contrast	Adjust the contrast.
	Saturation	Make colors more or less pronounced.
	Shutter sound	Adjust the shutter sound.
	Anti-flicker	Select a band to avoid the impacts on photos caused by flickers from lighting sources.
	Restore default settings	Restore to default settings.

Note: To zoom in or out a photo, please ensure that the photo is taken in a size equal to or greater than 640x480.

Video recorder

Learn about video recorder function. Let you record a video clip as desired by using your phone.




Record a video

- 1 Go to  > **Camera**, select video recorder mode.
- 2 Aim the lens at the subject.
- 3 Press camera key to record a video clip.
- 4 Tap on icon  to exit.


All the videos recorded are saved to **My files>Phone** or **Memory>Videos**.



 

Play a video clip

Go to **View videos**,

- 1 Tap on **Play** to play video.
- 2 Tap on icon  or  start or pause playing a video clip.
- 3 Slide the progress bar to fast forward or rewind easily.
- 4 Press the side volume key to adjust volume.
- 5 Tap on icon  to exit.

Video recorder settings

While using the video recorder, tap on icon  to select settings:

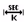Icon	Option	Function
	Video player	View the videos you have recorded.
	Record audio	Turn on/ off audio recording in the time of video recording.
	Record limit	Set time or size limit to video clips.
	Video quality	Select video quality.





 

Other setting, see Camera settings on page 15.

Note: To send a video clip via E-mail, the file size should equal to smaller than 100K.

FM radio

Lear about listening to radio programs by using a FM radio.

Listen to a radio station

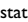- 1 Plug the supplied headset into your phone.
- 2 Go to **Multimedia>FM radio**, tap on **Options>Auto preset**. It starts scanning automatically and save the available channels.
- 3 Tap on icon  or  to select a station.
- 4 On the radio playback screen, tap to light up the auto search icon . Press  or  to start the auto tuning to the next available station.
- 5 Tap on icon  to turn off FM radio.


FM radio settings

Go to  **Options>Settings**:

- **Background play:** Continue playback after exit FM radio.
- **Loud speaker:** Listen to radio through the speaker.
- **Record format :** Select record format.
- **Audio quality :** Set audio quality.

- **Record storage:** Select default storage location.
- **Channel effect:** Select **Mono** or **Stereo** effect.

To turn off the FM radio on the home screen

Press , and then tap on **Yes**.

Record radio programs

You can record a radio program when listen to it.

- 1 Go to **Options>Record**.
- 2 Tap on **Pause** to pause recording, and then tap on **Stop** to stop recording.
- 3 Tap on **Save** to save the file.

The files recorded are saved to **My files>Phone** or **Memory>Audio**.

Business applications

Manage your calendar

You can create your to-do list and make a plan on your calendar.

Create your to-do list

- 1 Go to **Tools>Calendar** select a date, and tap on **Options>Add task**.
- 2 Edit task settings.
- 3 Tap on **Done** to save the task.
- 4 To change your task list, select the task, and then tap on **Options** to edit.

Check your to-do list

You can check your to-do list in weekly or monthly view. Go to **Tools>Calendar**, tap on **Options** to check your to-do list.

Check the calendar

Go to **Tools>Calendar**, you can check the calendar.

Alarm

Learn about how to set and use an alarm. You can set up to five alarms.

Set an alarm

- 1 Go to **Tools>Alarm**.
- 2 Select an alarm, tap on **Edit** to edit the alarm.
- 3 Tap on **Done** to finish setting.

Turn off an alarm

- 1 Go to **Tools>Alarm**.
- 2 Select the alarm you want to turn off.
- 3 Tap on **Edit** to turn off the alarm

Stop an alarm

When the alarm rings,

- Select **Stop** : The alarm stops.
Or turn over your phone to mute the alarm.
- Select **Snooze**: The alarm will sound again after the set **Snooze (mins)** interval.

Bluetooth

Your phone can connect to a compatible Bluetooth device for exchanging data.

Connect to a Bluetooth device

- 1 Go to **Bluetooth>Power**, turn on the Bluetooth function.
- 2 Select **Find devices**, a list of available Bluetooth devices appears.
- 3 Select the device you wish to connect.
- 4 Enter your Bluetooth password to start pairing (0000 by default). The pairing is made if your pairing request is accepted by the other part.

Send files via Bluetooth

- 1 Go to **My files**, select the file you want to send.
- 2 Tap on **Options>Send>To Bluetooth**.
- 3 Select a device.
- 4 Tap on **OK** to start send the file.

Receive files via Bluetooth

- 1 Go to **Bluetooth>Setting>Visibility**, make your phone visible to other Bluetooth devices.
- 2 Enter the password and accept the request.

- 3 The files received are saved to **My files>Phone** or **Memory>Others**.

Note: If you do not use the Bluetooth feature for some time, you should deactivate it in order to conserve battery power.

Read E-books

You can read E-books (.txt file) on your phone.

Start reading an E-book

- 1 Go to **Tools>Text reader**.
- 2 Select the .txt file you wish to read.
- 3 Tap on **Open** to start reading.

Go to **Options>View settings>Encoding**, select the encoding suitable to your language.

Reading setup

Go to **Options**, you can setup the following:

- **Find:** Find specific words in the file.
- **Jump to:** Jump to specific line.
- **Add bookmark:** Add current page to bookmark.

- **Go to bookmark:** Read the page saved as bookmark.
- **Remove bookmark:** Delete the bookmark.
- **Settings:** Set font size, scroll screen automatically or read E-book on full screen.

File management

Learn about how to use and manage your files and folders.

Use your files

- 1 Set a photo as contact picture or wallpaper:
 - Open **My files>Pictures**, select a photo.
 - Tap on **Options>Use as>Contact picture or Wallpaper**.
- 2 Set an audio file as ringtone:
 - Select an audio file.
 - Tap on **Options>Use as>To ringtone list**.

Note: To set photos you have taken as contact picture, select **Contact pictures** in **Image size**.

Share your files

You can share your photos, audio or video files with others via MMS, E-mail or Bluetooth.

- 1 Select your desired photos, audio or video files.
- 2 Tap on **Options>Send**.

Note: To send files via E-mail, the file size should be smaller than 100K.

Manage your files

You can copy, move or delete a file in a folder.

- 1 Open a folder, Tap on **Options>Select multiple**.
- 2 Tap on **Check** or **Uncheck**.
- 3 Go to **Options** to finish copying, moving or deleting.

Note: The insecure audio, video files and pictures are not recommended to save to your phone.

Use blacklist

Learn about how to set the blacklist, you can reject the incoming calls from those included in the blacklist.

Activate blacklist

- 1 Go to **Settings>Call settings>Blacklist**.
- 2 Tap on **Blacklist mode** to turn on blacklist function.

Add a phone number to blacklist



- 1 Go to **Blacklist>Blacklist numbers**.
- 2 Edit the blacklist, add contacts by entering a phone number. Or go to **Contacts>Options** to add a contact from phonebook

Check world clock

Learn about how to check time & date of cities in other countries.

Set world clock

Select **Settings>General>Time and date> World clock**,

- 1 In **Local settings/Foreign settings**, tap on icon  or  to select a city.
- 2 Tap on **Options** to turn on/off **Daylight saving**.
- 3 In **Switch local/foreign**, switch clock.

Note: Alarms, reminders, programmed events are time zone independent.

Calculator

Use the numeric keys to calculate on the phone.

Currency converter

- 1 Go to **Tools>Currency converter**, enter the rate.
- 2 Enter the sum of money in **Local**. Tap on **Ok** to confirm.

Note: The result of the calculator is indicative only.

Web applications & Java

Browser

You can use this function to browse the Internet. Consult your network operator for the service subscription, data account information, and WAP settings.

Access web sites

- 1 Go to **Browser**.
- 2 Select **Enter address**, enter your desired websites.
- 3 Tap on **OK** to access the website.

Set homepage

- 1 Go to **Browser**, browse a website.
- 2 Select **Options**, save current website as Homepage. You can set the websites you usually used as homepage.

Add bookmarks

- 1 Go to **Browser**, browse a website.
- 2 Select **Options**, add current website to bookmark. You can add your favorite websites to bookmarks.

Java applications

Learn about how to use Java applications and play games. Your phone is preloaded with some Java games and applications.

Install Java games

- 1 Connect your phone to a PC via supplied USB cable.
- 2 Save .jar file to **My files>Others**.
- 3 Install the Java games.

Play Java games

- 1 Go to **Fun>Java**.
- 2 Select a game from the list.
- 3 Tap on **Launch** to start playing the game.

Note: To run some Java applications (entrusted third party software) on your phone, you may need to adjust the Java settings. Tap on **Options>Settings**.

Java settings

Go to **Applications>Java>Java settings**,

Function	Definition
Java audio	Set the volume level.
Java backlight	Turn the backlight on or off.
Java vibration	Turn the vibration on or off.
Java network	Select a Java network (service subscription-dependent).
Heap size	Display allowed maximum size for Java memory.

Settings

Pen calibration

See “Stylus” on page 1.

SIM settings

Function	Definition
SIM cards	Change SIM card slot settings.
Slot 1 / Slot 2 setup	Set SIM card name. Select Active mode to receive calls or messages from a SIM card.
Primary settings	The default SIM card is Slot 1. You are provided services by primary SIM by default. You can select Slot1 or Slot2 as primary card.
Query On Power up	Display SIM setting screen or not while power on the phone.

General

Function	Definition
Time and date	Set the clock of the phone.

Auto power on/off Set time for the phone to be switched on or off automatically.

Languages Select a language for your phone.

Display Select the wallpaper, theme, background level, font size and other display settings as desired.

Speed dial Call a contact by long pressing a numeric key.

Handwriting Set the speed and the color for the stylus.

Call settings

Function	Definition
Caller ID	Set how to show your number to the called party (network-dependent).
Call waiting	Get informed of an incoming call when on phone(network-dependent).
Call barring	Set limits to your incoming and outgoing calls.

Call divert	Divert incoming calls to your voice mailbox or to another phone number.
Line switching	Swap phones when handling multiple calls.
Blacklist	Use the firewall to reject the incoming calls from those included in the blacklist.
Auto redial	Keep redialing the call number that fails to go through.
Call time display	Display the call time on the screen.
Call time reminder	Get reminded after the call time span once or repeatedly.
Reject by SMS	Enable the option to reject the incoming call by sending a text message.

Network settings

Function	Definition
Select network	Select the network for your phone (service subscription dependent). Automatic is recommended.
Preferred networks	Select your preferred network.
GPRS connection	Select GPRS connection mode.

Security settings

This menu allows you to use passwords to protect your SIM card, phone, and information stored on the phone.

Function	Definition
SIM1/SIM2 lock	Set PIN or PIN2 password protection for your SIM card. (The PIN or PIN2 are provided by the network operator.)
Fixed dial	Restrict your outgoing calls to certain numbers (PIN2 code required).

Barred dial	Prohibit some outgoing call (network-dependent).
Phone lock	Set password protection for your phone. You are required to enter the password each time you turn on the phone (0000 by default).
Auto keypad lock	Set an time span for the keypad to be locked.
Change password	Change your PIN, PIN2, phone lock passwords as desired.
Certificate manager	Check your authority and user certificate.

Restore factory settings

Restore your phone settings to the default values. You need to enter your phone lock password (0000 by default).

Safety & Precaution

Precaution

Keep your phone away from small children



Keep your phone and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

Radio Waves



Your phone transmits/receives radio waves in the GSM frequency (900/1800/1900MHz).



Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.



Your cellular telephone complies with all applicable safety standards and the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Switch off your phone...



Turn off the phone when in an aircraft. The use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.



In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders). In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG). In quarries or other areas where blasting operations are in progress.

Your mobile phone and your car



Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands free accessories to increase your safety when possible. Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

Handle your phone carefully and sensibly



For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position.

- Do not expose your phone to extreme temperatures.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.

Protect batteries from damage



You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an unspecified type of battery may also cause an explosion.

 
Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.


- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat ($>60^{\circ}\text{C}$ or 140°F), moisture or caustic environments.


Environmental care



Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling. Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

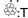 The labelled packaging material is recyclable.

 A financial contribution has been made to the associated national packaging recovery and recycling system.

 The plastic material is recyclable (also identifies the type of plastic).

WEEE Marking in the DFU: “Information to the Consumer”

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

Tips

Pacemakers

If you have a pacemaker:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breast pocket.
- Use the ear opposite to the pacemaker to minimize the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a hearing aid, consult your physician and hearing aid manufacturer to learn whether your phone's casing might interfere with cellular phone interference.

EN 60950 Norm

In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C.

How to prolong the battery life of your phone

To have your mobile phone function properly, sufficient battery power is important. For the power-saving purpose, do the following, if applicable:

- Turn off the Bluetooth function of your phone.
- Set the backlight level and duration of your phone to a low value.
- Turn on the auto keypad lock, turn off the key sounds, tap vibration, or vibration alerts.
- Turn off your phone if there is no coverage. Otherwise, the phone will keep searching for network, and drain your battery power.

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug the charger and try to switch the mobile on.

The display shows **BLOCKED** when you switch on the phone

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows **IMSI failure**

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to idle screen

Long press the hang-up key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in place if your mobile has an external antenna, or contact your network operator for assistance/information.

The phone doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for use with your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display Call 1 or Withheld instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you have entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You feel that you have missed some calls

Check your call divert options.

When charging, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the display shows NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted correctly. If the problem persists, your SIM card may be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated on the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performance. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

Notes: Check with the local authorities whether or not you are allowed to use the phone while driving.

Your phone is not charging

If the battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

The picture captured with the phone camera is not clear

Make sure that the camera lens on both sides is clean.

Trademark Declaration

T9®

T9® is a registered trademark of Nuance Communications, Inc..

JAVA

JAVA is a trademark of Sun Microsystems, Inc.

Bluetooth™

Bluetooth™ is a trade-mark owned by telefonaktiebolaget L M Ericsson, Sweden and licensed to Philips.

Philips

PHILIPS and PHILIPS' Shield Emblem are registered trademarks of Koninklijke Philips Electronics N.V. manufactured by Shenzhen Sang Fei Consumer Communications Co., Ltd. under license from Koninklijke Philips Electronics N.V..

Specific Absorption Rate Information

International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is **2.0W/kg averaged over ten grams of tissue and, is 1.6W/kg averaged over one gram of tissue** by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this Xenium X809 model phone when tested for compliance against the standard was 0.73 W/kg for ICNIRP recommendation.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

Limited warranty

1. What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser ("Consumer" or "You") that this Philips cellular product and all accessories originally provided by Philips in the sales package ("Product") are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips' intended country of sales of the product.

2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

3. What Will Philips Do if The Product is Not Free From Material Defects in Materials and Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Philips will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at Philips' option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or
- b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by Philips; or

- c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or
- d) Product defects or problems caused by uses with non-Philips products or accessories; or
- e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or
- f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
- g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.
- h) Normal wear and tear or Force Majeure.

5. How Do You Get Warranty Service?

- a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.
- b) The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.
- c) If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.
- d) **IMPORTANT** - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.

6. Other Limitation: This Warranty is The Entire Agreement.

EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE)

AND SPECIALLY DISCLAIMS ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TOPIT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

HOWEVER IN NO EVENT SHALL PHILIPS BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

Declaration of Conformity

We,
**Shenzhen Sang Fei Consumer
Communications Co., Ltd.**
**11 Science and Technology Road,
Shenzhen Hi-tech Industrial Park,
Nanshan District, Shenzhen 518057
China**

declare under our sole responsibility that the product

Xenium X809
Philips GSM/GPRS 900/1800/1900
TAC number: 35923503

to which this declaration relates, is in conformity with the following
Standards:

SAFETY : EN 60950-1:2006+A11:2009
 EN 60950-1:2001+A11:2004
HEALTH: EN 50360
 EN 62209-1
EMC: ETSI EN 301 489-1/-7/-17
SPECTRUM: ETSI EN 301 511
 ETSI EN 300 328

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

EMCCert DR. RAŠEK GmbH

Stonernhofer Berg 15, 91364 Unterleinleiter,
Germany

Identification mark: **0678**

May 5, 2010



Tips & tricks

Optimizing your Philips Xenium battery performance

Here are some steps to help you optimize your Philips Xenium's battery performance.

How to optimize the standby and talk time of your phone?

- Always ensure that your phone profile is appropriately set to meet your actual usage. Profile setting significantly impacts the phone's battery performance. In general, Outdoor Mode is the most power-draining setting while Silent Mode consumes the least amount of power.
- If you're using a Xenium phone with a dual SIM feature, try to activate the 2 SIM cards only when absolutely necessary. If you are in a country with single coverage, deactivate the non-covered SIM to prolong battery usage.
- If you're not using applications like Bluetooth, WIFI, GPS and JAVA, turn them off. And be sure to lock your phone to prevent accidental pressing of the keys with the auto-lock feature.

- Adjust the intensity and duration of your display screen's backlight to low or medium level and for the shortest duration. In general, the lower the backlight level and the shorter the duration, the more power you will save.
- Avoid using or placing your phone near magnetic objects (eg. a radio or television) or on metal surfaces, which will impact the network connection and ultimately drain power from your battery.

How to extend your battery's life?

- Full charging and full running down of your battery will extend its life. Charge the battery once the low-battery warning comes on.
- Temperature will impact battery usage. Over time, heat will degrade your battery's performance. Keep your phone out of the sun or a hot car. If in low temperature, place your phone in a warmer place (eg. your pocket), as battery capacity decreases as the temperature drops.
- Always use authentic accessories as they enable your battery to perform at its peak. Non-authentic accessories (eg. chargers) can damage your battery and even your phone.