


Quick start guide

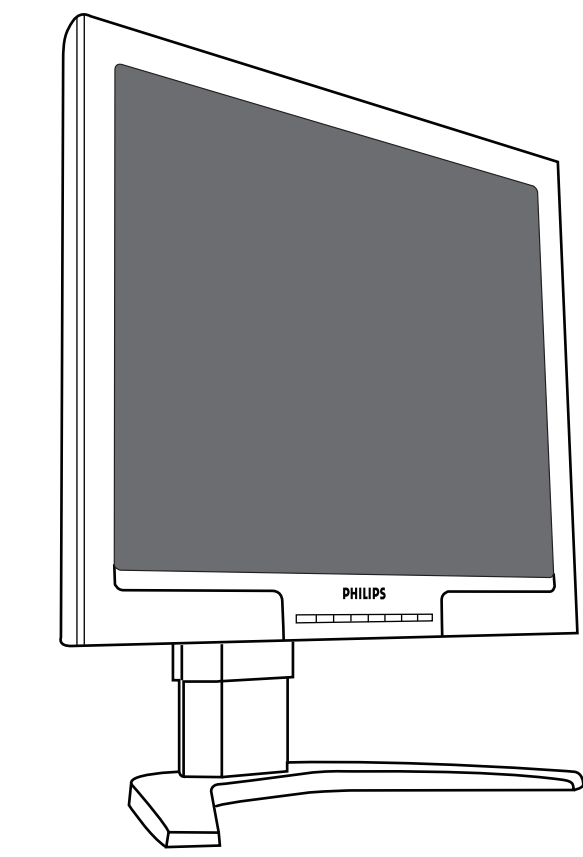

Display design may differ from that illustrated.

EZZPC 551 801E

Specifications are subject to change without notice.
© 2006 Koninklijke Philips Electronics N.V. All rights reserved.
Trademarks are property of Koninklijke Philips Electronics N.V. or their respective owners.
www.philips.com



Need help?
Use the digital User manual that comes with your LCD Monitor.
Online help: www.p4c.philips.com
H7200XWQ3

1 Connectivity

A Monitor Connections

- 1 DVI-D input
- 2 VGA input
- 3 AC power input
- 4 Kensington anti-theft lock
- 5 USB upstream

B VGA **DVI**

For best performance, use your DVI input and ensure that your display settings are set at 1680 x 1050 @60Hz

C Power **D USB**

2 Installation

A Base install to Monitor

Do not release the pin before the base stand is firmly fixed to the base column.

Place the monitor face down on a smooth surface taking care to avoid scratching or damaging the screen.

B Attach stand

Hold the monitor base with both hands and firmly fix the base stand into four-pronged base attachments

Fastening base stand with the monitor

Warning

Yes

Insert the pin before lifting Monitor

No

Base stand may eject without pin

Please follow the instruction on the above illustrations, before lifting your monitor. Not following the recommended way may cause injury

Using two hands to lift your monitor is strongly recommended

3 Ergonomic Adjustments

A Tilt

B Swivel


C Height adjustment

D Portrait display

E Quick reference for control buttons

- 1 To switch monitor's power on and off
- 2 To access OSD menu
- 3 To adjust OSD menu
- 4 To adjust brightness of the display
- 5 To adjust OSD menu
- 6 AUTO Automatically adjust the horizontal position, vertical position, phase and clock settings

What's in the box

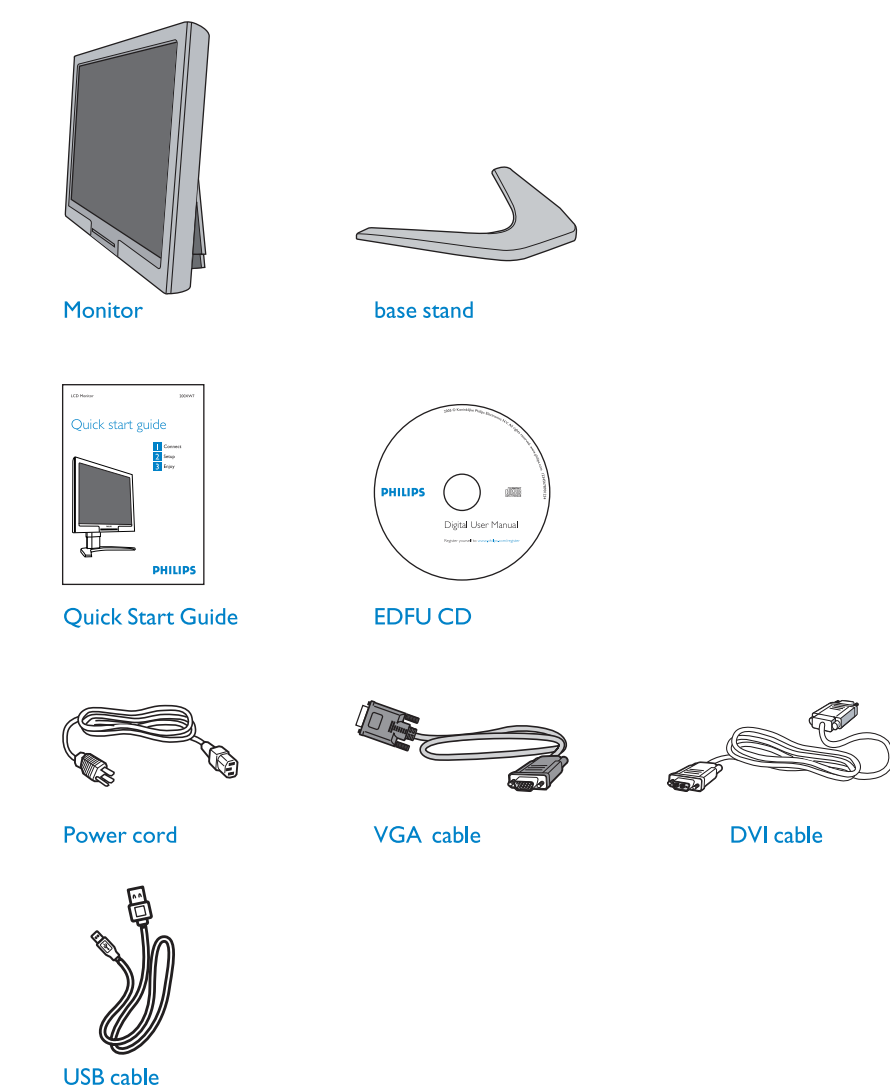

Quick start guide

Guide de démarrage rapide / Guía rápida / Kurzanleitung / Guida rapida / 快速入门指南 / 快速入門指南

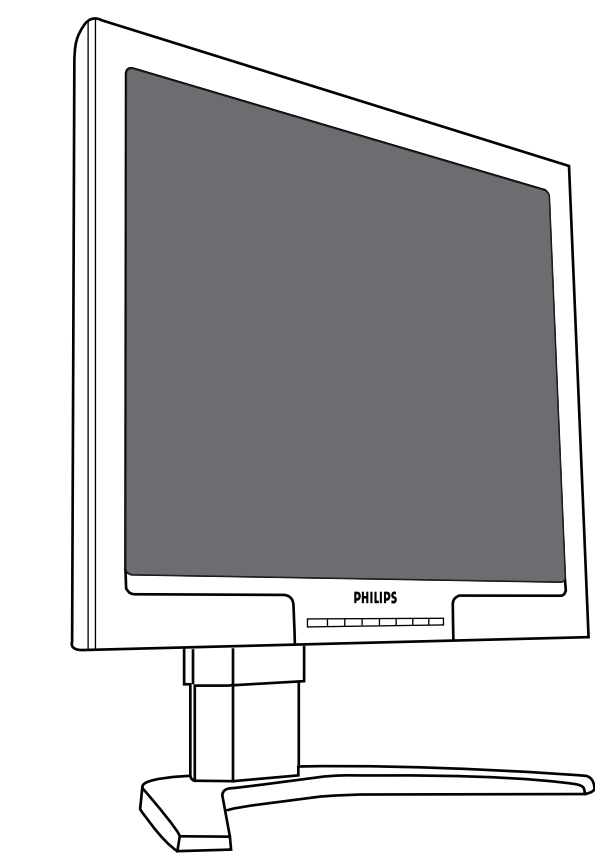


Illustration non contractuelle.
El diseño del reproducir puede diferir con respecto al de la ilustración.
Das Display-Design kann von der Abbildung abweichen.
La visualizzazione può differire da quella presente nella figura.
這隻顯示器設計可能與插圖有所不同。顯示器插圖僅供參考。

PHILIPS

1 Connectivité / Conectividad / Verbindungsfähigkeit / Connettività / 连接性 / 連接

A Connexions du moniteur / Conexiones de monitor / Monitoranschlüsse / Connessioni del monitor / 显示器连接 / 顯示器連接

- 1 Entrée DVI-D
- 2 Entrée VGA
- 3 Entrée alimentation CA
- 4 Verrouillage antivol Kensington
- 5 Port USB en amont

B VGA **DVI**

For best performance, use your DVI input and ensure that your display settings are set at 1680 x 1050 @60Hz

C Power **D USB**

2 Installation / Instalación / Installation / Installazione / 安裝 / 安裝

A Pour installer la base / Per installare la base / Um den Monitorfuß zu montieren / Para instalar la base / 如何安裝底座 / 安裝底座步驟

Do not release the pin before the base stand is firmly fixed to the base column.

Place the monitor face down on a smooth surface taking care to avoid scratching or damaging the screen.

B fixer le support / conectar soporte / Ständer anbringen / attacco supporto / 連接支架 / 連接架

Hold the monitor base with both hands and firmly fix the base stand into four-pronged base attachments

Fastening base stand with the monitor

AVERTISSEMENT / ADVERTENCIA / WARNUNG / AVVERTENZA / 小心 / 注意

Yes

Insert the pin before lifting the monitor

No

Base stand may eject without pin

Please follow the instruction on the above illustrations, before lifting your monitor. Not following the recommended way may cause injury

Using two hands to lift your monitor is strongly recommended

3 Réglages ergonomiques / Ajustes ergonómicos / Ergonomische Einstellmöglichkeiten / Regolazioni ergonomiche / 人体工学调整 / 人體工學調整

A Réglage de l'inclinaison / Inclinación / Kippen / Inclinação / 傾斜 / 傾斜


B Affichage format portrait / Posición vertical / Kurzreferenz für Bedientasten / Referimenti rapidi per i tasti di controllo / 控制按钮简介 / 可快速参考控制按钮

C Réglage en hauteur / Regulación de altura / Höheneinstellung / Regolazione altezza / 高度调整 / 高度調整

D Référence rapide pour les boutons de contrôle / Guida Rapida para los botones de control / Kurzreferenz für Bedientasten / Referimenti rapidi per i tasti di controllo / 控制按钮简介 / 可快速参考控制按钮

- 1 Mise sous tension (ON) et hors tension (OFF) du moniteur
- 2 Accès au menu OSD
- 3 Réglage de la luminosité de l'écran
- 4 Réglage des options OSD
- 5 Ajustage automatique de la position horizontale, de la position verticale, du réglage de phase et d'horloge

Contenu de la boîte / Contenido del embalaje / Lieferumfang / Contenuto della confezione / 包装盒内的物品清单 / 包裝盒內物品清單

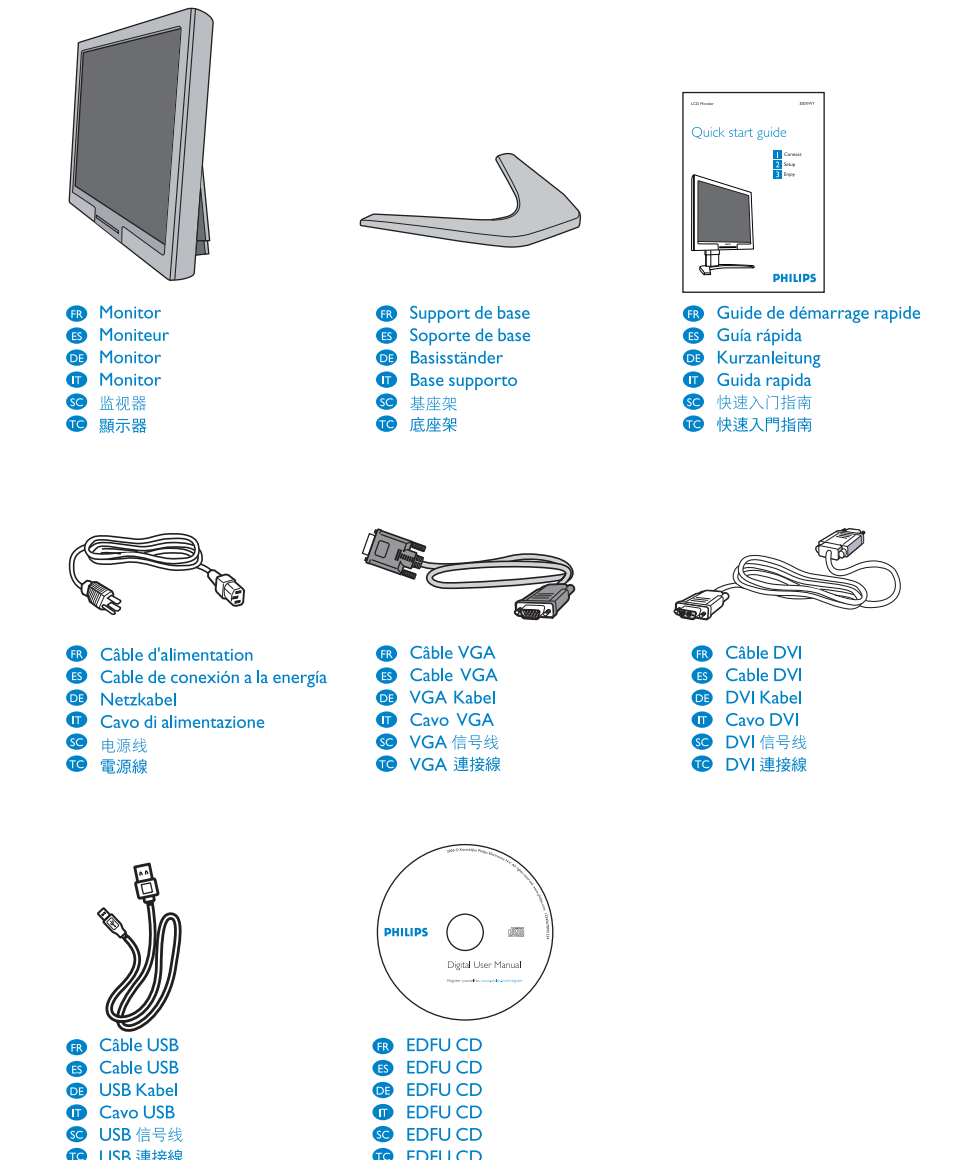

Besoin d'aide?
Manual utilisateur
Vorle manual dell'utente (CD-ROM) fourni avec le cadre photo interne al display.
Guida in linea: www.p4c.philips.com

¿Necesita ayuda?
Manual de uso
Considere el manual de uso digital suministrado con el reproductor de fotos digitales.
Ayuda en línea: www.p4c.philips.com

Benötigen Sie Hilfe?
Benutzerhandbuch
Stellen Sie ein digitales Benutzerhandbuch mit, das mit dem Foto Display mitgeliefert wurde.
Online-Hilfe: www.p4c.philips.com

Avete bisogno di aiuto?
Manuale d'istruzioni
Considerare il manuale d'istruzioni in formato elettronico fornito interno al display.
Guida in linea: www.p4c.philips.com

需要帮助?
用户手册
参阅随显示器提供的用户手册。
在线帮助: www.p4c.philips.com

需要協助?
使用手冊
參閱隨產品附贈的使用手冊。
線上協助: www.p4c.philips.com

Specifications are subject to change without notice.
Trademarks are property of Koninklijke Philips Electronics N.V. or their respective owners.
© 2006 Koninklijke Philips Electronics N.V. All rights reserved.
www.philips.com