



English

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Warning

- Keep the supply unit dry (Fig. 2).
- This appliance is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- Do not modify the supply unit.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Unplug the appliance before cleaning it with water.
- Do not use a damaged appliance. Replace damaged parts with new Philips parts.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Because of hygiene, only one person should use the appliance.
- Only use cold or lukewarm water to clean the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids to clean the appliance.
- Only use original Philips accessories or consumables. Only use detachable supply unit HQ8505.
- Charge, use and store the product at a temperature between 5 °C and 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

You can find the model number on the back of your product.

The full model number (e.g. BG1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

General description (Fig. 1)

- 1 Trimming comb (3 mm)
- 2 Trimming comb (5 mm)
- 3 Shaving unit
- 4 Shaving foil
- 5 On/off button
- 6 Battery status indicator
- 7 Supply unit
- 8 Small plug

Charging

Charge the appliance before first use and when the battery status indicator shows that the battery is almost empty. When the appliance has charged for 8 hours, it has a cordless operating time of 50 minutes.

- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.

- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 4).
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Battery status indications

- When the battery is almost empty, the battery status indicator flashes orange.
- When the appliance is charging, the battery status indicator flashes green (Fig. 4).
- When the battery is fully charged, the battery status indicator lights up green continuously.

Note: After approx. 30 minutes, the light goes out automatically.

Using the appliance

This product is only intended for shaving and trimming body parts below the neckline. Do not use it to shave or trim facial or scalp hair.

Always check the appliance and all accessories before you use them. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- You can use the appliance wet or dry to shave or trim hair on all parts of the body below the neckline.
- The appliance works best under dry conditions. Dry your skin with e.g. a towel when using it on moist areas, such as underarms.
- Since all hairs do not grow in the same direction, you may want to try different trimming directions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and make sure that the surface of the shaving unit or of the trimming comb always stays in contact with your skin.

Note: This appliance is for cordless use only.

Attaching and detaching combs

- 1 To attach a comb, snap the front part of the comb onto the teeth of the shaving unit and push the projection at the back of the comb into the appliance ('click') (Fig. 5).
- 2 To detach a comb, carefully pull the back part off the appliance and then remove it from the shaving unit (Fig. 6).

Switching the appliance on and off

Press the on/off button once to switch on the appliance (Fig. 7).

Trimming

The appliance comes with two trimming combs that allow you to cut hair to 2 different lengths (3 mm and 5 mm).

When trimming for the first time, start by using the 5 mm comb to familiarize yourself with the appliance.

- 1 Snap the trimming comb onto the appliance (see 'Attaching and detaching combs').
- 2 Switch on the appliance.
- 3 Move the appliance against the direction of hair growth (Fig. 8).

Note: Make sure that the flat part of the trimming comb is always fully in contact with the skin.

- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Shaving

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- If your hair is longer than 10 mm, trim hair to a length of 3 mm first for optimum shaving results.
- For dry use, make sure that your skin is clean and dry before using the shaving unit.
- For wet use, prepare your skin with lathered soap or shaving foam before you use the appliance.

Shaving without comb

- 1 Remove any trimming comb from the appliance (see 'Attaching and detaching combs').
- 2 Switch on the appliance.
- 3 Stretch your skin taut with your free hand (Fig. 9). Gently press the shaving unit onto skin and move it slowly and smoothly against the direction of hair growth. The shaver is bi-directional, which means that you can shave by moving the appliance up or down, depending on the direction of hair growth (Fig. 10).

Do not press too hard. Too much pressure can distort the foil and cause skin irritation.

Make sure that the shaving unit is always in full contact with your skin.

- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Cleaning

Clean the appliance after each use (see 'Cleaning').

Switch off the appliance before removing or attaching attachments and before cleaning.

Never dry cutting units or shaving foils with a towel or tissue, as this may cause damage.

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Switch off the appliance.
- 2 Remove any trimming comb from the appliance (see 'Attaching and detaching combs').
- 3 Remove the shaving unit by pulling it off the appliance (Fig. 11).
- 4 Hold the shaving unit by the plastic housing only.
- 4 Rinse the shaving unit with warm running tap water (Fig. 12).
- 5 Allow the shaving unit to air dry completely.
- 6 Rinse the hair chamber under warm running tap water to remove any residues (Fig. 13).
- 7 Reattach the shaving unit by snapping it back onto the appliance ('click') (Fig. 14).

Support

For all product support such as frequently asked questions, please visit www.philips.com/support. Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details). The following accessories and spare parts are available:

- TT2000 Philips replacement shaving unit.

Replacement

For maximum shaving performance, we advise you to replace the shaving unit every year (TT2000). If the shaving unit is worn or damaged, do not use the appliance and replace the shaving unit immediately. Always replace the shaving unit with an original Philips TT2000 shaving unit.

- 1 Switch off the appliance and disconnect it from the wall socket.
 - 2 Pull the shaving unit out of the appliance (Fig. 11).
- Note: The foil is delicate. Handle the shaving unit with care.
- 3 Snap the new shaving unit into the appliance ('click') (Fig. 14).
 - 4 Check if the shaving unit is firmly attached before you use the appliance.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 15).
- Follow your country's rules for the separate collection of electrical products and batteries.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Place a flathead screwdriver in the hole above the socket for the small plug. Twist the screwdriver to create a gap between the front and back panel of the appliance (Fig. 16).
- 2 Place a flathead screwdriver between the front and back panel. Twist the screwdriver to remove front panel of the appliance (Fig. 17).
- 3 Place a flathead screwdriver between the inner body and the back panel. Twist the screwdriver to remove the back panel of the appliance (Fig. 18).
- 4 Remove the two screws in the back of the appliance (Fig. 19).
- 5 Pull the panel with the on/off button from the inner body (Fig. 20).
- 6 Remove the transparent inner cover by bending the transparent flaps away from the hooks (Fig. 21).
- 7 Pull the printed circuit board off the inner body (Fig. 22).
- 8 Cut the connectors that connect the batteries to the printed circuit board (Fig. 23).
- 9 Remove the batteries.

