 



定制模式




清洁模式

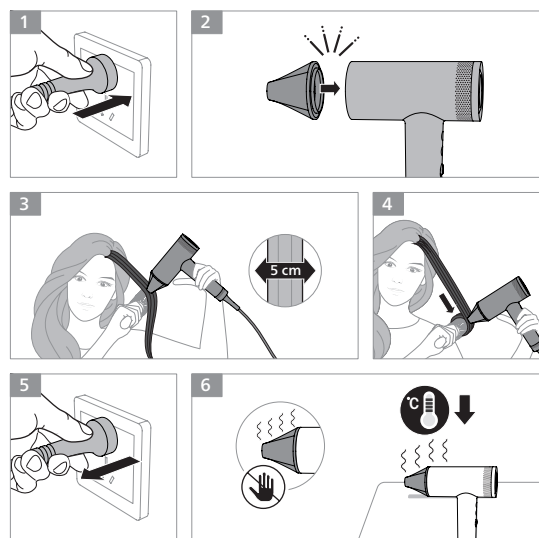

 
自动模式

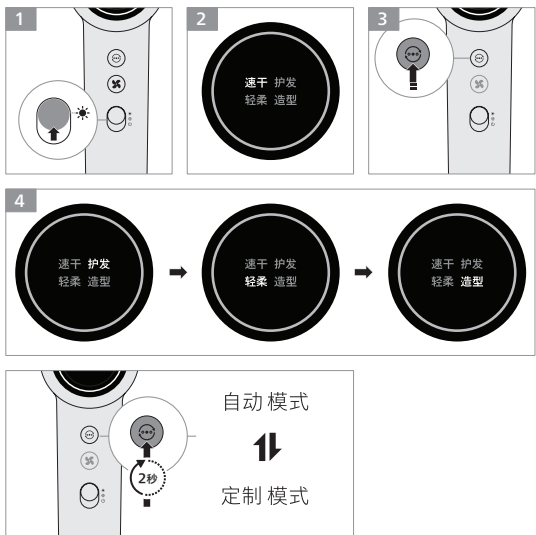


清洁模式

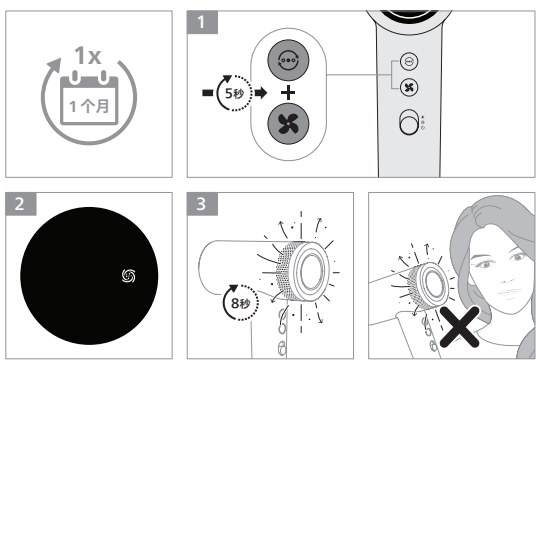 

冷风模式

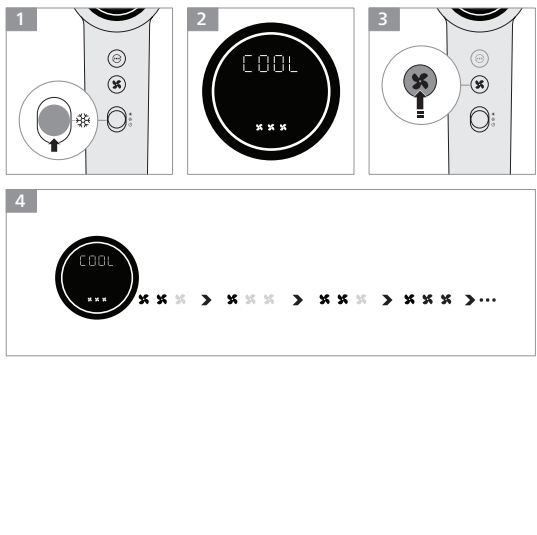 

清洁模式

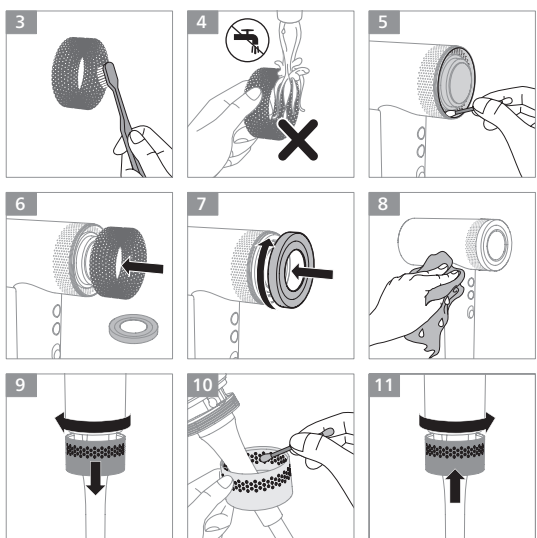 

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the appliance is switched off.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water (Fig. 1).
- The supply cord cannot be replaced. If the supply cord is damaged, you must have the appliance replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- WARNING: Do not use this appliance near water.
- Always unplug the appliance after use.
- Do not pull on the supply cord after using. Always unplug the appliance by holding the plug.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in the user manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the supply cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not operate the appliance with wet hands.
- Always return the appliance to a service center authorized by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
- Do not connect the appliance with a plug adapter. If really necessary, only use a certified plug adapter.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Use the new GB standard 2 flat pin socket when connecting to the dryer.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- This symbol means that electrical products shall not be disposed of with normal household waste (Fig. 2).
- Follow your country's rules for the separate collection of electrical products.

2 Dry your hair

Note: When the dryer is plugged in without switching on, it will automatically enter standby mode. The dryer's handle might have some warmth after a while, which is normal and safe to use.

- Connect the plug to a power supply socket.
- Attach the nozzle (5) onto the hairdryer for precise drying.
 - Warning: Do not touch/remove the nozzle until it cools down.**
- Slide the power on/off button (4) to . you can choose from **自动模式** or **定制模式**. To switch between both, press and hold the mode button (2) for 2 seconds.
- When selecting **定制模式**, you can press mode button (2) momentarily to adjust temperature and speed button (3) to adjust speed as preferred.
- When you are under **自动模式**, you can change to your desired mode by pressing the mode button momentarily according to the table as below:

Mode	Function
速干	Dry shower-wet hair quickly
护发	Care your hair with an alternating hot and cool airflow
轻柔	Dry hair at a mild temperature for gentle experience, especially soothing your scalp
造型	Style with high temperature and precise airflow

- Switch the power on/off button (4) to and you will see COOL (冷风模式) on display. You can change airflow (3) as preferred to fix your style.
 - When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine.
 - The dryer comes with memory feature, it can remember the last used settings.
- After use:**
- Switch off the appliance and cool down the dryer. Remove the nozzle if necessary.
 - Clean the appliance with a damp cloth.
 - It's suggested to use the auto-clean mode once a month. To activate the clean mode, press and hold both mode (2) and airflow (3) buttons for 5 seconds while powered off.
 - Unscrew the air inlet grille cover (7) to remove hair and dust, and use a toothbrush to gently clean the foam (6). Make sure to put foam back after thorough cleaning.
 - Note: Do not rinse the foam under tap water.**

3 Support

If you need information or support, please visit www.philips.com/support.

4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.
There is bad smell for the first-time of use.	The smell may come from the new appliance.	The smell will gradually disappear after a few uses. Please try to dry/style your hair in a well-ventilated room.
There is burning smell when drying/styling my hair.	If there is some dust or hair left in the appliance, it may be burnt due to the high temperature and produce odor.	Turn off the appliance and wait until it cools down. Check if any hair left. Remove dirt from the air inlet grille and keep it clean regularly.
I hear annoying noise when using auto-clean mode.	The motor setting is different under auto-clean mode.	Use auto-clean mode once a month to avoid blocking.



Error Code	Solution
A01	Check if the socket plug in correctly or contact Philips for help.
A02	Try to unplug and then plug in again see if the appliance work properly, or contact Philips for help.
A03	Try to unplug and then plug in again see if the appliance work properly, or contact Philips for help.
A04	Unplug the appliance and clean the dust on air inlet grille of the handle. Turn on the appliance again only when it cools down completely.
E5-E11	Please contact Philips for help.

简体中文

感谢您的惠顾，欢迎光临飞利浦！为了充分享受飞利浦提供的支持，请在 www.philips.com.cn/welcome 上注册您的产品。

1 重要信息

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有所障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。

在浴室中使用本产品时，请在使用后拔下电源插头，因为产品在关闭的情况下靠近水源也会引发危险。

为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向安装商咨询。

警告：请勿在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本产品（图 1）。

警告符号注释：禁止在洗澡或淋浴时使用。

不得更换电源线。如果电源线损坏，为避免危险，必须由飞利浦或

其授权的服务中心，或类似的专职人员来更换电源线。

警告：请勿在靠近水的地方使用本产品。

使用后务必拔下产品的插头。

使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。

连接产品之前，请确保产品上标示的电压与当地电源电压相符。

请勿将本产品用于用户手册说明以外的任何其他用途。

请勿对假发使用本产品。

当产品连接了电源时，切勿让其无人看管。

切勿使用由其他制造商生产的，或未经飞利浦推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。

切勿将电源线缠绕在产品上。

待产品完全冷却后再存放。

切勿用湿手操作本产品。

本产品应送往由飞利浦授权的服务中心检查或修理。由不合格人员进行维修可能将用户置于极度危险的境地。

切勿使用插头适配器连接本产品。如必须使用，请只使用经过认证的插头适配器。

如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。

切勿将金属物体插入风口，以免触电。

切勿阻塞电吹风风口。

使用新版国标的扁双头插座连接吹风机。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

- 此符号表示电器产品不能与一般的生活垃圾一同弃置（图 2）。



- 请遵守您所在国家/地区有关分类回收电器产品的规定。



2 吹干头发

注意：当吹风机接入电源而未启动时，会自动进入待机模式。吹风机手柄可能会发热，这是正常现象，可继续安全使用。

1 将插头连接至电源插座。

2 请将风嘴安装到 (⑤) 电吹风上，以便更精确地吹干头发。
警告：在风嘴冷却之前，请勿触碰/取下风嘴。

3 滑动电源开/关按钮 (④) 至 ，可以选择 **自动模式** 或 **定制模式**。要在两种模式之间切换，请按住模式按钮  (②) 2 秒。

4 当您选择了 **定制模式**，您可以按下模式按钮  (②) 来按需调节温度，按下风速按钮  (③) 来按需调节风速。

5 当您选择了 **自动模式**，您可以根据下表所示，通过按下模式按钮更改至所需模式：

模式	功能
速干	快速吹干湿透的头发
护发	交替使用冷热气流呵护秀发
轻柔	中等温度吹干头发，有利于舒缓头皮，享受温和体验
造型	使用高温和精确的气流做造型


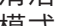
6 切换开/关按钮 (④) 至 ，您可以在显示屏上看到 COOL（冷风模式）。您可以按需改变风速  (③) 来为头发定型。

产品接通电源后，可自动且持续地释放负离子，令秀发更加顺滑、亮泽。
吹风机具有记忆功能，能够记住上次使用的设置。

使用后：

1 关闭产品并使吹风机冷却。如有必要，请取下风嘴。

2 用湿布擦拭本产品。

3 建议每月使用一次自动清洁模式。要启动清洁模式，请关闭吹风机后，同时按住模式  (②) 和风速  (③) 按钮 5 秒。

4 取下进风口盖 (⑦) 以清除毛发和灰尘，并使用牙刷轻柔地清洁海绵部分 (⑥)。彻底清洁后，确保将海绵放回原处。

注意：切勿在水龙头下冲洗海绵。

3 支持

如需获取信息或支持，请访问 www.philips.com.cn/support。

4 故障种类和处理方法

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。
	产品可能过热，自动关闭电源。	拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查进出风口，确保其未被绒毛、头发等杂物堵塞。
	所连接的电源电压可能不适用于本产品。	确保产品型号铭牌上标示的电压与当地电源电压相符。

问题	原因	解决方法
首次使用有异味。	新产品可能会有气味。	使用几次后气味会逐渐消失。请尽量在通风良好的房间内吹干头发/给头发定型。
吹干头发/给头发定型时有烧焦的气味。	如果产品内部残留一些灰尘或头发，可能会因高温而被烧焦并产生异味。	关闭产品，等待直至产品冷却。检查是否有头发残留。 定期清除进出风口的灰尘并保持清洁。
使用清洁模式时，产品发出恼人的噪音。	自动清洁模式下的马达设置有所不同。	每月使用一次清洁模式，以避免阻塞。

错误代码	解决方法
A01	检查是否正确插入插头或联系 Philips 寻求帮助。
A02	尝试拔下插头，然后再次插入，查看产品是否正常工作，或联系 Philips 寻求帮助。
A03	尝试拔下插头，然后再次插入，查看产品是否正常工作，或联系 Philips 寻求帮助。
A04	拔下产品插头，并清除手柄进风口的灰尘。直至产品完全冷却后，再次打开产品。
E5-E11	请联系 Philips 寻求帮助。

保留备用

出版日期： 2023-11-15

产品中有害物质的名称及含量						
部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑胶件	X	O	O	O	O	O
五金件	X	O	O	O	O	O
电源线	X	O	O	O	O	O
马达组件	X	O	O	O	O	O
发热架组件	X	O	O	O	O	O
PCBA组件	X	O	O	O	O	O

本表格依据SJ/T 11364的规定编制。
O：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

PHILIPS

产品 : 飞利浦高速吹护机
型号 : BHD737
额定电压 : 220V~
额定频率 : 50Hz
额定输入功率 : 1400 W
生产日期 : 请见产品本体
产地 : 中国广东东莞

飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2018及 GB17625.1-2022制造