

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the NEC, ANSI/NPA 70 and Section 54 of CEC, Part I provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna-discharge unit, ize of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Wall mount bracket kit TUNE IN TO SAFETY

• ALWAYS follow the manufacturer's recommendations for the safe installation of your television.

ALWAYS read and follow all instructions for proper use of your television.

NEVER allow children to climb on or play on the television or the furniture on which the television is placed.

NEVER place the television on furniture that can easily be used as steps, such as a chest of drawers.

ALWAYS install the television where it cannot be pushed, pulled over or 32PFL6573/F7 SANUS AST16 M4 x 1.378 " (35 mm) ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed. WALL OR CEILING MOUNT YOUR TELEVISION

WALL OR CEILING MOUNT YOUR TELEVISION
- ALWAYS contact your retailer about professional installation if you have any
doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television
manufacturer and has a safety certification by an independent laboratory
(such as UL, CSA, ETL).
- ALWAYS follow all instructions supplied by the television and mount
manufacturers.

isions can be heavy. A minimum of two people is required for a wall or

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.

* ALWAYS place your older CRT television on furniture that is sturdy and appropriate for its size and weight.

• NEVER place your older CRT television on a dresser where children may be to make the use the drawers to dish. tempted to use the drawers to climb.

*ALWAYS make sure your older CRT television does not hang over the edge of your furniture.

3 Press and hold about 10 seconds for factory reset.

When installing the unit on the wall, allow this much space. Top: 11.8" (30 cm) Left and right side: 5.9" (15 cm) Bottom: 3.9" (10 cm)

Notice Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.
Do not use this apparatus near water.
Clean only with dry cloth.
Do not block any ventilation openings. Install in accordance with the manufacturers' instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Pohyuse attachments? Accessories specified by the manufacturer. Skyworth USA Corporation reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly. The material in this Owner's manual is believed adequate for the intended use of the plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments / accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note to the CATV system installer: Skyworth USA Corporation cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Skyworth USA Corporation will be adapted and published on the Skyworth USA Corporation support website as soon as possible.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by service centers and official repair shops. Failure to do so shall void any warranty, stated or implied. Any operation expressly prohibited in document, any adjustments or assembly procedures not recommended or authorized in document shall void the warranty.

Example of antenna grounding as per NEC - National Electric Code GROUND CLAMP ANTENNA LEAD IN WIRE

ANTENNA LEAD IN WIRE

ANTENNA DISCHARGE UNIT
(NEC SECTION 810-20) GROUNDING CONDUCTORS
(NEC SECTION 810-21)
GROUND CLAMPS

Brand Model # Screw dimension

YourTV meets the VESA standard for wall mounting. Consult with your loca dealer for a wall mount bracket which is compatible with yourTV model.

The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.

Skyworth USA Corporation, Inc. is not liable for any accidents or injuries incurred while installing this product, including but not limited to those noted below:

to fall.

Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.

For safety reasons use 2 people to mount the TV onto a wall mounting bracket.

Do not mount the TV onto the wall mounting bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.

The wall mount bracket must be installed by experts.

POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)

warranty.

Federal communications commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio or television technician for help.

This device complies with part 15 of the FCC rules. Operation is subject

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept interference received, including interference that may cause undesired operation. Declaration of conformity
Trade name: PHILIPS
Responsible party: Skyworth USA Corporation, Inc.
Model: 32PFL6573/F7
Address: I4586 Central Ave. Chino, CA 91710, USA
Telephone number: 1 833 978 3323

Modifications

This apparatus may generate or use radio frequency energy. Changes or modifications to this apparatus may cause harmful interference. Any modifications to the apparatus must be approved by Skyowroth USA Corporation, Inc. The user could lose the authority to operate this apparatus if an unauthorized change or modification is made.

Canadian notice
CAN ICES-3(B) / NMB-3(B)
Analog and digital television receiving apparatus, Canada BETS-7/NTMR-7. The following FCC/IC RSS applies to the wireless LAN adapter included in this product. FCC caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC/IC RF Exposure Compliance

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from your body. This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this

5150-5250 MHz band is restricted to indoor operations only. High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause Compliance with FCC requirement 15.407(c) and IC requirement RSS-210

Positioning the TV
Large screen TVs are heavy. 2 people are required to carry and handle a large screen TV.
Make sure to hold the upper and bottom frames of the unit firmly as illustrated.
Install the unit in a horizontal and stable position.
Do not install the unit in direct sunlight or in a place subject to dust or strong wibration.
Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
When installing this unit in a temperate environment, avoid a place with rapid temperature changes. When installing this unit in a temperate environment, avoid a place with rapid temperature changes. This unit should not be used in a tropical environment as it has not been evaluated under such conditions. No objects should be placed directly on or under this unit, especially lighted candles or other flaming objects. Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the unit is placed too close to them. In this case, please ensure enough space between the external devices and the unit.

the unit.

Do not insert the AC power cord into the power socket outlet before all the connections are made.

Ensure that you always have easy access to the AC power cord and outlet to disconnect the TV from the AC outlet.

Before you move the TV, disconnect attached cables to prevent damage to connectors, especially the TV tuner.

Be sure to unplug the AC power plug from the AC outlet before moving or carrying the unit.

When moving the TV and then setting it down, please be careful not to pinch the AC power cord under the unit. Regulatory notices WARNING: To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions.

Tipping, shaking or rocking the unit may cause injury / death.

Stability Hazard
A television set may fall, causing serious personal injury or death.
Never place a television set in an unstable location. Many injuries, particularly
to children, can be avoided by taking simple precautions such as:
- Always use cabinets, stands or mounting instruction recommended by the - Always use cabinets, stands or mounting instruction recommended by the manufacturer of the television set.
 - Always use only furniture that can safety support the television set.
 - Always ensure the television set is not overhanging the edge of the supporting furniture.
 - Always educate children about the dangers of climbing on furniture to reach the television set or its controls.
 - Certainly wire the cords and cables connected to television set that cannot be routed, pulled and pinched.
 - Not placing the television set on unstable place.
 - Not placing the television set on all furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support. Sookcases) without anchoring both the furniture and the television set to a suitable support.

Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.

Not placing anything such as toys or controls that tempts children on a TV or furniture which a TV is placed. If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. In order to avoid interruption of ventilation, this unit should not be placed in built-in equipment such as a book cabinet, rack, etc., and the vents of this unit should not be covered with anything such as a tablecloth, curtain, newspaper, etc. Make sure that there is enough ventilation space (4 inches / 10 cm or more) around this unit. Press Q to turn the unit on and go into standby mode. To completely turn off the unit, you must unplug the AC power plug from the AC power outlet. Disconnect the AC power plug to shut the unit off when trouble is found or not in use. The AC plug shall remain readily available.

AC power plug wer plug Never use a gas duster on this TV. The gas trapped inside of this unit may cause ignition and explosion.

LIMITED WARRANTY ONE (1) YEAR This warranty obligation is limited to the terms as set forth below. WHO IS COVERED:

packaging.
For product recycling information, please visit - **www.recycle.philips.com** WHAT IS COVERED:

A Batteries usage

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: Batteries (battery pack or battery installed) should not be exposed to excessive heat such as sunshine, fire or the like.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, Li-ion, etc.) batteries. Disposal of used batteries

Preparing to move / ship the unit Preparing to move / ship the unit
Please pack the unit properly by following the diagram on
the carton (as noted below).

The packaging of this product is intended to be recycled. Contact your local authorities for information about how to recycle the

All other registered and unregistered trademarks are the property of their respective owners.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. Manufactured under license from Dolby
Laboratories. Dolby, Dolby Audio, and the double-D
symbol are trademarks of Dolby Laboratories
Licensing Corporation.

Portions of this software are copyright ${\mathbin{\circledcirc}}$ The FreeType Project (www. freetype.org). The American Academy of Pediatrics discourages television viewing for children younger than two years of age. License

Skyworth USA Corporation, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open-source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Skyworth USA Corporation, Inc. You should write to:

Skyworth USA Corporation Inc. Service OSS Request, 2950 Toy Road, Groveport, OH 43125, USA

Skyworth USA Corporation, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Skyworth USA Corporation, Inc. shall not be liable to make any corrections to the open-source software or source code or to provide any support or assistance with respect to it. Skyworth USA Corporation, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code. This product has been manufactured by and is sold under the responsibility of Skyworth

Limited warranty

WHAT IS COVERED:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day Limited warranty.

Replacement product can only be sent if all warranty requirements are met.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay. WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS: WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables 30lf "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

This Limited warranty does not cover: This Limited warranty does not cover:

Shipping charges to return defective product.

Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna / signal source systems outside of the product.

Product repair and / or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.

Damage or claims for products not being available for use, or for lost data or lost software.

Damage from mishandled shipments or transit accidents when returning product.

product.

A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorized, or repair of products damaged by these modifications.

A product used for commercial or institutional purposes (including but not limited to rental purposes).

Product lost in shipment and no signature verification receipt can be provided.

provided.
• Failure to operate per document. TO OBTAIN ASSISTANCE... Contact the customer care center at: 1 833 978 3323 Chat with us in English: https://tinyurl.com/y2e29xsq

Chat with us in English: https://tinyurl.com/y2e29xsq

d REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY POR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

Skyworth USA Coporation, Inc. Service 2950 Toy Road, Groveport, OH 43125, USA

ROKU TV

6573 series **Quick Start Guide**



Call us:
1-833-978-3323
To obtain assistance, contact Philips of center, In the U.S.A., Canada, Puerto R


Scan to call U.S. Virgin Islands.


To obtain assistance, contact Philips customer care center, In the U.S.A., Canada, Puerto Rico, or the

User Manual:
www.philips.com/support
For a detailed manual, please visit our support page and enter your TV model nuber to download.




https://tinyurl.com/y2e29xsq

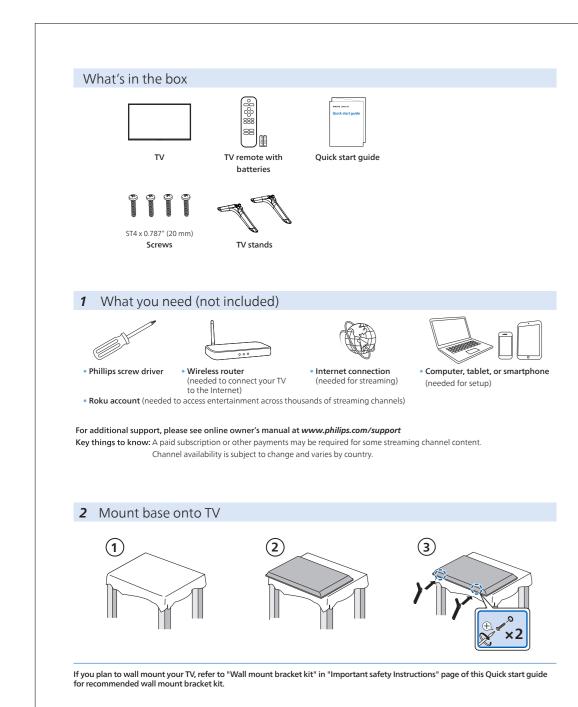


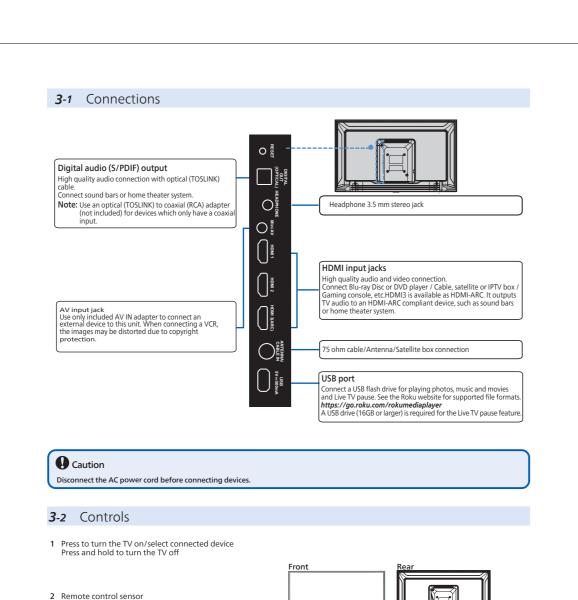


A factory reset clears the majority of data from your Roku TV and resets it to a factory default state. After you complete a factory reset, you might need to set up and configure your Roku TV again including Guided Setup and activation process, sign in to streaming channel perform a television channel scan and configure parental control settings.

*Power button is located at the bottom side of the TV

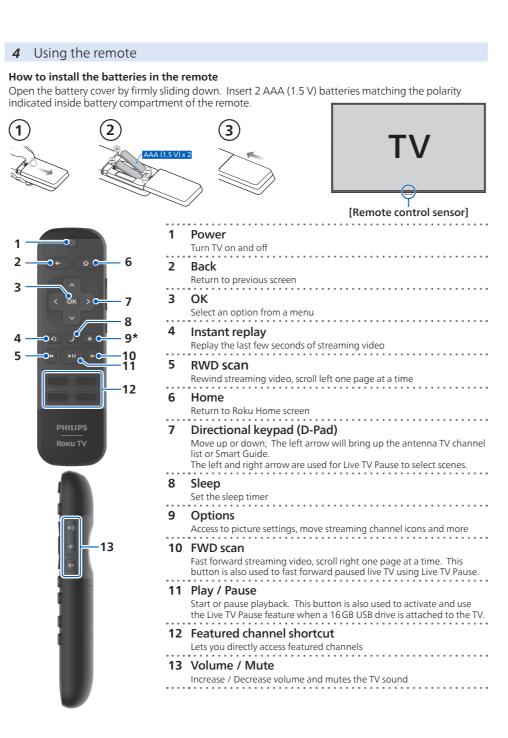

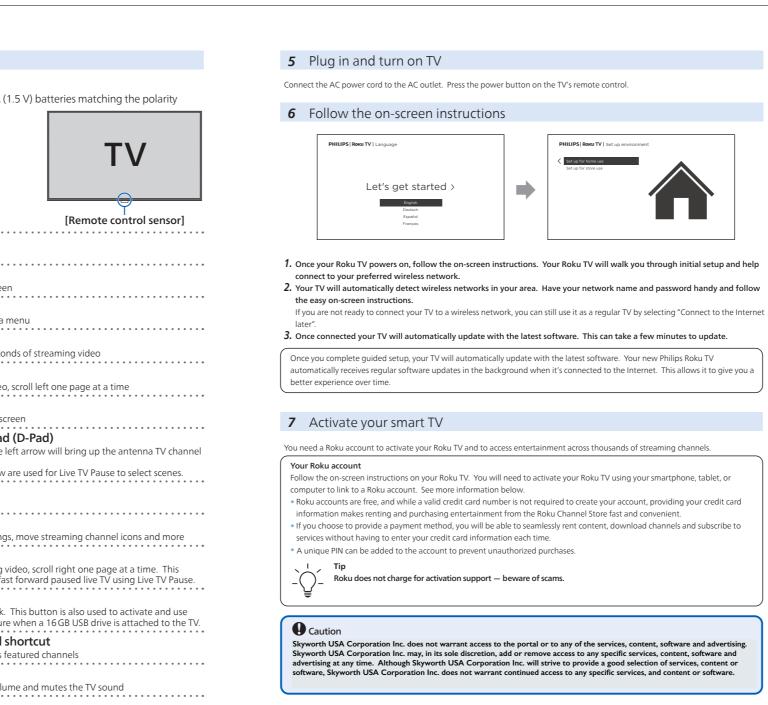

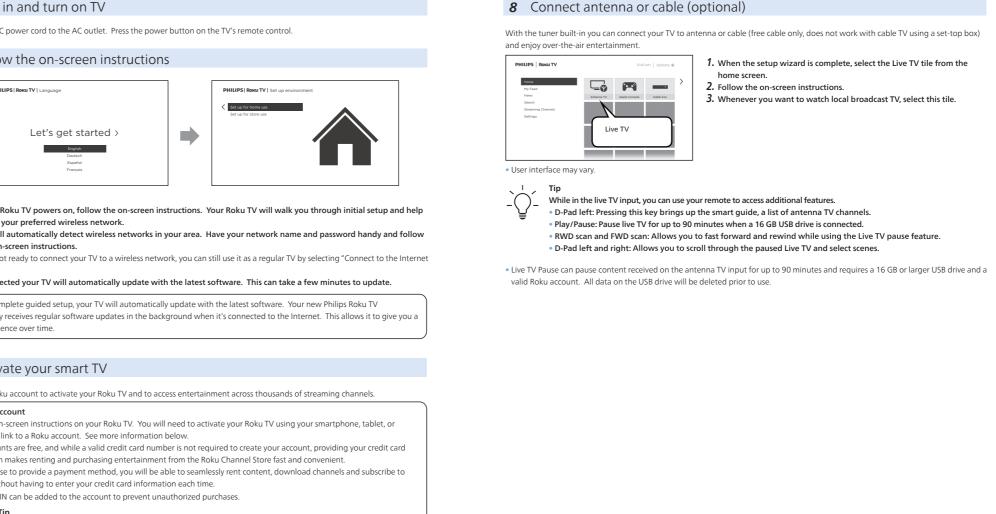



trademarks of Koninklijke Philips N.V. and are used Roku, Roku TV, the Roku logo, and the purple d-pad design are trademarks of Roku, Inc. All other trademarks and logos herein are the property of their respective



* The prives you easy access to picture settings, display options and more. Try it on every screen.