

**PHILIPS**

Televisions

5505 series



androidtv

Product design and user interface are for illustrative purposes only.  
Actual product and user interface may vary.

# Quick start guide

**Call us:**

1-866-309-5962

**Scan to call us:**



**Hours of operation:**

9 AM to 9 PM EST  
> Monday – Saturday

**Chat with us:**

 
<http://tinyurl.com/y2e29xsq>

**Scan to chat with us:**




9 AM to 6 PM EST  
> Sunday

## 1 What's in the box




with provided screws

 


★★★★★



## 2 Using the remote

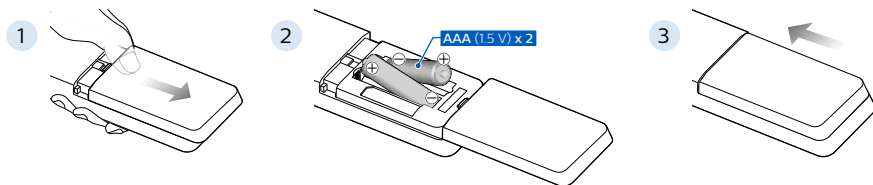 

Controllable range for the remote

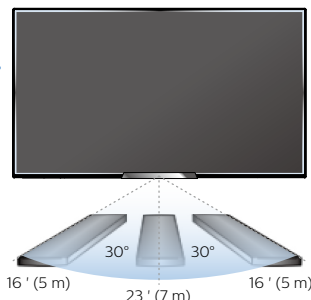 

### 1 **(POWER)**

Turn the TV on/off into Quick Start Standby. Holding the button for 1 second or more will put the TV into Low Power Standby.

### 2 **(TV GUIDE)**

Access to the Electronic Program Guide (EPG).

### 3 **Google Assistant**

Press the Google Assistant button on your remote to ask Google.

### 4 **(BACK)**

Returns to the previous menu screen.

### 5 **PREV.CH**

Direct access to the Live TV channels.  
Displays the last selected terminal or channel.

### 6 **(OPTIONS)**

Displays a list of menu options applicable to the active screen.

### 7 **(CURSOR as ▲▼◀▶) and OK**

Moves to select an item and to determine on the various menu.

### 8 **(HOME)**

 
Access to your apps, Live TV, input devices, settings, and the Google Play Store.

### 9 **(INPUT)**

Change input source.  
Select and change access to the attached devices such as Blu-ray player, gaming consoles, or cable box.



## 3 Installing the stands

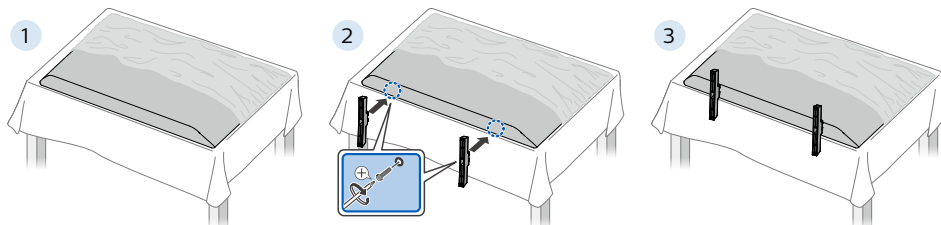

Remove the tape on the bottom of the TV set and the plastic bag.

❗ Fasten the stand to the TV with provided screws. While fastening the screws, hold the stand to prevent it from falling.

Both stands should now be securely fastened.

- If you plan to wall mount your TV, refer to “Wall mount” on the reverse side of this guide for recommended wall mount bracket kit.

## 4 Connecting your devices

 
### How to use external devices

 
#### Connecting antenna or cable / satellite / IPTV set-top box


##### ❗ Tip:

Connect your external devices to your Android TV™ before powering on.


**If connecting to an antenna via an RF cable**  
DTV programs that are broadcasted in your area can be received for free through a digital antenna.

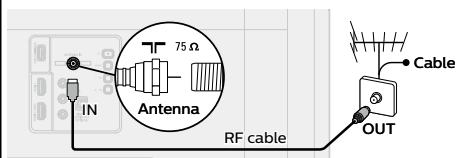

 **If connecting a set-top box via an HDMI cable**  
If the TV is connected to a cable or satellite set-top-box via an HDMI cable, you must select the correct source by using  (INPUT) on your remote.

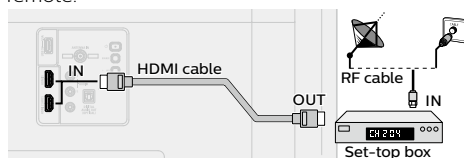

### Changing input to devices that are connected to the TV

 
Press  (INPUT) to switch input device list.

### How to use Chromecast built-in

Casting allows you to mirror your favorite apps on the big screen.

##### ❗ Tip:

The device you are using to cast to your television must be on the same Wi-Fi network.

1. Open a Chromecast built-in enabled app.
2. Tap .
3. Tap the device you would like to cast to.

### How to connect to your Bluetooth® devices

To pair your Bluetooth® devices, such as a wireless headset, keyboard, game controller, with your Android TV.

 
1. On the Android TV home screen, select **Settings** in the upper right corner of the screen, and press **OK**.
2. Select **Remote & Accessories** and press **OK**.
3. Enable pairing mode on your device.
4. Using your TV remote, select your device from the list shown on your TV.
5. Your Android TV will pair with your device.

##### ❗ Tip:

Some devices may require additional steps. Please consult your Bluetooth device manual for more information.



## 5 Connection overview

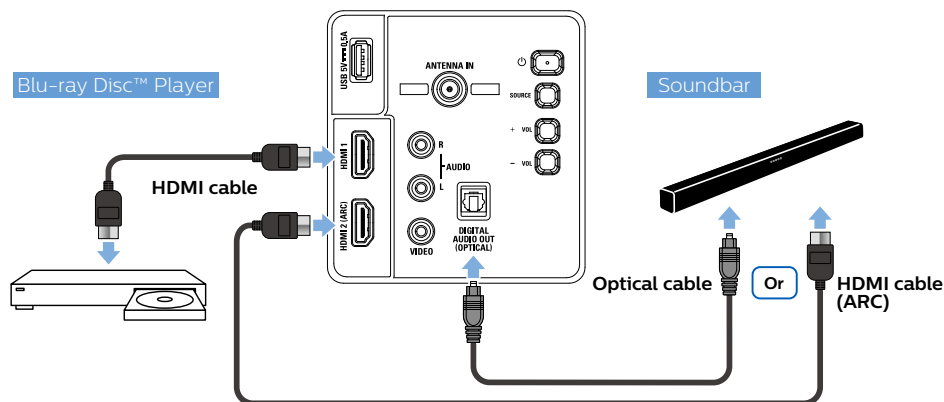

## 6 Best Experience

### Google account

Unleash your television's true potential. With a Google® account you can effortlessly expand your entertainment library via the Google Play Store and Google Play app and also keep apps up-to-date.

While you can enjoy this Philips Android TV™ without a Google Account via the preinstalled selection of applications, we recommend a Google account to download additional apps from the Google Play Store or use Google Assistant.

**Note:**  
Simply login with your Google account.

**Tip:**  
It is recommended to create a new Google account specifically for your Android TV. A new account will prevent interference and syncing of your personal account. To create a new Google account, visit <http://accounts.google.com/signup> on your smartphone, tablet, or computer.

### Network router

#### Wireless Connection:

The Philips 5000 Series Android TV is equipped with Wireless LAN 802.11ac for wireless streaming.

**Note:**  
Wireless performance may be affected by various factors, including the distance between the TV and your Wi-Fi router. To improve wireless performance, we recommend placing your Wi-Fi router within 15 feet of your TV. The use of open or unencrypted Wi-Fi networks is not recommended, as these networks are not secured, and your data could be at risk.

**Tip:**  
If your Wi-Fi Router was set up by your internet service provider (ISP), you may find a sticker on the bottom of your router indicating your Wi-Fi SSID and password.

### Set up Android TV with your Android smartphone or tablet

If you have an Android phone or tablet, you can quickly and easily set up your Android TV from your Android device. Pairing your Android device will allow you to wirelessly sync your Wi-Fi credentials, Google account, and Android TV compatible apps. During the initial setup, you will be prompted to set up your TV with your Android device, select **Yes**, and follow the on-screen instructions.

 
**Note:**  
Be sure to enable pairing mode on your Android device in the beginning.



## 7 Explore your television

From the Android TV home screen, you can easily access movies, TV shows, music, apps, input devices, settings, and more.

To go back to the home screen at any time, press **🏠 (HOME)** on your remote.

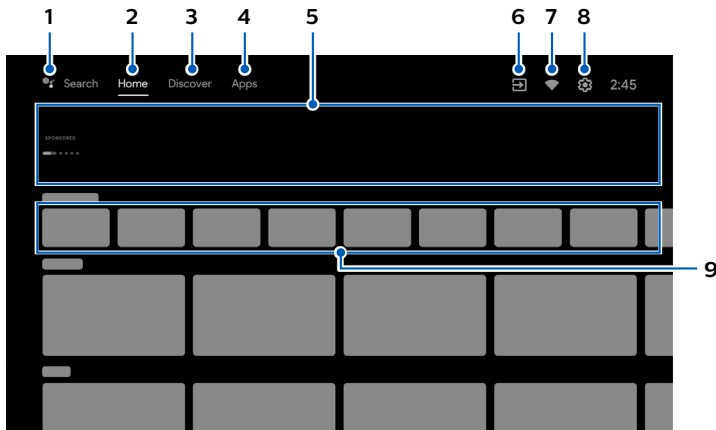

### 1 Google Assistant

With Google Assistant, quickly access entertainment, control smart devices, get answer on screen, and more using your voice.

### 2 Home screen tab

### 3 Discover tab

Recommendations are shown by topic or theme. Recommendations are based on watch history, interests and new trends.

### 4 Apps tab

Apps gallery which pre-installed or you installed.

You must sign in with a Google account to visit and download apps from the Google Play store.

### 5 Highlights

You can find suggestions of movies and shows to watch which are handpicked by Google Play's entertainment experts or sponsored by media partners.

### 6 Inputs

Toggle inputs between your favorite source devices and built-in RF tuner.

### 7 Network condition

Display the network status and open network settings if selected.

### 8 Settings

Configure your television settings and connect to wireless devices.

### 9 How to organize your favorite apps

Select the application and long press **OK** on your remote.

To move, Select **Move** in the list, and press **OK**. Use **◀▶** to move left or right. Press **OK**.

To delete, Select **Remove from favorites** in the list, and press **OK**.



 
## 8 Live TV/Antenna

To select channels, use **CH + / -** on your remote. For installation of TV channels using a set-top box, go to "4 Connecting your devices".


### Add channels

To add for the first time or additional channels, please follow the steps below:

1. On the Home menu, go to the **Apps** row and select **How to...**

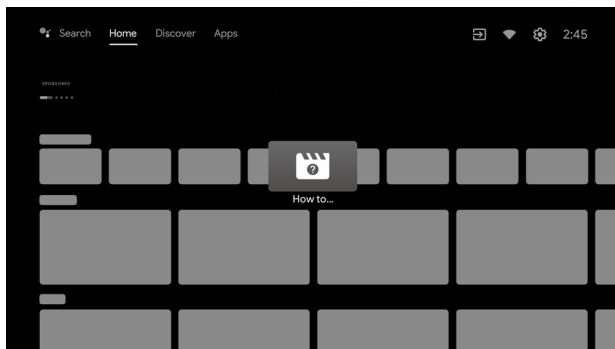

 2. Select **Live TV** to open channel installation page. Once open, select **Setup** and press **OK**.
3. Select your signal type **Antenna / Cable** to start the channel installation.

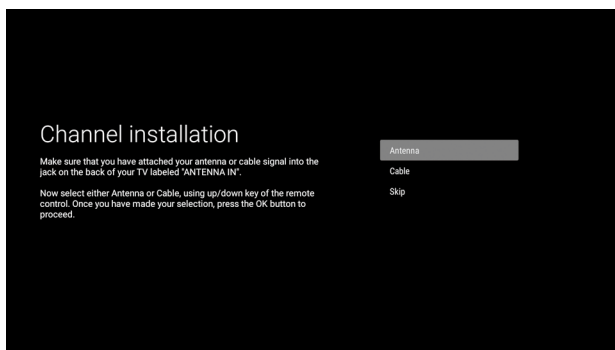



## 9 Google Assistant

### How to use Google Assistant with your remote

To use Google Assistant on your remote, make sure that the remote is connected via Bluetooth to the television. To check this, go to **Settings > Remotes & accessories** on your TV.

If the remote is not connected, hold down the Volume (-) and the Google Assistant button together for 3 seconds and select "Add accessory" in the menu.

You can start a conversation by simply pressing the Google Assistant button on your remote to ask Google a question or say a command. When activated by button, Google Assistant dialog bar will appear at the bottom of your television screen.



### Privacy protection built-in

Google Assistant is designed with your privacy in mind. You can delete any voice-command history by pressing the Google Assistant button and simply saying "Delete what I just said".

For more details on privacy, please visit:

<https://safety.google/intl/en-US>



# 10 Parental Control

## Parental Controls

You can restrict your children from watching certain programs or channels, by setting parental controls using a rating lock.

### How to set up Parental Controls

- 1. On the Android TV home screen, select **Settings** in the upper right corner of the screen, and press **OK**.
- 2. Select **Channel > Parental Controls** and press **OK**.
- 3. Enter your **PIN (\*) > Program Restrictions > Ratings**.
- 4. Select **Ratings** as described in the table below and press **OK**.

**Note:**  
Default setting of PIN is “1234”.  
If you have forgotten the current 4-digit PIN code, you can reset the code by performing Factory data reset.  
**Program Restrictions** is displayed only when the last selected input is not HDMI.

### Rating types and restriction levels

	United States						United States (Film ratings)					
	TV-Y	TV-Y7	TV-G	TV-PG	TV-14	TV-MA	G	PG	PG-13	R	NC-17	X
<b>High Restrictions</b> Content suitable for children		✓		✓	✓	✓			✓	✓	✓	✓
<b>Medium Restrictions</b> Content suitable for older children				✓	✓	✓			✓	✓	✓	✓
<b>Low Restrictions</b> Content suitable for teens						✓						✓

### SafeSearch filter for Google search

SafeSearch can help you block inappropriate or explicit images from your Google search results. The SafeSearch filter helps block most adult content from your television. Parental supervision is strongly recommended.

- 1. On the Android TV home screen, select **Settings** in the upper right corner of the screen, and press **OK**.
- 2. Select **Device Preferences** and press **OK**.
- 3. Select **Google Assistant** and press **OK**.
- 4. Select **SafeSearch filter** and press **OK**.



# 11 Specifications

Model #		32PFL5505
Picture		
Type		HD (1366 x 768 pixels 60 Hz)
Diagonal screen size / Aspect ratio		31.5" / 16:9
Viewing angles		178° (V) by 178° (H)
Built-in digital / analog tuner		ATSC (digital) / NTSC (analog)
Sound		
Mono / Stereo		Mono, Stereo
Power output (RMS watts)		8 W x 2
Equalizer		5 band
Ease of use		
Picture format	SD (4:3 source)	Automatic/Full/Unscaled/4:3/Movie expand
	HD (16:9 source)	
Channel		
Channel coverage	Over-the-Air DTV (ATSC)	VHF: 2-13 UHF: 14-69 (Each channel may have e.g. 2.1-2.9, 3.1-3.9, etc)
	Over-the-Air Analog (NTSC)	VHF: 2-13 UHF: 14-69
CATV (Analog NTSC)		2-13, A-W W+1-W+94 (Analog W+1-W+84), A-5-A-1, 5A
Tuning system		Channel frequency synthesized tuning system
Channel access		Direct access number keyboard, Programmable scan and Channel + (up) / - (down)
Connectivity		
Composite video input		1
HDMI input	2 (selectable HDMI modes)	
	Supporting HDMI video signals : 480i/p, 720p, 1080i @60 Hz, 1080p	
	Supporting HDMI digital audio signals : LPCM, AC3, DD+	
	Supporting PC-input video signal up to 1920 x 1080	
Analog audio L/R input		1 (L Audio / R Audio)
PC input		Via HDMI and HDMI-DVI + Analog audio L/R
USB		1
Wireless LAN		Wireless LAN Supporting wireless standards : IEEE 802.11a/b/g/n/ac (2.4 GHz / 5 GHz)
Digital audio output		1 Supporting Dolby Digital
Power		
Power requirements		120 V~ +/- 10 %, 60 Hz +/- 0.5 %
Temperature		
Operating temperature		41 °F (5 °C) to 104 °F (40 °C)

\* Specifications are subject to change without prior notice.

 


## 12 Troubleshooting

Category	Problem	Tip
Accessibility	Television is speaking prompts out-loud.	<ul style="list-style-type: none"> <li>To disable the TalkBack on your television, press <b>⌂ (HOME)</b> on your remote, navigate to settings icon in the upper right corner of the home screen and select <b>Device Preferences &gt; Accessibility</b>, select TalkBack, press <b>OK</b> to toggle between on or off.</li> </ul>
Picture on HDMI Input	Television has sound with no picture or abnormal picture.	<ul style="list-style-type: none"> <li>Change the resolution output of your source device.</li> </ul>
Sound on HDMI with external devices	Television has no sound.	<ul style="list-style-type: none"> <li>Please check to be sure the device is connected to the HDMI 2 (ARC) input on the TV.</li> </ul>
Power	No power	<ul style="list-style-type: none"> <li>Ensure that the AC outlet supplies the proper voltage. Plug another electrical appliance into the AC outlet to ensure that the AC outlet operates normally.</li> <li>If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself.</li> </ul>
Remote	Remote buttons are not functional.	<ul style="list-style-type: none"> <li>Re-insert or replace the AAA batteries with their polarities (+/-) as indicated on the remote battery area.</li> </ul>
	The Google Assistant button on your remote doesn't work.	<ul style="list-style-type: none"> <li>Make sure the remote is connected to the TV via Bluetooth. Google Assistant uses Bluetooth to create a safe connection between the remote and TV. (See step "4 Connecting your devices" in the previous page)</li> <li>Make sure Google Assistant feature was activated during initial installation. To check this, go to <b>Settings &gt; Device Preferences &gt; Google Assistant &gt; Accounts</b> to see if you are logged into an active account.</li> </ul>





Category	Problem	Tip
Network	Cannot connect the network.	<ul style="list-style-type: none"><li>• Check if your router and/or modem is properly connected.</li><li>• Power cycle the router and/or modem.</li><li>• Check your network settings.</li></ul>
	Slow Data Connection or buffering.	<ul style="list-style-type: none"><li>• Check the settings between your router and ISP modem or gateway (if applicable).</li><li>• Connect to a stable wireless connection from home wireless.</li><li>• The use of mobile hot spots or public wireless connections is not recommended.</li></ul>
Picture	Power is on but screen image is off.	<ul style="list-style-type: none"><li>• Check if the connection for your source device is properly secured.</li><li>• Check if the correct input is selected by pressing  (INPUT).</li><li>• Verify that your HDMI mode, for the input selected matches the resolution output of your source device. Change source input until you have picture and sound.</li></ul>
Performance	Remote response is delayed or sluggish during initial use.	<ul style="list-style-type: none"><li>• Your television is automatically, downloading and installing the latest applications, for the best user experience.</li><li>• During this time, you may experience a delayed response from your remote. Upon successful installation, your remote will operate normally.</li></ul>

For further assistance, call the customer support service in your country.

- To obtain assistance, contact Philips customer care center;

In the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands **1 866 309 5962**

Enter below the model and serial numbers located on the left side and the rear of the TV cabinet.

Model :

Serial :



## Safety instructions

Register online at [www.philips.com/welcome](http://www.philips.com/welcome) today  
to get the most benefits from your purchase.

Registering your model with Philips makes you eligible for all of the valuable benefits listed below, so don't miss out.

Register online at [www.philips.com/welcome](http://www.philips.com/welcome) to ensure:

### \*Product safety notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

 
### \*Additional benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

## Know these Safety symbols



The caution marking is located on the rear or bottom of the cabinet.

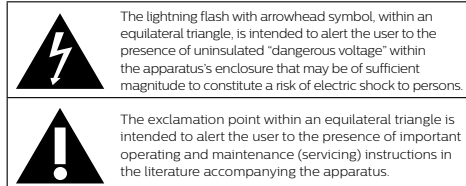

### WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### CAUTION:

To prevent electric shock, match wide blade of plug to wide slot, fully insert.

## PHILIPS

For fastest support visit us online for chat and self service solutions at [www.philips.com/support](http://www.philips.com/support)

## CHILD SAFETY:

### PROPER TELEVISION PLACEMENT MATTERS

#### THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions - new and old - must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

## TUNE IN TO SAFETY

- ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS** read and follow all instructions for proper use of your television.
- NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

## WALL OR CEILING MOUNT YOUR TELEVISION

- ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

## MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

CTA.tech/safety Consumer Technology Association

# Important safety instructions

 
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the replacement plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments / accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



### Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Example of antenna grounding as per NEC - National Electric Code

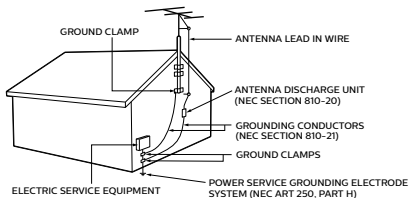

## Notice

Trademarks are the property of Koninklijke Philips N.V. or their respective owners. Funai Corporation reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in document is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained.

Funai Corporation warrants that the material itself does not infringe any United States patents.

No further warranty is expressed or implied.

Funai Corporation cannot be held responsible neither for any errors in the content of document nor for any problems as a result of the content in document. Errors reported to Funai Corporation will be adapted and published on the Funai Corporation support website as soon as possible.

### Pixel characteristics

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999 % or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

### Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by service centers and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in document, any adjustments or assembly procedures not recommended or authorized in document shall void the warranty.

### Positioning the TV

- Large screen TVs are heavy. 2 people are required to carry and handle a large screen TV.
- Make sure to hold the upper and bottom frames of the unit firmly as illustrated.
- Install the unit in a horizontal and stable position.
- Do not install the unit in direct sunlight or in a place subject to dust or strong vibration.





- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.
- When installing this unit in a temperate environment, avoid a place with rapid temperature changes.
  - Operating temperature: 41 °F (5 °C) to 104 °F (40 °C)
- This unit should not be used in a tropical environment as it has not been evaluated under such conditions.
- No objects should be placed directly on or under this unit, especially lighted candles or other flaming objects.
- Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the unit is placed too close to them. In this case, please ensure enough space between the external devices and the unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC power cord and outlet to disconnect the TV from the AC outlet.
- Before you move the TV, disconnect attached cables to prevent damage to connectors, especially the TV tuner.
- Be sure to unplug the AC power plug from the AC outlet before moving or carrying the unit.
- When moving the TV and then setting it down, please be careful not to pinch the AC power cord under the unit.

#### Regulatory notices

**WARNING:** To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions.

**Tipping:** shaking or rocking the unit may cause injury / death.

 
**WARNING:** Never place a TV in an unstable location. A TV may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the TV.
- Only using furniture that can safely support the TV.
- Ensuring the TV is not overhanging the edge of the supporting furniture.
- Not placing the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a suitable support.
- Not placing the TV on cloth or other materials that may be located between the TV and supporting furniture.
- Educating the children about the dangers of climbing on furniture to reach the TV or its controls.

If your existing TV is being retained and relocated, the same considerations as above should be applied.

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. In order to avoid interruption of ventilation, this unit should not be placed in built-in equipment such as a book cabinet, rack, etc., and the vents of this unit should not be covered with anything such as a tablecloth, curtain, newspaper, etc. Make sure that there is enough ventilation space (4" / 10 cm or more) around this unit.

Press **U** to turn the unit on and go into standby mode. To completely turn off the unit, you must unplug the AC power plug from the AC power outlet. Disconnect the AC power plug to shut the unit off when trouble is found or not in use. The AC plug shall remain readily available.

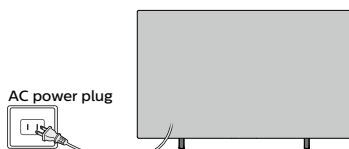

Never use a gas duster on this TV.  
The gas trapped inside of this unit may cause ignition and explosion.

#### Environmental care



The packaging of this product is intended to be recycled.  
Contact your local authorities for information about how to recycle the packaging.  
For product recycling information, please visit - [www.recycle.philips.com](http://www.recycle.philips.com)

#### End of life directives

Philips pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

#### ▲ Batteries usage

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

**WARNING:** Batteries (battery pack or battery installed) should not be exposed to excessive heat such as sunshine, fire or the like.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, Li-ion, etc.) batteries.

 
#### Disposal of used batteries

The batteries supplied do not contain the heavy metals mercury and cadmium, however in certain localities, disposing batteries with household waste is not permitted. Please ensure you dispose of batteries according to local regulations.

#### Preparing to move / ship the unit

Please pack the unit properly by following the diagram on the carton.

- To avoid damage to the screen, do not pack the stand on the same side as the TV screen, refer to the illustration.

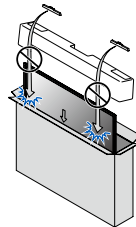

#### Federal communications commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept interference received, including interference that may cause undesired operation.

#### Declaration of conformity

**Trade name:** PHILIPS  
**Responsible party:** Funai Corporation, Inc.  
**Model:** 32PFL5505/F7  
**Address:** 12489 Lakeland Road, Santa Fe Springs, CA 90670, USA  
**Telephone number:** 1 866 309 5962

#### Modifications

This apparatus may generate or use radio frequency energy. Changes or modifications to this apparatus may cause harmful interference. Any modifications to the apparatus must be approved by Funai Corporation.

The user could lose the authority to operate this apparatus if an unauthorized change or modification is made.

#### Cables

Connections to this device must be made with shielded cables with metallic RF / EMI connector hoods to maintain compliance with FCC rules and regulations.

#### Canadian notice

CAN ICES-3 (B)/NMB-3 (B) Analog and digital television receiving apparatus, Canada BETS-7 / NTMR-7.

The following FCC/IC RSS applies to the wireless LAN adapter included in this product.

**FCC caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

#### FCC/IC RF Exposure Compliance

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20 cm or more away from your body.

This device complies with Part 15 of FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

5150-5250 MHz band is restricted to indoor operations only.

High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

#### Compliance with FCC requirement 15.407(c) and IC requirement RSS-210A9.4.4

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.



## Downloading an electronic copy

To obtain a more detailed electronic copy of document:

1. Point your browser to : [www.philips.com/support](http://www.philips.com/support)
  2. Choose your country of location with language.
  3. Enter the product name or number in the search field. Alternatively, you can browse the catalog.
  4. Click the description or model.
  5. Under product support, click "User manual".
- Funai Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertising. Funai Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Funai Corporation Inc. will strive to provide a good selection of services, content or software, Funai Corporation Inc. does not warrant continued access to any specific services, and content or software.

Funai Corporation Inc. does not warrant Wireless Screencasting compatibility with all source devices such as smartphones, tablets, laptops, etc. due to large variability in hardware, firmware, drivers, software and implementation of wireless casting applications on these source devices. Although Funai Corporation Inc. will strive to enhance compatibility and performance across a range of source devices, Funai Corporation Inc. does not warrant compatibility with specific source devices.

## Wall mount

### Wall mount bracket kit

Your product	Brand	Model #	Screw dimension
32PFL5505/F7	SANUS	AST16	M4 x 1.378 " (35 mm)

- Your TV meets the VESA standard for wall mounting. Consult with your local dealer for a wall mount bracket which is compatible with your TV model.
- The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.
- For detailed information on installing the wall mount, refer to the wall mount instruction book.
- Funai Corporation is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket on your own.
- The wall mount bracket must be installed by experts.

**Funai Corporation is not liable for any accidents or injuries incurred while installing this product, including but not limited to those noted below:**

- Install the wall mount bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.

**When installing the unit on the wall, allow this much space.**

Top: 11.8 " (30 cm)  
Left and right side: 5.9 " (15 cm)  
Bottom: 3.9 " (10 cm)

## Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Funai Electric Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

- Google, Google Play, Android, and related marks and logos are trademarks of Google LLC.
- Use of this TV requires consent to Google Terms of Service and Privacy Policy.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Features and specifications are subject to change without notice.
- Network services, content, and the operating systems and software of this Product may be subject to individual terms and conditions and changed, interrupted or discontinued at any time and may require fees, registration and credit card information.
- The American Academy of Pediatrics discourages television viewing for children younger than two years of age.
- Some features may require an always-on broadband internet connection, firmware update and/or a minimum bandwidth. Internet services vary by location.



## License

Funai Corporation, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Funai Corporation, Inc. You should write to Funai Service Corporation OSS Request, 2425 Spiegel Drive, Groveport, OH 43125, USA. Funai Corporation, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Funai Corporation, Inc. shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it. Funai Corporation, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code.

## Limited warranty

### Limited warranty one (1) year

#### Warranty coverage:

This warranty obligation is limited to the terms as set forth below.

#### Who is covered:

This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

#### What is covered:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.

**Note:** Any product sold and identified as refurbished or renewed carries a ninety (90) day Limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

#### What is not covered - Exclusions and limitations:

This Limited warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This limited warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

#### This Limited warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna / signal source systems outside of the product.
- Product repair and / or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per document.

#### To obtain assistance...

Contact the customer care center at: 1 866 309 5962

Chat with us in English:

<https://tinyurl.com/y2e29xsq>

**REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

*This warranty gives you specific legal rights. You may have other rights which vary from state / province to state / province.*

#### Funai Service Corporation,

2425 Spiegel Drive, Groveport, OH 43125, USA

For complete instructions, please visit [www.philips.com/support](http://www.philips.com/support) to download the full version of the online user manual.

This product has been manufactured by and is sold under the responsibility of Funai Corporation, Inc., and Funai Corporation, Inc. is the warrantor in relation to this product.

The Philips trademark and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. used under license.

