

For product support, visit

[www.philips.com/welcome](http://www.philips.com/welcome)

HTS5580W



EN User manual

ES Manual del usuario

FR-CA Manuel d'utilisation

**EN: For further assistance, call the customer support service in your country.**

- To obtain assistance in the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands, contact Philips Customer Care Center at 1-866-309-0866
- To obtain assistance in Mexico, contact Philips Customer Care Center at 01 800 504 6200

**ES: Para obtener mas informacion, llame al servicio de soporte al cliente de su pais.**

- Para obtener asistencia en los Estados Unidos, en Canada, Puerto Rico o en las Islas Virgenes de los Estados Unidos, comuniquese con Centro de atencion al cliente de Philips al 1-866-309-866
- Solo para Mexico CENTRO DE ATENCION A CLIENTES LADA, 01 800 504 62 00 Solo Para Mexico.

**FR: Pour obtenir de l'aide supplementaire, communiquez avec le centre de service a la clientele de votre pays.**

- Pour obtenir de l'aide aux États-Unis, au Canada, a Puerto Rico ou aux Iles Vierges americaines, communiquez avec le centre de service a la clientele Philips au : 1-866-309-0866
- Pour obtenir l'aide au Mexique, entrez en contact avec le centre de soin de client de Philips a 01 800 504 62 00

# PHILIPS



# Contents

<b>1 Notice</b>	2
Copyright	2
Compliance	2
Open source software	2
About Progressive Scan	2
Trademarks	3
<b>2 Important</b>	4
Safety	4
Product care	5
Disposal of your old product and batteries	6
<b>3 Your home theater</b>	6
Main unit	6
Remote control	7
<b>4 Connect your home theater</b>	10
Connectors	10
Connect to the TV	10
Connect audio from TV or other devices	11
Connect to a computer network and the Internet	12
<b>5 Use your home theater</b>	13
Before you start	13
Access the home menu	13
Choose your sound	13
Play a disc	15
Use BonusView on Blu-ray	15
Access BD-Live on Blu-ray	16
Play from a USB storage device	16
More play features for disc or USB	16
Play from PC (DLNA)	17
Play from radio	18
Play audio from TV or other devices	19
Play from an MP3 player	19
Play from an iPod or iPhone	19
Use Philips EasyLink	19

<b>6 Change settings</b>	20
Access the setup menu	20
Change video settings	20
Change audio settings	21
Set up network	21
Set up EasyLink	21
Change preference settings	22
Change advanced settings	22
<b>7 Update software</b>	23
Check software version	23
Update software from the network	23
Update software from a USB	23
<b>8 Product specifications</b>	24
<b>9 Troubleshooting</b>	25
<b>10 Index</b>	27

# 1 Notice

---

## Copyright



**Be responsible  
Respect copyrights**

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

---

## Compliance

### Notice for USA

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. Of this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

## Notice for Canada

### Class B Clause

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

This Class B digital apparatus complies with Canadian ICES-003.

---

## Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact [open.source@philips.com](mailto:open.source@philips.com). If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write in English to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands". If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included on a separate leaflet.

---

## About Progressive Scan

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center:

## Trademarks



### BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.

### AVCHD™

 
'AVCHD' and 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.

### x.v.Colour

'x.v.Colour' is a trademark of Sony Corporation.



DLNA®, the DLNA Logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance.



Manufactured under licence from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, and DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



DivX®, DivX Certified® and associated logos are registered trademarks of DivX, Inc. and are used under license.

DivX Ultra® Certified to play DivX® video with advanced features and premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit [www.divx.com](http://www.divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX VOD.




Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



HDMI, and HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.

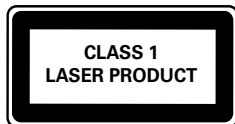

Class II equipment symbol



This symbol indicates that the unit has a double insulation system.

## 2 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

---

### Safety

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.



- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- **Use only with the cart**, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- **Unplug this apparatus** during lightning storm or when unused for long periods of time.
- **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **Battery usage CAUTION** - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install **all** batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (**old and new** or **carbon and alkaline**, etc.).
  - Remove batteries when the unit is not used for a long time.
- **Apparatus shall not be exposed to dripping or splashing.**
- **Do not place any sources of danger on the apparatus** (for example, liquid filled objects, lighted candles).
- This product may contain lead and mercury. Dispose according to local, State or Federal laws. For disposal or recycling information, please contact your local authorities. For additional assistance on recycling options, please contact [www.mygreenelectronics.com](http://www.mygreenelectronics.com) or [www.eiae.org](http://www.eiae.org) or [www.recycle.philips.com](http://www.recycle.philips.com).
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

## Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste.


Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit [www.recycle.philips.com](http://www.recycle.philips.com) for additional information on a recycling center in your area.

## 3 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, visit [www.philips.com/welcome](http://www.philips.com/welcome).

### Main unit

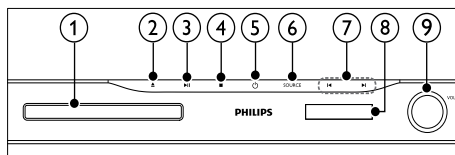

- ① **Disc compartment**
- ② **▲ (Open/Close)**  
Opens or closes the disc compartment.
- ③ **▶|| (Play/Pause)**  
Starts, pauses or resumes play.
- ④ **■ (Stop)**
  - Stops play.
  - In radio mode, erases the current preset radio station.
- ⑤ **⏻ (Standby-On)**  
Switches the home theater on or to standby.
- ⑥ **SOURCE**  
Selects an audio/video source for the home theater.
- ⑦ **◀▶**
  - Skips to the previous or next track, chapter or file.
  - In radio mode, selects a preset radio station.
- ⑧ **Display panel**
- ⑨ **Volume control wheel**




# Remote control

## Note

- Your home theater is supplied with one of the following remote controls.


## Remote control - A

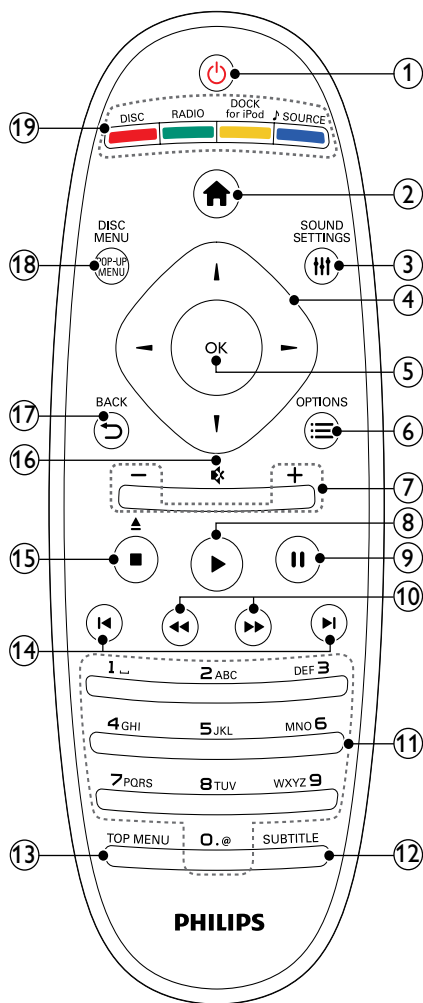

- ① **⏻ (Standby-On)**
  - Switches the home theater on or to standby.
  - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
- ② **🏠 (Home)**  
Accesses the home menu.
- ③ **🔊 (SOUND SETTINGS)**  
Accesses or exits various sound options.
- ④ **Navigation buttons**
  - Navigates menus.
  - In radio mode, press left or right to start auto search.
- ⑤ **OK**
  - Confirms an entry or selection.
- ⑥ **☰ (OPTIONS)**
  - Accesses more play options during playback.
  - In radio mode, programs radio stations.
- ⑦ **+/- (Volume)**  
Increases or decreases volume.
- ⑧ **▶ (Play)**  
Starts or resumes play.
- ⑨ **⏸ (Pause)**  
Pauses play.
- ⑩ **⏮ / ⏭ (Fast Backward/Fast Forward)**  
Fast backwards or fast forwards. Press repeatedly to change the search speed.
- ⑪ **Alphanumeric buttons**  
Enters values or letters (using SMS style entry).
- ⑫ **SUBTITLE**  
Selects subtitle language for video.
- ⑬ **TOP MENU**  
Accesses the main menu of a video disc.
- ⑭ **⏮ / ⏭ (Previous/Next)**
  - Skips to the previous or next track, chapter or file.
  - In radio mode, selects a preset radio station.

- 15 ■ (Stop) / ▲ (Eject / Open/Close)
- Stops play.
  - Press and hold to eject the disc or open the disc compartment.
  - In radio mode, erases the current preset radio station.
- 16 ✱ (Mute)
- Mutes or restores volume.
- 17 ↶ BACK
- Returns to a previous menu screen.
- 18 POP-UP MENU/DISC MENU
- Accesses or exits the disc menu.
- 19 Source buttons
- Color buttons** (for Blu-ray discs): Selects tasks or options.
  - DISC**: Switches to disc source.
  - RADIO**: Switches to FM radio.
  - DOCK for iPod**: Switches to Philips Dock for iPod/iPhone.
  - JSOURCE**: Selects an audio input source.

## Remote control - B

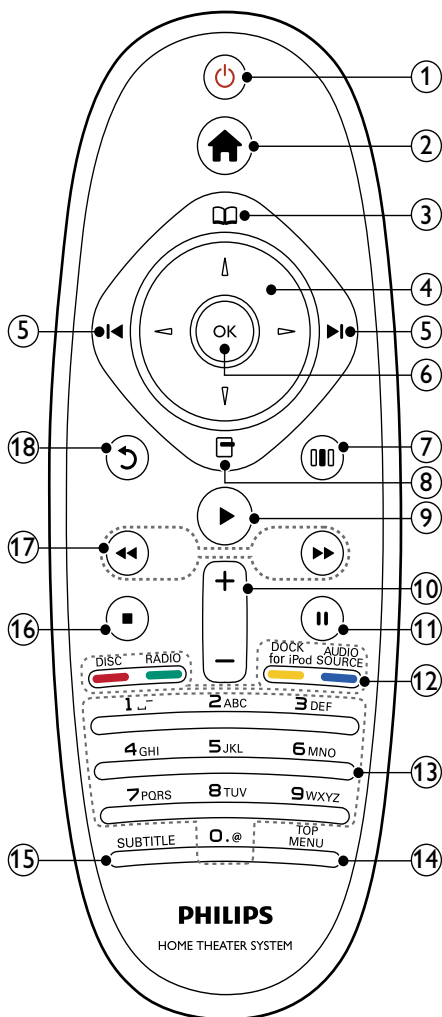

- ① **⏻ (Standby-On)**
  - Switches the home theater on or to standby.
  - When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.
- ② **🏠 (Home)**  
Accesses the home menu.
- ③ **📀 (Disc menu)**  
Accesses or exits the disc menu.
- ④ **Navigation buttons**
  - Navigates menus.
  - In radio mode, press left or right to start auto search.
- ⑤ **⏮ / ⏭ (Previous/Next)**
  - Skips to the previous or next track, chapter or file.
  - In radio mode, selects a preset radio station.
- ⑥ **OK**  
Confirms an entry or selection.
- ⑦ **🔊 (Sound options)**  
Accesses or exits various sound options.
- ⑧ **⚙ (Options)**
  - Accesses more play options during playback.
  - In radio mode, programs radio stations.
- ⑨ **▶(Play)**  
Starts or resumes play.
- ⑩ **+/- (Volume)**  
Increases or decreases volume.
- ⑪ **⏸ (Pause)**  
Pauses play.
- ⑫ **Source buttons / Color buttons**
  - Blu-ray discs: Selects tasks or options.
  - **AUDIO SOURCE:** Selects an audio input source.
  - **DOCK for iPod:** Switches to Philips Dock for iPod/iPhone.
  - **RADIO:** Switches to FM radio.
  - **DISC:** Switches to disc source.
- ⑬ **Alphanumeric buttons**  
Enters values or letters (using SMS style entry).
- ⑭ **TOP MENU**  
Accesses the main menu of a video disc.
- ⑮ **SUBTITLE**  
Selects subtitle language for video.
- ⑯ **■ (Stop)**
  - Stops play.
  - Press and hold to eject the disc or open the disc compartment.
  - In radio mode, erases the current preset radio station.
- ⑰ **⏮ / ⏭ (Fast Backward/Fast Forward)**  
Fast backwards or fast forwards. Press repeatedly to change the search speed.
- ⑱ **⏮ (Back)**  
Returns to a previous menu screen.

## 4 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see [www.connectivityguide.philips.com](http://www.connectivityguide.philips.com).

### Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

## Connectors


Connect other devices to your home theater.

### Front connectors



- ① **MP3 LINK**  
Audio input from an MP3 player.
- ② **••• (USB)**  
Audio, video or picture input from a USB storage device.

### Back connectors

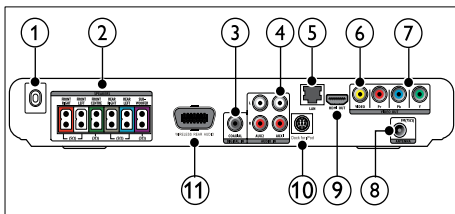

- ① **AC MAINS~**  
Connects to the power supply.
- ② **SPEAKERS**  
Connects to the supplied speakers and subwoofer.
- ③ **DIGITAL IN-COAXIAL**  
Connects to the coaxial audio output on the TV or a digital device.
- ④ **AUDIO IN-AUX 1/AUX 2**  
Connects to the analog audio output on the TV or an analog device.
- ⑤ **LAN**  
Connects to the LAN input on a broadband modem or router.
- ⑥ **VIDEO OUT-VIDEO**  
Connects to the composite video input on the TV.
- ⑦ **VIDEO OUT-Y Pb Pr**  
Connects to the component video input on the TV.
- ⑧ **FM ANTENNA**  
Connects the FM antenna for radio reception.
- ⑨ **HDMI OUT (ARC)**  
Connects to the HDMI input on the TV.
- ⑩ **DOCK for iPod**  
Connects to a Philips Dock for iPod/iPhone. (See Quick Start guide.)
- ⑪ **Wireless Rear Audio**  
Connects to the wireless transmitter. (See Quick Start guide.)

## Connect to the TV


Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

- ① **HDMI**
- ② **Component video**
- ③ **Composite video**

## Option 1: Connect to the TV through HDMI

### Note

- The HDMI connector on the TV might be labeled **HDMI IN** or **HDMI ARC**.
- If the TV supports HDMI Audio Return Channel (ARC), you can use it to output digital audio to the home theater.
- If the HDTV has a DVI connector; connect using an HDMI/DVI adapter.
- If the TV supports EasyLink HDMI CEC, control the home theater and TV with one remote control (see 'Use Philips EasyLink' on page 19).

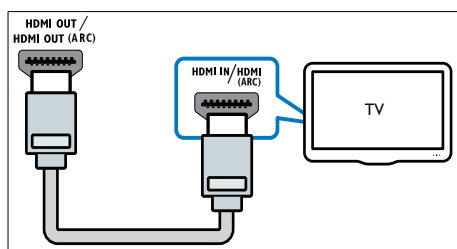


## Option 2: Connect to the TV through YPbPr (component video)

### Note

- The component video cable or connector might be labeled **Y Cb Cr** or **YUV**.

(Cable not supplied)

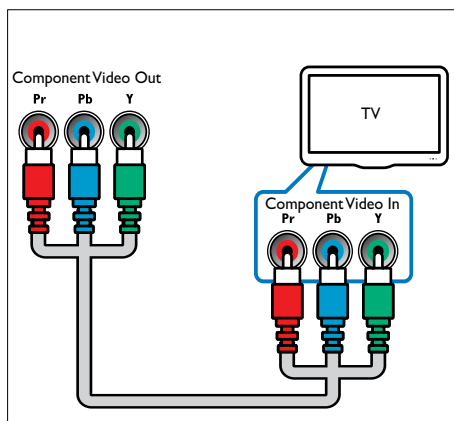


## Option 3: Connect to the TV through composite video (CVBS)

### Note

- The composite video cable or connector might be labeled **AV IN**, **VIDEO IN**, **COMPOSITE** or **BASEBAND**.

(Cable not supplied)

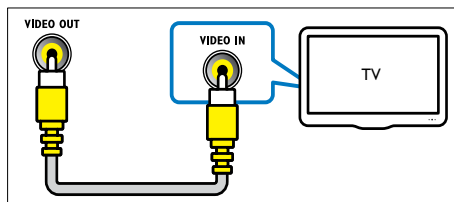

## Connect audio from TV or other devices



Use your home theater to play audio from the TV or other devices such as a cable box.

### Tip

- Press **JSOURCE / AUDIO SOURCE** repeatedly to select the audio output of your connection.

## Option 1: Connect audio through analog audio cables

(Cable not supplied)

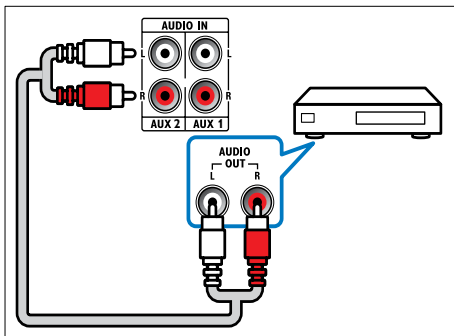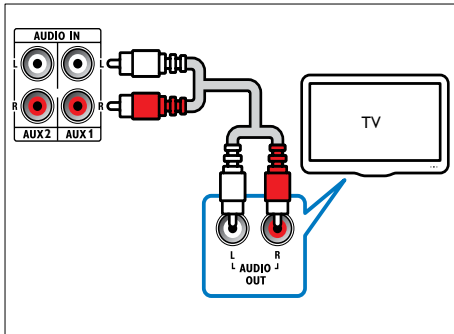


## Option 2: Connect audio through coaxial cable

### Note

- The digital coaxial cable or connector might be labeled **COAXIAL/DIGITAL OUT** or **SPDIF OUT**.

(Cable not supplied)

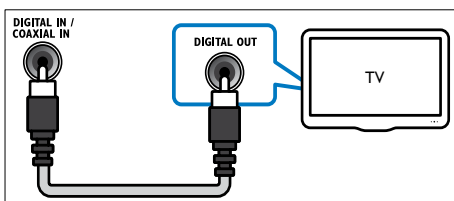

## Connect to a computer network and the Internet


Connect the home theater to a computer network and enjoy:

- Multimedia content streamed from your computer** : view photos, play music and watch video files streamed from your computer (see 'Play from PC (DLNA)' on page 17).
- BD-Live applications** : access to some exclusive services from the BD-Live enabled Blu-ray discs (see 'Access BD-Live on Blu-ray' on page 16).
- Software update** : update the software of the home theater through the network (see 'Update software from the network' on page 23).

### What you need:

- A network router (with DHCP enabled).
- A network cable (RJ45 straight cable).
- A computer with media server software installed (see 'Set up media server software' on page 18).
- For BD-Live application and software update, make sure that the network router has access to the Internet and the firewall is disabled.

(Cable not supplied)

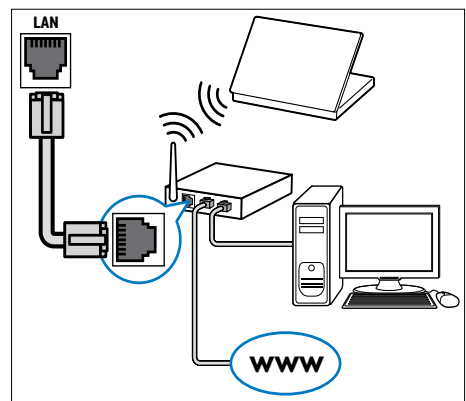

## Set up network

- 1 Connect the home theater to a broadband modem or router (see 'Connect to a computer network and the Internet' on page 12).
- 2 Turn on your TV and switch to the correct source for the home theater.
- 3 Press **⬆** (Home).
- 4 Select **[Setup]**, then press **OK**.
- 5 Select **[Network]** > **[Network Installation]**, then press **OK**.
- 6 Select **[Wired (Ethernet)]**, then press **OK**.
- 7 Select **[Auto (recommended)]** or **[Manual (advanced)]**, then press **OK**.
- 8 Follow the instructions on the TV to complete the setup.
  - ↳ The home theater connects to the internet. If connection fails, select **[Retry]**, then press **OK**.
- 9 Select **[Finish]**, then press **OK** to exit.



### Caution

- Familiarize yourself with the network router, media server software and networking principles before attempting to connect the home theater to a computer network. If necessary, read documentation accompanying network components. Philips is not responsible for lost, damaged or corrupt data.

## 5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

### Before you start

Check that you:

- Make the necessary connections and complete the setup as described in the Quick Start.
- Switch the TV to the correct source for the home theater.

### Access the home menu

The home menu gives you easy access to connected devices, audio and video settings, and other features.

- 1 Press **⬆** (Home).
  - ↳ The home menu appears.
- 2 Press the **Navigation buttons** and **OK** to select the following:
  - **[play Disc]** : Starts disc play.
  - **[browse USB]** : Accesses the content browser of the connected USB storage device.
  - **[browse iPod]** : Accesses the content browser of the connected iPod or iPhone.
  - **[browse PC]** : Accesses the content browser of the connected PC network.
  - **[Setup]** : Accesses menus to change picture, sound and other settings.

### Choose your sound

This section helps you choose the ideal sound for your video or music.

- 1 Press **⏮** **SOUND SETTINGS** / **⏭** (Sound options).
- 2 Press the **Navigation buttons** (left/right) to access the sound options.

Sound experience	Description
<b>AUTO VOLUME</b>	Sets a constant output signal at the speaker output. This option is best for TV audio input where the commercial signal level is usually higher than the content.
<b>SOUND</b>	Selects a sound mode.
<b>SURROUND</b>	Selects a surround sound or stereo sound.
<b>TREBLE</b>	Adjusts the high frequency output.
<b>MID</b>	Adjusts the middle frequency output.
<b>BASS</b>	Adjusts the low frequency output.
<b>AUDIO SYNC</b>	Delays the audio to match the video.

**3** Select an option, then press **OK**.

**4** Press **↩ BACK** to exit.

If you do not press a button within five seconds, it automatically exits the menu.

## Change auto volume

Select the level of volume which output from your TV or other devices to the home theater.

**1** Press **⏮ SOUND SETTINGS / ⏮** (Sound options).

**2** Select **AUTO VOLUME**, then press **OK**.

**3** Press the **Navigation buttons** (up/down) to select **ON** or **OFF**.

**4** Press **OK** to confirm your choice.

## Change sound mode

Select predefined sound modes to suit your video or music.

**1** Press **⏮ SOUND SETTINGS / ⏮** (Sound options).

**2** Select **SOUND**, then press **OK**.

**3** Press the **Navigation buttons** (up/down) to select the following settings:

- **ACTION/ROCK** : Enhanced low and high-range. Ideal for action movies and rock or pop music.

- **DRAMA/JAZZ** : Clear mid and high-range. Ideal for drama movies and jazz music.
- **CONCERT/CLASSIC**: Neutral sound. Ideal for live concerts and classical music.
- **SPORTS** : Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.

**4** Press **OK** to confirm your choice.

## Change surround sound mode

Experience an immersive audio experience with surround sound modes.

**1** Press **⏮ SOUND SETTINGS / ⏮** (Sound options).

**2** Select **SURROUND**, then press **OK**.

**3** Press the **Navigation buttons** (up/down) to select the following settings:

- **5CH STEREO** : Enhances the stereo channel output by duplicating the sound output to the center and rear speakers. Ideal for party music.
- **MULTI-CHANNEL/Dolby PLII** : Immersive multi-channel sound for an enhanced movie experience.
- **STEREO** : Two-channel stereo sound. Ideal for listening to music.

**4** Press **OK** to confirm your choice.

## Change treble, mid and bass

Change the high frequency (treble), mid frequency (mid) and low frequency (bass) settings of the home theater to suit your video or music.

**1** Press **⏮ SOUND SETTINGS / ⏮** (Sound options).

**2** Select **TREBLE**, **MID** or **BASS**, then press **OK**.

**3** Press the **Navigation buttons** (up/down) to adjust the frequency level.

**4** Press **OK** to confirm.



## Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

- 1 Press **⏮SOUND SETTINGS / ⏮** (Sound options).
- 2 Select **AUDIO SYNC**, then press **OK**.
- 3 Press the **Navigation buttons** (up/down) to sync the audio with the video.
- 4 Press **OK** to confirm.

## Play a disc

The home theater can play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

- 1 Insert a disc into the home theater.
- 2 Press **DISC**, or select **[play Disc]** in the home menu and press **OK**.
  - ↳ The disc plays or the disc main menu appears.
- 3 Press the following buttons to control play:

Button	Action
<b>Navigation buttons</b>	Navigate menus.
<b>OK</b>	Confirms an entry or selection.
<b>▶(Play)</b>	Starts or resumes play.
<b>⏮</b>	Pauses play.
<b>■</b>	Stops play.
<b>⏮ / ▶</b>	Skips to the previous or next track, chapter or file.
<b>⏮⏮ / ▶▶</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
<b>Navigation buttons (up/down)</b>	Rotates the picture counter-clockwise or clockwise.
<b>SUBTITLE</b>	Selects subtitle language for video.
<b>POP-UP MENU / DISC MENU / ⏮ (Disc menu)</b>	Accesses or exits the disc menu.
<b>⏮⏮ / ▶▶ (Options)</b>	Accesses more play options during playback.

For video formats such as, DivX and WMV:

- To stop play, press **■**.
- To resume the video from where you stopped, press **▶ (Play)**.
- To play the video from the start, press **OK**.

### Note

- To play DivX DRM - protected files from a disc or a USB storage device, connect your home theater to a TV through an HDMI cable.

## Use Bonus View on Blu-ray

Blu-ray discs that support the BonusView feature (also known as Picture-In-Picture) allow you to view special content such as a director's commentary while watching the main feature.

- 1 If necessary, enable BonusView (or Picture-In-Picture) in the Blu-ray disc menu.
- 2 During playback of the main feature, press **⏮⏮ / ▶▶ (Options)**.
  - ↳ The options menu is displayed.
- 3 Select **[PIP Selection] > [PIP]**, then press **OK**.
  - ↳ PIP options [1]/[2] depend on the video contents.
  - ↳ The picture-in-picture video appears in a small window.
- 4 Select **[2nd Audio Language]** or **[2nd Subtitle Language]**, then press **OK**.
- 5 Select the language to play, then press **OK**.

### Note

- To turn off the Bonus View (Picture-in-Picture), press **⏮⏮ / ▶▶ (Options)**, select **[PIP Selection] > [Off]**, then press **OK**.

---

## Access BD-Live on Blu-ray

BD-Live enabled Blu-ray discs include exclusive services such as movies and other online bonuses.

- 1 Prepare the internet connection and set up the network (see 'Connect to a computer network and the Internet' on page 12).
- 2 Connect the USB storage device to the home theater.
- 3 Select the BD-Live icon in the disc menu, then press **OK**.
  - ↳ BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 4 Press the **Navigation buttons** to navigate BD-Live.
- 5 Press **OK** to select an item.

### Note

- The range of BD-Live services depends on the disc.
- When you use BD-Live, data on the disc and home theater are accessed by the content provider.
- Use a USB storage device with at least 1GB of free space to store the downloaded files.
- If there is insufficient memory to download BD-Live content, clear memory space.

---

## Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures, listen to music or watch movies stored on a USB storage device.

- 1 Connect the USB storage device to the home theater.
- 2 Press **⬆ (Home)**.
  - ↳ The home menu appears.
- 3 Select **[browse USB]**, then press **OK**.
  - ↳ A content browser appears.
- 4 Select a file, then press **OK**.
- 5 Press the playback buttons to control play (see 'Play a disc' on page 15).

### Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be NTFS, FAT or DOS-formatted, and Mass Storage Class compliant.

---

## More play features for disc or USB

Several advanced features are available for video or picture playback from a disc or USB storage device.

---

### Use video options

Access several useful features while viewing video.

### Note

- Available video options depend on the video source.

- 1 Press **≡OPTIONS / Ⓞ (Options)**.
  - ↳ The video options menu appears.
- 2 Press the **Navigation buttons** and **OK** to select and adjust:
  - **[Audio Language]** : Selects audio language for video.
  - **[Subtitle Language]** : Selects subtitle language for video.
  - **[Subtitle Shift]** : Adjusts the subtitle position on the screen.
  - **[Info]** : Displays information about what is playing.
  - **[Character Set]** : Selects a character set that supports the DivX subtitle.
  - **[Time Search]** : Skips to a specific part of the video by entering the time of the scene.
  - **[2nd Audio Language]** : Selects the second audio language to play.
  - **[2nd Subtitle Language]** : Selects the second subtitle language to play.

- **[Titles]** : Selects a specific title.
- **[Chapters]** : Selects a specific chapter.
- **[Angle List]** : Selects a different camera angle.
- **[Menus]** : Displays the disc menu.
- **[PIP Selection]** : Displays Picture-in-Picture window.
- **[Zoom]** : Zooms into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
- **[Repeat]** : Repeats a chapter or title.
- **[Repeat A-B]** : Marks two points within a chapter or track for repeat play, or turns off repeat mode.
- **[Picture Settings]** : Selects a predefined color setting.

## Use picture options

Access several useful features while viewing pictures.

- 1 Press **≡OPTIONS** / **Ⓞ (Options)**.  
↳ The pictures options menu appears.
- 2 Press the **Navigation buttons** and **OK** to select and adjust:
  - **[Rotate +90]** : Rotates the picture 90 degree clockwise.
  - **[Rotate -90]** : Rotates the picture 90 degree counter-clockwise.
  - **[Zoom]** : Zooms into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
  - **[Info]** : Displays picture information.
  - **[Duration per slide]** : Sets the display speed for each picture in a slide show.
  - **[Slide Animation]** : Selects animation for the slide show.
  - **[Picture Settings]** : Selects a predefined color setting.
  - **[Repeat]** : Repeats a selected folder.

## Use audio options

Access several useful features while audio is played.

- 1 Press **≡OPTIONS** / **Ⓞ (Options)** repeatedly to cycle through the following functions:
  - **REPEAT TRACK** : Repeats the current track.
  - **REPEAT DISC** : Repeats all the tracks on the disc or folder.
  - **REPEAT RANDOM** : Plays audio tracks in random order.
  - **REPEAT OFF** : Turns off repeat mode.

## Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow.

- 1 Select a music track, then press **OK**.
- 2 Press **↶ BACK** and go to the picture folder.
- 3 Select a picture, then press **OK** to start slideshow.
- 4 Press **■** to stop slideshow.
- 5 Press **■** again to stop music.

## Play from PC (DLNA)

When you connect your home theater to your home network, you can play music, photo, and video from a computer or other media server on that network.

### What you need:

- A wired or wireless home network, connected with a Universal Plug and Play (uPnP) router.
- A Philips wireless USB adapter or a LAN able to connect your home theater to your home network.
- A media server such as:
- PC running Windows Media Player 11 or higher; or
- Mac running Twonky Media Server.

For help to use other media servers, such as TVersity, see the web site of the media server.

## Set up media server software

### Before you start:

- Connect your home theater to your home network (see 'Connect to a computer network and the Internet' on page 12).
- Connect your PC to the same home network.
- Make sure that your PC firewall allows you to run Windows Media Player programs.

### In Microsoft Windows Media Player 11

- 1 Connect the home theater to a network router (see 'Connect to a computer network and the Internet' on page 12).
- 2 Switch on the computer and router.
- 3 Open Windows Media Player on the computer.
- 4 Select **Library > Media Sharing**, then select settings to share your media.
- 5 Select **Library > Add to Library**, then select settings to share the folder containing your media.
- 6 Select **Advanced options**, then add the folders to share.
- 7 Select **Library > Apply Media Information Changes** to activate the changes.

### In Macintosh OS X Twonky Media (v4.4.2)

- 1 Connect the home theater to a network router (see 'Connect to a computer network and the Internet' on page 12).
- 2 Switch on the Macintosh and router.
- 3 Visit [www.twonkymedia.com](http://www.twonkymedia.com) to purchase the software or download a free 30-day trial to your Macintosh.
- 4 Open Twonky Media on the Macintosh.  
↳ The media sharing setting is turned on by default, thus enabling you to directly add folders for media sharing.
- 5 Select **Basic Setup > Sharing**, then select settings to add a folder location or add more folders.
- 6 Select **Save Changes** to activate the changes.

## Play multimedia content



### Note

- Before playing multimedia content from the computer, ensure that the home theater is connected to the computer network and the media server software is properly set up.

- 1 Press (**Home**).  
↳ The home menu appears.
- 2 Select [**browse PC**], then press **OK**.  
↳ A content browser appears.
- 3 Select a file, then press **OK**.
- 4 Press the playback buttons to control play (see 'Play a disc' on page 15).

## Play from radio

The home theater can store up to 40 radio stations.

- 1 Check that the FM antenna is connected.
- 2 Press **RADIO**.  
↳ "AUTO INSTALL...PRESS PLAY" appears on the display panel if you have not installed any radio stations. Press (**Play**).
- 3 Press the following buttons to control play:

Button	Action
	Selects a preset radio station.
<b>Navigation buttons</b> (left/right)	Searches for a radio station.
<b>Navigation buttons</b> (up/down)	Fine tunes a radio frequency.
	Press and hold to erase the preset radio station. Press to stop the installation of radio stations.
<b>OPTIONS /</b> ( <b>Options</b> )	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for five seconds to reinstall radio stations.
<b>RADIO</b>	Toggles between stereo and mono sound.

### Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

## Play audio from TV or other devices

Press **JSOURCE** / **AUDIO SOURCE** repeatedly to select the audio output of the connected device.

## Play from an MP3 player

Connect and play audio files from an MP3 player or other external audio devices.

- 1 Connect the MP3 player to the home theater as described in the Quick start guide.
- 2 Press **JSOURCE** / **AUDIO SOURCE** repeatedly until '**MP3 LINK**' appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files.

## Play from an iPod or iPhone

By connecting and installing a Philips Dock for iPod/iPhone, you can use the home theater to play music, movies and photos from your iPod or iPhone.

### Note

- You can charge your iPod/iPhone on the dock while the home theater is in iPod mode.

## Dock your iPod or iPhone

- 1 Move the slide at the bottom of the dock to '**STANDARD**', then connect the dock to the home theater.
- 2 Connect the yellow composite cable from the dock to the TV.

- 3 Switch on the iPod or iPhone and place it in the dock.
- 4 On the home theater remote control, press **⏏ (Home)**, then select [**browse iPod**] and press **OK**.

## Listen to music

- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 19).
- 2 Press **DOCK for iPod** on the home theater remote control.  
↳ The playlists are displayed on the TV.
- 3 Press the **Navigation buttons** and **OK** to select and play tracks.

## Watch video or view slideshows

### Note

- On iPod, enable the TV ON setting.
- On iPhone, select the TV Out option.

- 1 Dock your iPod or iPhone (see 'Dock your iPod or iPhone' on page 999).
- 2 Switch the TV to the **AV/VIDEO** source (corresponding to the yellow composite cable).  
↳ The TV screen goes blank.
- 3 Browse on the iPod or iPhone screen to select videos or photos.
- 4 Press **▶ (Play)** to play the video and photos.  
↳ The picture is displayed on the TV.

## Use Philips EasyLink

The home theater supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

### Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

- 1 Switch on the HDMI CEC operations on the TV and other connected devices. See the manual of the TV or other devices for details.
- 2 Press **⬆** (Home).
- 3 Select **[Setup]**, then press **OK**.
- 4 Select **[EasyLink]** > **[EasyLink]**, then press **OK**.
- 5 Select **[On]**, then press **OK**.
- 6 You can now enjoy the following Philips EasyLink controls.

---

#### One-touch play

When you play a disc, the TV automatically switches to the correct channel.

---

#### One-touch standby

When you press and hold **⏻** (Standby) on the remote control, the home theater and all the connected HDMI CEC devices (if they support one-touch standby) switch to standby mode simultaneously.

---

#### System Audio Control

When you play a device that has its audio output routed to the home theater, the home theater switches to the corresponding audio source automatically.

To use one-touch audio, enable this feature and follow the instructions on the TV to map the connected devices correctly to the audio input jacks of the home theater.

---

#### Audio Input Mapping

Updates audio input mapping if there are new devices connected.

---

## 6 Change settings

This section helps you to change the settings of your home theater.

### Caution

- Most of the settings are already configured with the best value for the home theater. Unless you have a specific reason to change a setting, it is best to leave it at the default value.

---

### Access the setup menu

- 1 Press **⬆** (Home).
- 2 Select **[Setup]**, then press **OK**.  
↳ The setup menu appears.
- 3 Select a setup menu, then press **OK**.  
See the following sections for information about how to change the settings of your home theater.
- 4 Press **⏮** BACK to return to the previous menu, or press **⬆** to exit.

### Note

- You cannot change a setting that is grayed out.

---

### Change video settings

- 1 Press **⬆** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Video]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[TV Display]**: Selects a picture display format to fit the TV screen.
  - **[HDMI Video]**: Selects the HDMI video resolution.
  - **[HDMI Deep Color]**: Displays colors with more shades and hues when the video content is recorded in Deep Color and the TV supports this feature.
  - **[Component Video]**: Selects the component video resolution. Copy-protected DVDs can display only 480p/576p or 480i/576i.

- **[Picture Settings]**: Selects a predefined color setting.

5 Press **OK** to confirm your choice.

#### Note

- The best setting is automatically selected for the TV. If you change the setting, ensure that the TV supports the new setting.
- For settings related to HDMI, the TV must be connected through HDMI.
- For settings related to progressive or component video, the TV must be connected through Component Video.

## Change audio settings

- 1 Press **▲** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Audio]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[Night Mode]** : Selects quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases the volume of soft sounds such as speech.
  - **[HDMI Audio]** : Selects HDMI audio format or disables HDMI audio output for the TV.
  - **[Speaker Setup]** : Sets the volume level and distance of each speaker to obtain the best possible surround sound based on your room setup.
- 5 Press **OK** to confirm your choice.

#### Note

- For settings related to HDMI, the TV must be connected through HDMI.
- Night mode is available for Dolby encoded DVD and Blu-ray discs (for models support Blu-ray playback).

## Set up network

- 1 Press **▲** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Network]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[Network Installation]** : Starts wired (Ethernet) setup. Follow the instructions to set up the network connection.
  - **[View Network Settings]** : Displays the current network settings.
- 5 Press **OK** to confirm your choice.

## Set up EasyLink

- 1 Press **▲** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[EasyLink]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[EasyLink]** : Enables or disables EasyLink.
  - **[One Touch Play]** : Enables or disables One Touch Play.  
If enabled, you can use the remote control to start disc play in the home theater and the TV switches automatically to the correct channel.
  - **[One Touch Standby]** : Enables or disables One Touch Standby.  
If enabled, the home theater can be switched off to standby by a remote control from the TV or other connected HDMI CEC devices.
  - **[System Audio Control]** : Enables or disables System audio control.  
If enabled, follow the instructions on the TV to map the connected devices correctly to the audio connectors of the home theater. The home theater switches automatically to the audio source of the connected device.
  - **[Audio Input Mapping]** : Updates audio input mapping if there are new devices connected.
- 5 Press **OK** to confirm your choice.

## Note

- The connected devices must be connected through HDMI and switched on.

## Change preference settings

- 1 Press **▲** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Preference]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[Menu language]** : Selects the on-screen display menu language.
  - **[Audio]** : Selects audio language for video.
  - **[Subtitle]** : Selects subtitle language for video.
  - **[Disc Menu]** : Selects menu language for video disc.
  - **[Parental Control]** : Restricts access to discs that are recorded with ratings. To play all discs irrespective of the rating, select level '8'.
  - **[Screen Saver]** : Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
  - **[Auto Subtitle Shift]** : Enables or disables shift subtitle. If enabled, it adjusts the subtitle position automatically to fit the TV screen.
  - **[Change Password]** : Sets or changes a PIN code to play a restricted disc. Enter '0000' if you do not have a PIN or if you have forgotten your PIN.
  - **[Display Panel]** : Changes the brightness of the display panel.
  - **[Auto Standby]** : Enables or disables auto standby. If enabled, the home theater switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
  - **[VCD PBC]** : Displays or skips the content menu for VCD and SVCD discs.
  - **[Sleep Timer]** : Sets a sleep timer to switch the home theater to standby after a specific time.

- 5 Press **OK** to confirm your choice.

## Note

- If your preferred disc language is not available, you can select **[Other]** from the list and enter the 4-digit language code which can be found at the back of this manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

## Change advanced settings

- 1 Press **▲** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Advanced]**, then press **OK**.
- 4 Select and adjust the following settings:
  - **[BD-Live Security]** : Restricts or allows access to BD-Live.
  - **[Enhanced Audio]** : Enables or disables the audio post processing at the speaker output.
  - **[Software Update]** : Selects to update software from the network or from USB storage device.
  - **[Clear memory]** : Clears local memory, delete the BD-Live files that you previously downloaded. If using an USB storage device, the local storage folder is 'BUDA'.
  - **[DivX@ VOD Code]** : Displays the DivX VOD registration code for the home theater.
  - **[Version Info.]** : Displays the software version for the home theater.
  - **[Restore default settings]** : Resets the home theater to the default settings programmed at the factory.
- 5 Press **OK** to confirm your choice.

## Note

- You cannot restrict internet access on commercial Blu-ray discs.
- Before you purchase DivX videos and play them on the home theater, register the home theater on [www.divx.com](http://www.divx.com) using the DivX VOD code.
- You cannot reset parental control setting to its default value.



## 7 Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

### Check software version

- 1 Press **⬆** (Home).
- 2 Select **[Setup]**, then press **OK**.
- 3 Select **[Advanced]** > **[Version Info.]**, then press **OK**.
  - ↳ The software version is displayed.

### Update software from the network

- 1 Prepare the internet connection (see 'Connect to a computer network and the Internet' on page 12).
- 2 Press **⬆** (Home) and select **[Setup]**.
- 3 Select **[Advanced]** > **[Software Update]** > **[Network]**.
  - ↳ If an upgrade media is detected, you are prompted to start or cancel the update.
- 4 Follow the instruction on the TV to confirm the update.
  - ↳ When complete, the home theater automatically switches off and restarts.
  - If not, disconnect the power cord for a few seconds and then reconnect it.

## Update software from a USB

- 1 Check for the latest software version on [www.philips.com/support](http://www.philips.com/support).
  - Search for your model and click on 'software and drivers'.
- 2 Create a folder named 'UPG' in the root directory of your USB storage device.
- 3 Download the software into the 'UPG' folder of the USB storage device.
- 4 Unzip the software in the 'UPG' folder.
- 5 Connect the USB storage device to the home theater.
- 6 Press **⬆** (Home) and select **[Setup]**.
- 7 Select **[Advanced]** > **[Software Update]** > **[USB]**.
- 8 Follow the instructions on the TV to confirm the update.
  - ↳ When complete, the home theater automatically switches off and restarts.
  - If not, disconnect the power cord for a few seconds and then reconnect it.



#### Caution

- Do not turn off the power or remove the USB storage device when the software update is in progress because you might damage the home theater.



#### Note

- If the home theater is unable to connect to the Philips server, press **⬆** (Home), select **[Setup]** > **[Network]** > **[Network Installation]** to set up the network.



# 8 Product specifications

## Note

- Specification and design are subject to change without notice.

## Region code

The type plate on the back or bottom of the home theater shows which regions it supports

Country	DVD	BD
USA, Canada	 	

## Playback media

- AVCHD, BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture CD, MP3-CD, WMA-CD, DivX (Ultra)-CD, USB storage device

## File Format

- Audio: .mp3, .wma, .wav
- Video: .avi, .divx, .mp4, .mkv, .mov, .wmv
- Picture: .jpg, .gif, .png

## Amplifier

- Total output power: 1000W RMS (30% THD)
  - FTC: 580 W (1% THD)\*
- Frequency response: 20 Hz-20 kHz /  $\pm 3$ dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 500 mV
  - MP3 LINK: 300 mV

\* (main channel @ 1kHz sub channel 60 hz within 1%THD)

## Video

- Signal system: PAL / NTSC

- Component video output: 480i/576i, 480p/576p, 720p, 1080i
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

## Audio

- S/PDIF Digital audio input:
  - Coaxial: IEC 60958-3
- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
  - MP3: 112 kbps - 320 kbps
  - WMA: 48 kbps - 192 kbps

## Radio

- Tuning range: FM 87.5-108 MHz (100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-12.5 kHz /  $\pm 3$ dB

## USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: NTFS, FAT16, FAT32
- Maximum memory support: < 160GB

## Main Unit

- Power supply: 120V;  $\sim$  60Hz
- Power consumption: 135 W
- Standby power consumption:  $\leq$  0.9 W
- Dimensions (WxHxD): 17.1 x 2.3 x 14.1 (inches)
- Weight: 3.87 kg

## Subwoofer

- Impedance: 3 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Frequency response: 20 Hz-150 Hz
- Dimensions (WxHxD): 7.7 x 15.6 x 13.5 (inches)
- Weight: 5.25 kg
- Cable length: 13.12 ft

## Speakers

- System: full range satellite
- Speaker impedance: 3 ohm (center), 5 ohm (Front/Rear)
- Speaker drivers: 2 x 3" full range
- Frequency response: 150 Hz-20 kHz
- Dimensions (WxHxD):
- Center: 11.0 x 3.7 x 3.6 (inches)

- Speaker : 3.9 × 11.0 × 4.5 (inches)
- Tall speaker: 10.2 × 43.3 × 10.2 (inches)
- Weight:
- Center: 1.40 kg
- Speaker: 0.98~1.05 kg/each
- Tall speaker: 3.73~3.81 kg/each
- Cable length:
- Center: 6.56 ft
- Front: 9.84 ft
- Rear: 32.8 ft

#### Wireless receiver

- Power supply rating: 110-240V; ~50-60 Hz
- Total output power: 250 W (RMS)
- Power consumption: 50 W
- Standby power consumption: ≤ 0.45 W
- Frequency response: 150 Hz ~ 20 kHz
- S/N Ratio: 65 dB (A-Weighted)
- Distortion: 1%
- Dimensions (WxHxD): 4.96 × 5.16 × 4.96 (inches)
- Weight: 1.1 kg

#### Wireless transmitter

- Frequency response: 5.8 GHz
- Dimensions (WxHxD): 2.16 × 2.08 × 1.30 (inches)
- Weight: 0.05 kg

#### Dock for iPod/iPhone

- Dimensions (HxD): 1.35 × 4.1 (inches)
- Weight: 135 g

#### Laser Specification

- Laser Type (Diode): InGaN/AlGaIn (BD), InGaAlP (DVD), AlGaAs (CD)
- Wave length: 405 +5nm/-5nm (BD), 650 +13nm/-10nm (DVD), 790 +15nm/-15nm (CD)
- Output power (Max. ratings): 20mW (BD), 7mW (DVD/CD)

## 9 Troubleshooting



### Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, visit [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact Customer Care Center, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

### Main unit

#### The buttons on this home theater do not work.

- Disconnect the home theater from the power outlet for a few minutes, then reconnect.

### Picture

#### No picture.

- Ensure that the TV is switched to the correct source for the home theater.

#### No picture on HDMI connection.

- Change the HDMI video setting or wait for 15 seconds for auto recover.
- Check if the HDMI cable is faulty. Replace with a new HDMI cable.

#### No picture on the Component (Y Pb Pr) connection.

- If the HDMI video connection is set to **[Auto]** or **[1080p/24Hz]**, there is no video output through the component connection. Change the HDMI video setting or remove the HDMI connection.

#### No high-definition video signal on the TV.

- Ensure that the disc contains high-definition video.
- Ensure that the TV supports high-definition video.

---

## Sound

### No sound.

- Ensure that the audio cables are connected and select the correct input source (for example, **JSOURCE / AUDIO SOURCE**) for the device you want to play.

### No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (High-bandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the **[HDMI Audio]** is enabled.

### No sound from TV program.

- Connect an audio cable from the audio input on the home theater to the audio output on the TV, then press **JSOURCE / AUDIO SOURCE** repeatedly to select the correct audio source.

### Distorted sound or echo.

- Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

### Audio and video are not synchronized.

- 1) Press **≡SOUND SETTINGS / ⏏** (Sound options) . 2) Press the **Navigation buttons** (left/right) repeatedly until **AUDIO SYNC** is displayed, then press **OK**. 3) Press the **Navigation buttons** (up/down) to sync the audio with the video.

### No sound from rear speakers.

- Ensure that the audio source currently being played back has audio present in the rear channels. To enable sound output from the rear speakers for stereo sources, select multi-channel in **SURROUND** settings.

### No sound from the rear speakers and the

### indicator on the wireless receiver blinks continuously for more than one minute.

- Check whether there is any interference from nearby electronic devices, remove the conflict or strong interference, then try the procedures: 1) Disconnect the power cord from the wireless receiver for a few seconds and connect it back again. 2) Press **JSOURCE/AUDIO SOURCE** on the remote control to select 'AUX' or 'MP3 LINK'. 3) Press and hold **Navigation buttons** (right) until '**PAIRING**' flashes on the display panel. 4) If '**FAILED**' is displayed, repeat the above steps.

---

## Play

### Disc cannot be played.

- Clean the disc.
- Ensure that the home theater supports the disc (see 'Product specifications' on page 24).
- Ensure that the home theater supports the region code of the disc.
- For DVD±RW or DVD±R, ensure that the disc is finalized.

### DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

### DivX subtitles do not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press **≡OPTIONS / ⏏** (Options). 2) Select **[Character Set]**. 3) Select the supported character set. 4) Press **OK**.

### The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 24).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater.

### 'No entry' or 'x' sign appears on the TV.

- The operation is not possible.

### EasyLink feature does not work.

- Ensure that the home theater is connected to a Philips brand EasyLink TV and that EasyLink is on.

### I do not want my home theater to be switched on when I switch on my TV.

- This is the correct behavior for Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

### I cannot access BD-Live features.

- Check the network connection (see 'Connect to a computer network and the Internet' on page 12) or ensure that the network has been set up (see 'Set up network' on page 13).
- Clear memory storage. (see 'Change advanced settings' on page 22)
- Ensure that the Blu-ray disc supports BD-Live feature.

### The video (movies, photos, video clips, etc.) contents of the iPod/iPhone do not display on TV.

- Video and photo browsing is not supported, you can only browse the video and photo contents on the iPod/iPhone itself.

## 10 Index

### A

<b>amplifier</b>	24
<b>audio</b>	
connection	11
language	22
settings	21
synchronize with video	15
<b>audio input mapping</b>	19, 21

### B

<b>BD-Live</b>	
access	16
set up	13
<b>Bonus View</b>	15
<b>Browse</b>	
PC	18

### C

<b>care</b>	5
<b>change settings</b>	20
<b>chapter</b>	16
<b>connect</b>	
audio from TV	11, 19
guide	10
network	12
other devices	11
TV	10
<b>connectors</b>	10

### D

<b>disc</b>	
play	15
supported discs	24
<b>DivX</b>	
character set	16
<b>DLNA</b>	17

### E

<b>EasyLink</b>	
settings	19, 21

### F

<b>file formats</b>	24
---------------------	----

<b>H</b>	
HDMI CEC (see Easylink)	19
<b>I</b>	
Internet	
BD-Live	16
connect	12
software update	23
iPod	
play	19
slideshow	19
<b>L</b>	
language	
audio	16, 22
disc menu	22
on-screen display	22
subtitle	16, 22
<b>M</b>	
media server software	
set up	18
MP3	
play	19
<b>N</b>	
network	
connect	12
set up	13
software update	23
<b>O</b>	
one-touch play	19, 21
one-touch standby	19, 21
overview	
connectors	10
main unit	6
remote control	7
<b>P</b>	
password (PIN code)	22
picture	
options	17
rotate	17
slide show	17, 17
troubleshooting	25
picture-in-picture	
2nd audio language	15
2nd subtitle language	15
enable	15
play	
disc	15
from PC	17
MP3 player	19
multimedia content	17
options	15
radio	18
troubleshooting	26
USB storage device	16
product care	5
product specifications	24
progressive scan	2
<b>R</b>	
radio	
play	18
program	18
tune	18
region code	24
remote control	7
repeat	16, 15
rotate pictures	17
<b>S</b>	
settings	
audio	21
EasyLink	21
parental control	22
preferences	22
slideshow	
animation	17
duration	17
play from iPod/iPhone	19
play musical slideshow	17
software	
update	23
version	23
sound	
auto volume	14
mode	14
surround	14
treble and bass	14
troubleshooting	26
subtitle	
language	16, 22
subtitle shift	16, 22
system audio control	19

---

<b>T</b>	
time search video	16
title	16
<b>TV</b>	
audio from TV	11, 19
connect	10

---

<b>U</b>	
<b>USB</b>	
play	16
software update	23

---

<b>V</b>	
<b>video</b>	
options	16
synchronize with audio	15

# ONE (1) YEAR LIMITED WARRANTY

## WARRANTY COVERAGE:

This warranty obligation is limited to the terms set forth below.

## WHO IS COVERED:

This product is warranted to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

## WHAT IS COVERED:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

The company warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes the company property. When a refund is given, your product becomes the company property.

**Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.**

**Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.**

## WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to the new products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any non-Philips hardware product or any software, even if packaged or sold with the product. Non-Philips manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any , programs data, or other information stored on any media contained within the product, or any non-Philips product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-Philips product, (b) to damage caused by service performed by anyone other than an Authorized Service Location, (c) to a product or a part that has been modified without written permission,

or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished Philips product sold "AS IS" by some retailers.

## This Limited Warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

## TO OBTAIN ASSISTANCE IN THE U.S.A., CANADA, PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Customer Care Center at:

1-866-309-0866

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

P&F USA Inc. PO Box 430 Daleville, IN 47334-0430



# Language Code

Abkhazian	6566
Afar	6565
Afrikaans	6570
Amharic	6577
Arabic	6582
Armenian	7289
Assamese	6583
Avestan	6569
Aymara	6589
Azerbaidjani	6590
Bahasa Melayu	7783
Bashkir	6665
Belarusian	6669
Bengali	6678
Bihari	6672
Bislama	6673
Bokmål, Norwegian	7866
Bosanski	6683
Brezhoneg	6682
Bulgarian	6671
Burmese	7789
Castellano, Español	6983
Catalán	6765
Chamorro	6772
Chechen	6769
Chewa; Chichewa; Nyanja	7889
中文	9072
Chuang; Zhuang	9065
Church Slavc; Slavonic	6785
Chuvash	6786
Corsican	6779
Česky	6783
Dansk	6865
Deutsch	6869
Dzongkha	6890
English	6978
Esperanto	6979
Estonian	6984
Euskara	6985
Ελληνικά	6976
Faroese	7079
Français	7082
Frysk	7089
Fijian	7074
Gaelic; Scottish Gaelic	7168
Gallegan	7176
Georgian	7565
Gikuyu; Kikuyu	7573
Guarani	7178
Gujarati	7185
Hausa	7265
Herero	7290
Hindi	7273
Hiri Motu	7279
Hrwatski	6779
Ido	7379
Interlingua (International)	7365
Interlingue	7365
Inuktitut	7385

Inupiaq	7375
Irish	7165
Íslenska	7383
Italiano	7384
Ivrit	7269
Japanese	7465
Javanese	7486
Kalaallisut	7576
Kannada	7578
Kashmiri	7583
Kazakh	7575
Kernewek	7587
Khmer	7577
Kinyarwanda	8287
Kirghiz	7589
Komi	7586
Korean	7579
Kuanyama; Kwanyama	7574
Kurdish	7585
Lao	7679
Latina	7665
Latvian	7686
Letzeburgesch;	7666
Limburch; Limburger	7673
Lingala	7678
Lithuanian	7684
Luxembourgish;	7666
Macedonian	7775
Malagasy	7771
Magyar	7285
Malayalam	7776
Maltese	7784
Manx	7186
Maori	7773
Marathi	7782
Marshallese	7772
Moldavian	7779
Mongolian	7778
Nauru	7865
Navaho; Navajo	7886
Ndebele, North	7868
Ndebele, South	7882
Ndonga	7871
Nederlands	7876
Nepali	7869
Norsk	7879
Northern Sami	8369
North Ndebele	7868
Norwegian Nynorsk;	7878
Occitan; Provençal	7967
Old Bulgarian; Old Slavonic	6785
Oriya	7982
Oromo	7977
Ossetian; Ossetic	7983
Pali	8073
Panjabi	8065
Persian	7065
Polski	8076
Português	8084

Pushto	8083
Russian	8285
Quechua	8185
Raeto-Romance	8277
Romanian	8279
Rundi	8278
Samoan	8377
Sango	8371
Sanskrit	8365
Sardinian	8367
Serbian	8382
Shona	8378
Shqip	8381
Sindhi	8368
Sinhalese	8373
Slovensky	8373
Slovenian	8376
Somali	8379
Sotho; Southern	8384
South Ndebele	7882
Sundanese	8385
Suomi	7073
Swahili	8387
Swati	8383
Svenska	8386
Tagalog	8476
Tahitian	8489
Tajik	8471
Tamil	8465
Tatar	8484
Telugu	8469
Thai	8472
Tibetan	6679
Tigrinya	8473
Tonga (Tonga Islands)	8479
Tsonga	8483
Tswana	8478
Türkçe	8482
Turkmen	8475
Twi	8487
Uighur	8571
Ukrainian	8575
Urdu	8582
Uzbek	8590
Vietnamese	8673
Volapuk	8679
Walloon	8765
Welsh	6789
Wolof	8779
Xhosa	8872
Yiddish	8973
Yoruba	8979
Zulu	9085

P&F USA, Inc.  
PO Box 430 Daleville, IN 47334-0430

