

#### Shenzhen Yunyue Intelligent Technology Co., Ltd.

Address: 11th Floor, Block B, Tsinghua Info Port, No. 1 Xindong Road, Songpingshan, Songpingshan Community, Xili Street, Nanshan District, Shenzhen

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Shenzhen Yunyue Intelligent Technology Co., Ltd. and Shenzhen Yunyue Intelligent Technology Co., Ltd. is the warrantor in relation to this product.

Philips smart safe box reserves the rights to change content and product specifications included in this user manual.



# User manual



To register your product as well as obtain support please go to: www.philips.com/support

Models and dimensions

Models	Dimensions (LxWxH)	
FDG-A10/D-45-SBX701-4B0	450×430×380 mm	
FDG-A10/D-55-SBX701-5B0	550×430×400 mm	
FDG-A10/D-65-SBX701-6B0	650×450×420 mm	
FDG-A10/D-75-SBX701-7B0	750×500×460 mm	
FDG-A10/D-85-SBX701-8B0	850×530×480 mm	

#### Please read this user manual carefully before using this product.

Thank you for purchasing Philips-branded products. For your safety, please read this user manual carefully before using the product. Any personal injury, property or other loss caused by not following the user manual or precautions, no liability will be assumed by Philips.

#### Kind reminder:


This user manual is used as a guide. The photos, pictures, or illustrations provided in the manual are for explanation purposes, which may differ from the specific product, please refer to the actual product. Due to product version upgrade or other needs, Philips may update this manual timely without notice. If you need the latest version of the manual, please download it from the Philips website (www.philips.com/sup- port). The copyright of any part from this manual, including text, pictures or illustrations, belongs to Philips. Without written permission, no corporation or individual may extract, copy, translate, or modify all or part of this manual in any way. Unless otherwise agreed, Philips does not make any express or implied representations and guarantees.


Get to know your smart safe box	01
Keypad	03
First use	04
Add fingerprint and PIN code	05
Delete fingerprint and PIN code	06
Safe mode ····	07
Language setting	08
Back-up system	08
Vibrant alert	09
False alert	10
Low-voltage alert	10
Network configuration	11
Wall-mount instructions	12
After-sales policies	13
After-sales support	14
Warranty card	15

### Get to know your smart safe box


- 1. Keypad
- 2. Handle
- 3. Door
- 4. Feet
- 5. Drawer
- 6. Compartment
- 7. Lock cylinder
- 8. Battery compartment


▲ Note: due to limited internal space, 450 mm high safes are designed with no drawer.

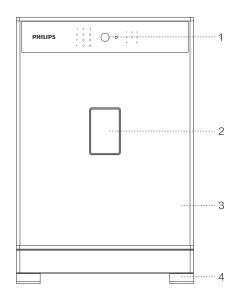

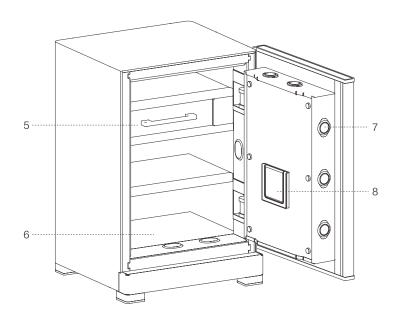

### Keypad 📐

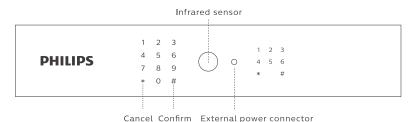

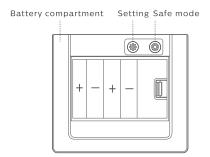

#### First use

- Insert 4 AA batteries into the external power supply box, then plug the power into the connector interface beside the infrared sensor.
- 2. As shown in Figure 1, enter any fingerprint or simply touch the panel to wake up the keypad. Enter default password "1234" and press "#" to confirm. After hearing a voice prompt "Unlocking successful", open battery compartment inside the safe and insert in 4 AA batteries to complete the first use.

 


Figure 1

A Note: Do not place the external power box inside the safe! Besides powering up the safe for its first use, it is also for emergency use when the main power supply is down.

#### Add fingerprint and PIN code

- Open safe door and press " ( on the battery compartment. After hearing a voice prompt "Please enter fingerprint or PIN code", enter your fingerprint as shown in Figure 2. A voice prompt "Fingerprint entering succeeded." indicates successful operation. If the entering fails, there will be a voice prompt "Fingerprint entering failed". The system will automatically exit if there is no entering in 8 seconds.
- Note: this product supports a maximum of 30 fingerprints.
- After the fingerprint is successfully entered, you can continue with PIN code entering. Enter a string of 3 - 8 digit PIN code and press "#" to confirm. There will be a voice prompt "Please enter your PIN code again". Enter the PIN code again and press "#" to confirm. There will be a voice prompt "PIN code setting successful", indicating successful operation.
- Note: this product supports a maximum of 10 sets of PIN codes

 


Figure 2

#### Delete fingerprint and PIN code

As shown in Figure 3, press " ( on the battery compartment for 3 seconds. There will be a voice prompt "Initialization successful", indicating all PIN codes and fingerprints have been successfully deleted and the safe has restored to factory settings.

#### A Note:

- 1. This product does not support deleting single fingerprint or PIN code.
- 2. After restoring to factory settings, "Vibration alert" and "Safe mode" will also return to the initial settings (off).

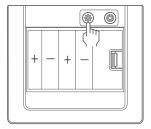


Figure 3

#### Safe mode

- Under "Safe mode", 2 registered codes are required to unlock the safe, either "fingerprint + fingerprint", "fingerprint + password", "password + fingerprint" or "password + password".
- As shown in Figure 4, press " on the battery compartment and there will be a
  voice prompt "Safe mode is on", indicating successful activation. Press the button
  again can turn "Safe mode" off.

▲ Note: under "Standard mode", any one set of registered PIN code or fingerprint can unlock the safe.

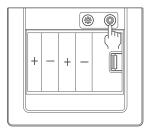


Figure 4

### Language setting

Press " ( on the battery compartment and hold until hearing a beep. Press the button 4 times can switch between Chinese and English.

▲ Note: the default language is Chinese.

### Back-up system

This product is designed with back-up system. The main system is used under normal situations. The back-up system is used in case the main system breaks down or the registered fingerprints and passwords fail to open the safe.

#### ⚠ Note:

- For security concern, we do not disclose the methods of using the back-up system.
   Please contact us for instruction if the main system of your safe breaks down.
- Do not place the external power box inside the safe! It is needed for starting the back-up system.

### Vibrant alert

- As shown in Figure 5, press (a) for 3 seconds. There will be a voice prompt "Vibration alert is on", indicating successful operation. Press the same button for another 3 seconds can turn the "Vibration alert" off.
- When the safe detects a certain intensity of vibration, it will activate vibration alert.
   The alert will last for 20 seconds and can be stopped by any registered fingerprint or password.

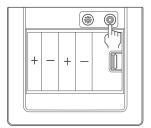


Figure 5

#### False alert

5 times of wrong fingerprint entering or 3 times of wrong password entering will activate false alert. The alert will last for 20 seconds. At the same time, the system will be locked for 180 seconds.

⚠ Note: the safe can not be operated under "Locked" state caused by false alert.

## Low-voltage alert

If voltage of the main power supply goes below 4.8 V, the system will activate "Low-voltage alert". In using the safe, it will remind you with a voice prompt "Low voltage, please replace battery". Once having this alert, please replace battery in time.

**A** Note: Low-voltage may affect the normal use of the safe. Please replace battery in time when receiving low-voltage alert.

### Network configuration

Press the "Setting" button and the "Safe mode" button simultaneously until the blue light flashes, after which you can start network configuration. For more instructions, please refer to "Network configuration manual".

#### A Note:

- 1. This function is optional and only available for the "Network Edition" products.
- If you are using "Network Edition" products, please scan QR code below to download APP and get tutorial.



Scan to download APP



Scan to get tutorial

#### Wall-mount instructions

As shown in Figure 6, select an appropriate installation position, then open the safe door and take out the plugs on the back panel. Mark hole positions on the wall or cabinet and drill holes for expansion tubes. Put expansion tubes in the holes, then attach the safe and fix it with screws

#### 🛕 Note:

- Concrete wall is recommended for mounting the safe.
- 2. For safety reasons, please make sure the safe is firmly attached to the wall.

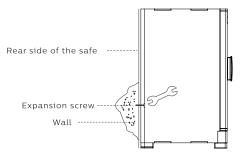


Figure 6

### After-sales policy

Philips smart safe box warrants:

- 1. Return or replacement of products that have defects caused by non-human factors or force majeure within 7 days from the date of purchase;
- 2. Replacement or maintenance of products that have defects caused by non-human factors or force majeure within 8-15 days from the date of purchase;
- 3. Maintenance of products that have defects caused by non-human factors or force majeure within 24 months from the date of purchase;

This warranty does no apply to (including but not limited to):

- 1. Damages of product caused by unauthorized repairs, misuse, incorrect use, abuse, collision, negligence, fluid intake, accidents, modification and alterations;
- 2. Products with broken or altered labels, serial number and anti-counterfeit label;
- 3. Products out of warranty period;
- 4. Damages caused by force majeure;
- 5. Damages due to human factors.

## After-sales support

If you encounter any problems when using the product, please contact local authorized distributors.

# Warranty card

Model of product			Serial number of product		
Invoice No.			Seller		
Address of seller					
Date of sales			User name		
Contact of user			Address of user		
Failure description					
Maintenance records	Date	Issue		Maintenance staff	User signature