






Game/Camera/Headphones
Jeux/Caméra/Casque
Juegos/Cámara/Auriculares

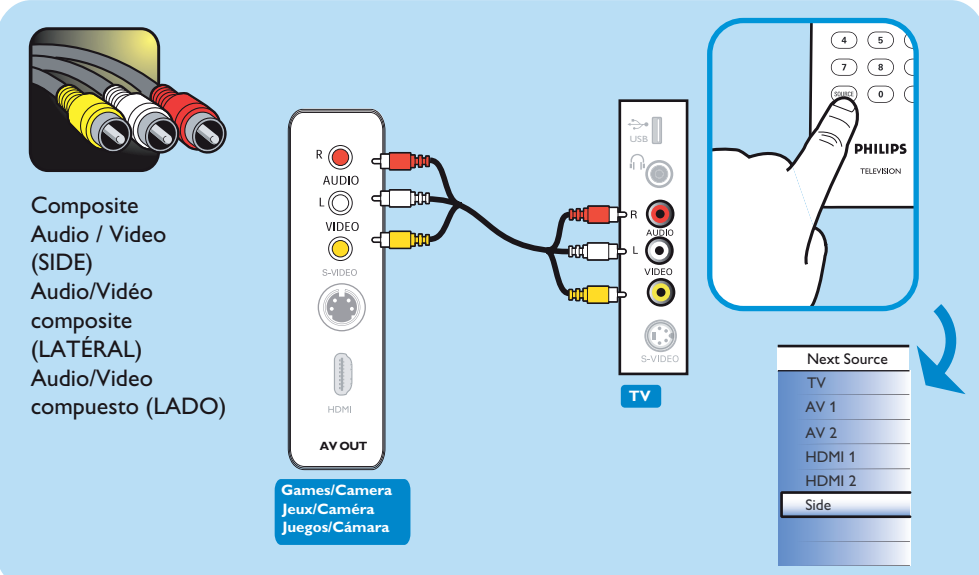


OR / OU / O

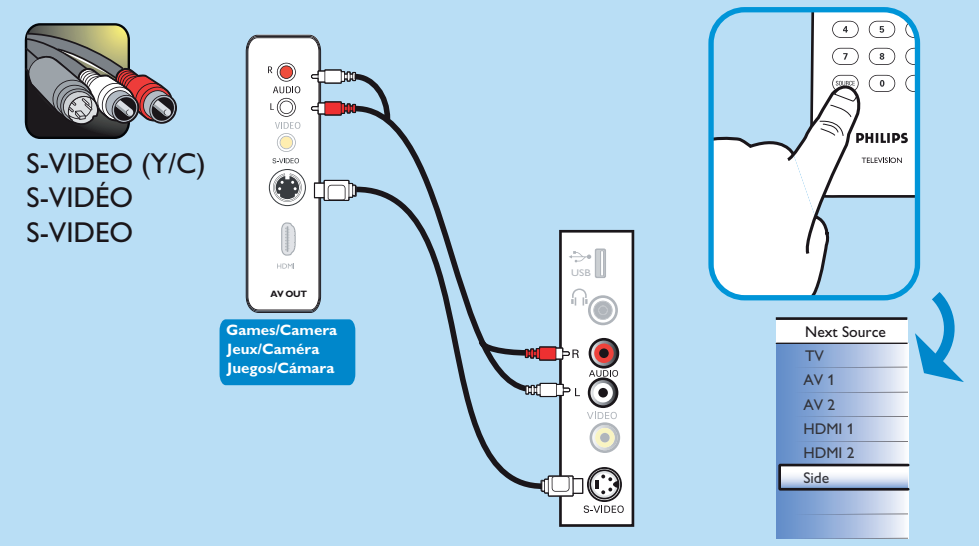


OR / OU / O

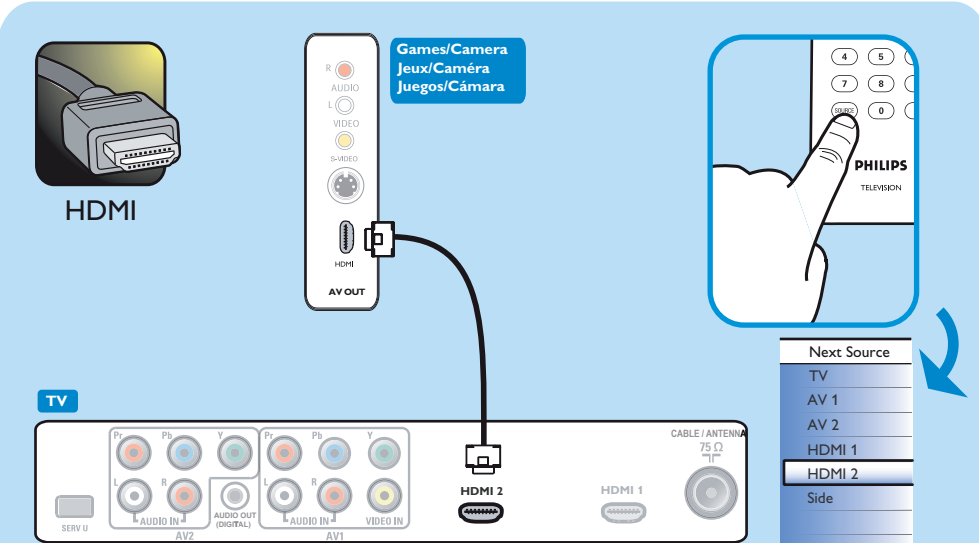


OR / OU / O

 


High Definition devices
Périphériques HD
Dispositivos HD

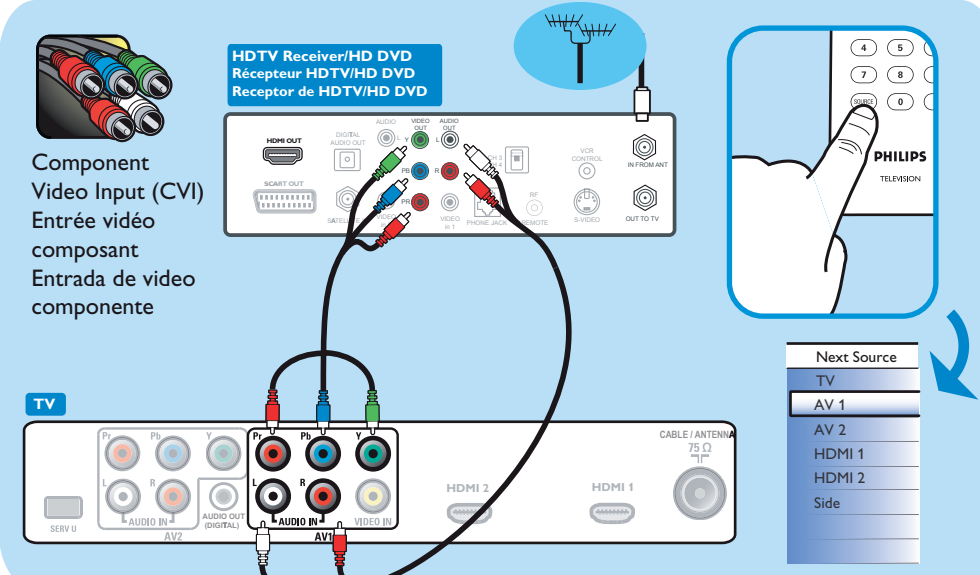


OR / OU / O

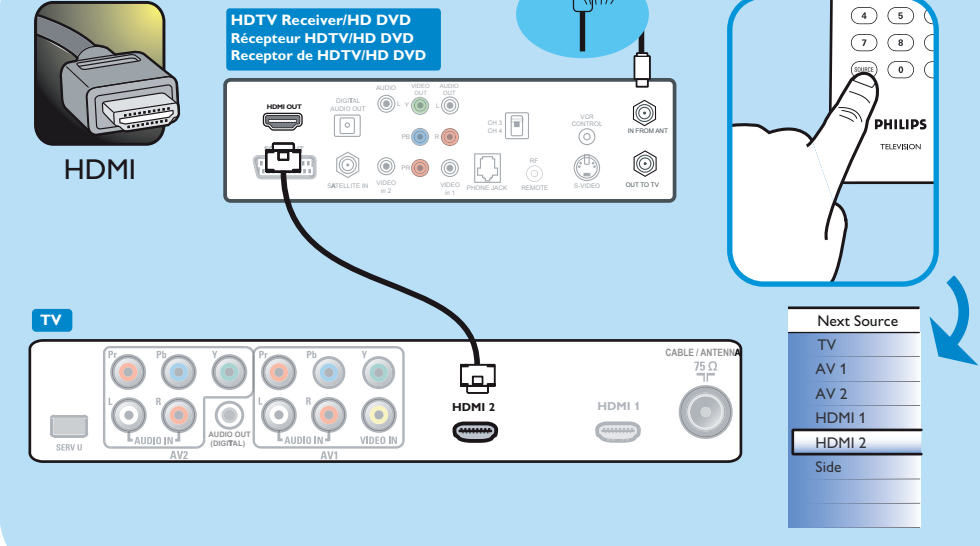


OR / OU / O

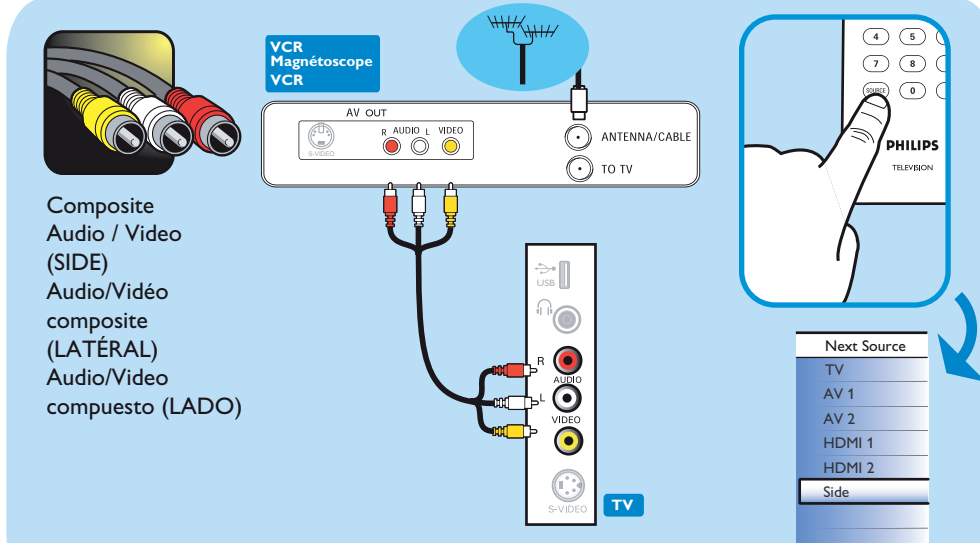

OR / OU / O

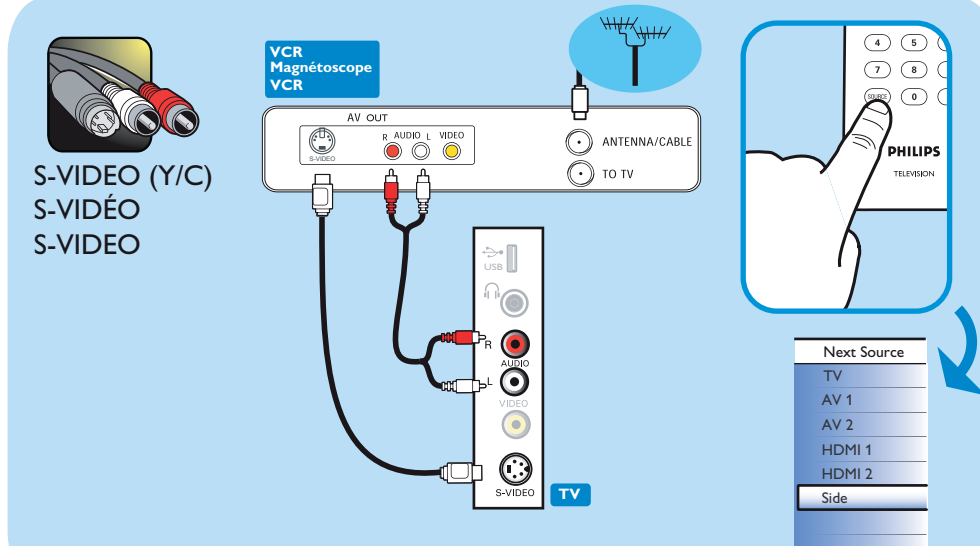


Cable management
Gestion des câbles
Manejo del cable

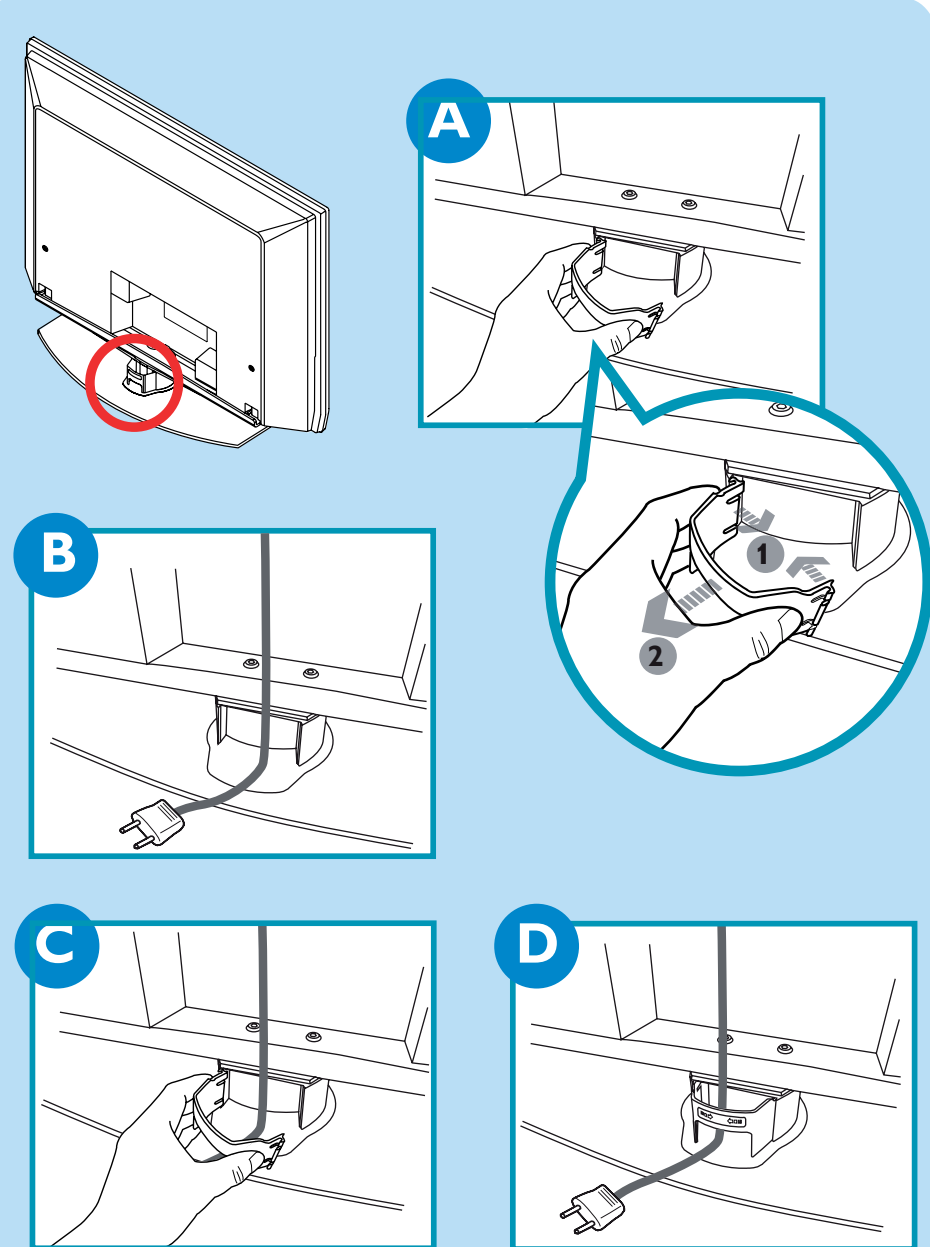

Quick Start Guide


Guide de démarrage rapide

Guía de inicio rápida

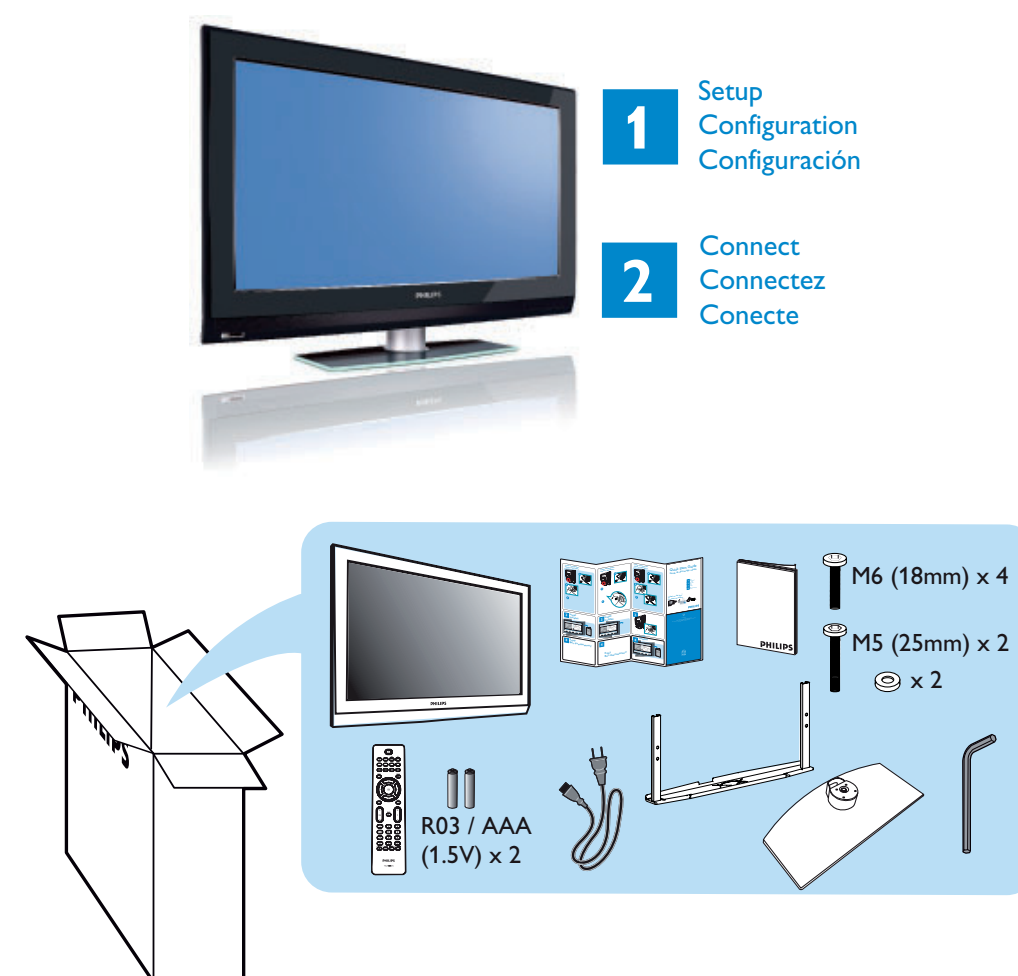






Welcome to Philips!
Register your product and get support at
www.philips.com/welcome

PHILIPS

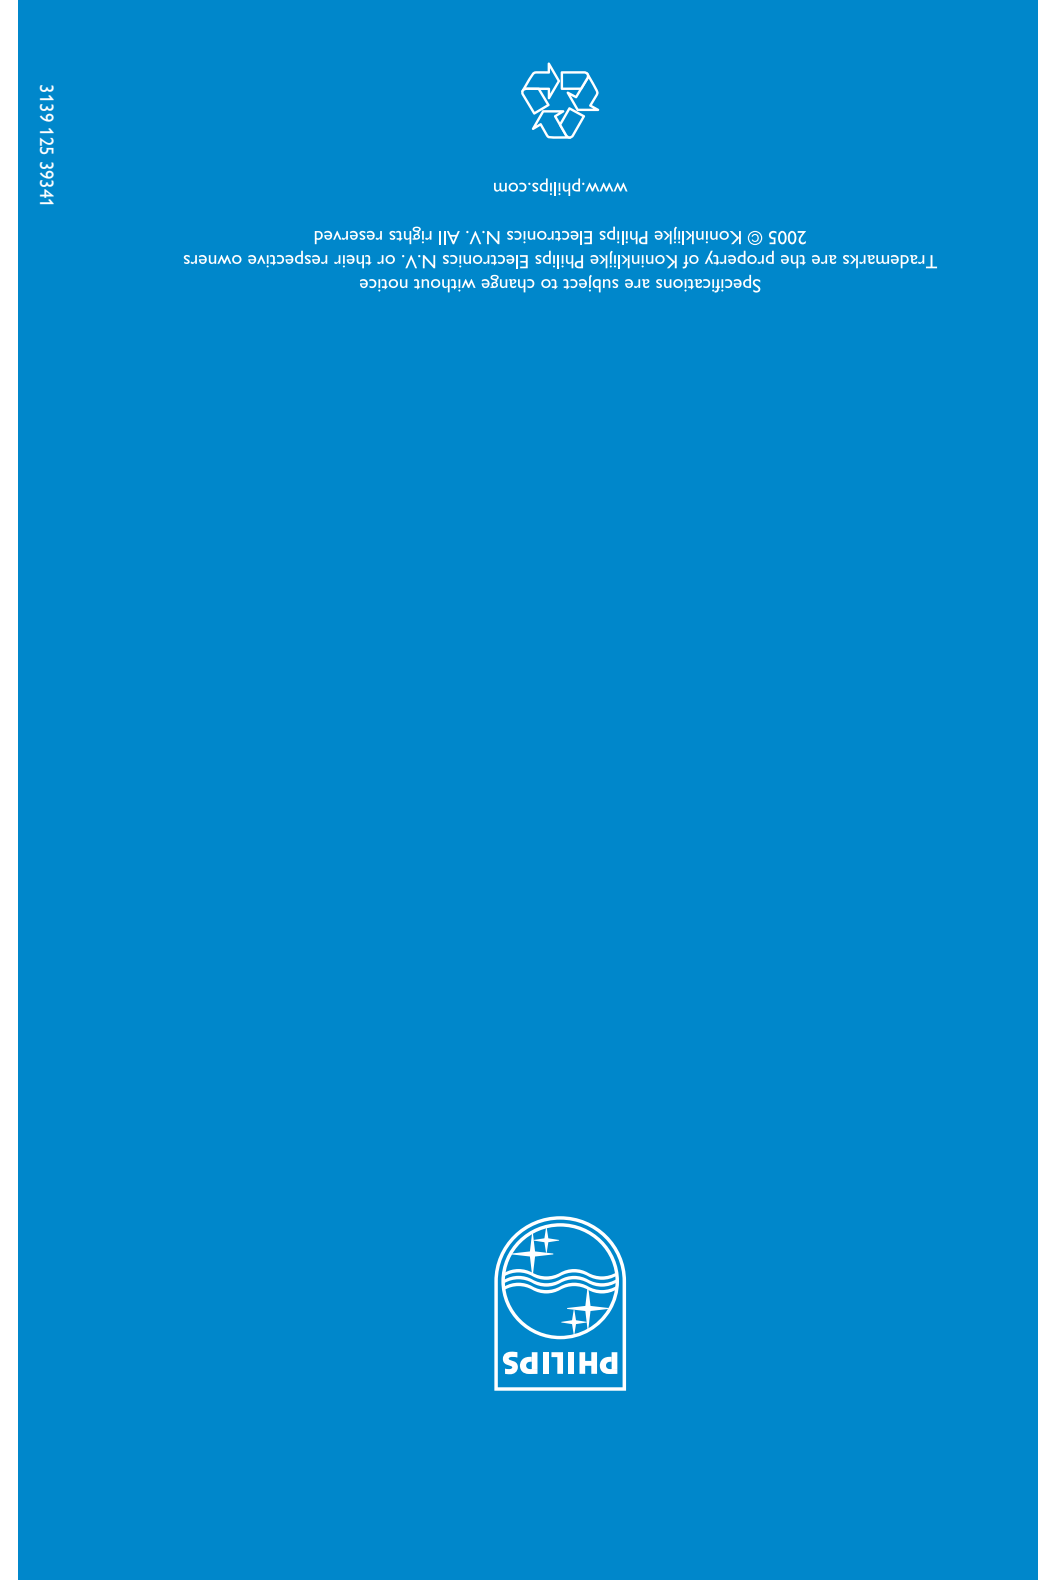


1 Setup Configuration Configuración


Assemble
Assemblez
Ensamblaje

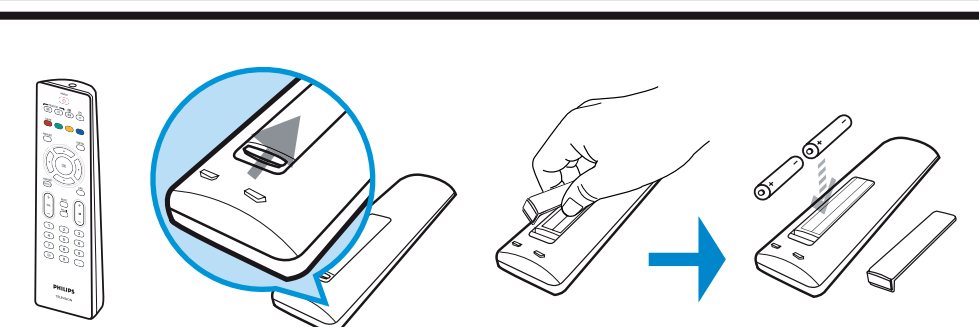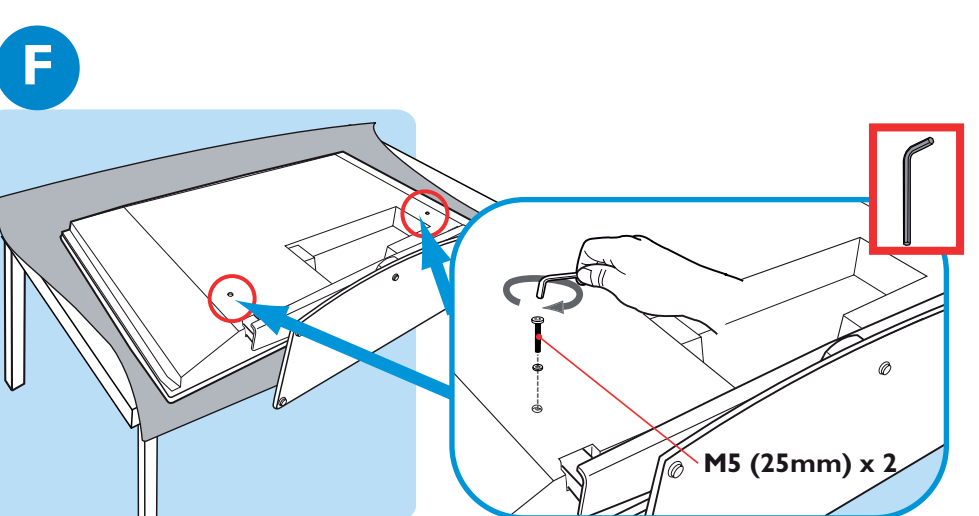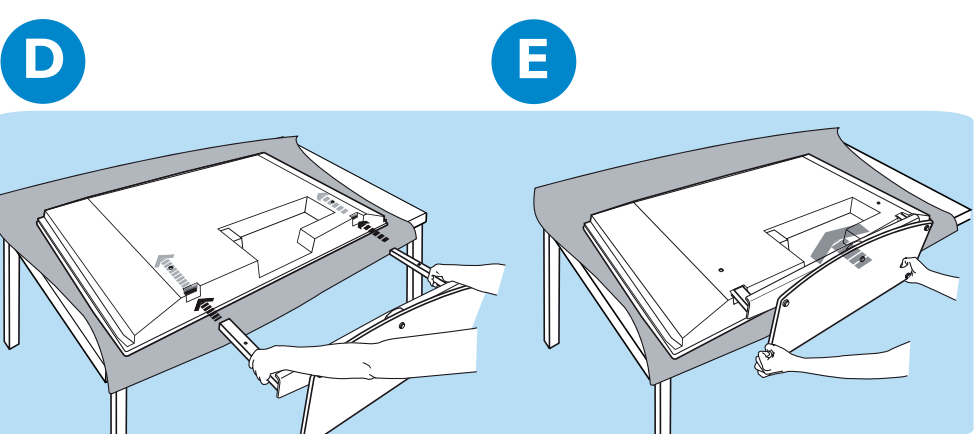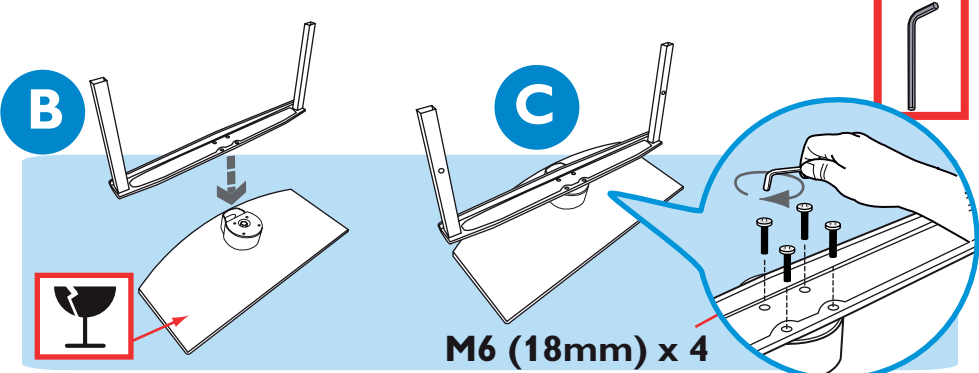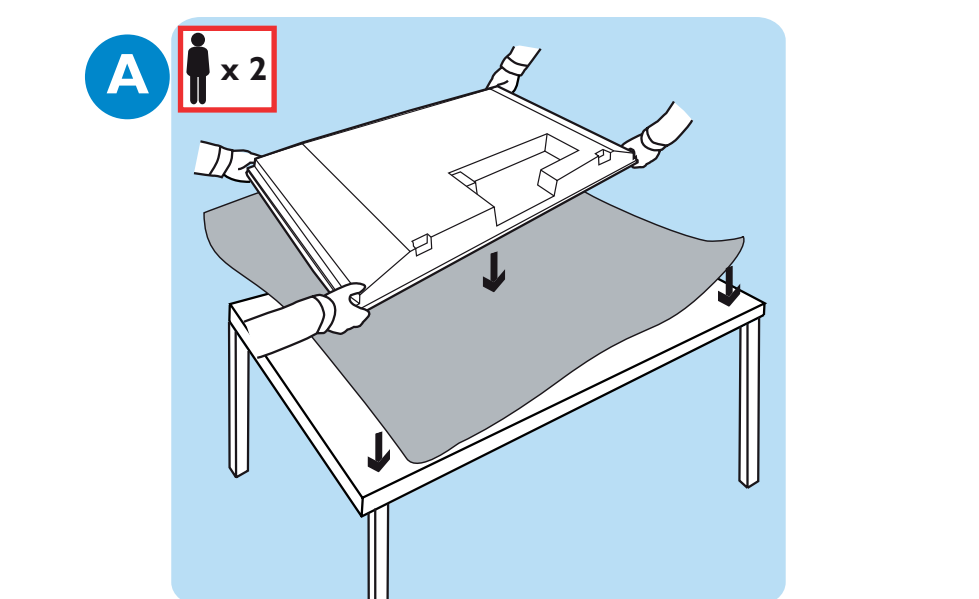

Basic connections
Connexion de base
Conexión básica

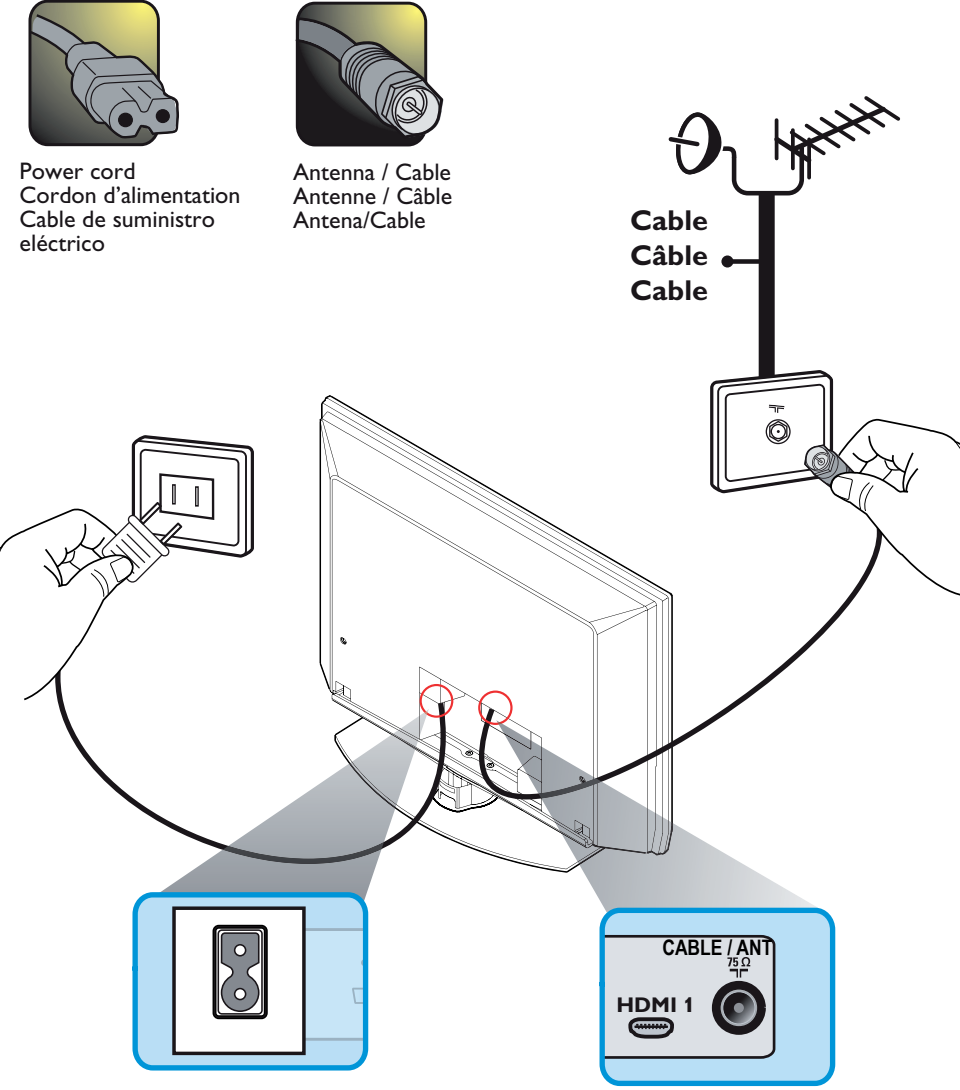


Locating the TV connectors
Emplacement des prises du téléviseur
Ubicación de los conectores del TV

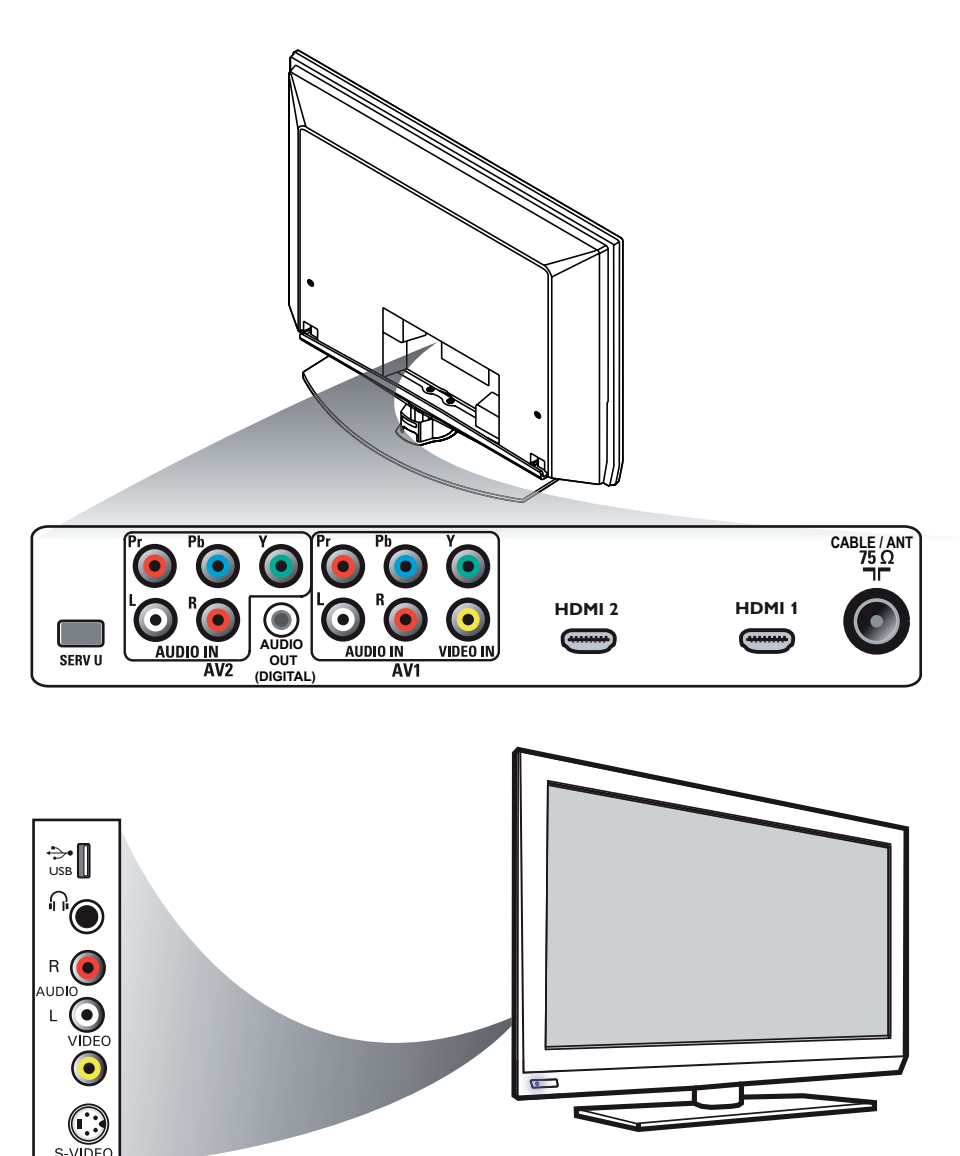


2 Connect Connectez Conecte


Cable box or set top box
Boîtier décodeur
Caja de cable o caja superior de ajuste

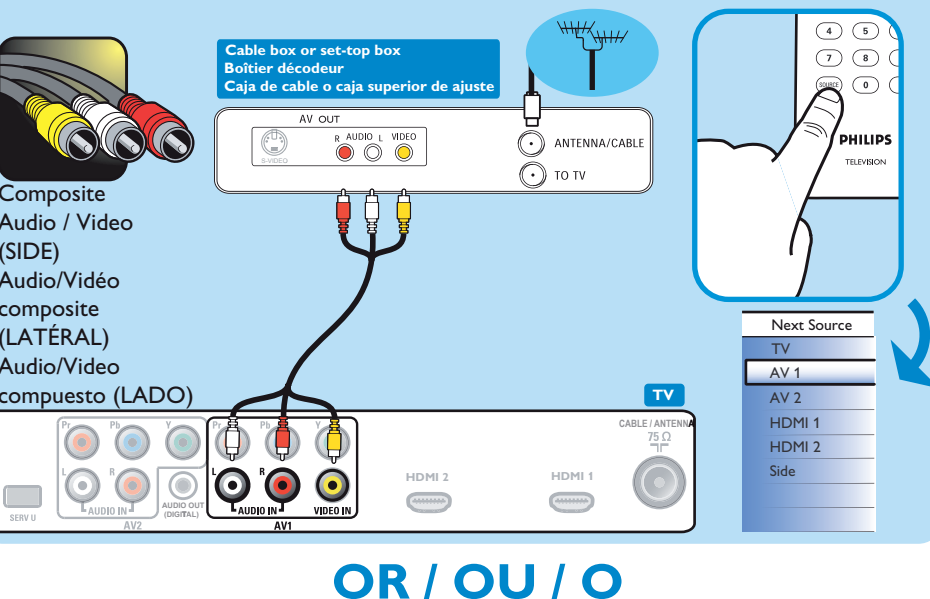


OR / OU / O

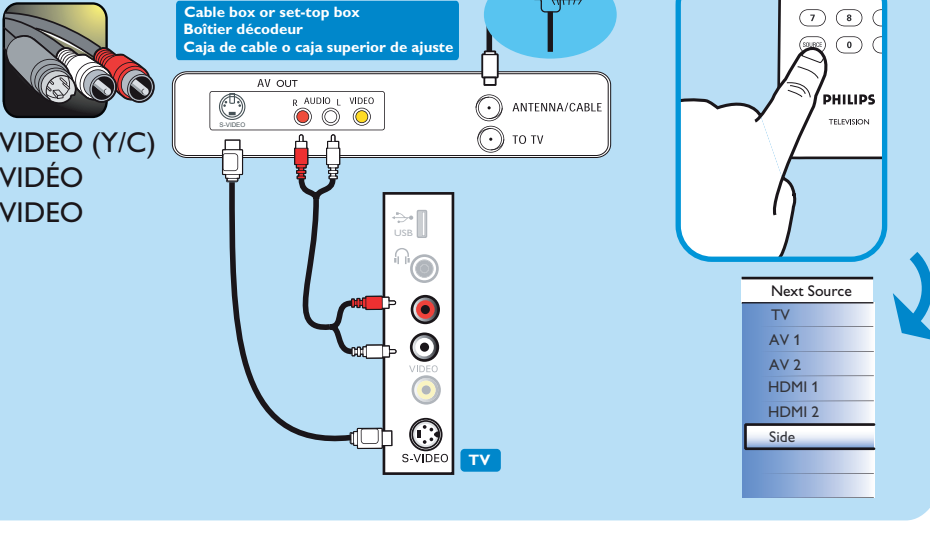


OR / OU / O

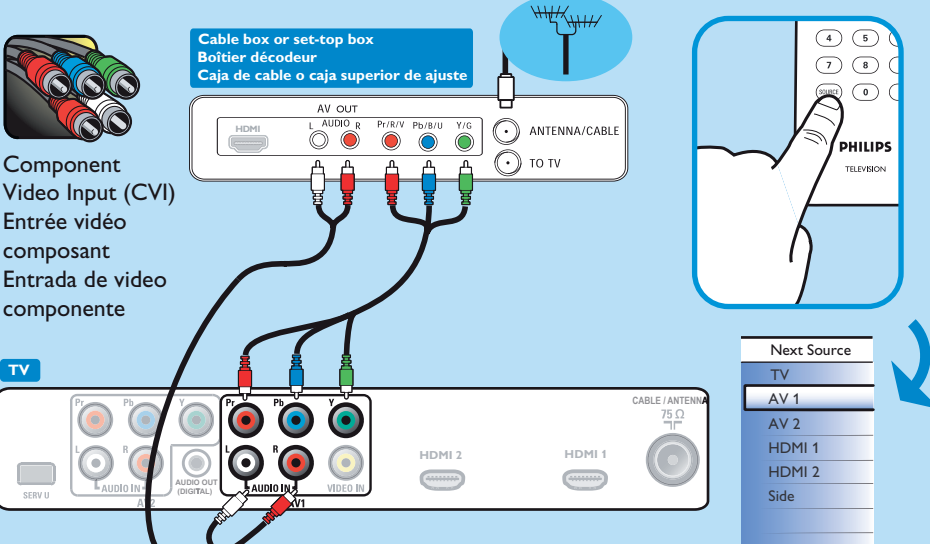


OR / OU / O

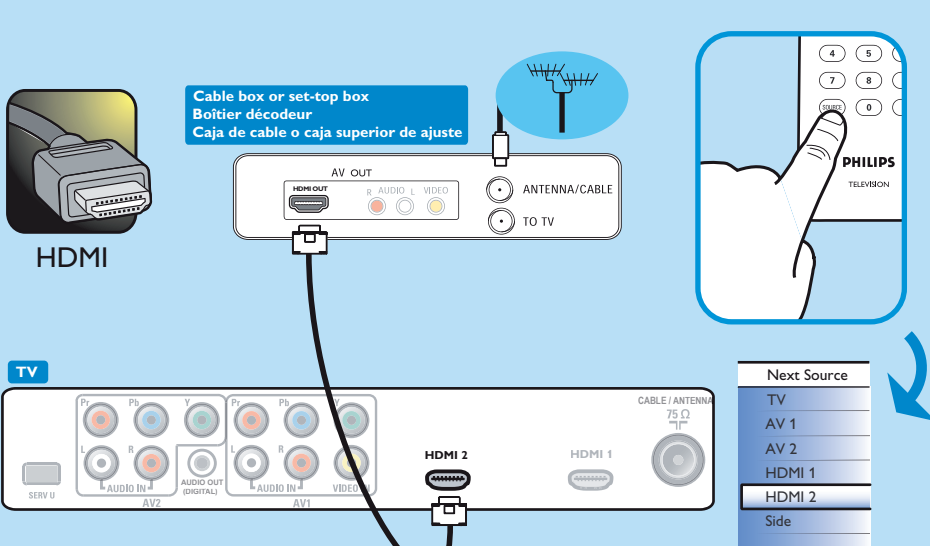


DVD player or recorder
Lecteur ou enregistreur de DVD
Reproductor o grabador de DVD

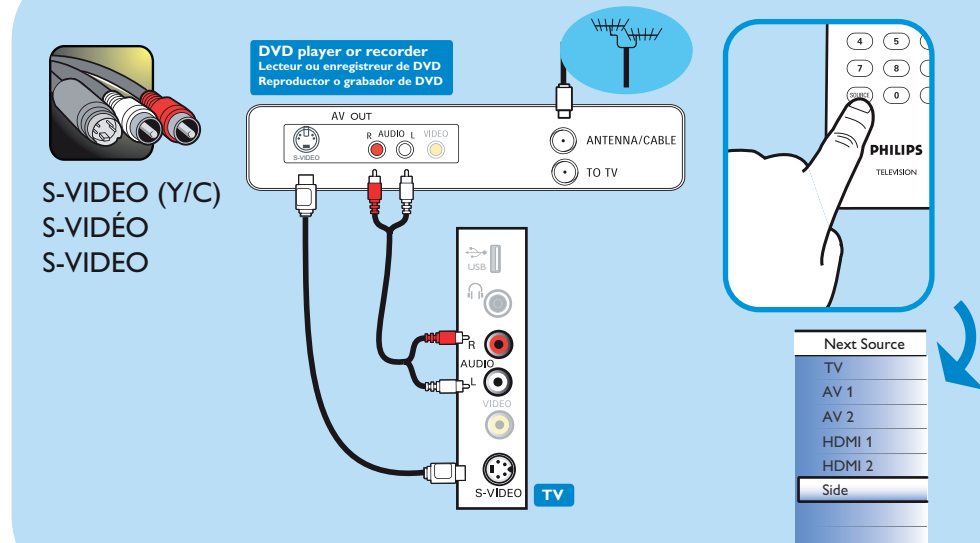

OR / OU / O

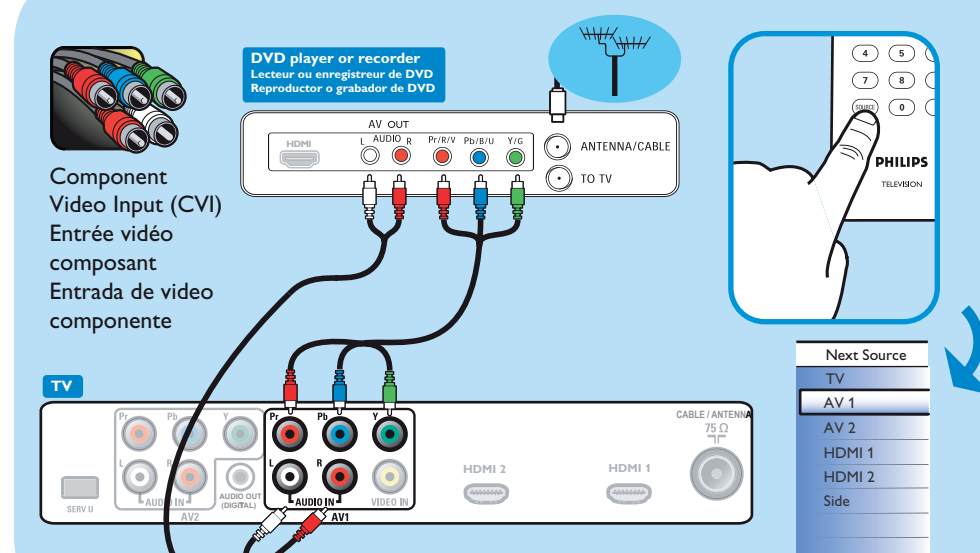

OR / OU / O

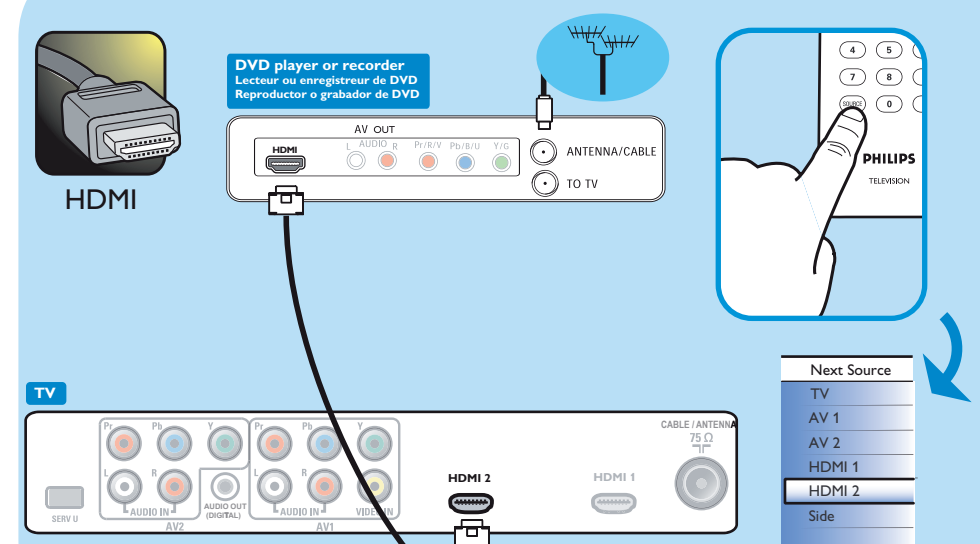

Personal computer
Ordinateur personnel
Computadora personal

