# **PHILIPS**

## Televisions

4000 series

55PFL4901 50PFL4901 43PFL4901



## Register your product and get support at

# www.philips.com/welcome

## EN User manual

ES Manual del usuario

## FR Manuel d'utilisation

- EN If you read this User Manual for 55PFL4901, 50PFL4901, 43PFL4901 and your television's serial number starts with:
   DS6 Please start to read from next page.
- DS7 Please start to read from p.58.
- ES Si lee este Manual de Usuario para 55PFL4901, 50PFL4901, 43PFL4901 y el numero de serie de su television comienza con:
- DS6 Por favor comience a leer desde la siguiente página.
   DS7 Por favor comience a leer desde la p.58.
- FR Si vous lisez ce Manuel d'Utilisation pour le 55PFL4901, 50PFL4901, 43PFL4901 et que le numero de serie de votre televiseur commence par:
- DS6 Veuillez commencer a lire a partir de la page suivante.
- DS7 Veuillez commencer a lire a partir de la p.58.

#### ΕN For further assistance, call the customer support service in your country. To obtain assistance, contact Philips customer care center; In the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands 18668133283 México D.F. and área metropolitana; 58 87 97 36 Interior de la republica; 01 800 839 19 89 ES Para obtener más información, llame al servicio de soporte al cliente de su país. Para obtener asistencia, comuníquese con centro de atención al cliente de Philips; En los Estados Unidos, en Canadá, Puerto Rico o en las Islas Vírgenes de los Estados Unidos; 1866 813 3283 México D.F. y área metropolitana; 58 87 97 36 Interior de la republica; 01 800 839 19 89

- FR Pour obtenir de l'aide supplémentaire, communiquez avec le centre de service à la clientèle de votre pays.
  - Pour obtenir de l'aide, communiquez avec le centre de service à la clientèle Philips au;

Dans le États-Unis, au Canada, à Puerto Rico ou aux Îles Vierges américaines; **1 866 813 3283** 

México D.F. et área metropolitana; **58 87 97 36** Interior de la republica; **01 800 839 19 89** 

# Contents

1	Notice	5
2	Important	7
	Positioning the TV	7
	Regulatory notices	7 7
	Environmental care Preparing to move / ship the unit	7
3	Getting started	8
	Features	8
	Supplied accessories	8
	Symbols used in this User manual	8
	Stand assembly	9
	Attaching the base Installing the remote control batteries	9
	Remote control	10
	Control panel	11
	Terminals	11
	Connecting Antenna or Cable / Satellite / IPTV set-top box	12 12
	Plugging in the AC power cord Selecting your connection quality	13
	Connecting your devices	13
	Initial setup	17
4	Use your TV	19
	Switching on your TV and putting it in standby mode	19
	Adjusting volume	19
	Switching channels	19
	Watching channels from an external device Access the Home menu	20 20
	Create a list of favorite channels	20
	Changing Picture format	21
	TV screen information	22
	Using options menu	23
	USB	24
5	Getting more from your TV	27
	Picture and sound setup	28
	TV settings	28
	Picture Sound	28 30
	Features	31
	Installation	32

	Search for channels	35
	Install channels	35
	Channel settings	35
	Channel installation	35
	Child lock	36
	Change PIN	37
	Digital audio language	37
	Mono/Stereo	37
	Connect to network	38
	Wireless setting	38
	Wired setting	38
	Network settings	39
	Manual network settings	39
	Connection test	41
	Setting status	41
	Home network	42
	Wake-on-LAN(DIAL)	42
	Net TV	42
	Reset network settings	42
	Update software	43
	Preparing for the software upgrade	43
	Downloading the software	43
	USB upgrade	43 44
	Network updates	44
	Software settings Software	44
	Wireless Screencasting	44
	View photos, play music and watch videos using hor	
	network	45
	Net TV	48
	Pandora® operations	49
6	Useful tips	50
0	-	
	FAQ	50
	Troubleshooting tips	51
7	Information	53
	Glossary	53
	Maintenance	53
		00
8	Specifications	54
9	Warranty	55
	License e	nd of book

• Displays and illustrations may differ depending on the product you purchase.

## Register online today at www.philips.com/welcome today to get the most benefits from your purchase.

Registering your model with Philips makes you eligible for all of the valuable benefits listed below, so don't miss out. Register Online at www.philips.com/welcome to ensure:

## \*Product safety notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

# Know these **Safety** symbols



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The caution marking is located on the rear or bottom of the cabinet.

## \*Additional benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the apparatus's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. WARNING: Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

- CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For fastest support visit us online for chat and self service PHILIPS solutions at www.philips.com/support

## **CHILD SAFETY:** PROPER TELEVISION PLACEMENT MATTERS

## THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old- must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

## **TUNE IN TO SAFETY**

- ALWAYS follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS read and follow all instructions for proper use of your television.
- NEVER allow children to climb on or play on the television or the furniture on which the television is placed
- NEVER place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

# CTA.tech/safety Consumer Technology

**Association**<sup>®</sup>

## WALL OR CEILING MOUNT YOUR TELEVISION

- ALWAYS contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- ALWAYS follow all instructions supplied by the television and mount manufacturers.
- ALWAYS make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

## MOVING AN OLDER TELEVISION TO A NEW PLACE **IN YOUR HOME**

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- ALWAYS place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- NEVER place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- ALWAYS make sure your older CRT television does not hang over the edge of your furniture.

# Important safety instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **9.** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **10.** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **11.** Only use attachments / accessories specified by the manufacturer.

Model #

PLA50B

SAN25BB

Your TV meets the VESA standard for wall mounting. Consult with your

The recommended wall mount bracket kit (sold separately) allows the

• For detailed information on installing the wall mount, refer to the wall

Funai Corporation is not responsible for any damage to the product

bracket or mount the TV onto the bracket on your own. • The wall mount bracket must be installed by experts.

or injury to yourself or others if you elect to install the TV wall mount

local dealer for a wall mount bracket which is compatible with your TV

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

Brand

SANUS

Wall mount bracket kit

mounting of the TV on the wall

mount Instruction book.

55PFL4901

50PFL4901

43PFL4901

model



Screw dimension

M6 x 0.472" (12mm)


M4 x 0.472" (12mm)

- **13.** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Example of antenna grounding as per NEC -National Electric Code

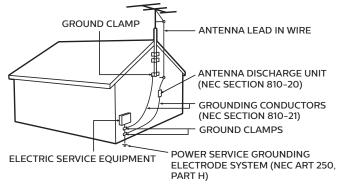

## Funai Corporation is not liable for these types of accidents or injuries noted below.

- Install the wall mount bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.

## When installing the unit on the wall, allow this much space.

Тор	: 11.8 inches (30cm)
Left and right side	: 5.9 inches (15cm)
Bottom	: 3.9 inches (10cm)

# 1 Notice

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Funai Corporation reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this Owner's Manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Funai Corporation warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Funai Corporation cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Funai Corporation will be adapted and published on the Funai Corporation support website as soon as possible.

## **Pixel characteristics**

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

## Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Service Centers and official repair shops. Failure to do so shall void any warranty, stated or implied. Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

## Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

## Declaration of conformity

Trade name	:	PHILIPS
Responsible party	:	Funai Corporation, Inc.
Model	:	55PFL4901, 50PFL4901, 43PFL4901
Address	:	12489 Lakeland Road, Santa Fe Springs, CA 90670, USA*
<b>T</b> . I I		1 066 012 2202

- Telephone number : 1866 813 3283
- \* This is not the mailing address for Open Source Software or Customer service.

## Modifications

This apparatus may generate or use radio frequency energy. Changes or Modifications to this apparatus may cause harmful interference.

Any Modifications to the apparatus must be Approved by Funai Corporation.

The user could lose the authority to operate this apparatus if an unauthorized Change or Modification is made.

## Cables

Connections to this device must be made with shielded cables with metallic RFI / EMI connector hoods to maintain compliance with FCC Rules and Regulations.

## **Canadian notice**

CAN ICES-3 (B)/NMB-3 (B)

Standard Televísion Receiving Apparatus, Canada BETS-7 / NTMR-7.

The following FCC/IC RSS applies to the Wireless LAN adapter included in this product. FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Country Code Statement

For product available in the USA market, only channel 1~11 can be operated. Selection of other channels is not possible.

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that do not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

5150-5250 MHz band is restricted to indoor operations only.

High-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

## Compliance with IC requirement RSS-210 A9.4.4

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

## Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and

trademarks of Dolby Laboratories



sonic

ABSOLUTE **3D** SOUND

emotion PREMIUM Sonic Emotion and the Sonic Emotion logo symbol are registered trademarks of sonic emotion ag.

the double-D symbol are

Licensing Corporation.



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

## **Consumer Notice:**

This TV has been set to maximize energy efficiency while delivering the best possible picture using the factory installed home mode settings.

Changing or enabling other features in this TV (e.g. brightened backlighting) will possibly increase energy consumption beyond the original ENERGY STAR® qualified limits.



Netflix is available in certain countries. Streaming membership required. More information at www.netflix.com.

VUDU™ is a trademark of

VUDU. Inc.











PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission.

YouTube and the YouTube logo

are trademarks of Google Inc.

CinemaNow and the CinemaNow logo are trademarks of BestBuy Stores L.P. and BestBuy Canada LTD.

Hotlist, Samba, Samba TV and associated logos are trademarks of Free Stream Media Corp.

Portions of this software are copyright © The FreeType Project (www.freetype.org).

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

Some features may require an always-on broadband internet connection, firmware update and/or a minimum bandwidth. Internet services vary by location.

Funai Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertising. Funai Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Funai Corporation Inc. will strive to provide a good selection of services, content or software, Funai Corporation Inc. does not warrant continued access to any specific services, and content or software.

Funai Corporation Inc. does not warrant Wireless Screencasting compatibility with all source devices such as smartphones, tablets, laptops, etc. due to large variability in hardware, firmware, drivers, software and implementation of wireless casting applications on these source devices. Although Funai Corporation Inc. will strive to enhance compatibility and performance across a range of source devices, Funai Corporation Inc. does not warrant compatibility with specific source devices.

# 2 Important

## Positioning the TV

- Large screen TVs are heavy. 2 people are required to carry and handle a large screen TV. Make sure to hold the upper and bottom frames of the Unit firmly as
- illustrated. Install the Unit in a horizontal and
- stable position. Do not install the Unit in direct sunlight or in a place subject to



- dust or strong vibration. Depending on the environment, the temperature of this Unit may increase slightly. This is not a malfunction
- Avoid a place with drastic temperature changes Do not place anything directly on top or bottom of the Unit
- Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the Unit is placed too close to them. In this case, please ensure enough space between the external devices and the Unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC Power Cord and Outlet to disconnect the TV from the AC Outlet.
- Before you move the TV, disconnect attached Cables to
- before you move the TV, disconnectors, especially the TV Tuner. Be sure to Unplug the AC Power Plug from the AC outlet before moving or carrying the Unit. When moving the TV and then Setting it down, please be careful not to pinch the AC Power Cord under the Unit.

 
## **Regulatory notices**

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided. Make sure to leave a space of 4 inches (10cm) or more around this apparatus.

Press 🕁 to turn the unit On and go into Standby mode. To completely turn Off the unit, you must unplug the AC power

Plug from the AC Power Outlet. Disconnect the AC Power Plug to shut the unit Off when trouble is

found or not in use. The AC Plug shall remain readily available.



Never use a gas duster on this TV.

The gas trapped inside of this unit may cause ignition and explosion.

CAUTION:	Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
WARNING:	Batteries (battery pack or battery installed) should not be exposed to excessive heat such as sunshine, fire or the like.
WARNING:	To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions. Tipping, shaking or rocking the unit may cause injury / death.

## Environmental care



The packaging of this product is intended to be recycled. Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit www.recycle.philips.com

## End of life directives


Philips pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

## Disposal of used batteries

The batteries supplied do not contain the heavy metals mercury and cadmium, however in certain localities, disposing batteries with household waste is not permitted. Please ensure you dispose of batteries according to local regulations.

## Preparing to move / ship the unit

Please pack the unit properly by following the diagram on the carton (as noted below)

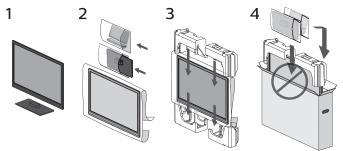

To avoid damage to the screen, do not pack the stand on the same side as the TV screen, refer to the step 4 above

# 2 Getting started

## **Features**

- DTV / Analog TV / CATV
- You can use your remote control to select channels which are broadcast in digital format and conventional analog format. Also, cable and satellite subscribers can access their TV channels.
- Information display
   You can display on the TV screen the title, contents (DTV only) and other information on the current
   program.
- Autoprogram

This unit automatically scans and memorizes channels available in your area, eliminating difficult setup procedures.

Net TV

This unit lets you enjoy internet services. Use the remote control to browse the Net TV pages. You can play movies and much more, all from your TV screen.

- Child lock
   This feature allows you to block children's access to inappropriate programs.
- Closed caption decoder

Built-in closed caption decoder displays text for closed caption supported programs. • MTS / SAP tuner

- Audio can be selected from the remote control.
- Auto standby If there is no input signal and no operation for 15 minutes, the unit will go into standby mode automatically.
- Sleep timer You can set the unit to go into standby mode after a specific amount of time
- Choices for on-screen language
   Select your on-screen language: English, Spanish or French.
- Stereo sound function
- PLL frequency synthesized tuning

Provides free and easy channel selection and lets you tune directly to any channel using the number and decimal point \*\* keys on the remote control.

- Various adjustments for picture and sound Customizes picture quality suitable for your room and sets your sound preference.
- EasyLink via HDMI link
   EasyLink allows your other HDMI link devices to be controlled by the HDMI cable connected to
   your TV.
- HDMI input
- HDMI-DVI input

If your video device has a DVI output jack, use an HDMI-DVI conversion cable to connect the unit

- Component video input
- PC input
- AV input
   Audio and video input from an external device
- USB terminal
- The picture, music and video files stored on a USB memory stick can be played back on this unit. • Digital audio output
- Headphone audio output

Headphone 3.5mm stereo jack for personal listening.

User Manual

Quick Start guide

 
Quick Start Guid

Caution Sheet









TV base and Screws



Screws packed with this Unit.

Model	Quantity	Size
55PFI 4901	8	M4 x 0.472"(12mm)
55PFL4901	2	M5 x 0.472"(12mm)
50PFL4901	8	M4 x 0.472"(12mm)
43PFL4901	3	M4 x 0.787"(20mm)

\* Caution Sheet is not included in 43PFL4901.

-	Note(s)
	(-)

E

- If you lose the screws, please purchase the above-mentioned Phillips head screws at your local store.
- If you need to replace these accessories, please refer to the part name or No. with the illustrations and call our toll free customer support line found on the cover of this User manual.

#### When using a universal remote control to operate this unit.

- Make sure the component code on your universal remote control is set to our brand. Refer to
  the instruction book accompanying your remote control for more details.
- We do not guarantee 100% interoperability with all universal remote controls.


## Symbols used in this User manual

The following is the description for the symbols used in this User manual. Description refers to:

**Digital TV operation** 

Cable / NTSC (Analog) TV operation

• If neither symbol appears, the operation is applicable to both.

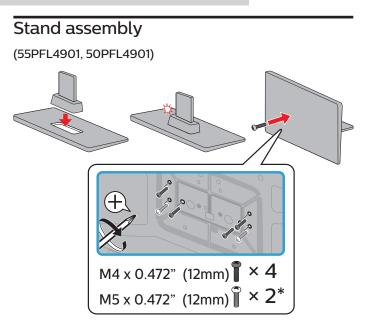


\* For 55PFL4901 only.

## Attaching the base


You must attach the base to the unit to have it as a table top unit. Be sure the front and rear of the base match the proper direction. For large screen TVs, at least 2 people are required for these steps.

#### (55PFL4901, 50PFL4901)


#### 1

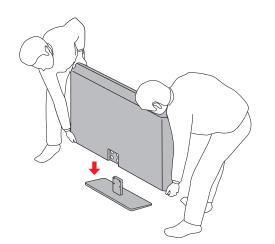

2

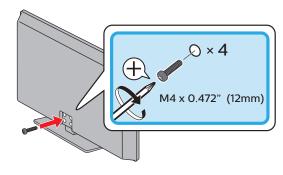


1

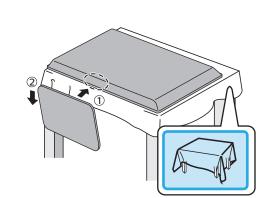




2

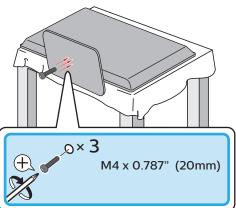

#### Note(s)

- Make sure to use a table which can support the weight of this unit and is larger than this unit.
  Make sure the table is in a stable location.
- Make sure the lable is in a slable location.
- A Phillips-head screwdriver is required to fasten the stands to the TV set.
  When attaching the base, ensure that all screws are tightly fastened. If the base is not properly
- attached, it could cause the unit to fall, resulting in injuries as well as damage to the unit. • To remove the base from this unit, unscrew the Phillips-head screws by reversing the procedure.
- To remove the base from this unit, unscrew the Phillips-head screws by reversing the procedure.
   Be careful not to drop the base when you remove it.
 
## Installing the remote control batteries




- 1 Slide the battery cover off the back of the remote control.
- 2 Insert the two supplied batteries (AAA, 1.5V). Be sure the + and ends of the batteries line up with the markings inside the case.
- 3 Slide the cover back into position.

#### Note(s)

Remove the batteries if not using the remote control for an extended period of time.

## Remote control

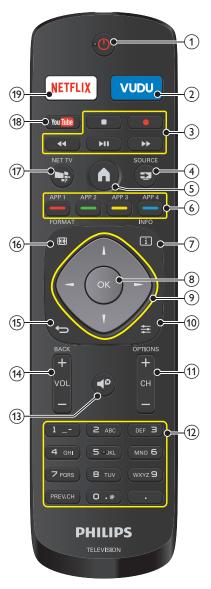



- (DOWER) Turns the TV on from standby or off to standby.
- (2) VUDU
  - Access directly to VUDU.

## 3 EasyLink buttons

- ◄</>> : Searches backward or forward through the disc.
- Starts, pauses or resumes playback.
  - : Stops the disc playback.

## Note(s)

 Pause may not work properly on some devices even if they are EasyLink (HDMI CEC) compliant.

#### (4) ➡ SOURCE

Selects connected devices.

- (Home) 5 **↑**
- Displays the main menu.
- 6 Apps (APP1 / APP2 / APP3 / APP4) buttons
- Works as direct access to user specified net apps.

## 

- Displays information about the current program.
- 8 OK

Press to decide the command of setting when the Home menu is displayed.

(9) ▲▼◀► (NAVIGATION buttons)

Moves the cursor, selects the on-screen menu items.

## 10 ₩ OPTIONS

Displays a list of menu items applicable to the highlighted object or screen.

(1) CH + / – Selects a channel.

## (12) 0 - 9 (NUMBER buttons)

Used to enter a channel / program number.

• (DOT) : Use with 0-9 to select digital channels.

For example, to enter 2.1, press



PREV.CH : Returns to the previously viewed channel.

## (13) **4**<sup>®</sup> (MUTE)


- Turns the sound on and off.
- (14) VOL + / -
  - Adjusts the volume.
- (15) ← BACK
  - Returns to the previous menu operation.
- 16 E FORMAT

Adjusts the picture size on the TV screen.

- T NET TV
- Access to Net TV menu directly. (18) YouTube
  - Access directly to YouTube.
- (19) NETFLIX

Access directly to Netflix.

## Control panel

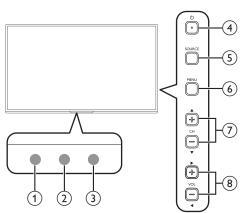

## (1) Remote control sensor

Receives IR signal from remote control.

#### (2) Ambient light sensor

Alters the brightness of the TV screen automatically by detecting your room lighting level. Do not block this light sensor window which allows proper operation.

#### (3) Power on / Standby indicator

(On : lights in white, Standby : no light)

#### ④ (DOWER)

Turns the TV on or switches the TV into standby mode.

#### 5 SOURCE

Selects connected devices.

## 6 MENU

Opens the main on-screen menu.

## ⑦ CH▲(+)/▼(–)

Selects a channel. In the menu screen, moves the cursor up (  $\blacktriangle$  ) ( – ) / down (  $\bigtriangledown$  ) (+).


## ⑧ VOL◀(-)/▶(+)

Adjusts the volume. In the menu screen, moves the cursor left ( $\blacktriangleleft$ ) (–)/ right ( $\triangleright$ ) (+).

## VOL◀(–): Volume down

VOL►(+) : Volume up

## Terminals

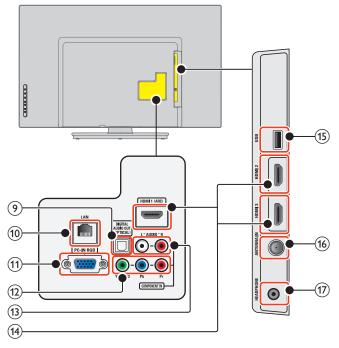

#### (9) Digital audio output jack

Digital audio (S/PDIF) output to home theaters and other digital audio systems.

#### 10 Ethernet port

For internet connection using an Ethernet cable with an RJ-45 connector.

## 11) PC input jack

VGA cable connection for PC.

#### (12) Component (Y/Pb/Pr) / Composite video (VIDEO) input jack(s) for VIDEO

Composite video input (VIDEO) jack is a shared jack with component video input (Y) jack.

## (13) Analog audio (L/R) input jacks

- Connect analog audio signals from;
- HDMI-DVI / Analog audio (L/R) jacks signal
- Component video / Analog audio (L/R) jacks signal
- Composite video / Analog audio (L/R) jacks signal
- PC connection / Analog audio (L/R) jacks signal with stereo mini 3. 5mm plug audio cable on PC

#### (14) HDMI input jack(s)

Digital audio and video input from high definition digital devices such as DVD / Blu-ray disc players, cable / satellite set-top boxes, PC's, etc.

\* For HDMI 1 only

In addition to normal HDMI and HDMI-DVI functionality, it outputs TV audio to an HDMI-ARC-compliant device, such as a home theater system.

#### (15) USB terminal

Data input from USB memory stick only. Do not connect any device to this terminal such as digital camera, keyboard, mouse, etc.

#### (16) 75 ohm cable / Antenna connection

Signal input from an antenna or cable / satellite set-top boxes.


## (7) Headphone audio output jack

Headphone 3.5mm stereo jack for personal listening.

Be sure your antenna or another device is connected properly before plugging in the AC power cord.


## If connecting to an antenna through an RF cable

Any DTV programs that are broadcast in your area can be received for free through an antenna connection.

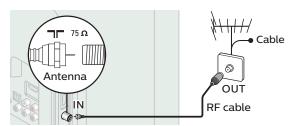


# If connecting Cable / Satellite / IPTV set-top box using an RF cable

If the TV is connected to a cable or set-top box via a coaxial connection, set the TV to channel 3/4 or the channel specified by the service provider

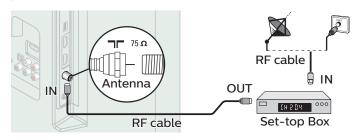


# If connecting Cable / Satellite / IPTV set-top box using an HDMI cable

If the TV is connected to a cable / satellite set-top box via an HDMI cable, make sure you select the correct source by using **3 SOURCE**.

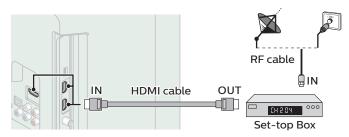


# If connecting Cable / Satellite / IPTV set-top box using component video input

If the TV is connected to a cable / satellite set-top box via component video input, make sure you select the correct component video source by using **3** SOURCE.

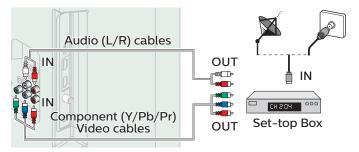

## Connecting a Cable / Satellite / IPTV set-top box, Bluray disc / DVD recorder via composite connectors and analog audio

Do not place your recorder too close to the screen because some recorders can be susceptible to harmful interference from the TV.

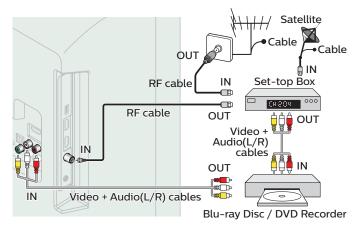

## Note(s)

- If you have any question about the DTV's antenna, visit www.antennaweb.org for further information.
- Depending on your antenna system, you may need different types of combiners (mixers) or separators (splitters) for HDTV signal. The minimum RF bandpass on these devices is 2,000MHz or 2GHz.
- For your safety and to avoid damage to this unit, please unplug the RF coaxial cable from the antenna input jack before moving the unit.
- If you did use an antenna to receive analog TV, it should also work for DTV reception. Outdoor
  or attic antennas will be more effective than a set-top box or inside antenna.
- To turn on your reception source easily between antenna and cable, install an antenna selector.
- If you are not receiving a signal from your cable service, contact the cable provider.

## Plugging in the AC power cord

Make sure that the AC power cord must be plugged to an AC outlet after all the necessary connections are made.

## Caution(s)

 $\bullet$  Connect the analog audio signal cables from the external device to the analog audio L/R input jacks.

• If you have an amplifier, connect the HDMI cable to the HDMI input via your amplifier.

#### Note(s)

• Each time you plug in the AC power cord, no operations will be performed for several seconds. This is not a malfunction.

## No supplied cables are used with these connections:


Please purchase the necessary cables at your local sto

#### Before you connect the AC power cord:

Be sure other devices are connected properly before plugging in the AC power cord.

## Selecting your connection quality

#### HDMI - Highest quality

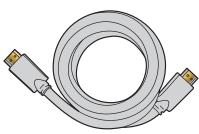


Supports high-definition digital signals and gives highest picture and sound quality. Video and audio signals are combined in one cable. You must use HDMI for full high-definition video and to enable EasyLink(HDMI CEC).

#### Note(s)

- Philips HDMI supports HDCP (High-bandwidth Digital Contents Protection). HDCP is a form of
- digital rights management that protects high-definition content in Blu-ray discs or DVDs.
- The HDMI-ARC connector on the TV features HDMI-ARC functionality. This allows output of TV audio to an HDMI-ARC-compliant device.
- i v addio to ai h ibini-Ai C-comptiant device.

## Component (Y Pb Pr) - High quality

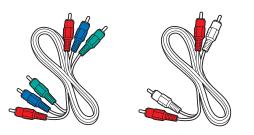

Supports high-definition analog signals but gives lower picture quality than HDMI. Component (Y/Pb/Pr) video cables combine red / green / blue video cables with red / white audio (L/R) cables. Match the cable colors when you connect to the TV.

## Composite - Basic quality




For analog connections. Composite video / Audio analog cable usually combine a yellow video cable with red / white audio (L/R) cables. With this unit, yellow cable must be connected to Y (green) jack on the component video input jacks.

## Connecting your devices

#### HDMI digital connection

HDMI connection offers the highest picture quality. HDMI (High-Definition Multimedia Interface) transports high-definition digital video and multi-channel digital audio through a single cable.

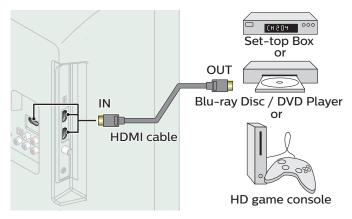


#### Note(s)

- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i / 480p / 720p / 1080i, 1080p 24/30/60Hz of video signals, 32kHz / 44.1kHz and 48kHz of audio signals.
- This unit accepts LPCM, AC-3, DD+ audio signal.
- This unit accepts only signals in compliance with EIA861.

#### **HDMI-DVI** connection


This unit can be connected to your device that has a DVI terminal. Use an HDMI-DVI conversion cable for this connection and it requires audio cable for analog audio signal as well.

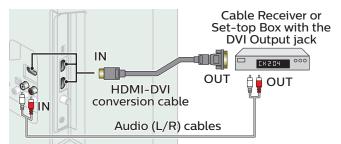

#### Note(s)

- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Some newer HDMI devices may output signals that this TV cannot receive (such as 4K or HDR).
   For such devices you will need to change the output of that device to a compatible signal.
   Please consult with the manufacturer or the user manual of that device.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i, 480p, 720p, 1080i and 1080p video signals.
- HDMI-DVI connection requires separate audio connections as well and the audio signals are output as analog (L/R) audio.
- DVI does not display 480i image which is not in compliance with EIA/CEA-861/861B.

HDMI-ARC allows you to use EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

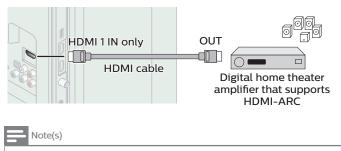


- The HDMI 1 connector is HDMI Audio Return Channel (ARC) compliant. Use it to output digital audio to an HDMI home theater system.
- Be sure that the device is HDMI CEC and ARC compliant and that the TV is connected to the device using an HDMI cable attached to HDMI-ARC connectors.

## Component analog video connection

Component analog video connection offers better picture quality for video devices connected to the unit.

If you connect to the unit's component video (Y/Pb/Pr) input jacks, connect analog audio cables to the analog audio (L/R) input jacks.

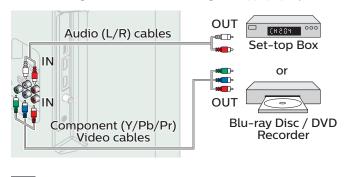


Note(s)

• The unit accepts 480i, 480p, 720p, 1080i and 1080p of video signals for this connection.

## Composite analog video connection

Composite analog video connection offers standard picture quality for video devices connected to the unit.


If you connect to the unit's component/composite video (Y/VIDEO) input jack (green), connect audio cables to the audio (L/R) input jacks. When the audio is monaural, then only connect to the audio L input jack.

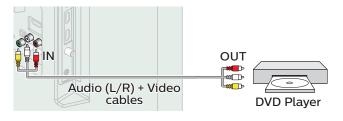

## Note(s)

- With this unit, yellow cable must be connected to Y (green) jack on the component video input jacks.
- Whenever you connect to the composite video input jack (Y/VIDEO), you must disconnect the component video input jacks (Pb and Pr). If you leave those jacks connected, it may cause an unstable picture.


# Connecting the TV to the internet using an Ethernet cable

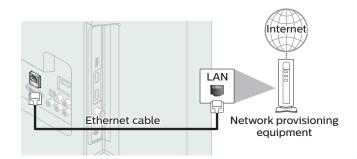

#### Note(s)

- Please purchase shielded Ethernet cables at your local store and use them when you connect to network equipment.
- After connecting an Ethernet cable, set up necessary network settings. Connect to network p. 38
- Do not insert any cable other than an Ethernet cable to the Ethernet port to avoid damaging the unit.
- If your telecommunications equipment (modem, etc.) does not have broadband router functions, connect a broadband router.
- If your telecommunications equipment (modem, etc.) has broadband router functions but there
  is no vacant port, then add a hub.
- For a broadband router, use a router which supports 10BASE-T / 100BASE-TX.
- Do not connect your PC directly to the Ethernet port of this unit.

WLAN

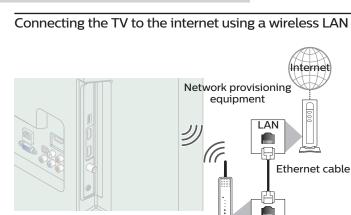

Broadband router


#### Note(s)

 - After you make the wireless connection, set up the necessary network settings. Connect to network 🛶 p. 38
- Use a wireless LAN Access Point (AP) (e.g. broadband wireless router) which supports IEEE 802.11 a/b/g/n/ac. (n is recommended for stable operation of the wireless network.)
- This unit does not support Ad-hoc mode
- Other radio devices or obstacles may cause interference to the wireless network connection.

## Digital audio output connection

If you connect this unit to an external digital audio device, you can enjoy multi-channel audio like 5.1ch digital broadcasting sound.


Use a digital audio optical cable to connect the unit to external digital audio devices



## PC connection


#### HDMI connection

 This unit can be connected to your PC that has an HDMI terminal. Use an HDMI cable for this digital connection.



#### HDMI-DVI connection


This unit can be connected to your PC that has a DVI terminal. Use an HDMI-DVI conversion cable for this video digital connection and it requires stereo mini 3.5mm plug audio cable for analog audio signal as well.

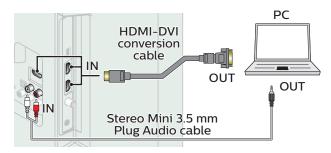

#### VGA connection

This unit is equipped with a PC input jack. If you connect this unit to your PC, you can use this unit as a PC monitor.

Use a VGA cable for this video connection and it requires a stereo mini 3. 5mm plug audio cable for analog audio signal as well.

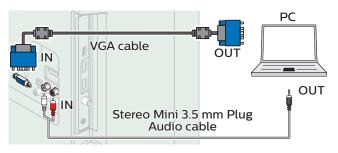

The following PC-input video signals can be displayed:

Format	Resolution	Refresh rate
VGA	640 x 480	
SVGA	800 x 600	
XGA	1,024 x 768	60Hz
WXGA	1,280 x 768	
WAGA	1,360 x 768	
FHD	1,920 x 1,080	24/30/60Hz

Other formats or non-standard signals will not be displayed correctly.

## Note(s)

- Please purchase a VGA cable that has a ferrite core (0.6 inches (15mm) or more in diameter).
- Please purchase a HDMI-DVI conversion cable that has a ferrite core.
- The following operations may reduce noise.
- Attach a ferrite core to the AC power cord of your PC.
- Unplug the AC power cord and use the built-in battery of your portable / laptop PC.
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i, 480p, 720p, 1080i and 1080p video signals only when using the HDMI connection and HDMI-DVI connection.
- $\cdot$  HDMI-DVI connection requires separate audio connections as well and the audio signals are output as analog (L/R) audio.
- DVI does not display 480i image which is not in compliance with EIA/CEA-861/861B.

## USB memory stick

This unit offers easy playback of picture, music and video files.

Insert the USB memory stick into the USB terminal shown below. For a complete list of file formats and specifications supported, refer to USB Section  $\implies p. 24$ 



#### Note(s)

- The unit recognizes only a USB memory stick.
- Do not use a USB hub or an extension cable to connect an external hard disk drive to the unit. (Not supported.)
- Always insert a USB memory stick directly to this unit.
- A USB memory stick is not supplied with this unit.
- We do not guarantee that all USB memory sticks can be supported by this unit.
- Be sure to keep a backup copy of the original files on your USB device before you play them back on this unit. We have no responsibilities for damage or loss of your USB stored data.
- To protect your USB memory stick files from being erased place the write protect sliding tab in the protect position (if available).
- When you are ready to remove a USB memory stick, set the unit to go into standby mode to avoid any damage to your data and the unit.
- A USB memory stick that requires its own driver or the device with a special system such as
- fingerprint recognition are not supported.
- This unit is not allowed to use the USB memory stick which requires an external power supply
   (500mA or more).

These operations are accessible by remote control. Some may also be accessible by the main unit's control panel

## Initial setup

This section will guide you through the unit's Initial setting which includes selecting a language for your on-screen menu, country, location and Autoprogram, which automatically scans and memorizes viewable channels. You can also set the network connection in this setting.

## Before you begin:

Make sure the unit is connected to an antenna or cable.

- 1 After making all the necessary connections, press  $\mathfrak{O}$  to turn on the unit.
  - It may take a few moments to turn on the unit for the first time.
  - Initial setup menu appears automatically after the unit is turned on.
- 2 Use  $\blacktriangle \forall$  to select the on-screen language, country, TV placement and location in the middle of the TV screen, then press **OK**.
  - You must set Home in location setting. Otherwise, Picture and Sound settings you adjusted will not be memorized after the unit goes into standby mode.
- 3 Use ◀▶ to select Skip or Next on network setup screen.
- 4 Use  $\blacktriangle \forall$  to select Wireless or Wired, then press OK.




If you have a wireless router, select <b>Wireless</b> to connect to the internet.
If you connect with an Ethernet cable, select <b>Wired</b> to connect to the internet.

 If you have a router with easy connect function, select Wireless and use ▲ ▼ to select Easy Connect, then press OK.

5 Follow the on-screen instructions to complete the installation.

 When you select On in the selection screen for Auto software update, A message will appear later if there is the latest software on the network server.


- 6 Use  $\blacktriangle \lor$  to select the signal type.
  - If the TV is connected to a cable or satellite set-top box, select the 2nd one and skip to step **8**.

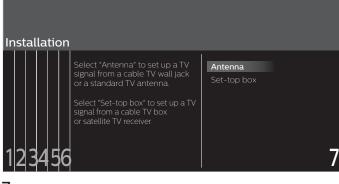



Installation	Ļ	
123456	Make sure that you have attached your antenna or cable signal into the jack on the back of your TV labeled "ANTENNA IN". Now select either Antenna or Cable, using up/down key of the remote control. Once you have made your selection, press the OK button to proceed.	Antenna Cable Skip 7

- When Antenna is selected, the TV detects antenna signals. It searches for DTV and analog TV channels available in your area.
- When Cable is selected, the TV detects signals supplied by cable.
   It searches for DTV, analog TV and cable channels available in your area.
- Auto programming will begin.

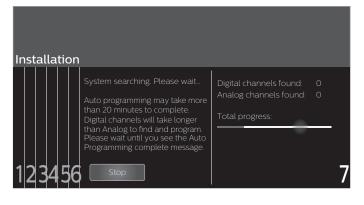

8 Use  $\blacktriangle V$  to select your preferred picture setting, then press OK.

Please select your preferred picture mode.	Natural
The energy consumption in the "Standard" setting is Energy Star certified.	Vivid Sports
Skip	12

9 Use  $\blacktriangle \lor$  to select your preferred sound setting, then press OK.



10 After Picture and sound setup is completed, a message will appear if there is the latest software on the network server.


Note(s)
• If you are not receiving a signal from your cable service, contact the cable provider.
$\cdot$ If you press $igodot$ during Autoprogram, this setup of TV channels will be cancelled.
<ul> <li>The initial Autoprogram function can be executed for either Antenna or Cable only once. When you change the connection (Antenna / Cable), select Search for channels again.</li></ul>

## After an initial setup is completed...

- If you want to scan the channels automatically again.
   Search for channels → p. 35
- If you want to change to another language.
   Language p. 33
- If you want to change the country setting.
   Country → p. 48
- If you want to change the location setting.
   Location 
   p. 33
- If you want to change the network setting.
   Connect to network 
   p. 38
- If you want to restore the picture and sound setting.
   Picture and sound setup → p. 28

# 3 Use your TV

# Switching on your TV and putting it in standby mode

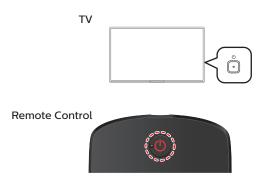


## To turn the TV on from standby or off to standby

• Press 🕁 on the TV or the remote control.

## Note(s)

 Energy consumption contributes to air and water pollution. When the AC power cord is plugged in, your TV consumes energy with a very low standby power consumption.

## Adjusting volume

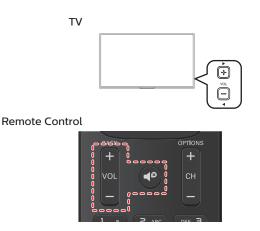


#### To decrease or increase volume

- Press VOL 
   > on the TV or press VOL + / on the remote control.
   VOL 
   > (-) : Volume down
- VOL▶ (+) : Volume up
- To mute or unmute sound
- Press ◀<sup>𝔅</sup> on the remote control to mute the sound.
- Press  $\blacksquare$  again or VOL + / to recover the original sound.

## Switching channels

 тν



#### Remote Control



## To select channels by using CH $\blacktriangle$ / $\bigtriangledown$ or CH + / -

Press CH ▲ (up) / ▼ (down) on the TV or press CH + / – on the remote control.

## To select channels by using the NUMBER buttons

## Digital TV operation

- For digital channels, press a number followed by a dot "-" and the corresponding sub channel number.
  - When selecting digital channel 11.1
  - Be sure to press before entering the subchannel number.



Cable / NTSC (Analog) TV operation

- When selecting cable or analog channel 11



Press **PREV.CH** to return to the previously viewed channel.

#### Note(s)

- To select the non-memorized channels, use the NUMBER buttons.
- Channel not available or No signal will appear on the TV screen after the subchannel broadcast
  is over.
- Audio only message will appear on the TV screen, when you receive only sound signal.

# Watching channels from an external device

Switching each input mode can easily switch with the remote control between TV and external devices when they are connected to the unit.

Turn on the set-top box or the connected device.



① Press SOURCE and use <> to select the set-top box or the connected device and wait a few seconds till the picture appears.




(2) Use the remote control of the set-top box or the connected device to select channels.

## Access the Home menu

## 1 Press



## Guide to Home menu

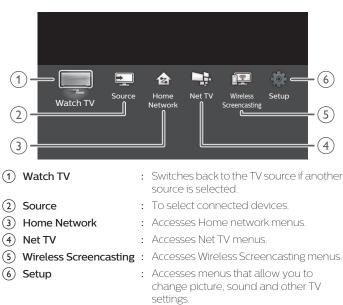

## Lock or unlock your device from the Home menu

This section describes how to lock or unlock specified device.

- 1 Press **⊃ SOURCE** on the remote control.
- 2 Use **I** to select a device to lock or unlock.
- 3 Press **≅ OPTIONS** on the remote control.
- 4 Use  $\blacktriangle$  to select Lock or Unlock, then press OK.
  - If device lock is unlocked, Lock will be displayed. If device lock is locked, Unlock will be displayed at the top right of the device icons.
- 5 Enter your PIN. Change PIN → p. 37

## Changing device type

You can change device icons displayed in the source list.

- 1 Press **⇒ SOURCE** on the remote control.
- 2 Use  $\triangleleft \triangleright$  to select the desired device.
- 3 Press red button on the remote control.
- 4 Use  $\blacktriangle$   $\forall$  to select the desired type, then press OK.

## To reset the type

## Scan connections

You can rescan TV connections and update the source list.

## Before you begin:

You must set On in Master EasyLink. 🛶 p. 34

- 1 Press SOURCE on the remote control.
- 2 Use  $\triangleleft \triangleright$  to move the cursor to any device.
- 3 Press **₽ OPTIONS** on the remote control.
- 4 Use  $\blacktriangle$   $\forall$  to select Scan connections, then press OK.

## Create a list of favorite channels

You can create lists of your preferred TV channels so that you can find those channels easily.

- 1 Press OK while viewing a TV program.
- 2 Use ▲▼ ◀► to select the desired channel, then press **yellow** button.
- 3 Use ▲▼ to select the desired favorite list (Favorites 1 Favorites 4), then press OK to add or remove on the list of favorite channels.
  - $\blacksquare$  indicates that the channel is added.
  - Indicates that the channel is removed.
  - $\cdot$  The channel will be marked with  $\diamondsuit$  icon.

## Display the list of favorite channels

- 1 Press **OK** while viewing a TV program.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Favorites.

#### To change the favorite list

- 1 Press blue button.
- 2 Use  $\blacktriangle \lor$  to select the desired favorite list (Favorites 1 Favorites 4).

## To remove a channel from the favorite list

- 1 Select the desired channel, then press **yellow** button.
- 2 Use  $\triangleleft \triangleright$  to select Yes, then press OK.

## Changing Picture format


Display modes can be selected when your TV receives a 16:9 or 4:3 video signal.

Three types of display modes can be selected for a PC input signal.

Press 🖼 FORMAT repeatedly to switch the TV aspect ratio.



#### For 16:9 video signal

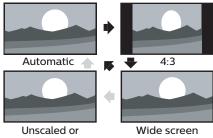


Full\*(1080i/p only)

Automatic	Other than DTV and HDMI connected devices, enlarges the picture to best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.	
4:3	Displays a 16:9 picture at a 4:3 size; the picture is shortened horizontally. Sidebars appear on both edges of the screen.	
Wide screen	Displays a 16:9 picture that is stretched horizontally and vertically.	
<b>Unscaled</b> or <b>Full</b> * (1080i/p only)	Displays a scaled 16:9 picture. Bars appear on both the upper and lower portions of the screen depending on the type of video signal.	


\* This part differs depending on the product you have.

For 4:3 video signal

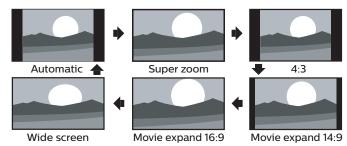

Automatic	Other than DTV and HDMI connected devices, enlarges the picture to best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.
Super zoom	Displays a 4:3 picture at a 16:9 size; the picture is stretched horizontally and vertically and its left and right edges are enlarged. This crops out some of the top and bottom of the picture.
4:3 Displays a 4:3 picture at its original size. Sidebars appear on both edges of the scree	
Movie expand 14:9	Displays a 4:3 picture at a 14:9 size; the picture is stretched horizontally and vertically. This crops out some of the top and bottom of the picture. Sidebars appear on both edges of the screen.
Movie expand 16:9 Displays a 4:3 picture at a 16:9 size; the picture stretched horizontally and vertically. This crop out some of the top and bottom of the picture of the picture of the top and bottom of the picture of the picture of the top and bottom of the picture	
Wide screenDisplays a picture that is stretched out of proportion to fill the screen.	

#### For PC input signal

 

• This unit can also be connected to your PC that has a DVI terminal. Use an HDMI-DVI conversion cable for this video connection and it requires stereo mini 3.5mm plug audio cable for analog audio signal as well.

• Refer to 16:9 video signal on this page if the PC has HDMI output.

4:3 Displays a proportionately stretched pictur Sidebars appear on both edges of the scre	
Wide screenDisplays a picture that is stretched out of proportion to fill the screen.	
Unscaled Displays a picture in its original size.	


If the signal source has side or top-bottom bars inserted into the picture, the Picture format function will not eliminate them.

## TV screen information

You can display the currently selected channel or other information such as the aspect ratio on the TV screen.

In the digital mode, the detailed broadcasting information for the current off-the-air channel such as program title and program guides are displayed.

1 Press I INFO.

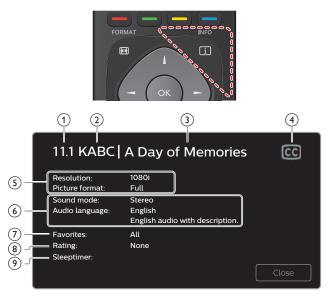

(1) Channel number / Input mode

Switching channels 🛶 p. 19

Watching channels from an external device 🛶 p. 20

- 2 Broadcast station
- 3 Program title (for DTV only)
- (4) CC (not available if Closed caption is set to Off)
   Caption settings → p. 31
- (5) Program's image aspect ratio
   Changing Picture format → p. 21
- 6 Audio language (DTV) / Audio mode (Analog TV)
   Sound → p. 30
- (7) Favorites

Create a list of favorite channels 🛶 p. 21

- 8 Child lock ratingChild lock → p. 36
- (9) Remaining time on sleep timer
   Sleeptimer → p. 32
- 2 Press IINFO to hide the information.

#### Note(s)

- While the program guide is displayed, the closed caption function is interrupted.
- The information display will automatically disappear in 5 seconds.

 
## Using options menu

You can access to some TV settings directly by using **#OPTIONS**.

1 Press ≢ OPTIONS to display options menu, then press OK.



2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select a desired setting, then press OK.



## (1) Options

Following settings can be configured.

Closed captions	To choose the Closed captions display setting. Closed captions in p. 31	
Digital audio language	To Select the language according to your preference. (It differs depending on the program.) Digital audio language <b> p. 37</b>	
Mono/Stereo	To Select an audio format. Mono/Stereo 🛶 p. 37	

## (2) Controls

If you have our brand products such as Blu-ray disc player or DVD recorder that are compatible with EasyLink functions, connect them to this unit via an HDMI cable so you can simply operate various items from this unit's remote control.

Before you begin:

select a device connected to an HDMI connection. **••• p. 20** You must set **On** in **Master EasyLink**. **••• p. 34** Otherwise, LINK does not work even if you connected our brand devices to this unit.

1 Press **≅ OPTIONS** to display options menu.

- 2 Use **◄**► to select **Controls** then press **OK**.
- 3 Use  $\blacktriangle$   $\lor$  to select the desired item, then press OK.

Device-menu	Controls the menu of your connected EasyLink device.	
Device-contents	Controls the top menu of your DVD or Blu-ray discs.	
Device-favorite	Controls the pop-up menu of your Blu-ray discs.	

#### Note(s)

Some of EasyLink functions may not be available depending on your EasyLink devices or discs.

 You must connect this unit to our brand EasyLink devices and be sure its EasyLink (HDMI CEC) setting is also set to On.

• We do not guarantee 100% interoperability with other brands of HDMI link compliant devices.

③ Picture and sound

Following settings can be configured.

23	English

Auto picture	To set predefined picture mode. Picture 🛶 p. 28			
Auto sound	To set predefined sound mode. Sound <b></b>			
Headphone volume	To adjust headphone volume. Sound 🛶 p. 30			
TV speakers	To Select the audio output from the unit's speakers or not. <b>Sound</b>			
Picture format	To switch the TV aspect ratio. Changing Picture format <b>p</b> . 21			
Setup	To display setup menu.			

#### (4) ECO settings


Following settings can be configured

Following sellings can be conliguied.		
	You can turn off the unit automatically when there is no operation for specified time. In spite of this setting, the unit goes into standby mode automatically if there is no signal input and no user operation for 15 minutes.	
Switch off timer	Press ▲ repeatedly to change the amount of time (increases the time by 30 minutes up to 240 minutes).	
	Each press of ▼ will decrease the time by 30 minutes.	
	To cancel the timer, press ♥ repeatedly until " <b>0</b> " is displayed.	
Light sensor	To set light sensor On or off. Picture ➡ p. 28	

## USB

Your TV is fitted with a USB connection that enables you to view photos, listen to music or watch video files stored on a USB memory stick.

- 1 Press ⊇ SOURCE and use ◀► to select USB, then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired file, then press OK.

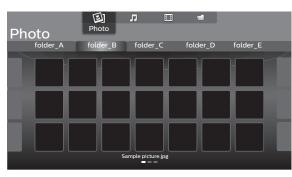

These recorded files must meet specifications shown below:

Picture (JPEG / Progressive JPEG)					
JPEG Upper limit 4000x4000 pixels					
Progressive JPEGUpper limit1024x768 pixels					
Muric (MD2 / MA) / (AAC)					

Music (MP3 / WAV / AAC)							
MP3	Sampling frequency		16 kHz – 48 kHz				
	Cons	Constant bit rate			8 kbps – 320 kbps		
WAV	Sampl	ing frequ	iency	8 kHz – 48 kHz			
	Cons	stant bit I	rate	64 kbp	64 kbps – 1.5 Mbps		
AAC	Sampl	ing frequ	iency	8 kHz -	8 kHz - 48 kHz		
AAC	Cons	tant bit	rate		_		
Video (MPEG / VO	DB/AVI/	MP4)					
Maximum video	H.264, H.265/HEVC, MPEG: 1920x1080@60fps						
Extension	.avi .mpg, .ts, .mpeg .trp, .tp		.vob	.mp4	.mkv		
Video codec Audio codec	MPEG1, MPEG2, MPEG4, H.264	MPEG1, MPEG2, MPEG4	MPEG1, MPEG2, H.264, H.265/ HEVC	MPEG1, MPEG2	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC	
Dolby Digital	YES	YES	YES	YES	YES	YES	
MPEG1/2 audio layer1/2/3	YES	YES	YES	YES	NO	YES	
LPCM	YES	YES	YES	YES	YES	YES	

AAC-LC

YES

YES

YES

YES

YES

YES

## Note(s)

- This unit accepts USB memory stick only. Other storage devices such as external HDD by USB bus power will not work.
- Do not use an extension cord and/or USB hub to connect devices to this unit. Always directly
  insert the USB flash memory stick to this unit directly.
- We cannot be held responsible if your USB memory stick is not supported, nor will we accept
   any liability for damage or loss of stored data.
- The USB memory stick is not supplied with this TV.
- A maximum of 1,023 folders or files can be recognized.
- A file name exceeding 256 characters or contains a dot character is not supported on this TV.
- A USB memory stick that required its own driver or the device with a special system such as fingerprint recognition are not supported.
- Be sure to keep a backup copy of the original files on your USB device before you play them back on this unit. We have no responsibilities for damage or loss of your USB stored data.
- To avoid damaging the USB memory stick and the unit always turn off the unit before you remove the USB memory stick.
- This unit is not allowed to use the USB memory stick which requires external power supply (500 mA or more).
- This unit does not support MTP (Media Transfer Protocol) or the file other than FAT16 and FAT32 file system. If the file is not supported, an error message appears.
- When the unit does not recognize the USB memory stick, try reconnecting it.
- Playing the files recorded with high bit rates, the images can be interrupted in some occasions.
   This unit does not a uppertention of the bit rates are a solutions.
- This unit does not support external subtitles.
- This unit cannot play back a file which goes over the limit of file restriction limit.

## Viewing photos

- 1 Use ◀▶ to select **Photo**, then press **OK**.
- 2 Use  $\triangleleft$  to select the desired item, then press **OK**.
- 3 Press OK or ►II to start a slide show of the files.
  - Press **OK** or **▶ ||** to pause the slide show.
  - The ∎icon appears.
  - Press *dd* or *bb* to move between images.
  - Press ← BACK or to stop the slide show.
  - Press  $\rightleftharpoons$  OPTIONS to display the optional menu, then use  $\blacktriangle \lor$  to select the desired item.

	Off	Sets repeat playback to off.		
Repeat *1	One	Sets repeat playback for a selected image file.		
	All	Sets repeat playback for all image files in the current folder.		
	Short	Switches to the next image in 5 seconds.		
Slide time *1	Medium	Switches to the next image in 10 seconds.		
	Long	Switches to the next image in 15 seconds.		
	None	No effect when switching images.		
	Dissolve	Overlaps the next image on the current image.		
	Wipe right	Pushes the current image out from left.		
	Wipe left	Pushes the current image out from right.		
Transitions *1	Wipe up	Pushes the current image out from bottom.		
	Wipe down	Pushes the current image out from top.		
	Box in	The next image comes to the center from the outside.		
	Box out	The next image goes to the outside from the center.		
	0	Displays an image in its original direction.		
Rotate *2	90	Rotates an image 90 degrees clockwise.		
Rotate 2	180	Rotates an image 180 degrees clockwise.		
	270	Rotates an image 270 degrees clockwise.		
	1X	Displays an image in its original size.		
Zoom *2	2X	Magnifies a current image by 2 times.		
	4X	Magnifies a current image by 4 times.		
Auto picture *1	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)			

\*1 You can set **Repeat**, **Slide time**, **Transitions** and **Auto picture** when images are in slide show.

\*2 You can set Rotate and Zoom when slide show is in pause mode.

## **Playing music**

- 1 Use ◀▶ to select Music, then press OK.
- 2 Use  $\triangleleft$  to select the desired item, then press OK.
- $3 \quad \text{Press OK or } \blacksquare \text{ It o play the selected files.}$ 
  - Press OK or ▶ || to pause, then press OK or ▶ || again to resume.
  - Press 
     to fast-forward search.
  - Press 📢 to fast-backward search.
  - Press to stop playback.
  - Press OPTIONS to display the optional menu, then use ▲ ▼ to select the desired item.

	Off	Sets repeat playback to off.	
Repeat	One	Sets repeat playback for a selected music file.	
	All	Sets repeat playback for all music files in the current folder.	
	Off	Sets shuffle playback to Off.	
Shuffle	On	Sets shuffle playback for all music files in the current folder.	
	Off	The sound will not be output from the unit's speakers.	
TV Speakers	On	The sound will be output from the unit's speakers.	
- Speakers	SpeakersYou can control audio output from your connected EasyLink compliant devices with VOL + / - by using this unit's remote control.		
Auto sound	Selects the sound mode according to your preference. ( <b>Standard</b> , <b>Vivid</b> , <b>Sports</b> , <b>Movie</b> , <b>Music</b> and <b>News</b> )		

## **Playing movies**

- 1 Use  $\triangleleft$  to select Movie, then press OK.
- $2 \quad \text{Use} \blacktriangleleft \blacktriangleright \text{ to select the desired item, then press } \textbf{OK}.$
- $3 \quad \text{Press } \mathbf{OK} \text{ or } \blacktriangleright II \text{ to play the selected files.}$ 
  - Press OK or ▶ || to pause, then press OK or ▶ || again to resume.
  - Press **>>** to fast-forward search.
  - Press 📢 to fast-backward search.
  - Press to stop playback.

Press  $\blacktriangleright II$  to resume from the point at which playback was stopped. Press OK to play from the beginning of the file.

• Press  $\Xi$  OPTIONS to display the optional menu, then use  $\blacktriangle$   $\forall$  to select the desired item. ~ ~ ~

	Off	Sets repeat playback to off.	
Repeat	One	Sets repeat playback for a selected video file.	
	All	Sets repeat playback for all video files in the current folder.	
	Off	The sound will not be output from the unit's speakers.	
TV speakers	On	The sound will be output from the unit's speakers.	
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.	
Auto picture	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)		
Auto sound	Selects the sound mode according to your preference. ( <b>Standard, Vivid, Sports, Movie, Music</b> and <b>News</b> )		

Note(s)

• The resume information will be kept even when the unit is Turned off.

If you play another file while the previously viewed file is being resumed, the resume information
of the previously viewed file will be deleted.

• The file or the folder in resume stop mode will be highlighted in gray on List or Thumbnails.

# 4 Getting more from your TV


This section describes the overview of the **Setup** menu displayed when you press  $\mathbf{\hat{n}}$  and use  $\mathbf{A}$  to Select **Setup**.

The **Setup** menu consists of the function setting items below.

1 Press fto display the Home menu.



2 Use  $\triangleleft$  to select Setup, then press OK.

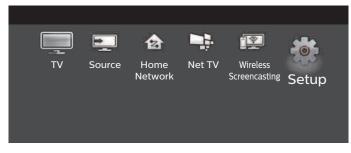

3 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired menu and an item, then press OK.



Picture and sound setup p. 28 → p. 28 Guides you to get the best picture and sound settings.
TV settings → p. 28
Accesses menus that allow you to change picture, sound and TV usage settings.
Search for channels 🛶 p. 35
Guides you through channel installation.
Channel settings p. 35
Accesses menus that allow you to change channel settings.
Connect to network p. 38
Guides you through network installation.
Notwork cottings
Accesses menus that allow you to network settings.
Accesses menas indeatow you to network settings.
Update software p. 43
Guides you through an update of the TV software.
Software settings p. 44
Accesses menus that allow you to change software settings.

## Picture and sound setup

#### Before you begin:

#### You must set Home in Location. 🛶 p. 33

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- Press ↑ and use ◀► to select Setup then press OK.
- 2 Use  $\blacktriangle \forall \blacktriangleleft \triangleright$  to select **Picture and sound setup**, then press **OK**.
- 3 Follow steps 8 to 9 in Initial setup 🛶 p. 18

## **TV** settings

## **Picture**

#### Before you begin:

#### You must set Home in Location. 🛶 p. 33

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- 1 Press  $\square$  and use  $\triangleleft$  to select Setup then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \lor$  to select **Picture**, then press **OK**.

Sound Backlight Features Contrast Installation Brightness Color Tint Sharpness Pixel Plus HD Advanced settings Picture format Mode selection Auto adjustment Clock		Brightness Color Tint Sharpness Pixel Plus HD Advanced settings Picture format Mode selection Auto adjustment	
---	--	---	--

	To set your TV to a predefined picture setting.		
Auto picture	Personal	The customized settings you defined using the <b>Picture</b> menu.	
	Standard	For normal TV viewing.	
	Natural	Ideal picture mode for viewing high quality content without any picture enhancements.	
	Vivid	Enhanced picture contrast and sharpness for viewing in a well-lit room.	
	Sports	Brilliant picture settings for high action.	
	Movie	Deep picture settings for a cinematic experience.	
	Game	Optimized for PCs and game consoles.	
	Energy saving	Eco TV settings for low power consumption.	
	Internet video	Optimized for low bit-rate internet video.	

When you adjust the following settings, **Personal** picture will be set automatically.

	Cursor V	Cursor 🛦	
Backlight	To reduce power consumption and brightness	To increase power consumption and brightness	
Contrast	To decrease contrast	To increase contrast	
Brightness	To decrease brightness	To increase brightness	
Color	To decrease color intensity	To increase color intensity	
Tint	To add green	To add red	
Sharpness	To soften	To sharpen	
Pixel Plus HD	Enters sub-menus to adjust the following setting (Dynamic contrast, Color enhancement, Black stretch, 120 PMR, Noise reduction and MPEG artifact reduction)		
Advanced settings	Enters sub-menus to adjust the following settings: (Color alignment, Custom color management, Light sensor <sup>*</sup> , Gamma and Film mode)		
	Automatic		
	Super zoom		
	4:3		
Picture format	Movie expand 14:9 Changing Picture format p. 21		
	Movie expand 16:9	101111at iii p. 21	
	Wide screen		
	Unscaled		
Mode selection	PC	To turn off image enhancement features which makes the TV to act purely as a monitor	
Mode selection	HDTV	To enable image enhancement features to improve picture quality	
Auto adjustment	To adjust the horizontal / vertical position, clock and phase of the PC screen automatically		
	Cursor <b>V</b>	Cursor 🔺	
Clock	To decrease setting	To increase setting	
Phase	value	value	
Horizontal position	To move PC screen left	To move PC screen right	
		romover escreeninghe	

\* Adjusts backlight for the best picture quality by dynamically adjusting the backlight intensity in accordance with the room lighting condition when the **Light sensor** feature is set to **On**. Please ensure the room lighting is stable and the light sensor is not blocked.

Auto picture	Dynamic contrast	Off
Backlight	Color enhancement	Minimum
Contrast	Black stretch	Medium
Brightness	120 PMR	Maximum
Color	Noise reduction	
Tint	MPEG artifact reduction	
Sharpness		
Pixel Plus HD		
Advanced settings		
Picture format		
Mode selection		
Auto adjustment		
Clock		

Dynamic contrast	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
Color	Off	To set color enhancement to off
enhancement	On	To make colors more vivid and bright
Black stretch	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
120 PMR	Off	To set <b>120 PMR</b> to <b>Off</b>
120 PIVIR	On	To make the video appear smoother
Noise reduction	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
MPEG artifact reduction	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	

Auto pictureColor alignmentModeBacklightCustom color managementRed gainContrastLight sensorGreen gainBrightnessGammaBlue gainColorFilm modeRed offsetTintFilm modeGreen offsetSharpnessBlue gainBlue offsetPixel Plus HDHDHode selectionAdvanced settingsPicture formatHode selectionAuto adjustmentFilm modeFilm selection

	Mode	To set the color temperature to <b>Personal</b> , <b>Cool, Normal</b> and <b>Warm</b> . When you adjust the following settings, <b>Personal</b> will be set automatically.		
		Cursor 🔻	Cursor 🛦	
Color alignment	Red gain	To decrease red contrast	To increase red contrast	
	Green gain	To decrease green contrast	To increase green contrast	
augiment	Blue gain	To decrease blue contrast	To increase blue contrast	
	Red offset	To decrease red brightness	To increase red brightness	
	Green offset	To decrease green brightness	To increase green brightness	
	Blue offset	To decrease blue brightness	To increase blue brightness	
	To select the desired setting, then press <b>OK</b> ( <b>Red</b> , <b>Yellow</b> , <b>Green</b> , <b>Cyan</b> , <b>Blue</b> and <b>Magenta</b> )			
		Cursor <b>V</b>	Cursor 🛦	
Custom color management	Tint	To rotate only selected color tint in clockwise direction	To rotate only selected color tint in counterclockwise direction	
	Saturation	To decrease color with only selected color	To increase color with only selected color	
		T		
	Brightness	To decrease brightness with only selected color	To increase brightness with only selected color	
	Brightness Off	brightness with only	brightness with only selected color	
Light sensor		brightness with only selected color	brightness with only selected color off or the best picture ly adjusting the accordance with	
Light sensor • Gamma	Off On To select the	brightness with only selected color To set light sensor to To adjust backlight for quality by dynamical backlight intensity in lighting condition in t desired setting, then p om, Dark Room, Norr	brightness with only selected color off or the best picture ly adjusting the accordance with he room	
*	Off On To select the (Very Dark Rc	brightness with only selected color To set light sensor to To adjust backlight for quality by dynamical backlight intensity in lighting condition in t desired setting, then p om, Dark Room, Norr	brightness with only selected color off or the best picture ly adjusting the accordance with he room oress <b>OK</b> nal, Bright Room and	

\* Adjusts backlight for the best picture quality by dynamically adjusting the backlight intensity in accordance with the room lighting condition when the **Light sensor** feature is set to **On**. Please ensure the room lighting is stable and the light sensor is not blocked.

## Note(s)

Mode selection is available only if

 $-\,{\rm The}$  external input modes are selected HDMI 1, HDMI 2 or HDMI 3.

- The connected HDMI device is outputting a video signal.

#### Before you begin:

#### 

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- 1 Press  $\triangle$  and use  $\triangleleft$  to select **Setup** then press **OK**.
- 2 Use ▲ ▼ ◀ ► to select TV settings, then press OK.
- 3 Use  $\blacktriangle \forall$  to select **Sound**, then press **OK**.

Picture Sound Features Installation	Auto sound Equalizer Balance Sonic Emotion Premium Auto volume leveling TV speakers Headphone volume Digital output format Delta volume	
--	---	--

4 Use ▲▼ ◄► to select the item you want to adjust, then press OK. The following sound settings can be configured. Depending on the format of the broadcasting, some sound settings are not available.

of the broadcasting, some sound settings are not available.			
	To set your TV to a predefined sound setting. When you adjust the following settings ( <b>Equalize</b> r, <b>Sonic Emotion Premium</b> and <b>Auto volume leveling</b> ), <b>Personal</b> sound will be set automatically.		
Auto sound	Personal	The customized settings you defined using the <b>Sound</b> menu.	
	Standard	For normal TV viewing.	
	Vivid	Enhanced sound.	
	Sports	Clear sound for high action.	
	Movie	Powerful sound settings for a cinematic experience.	
	Music	Optimized for music playback.	
	News	Set the anchor's voice at a comfortable volume.	

Adjust the tonal quality for each frequency.

	Cursor 🛦	Cursor V
Equalizer	To adjust each level of tonal quality	
	Press - BACK to go back to the previous menu.	

Adjust the speakers to suit your listening preference.

Balance	Cursor 🛦	Cursor <b>V</b>
	To adjust the balance of the right and left speakers	

This selects sound modes for more spatial or surround sound reproduction.

	Sonic	Off	To set Sonic Emotion to off
	Emotion	On	To set Sonic Emotion to on
	Dialog Enhancement	Off	To set Dialog Enhancement to off
Sonic Emotion Premium		On	To set Dialog Enhancement to on
	Bass Enhancement	Off	To set Bass Enhancement to off
		On	To set Bass Enhancement to on
	Absolute 3D	Off	To set Absolute 3D Sound to off
	Sound	On	To set Absolute 3D Sound to on

This function keeps a constant Loudness differential between the TV commercials and the programs.

Auto volume	Off	To remove the Auto volume leveling	
leveling	On	To reduce volume differences between the TV commercials and the programs	

You can select the audio output from the unit's speakers or not. If your amplifier is HDMI link function compatible and connected by an HDMI cable to this unit, some sound operations such as volume up can be changed by using this unit's remote control. Make sure **Master EasyLink** is set to **On**.  $\implies$  **p. 34** 

TV speakers	Off	No output sound from the unit's speakers
	On	To output sound from the unit's speakers
i v spearers	Speakers EasyLink	To control audio output from your connected EasyLink compliant devices with <b>VOL + /</b> – by using this unit's remote control.

Adjust headphone volume.

Headphone	Cursor 🛦	Cursor 🔻
volume	To decrease or increase volume	

You can set the digital audio output format from SPDIF/ARC.

	PCM	To output PCM format
Digital output format	Bitstream	To output audio in its native format as Bitstream to connected audio receiver

If a channel or input device is too loud or too soft, navigate to that channel or input device.

	Cursor 🛦	Cursor <b>V</b>	
	Provides the ability to set a custom volume level for the current channel or input source.		
Delta volume	If the source volume is too loud, set a negative value (-1 to -12)		
	If the source volume is too soft, set a positive valu (+1 to +12)		

- 1 Press  $\clubsuit$  and use  $\blacktriangleleft$  to select **Setup** then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \lor$  to select Features, then press OK.

Picture Sound <b>Features</b>	Caption settings Sleeptimer Digital audio preferences	
Installation	Power indicator	

4 Adjust the following items.

## Caption settings

Closed captions displays the audio portion of the program as superimposed text over the video.

## 1 Use $\blacktriangle \forall$ to select Caption settings, then press OK.

Caption settings	Closed captions	Off
Sleeptimer	Caption service	On
Digital audio preferences	Digital caption service	CC w/ mute
Power indicator	Digital caption options	

Closed captions	Off	Closed caption is not displayed.
	On	Closed caption is always displayed.
	CC w/ mute	Closed caption is displayed when the sound is off.

#### **Digital TV operation**

In addition to the basic closed caption, DTV has its own closed caption called digital caption service. Use this menu to change the settings for digital caption service.

Digital caption service	CS-1 to CS-6	Select one of these before changing any other item in <b>Caption</b> settings menu. Choose <b>CS-1</b> under normal conditions.
----------------------------	--------------	--

You can choose the size, font, color, background and other characteristics of the caption text.

Digital caption	Reset to default	You can reset the status of digital caption options.	
	You can change closed captioning font style, size, color and transparency. (Font style, Font size, Font color and Font opacity)		
options	transparency	ge background color and of the displayed caption. <b>color</b> and <b>Background opacity</b> )	
	displayed cap	ou can change edge color and type of the splayed caption text. dge color and Edge type)	

#### Picture display



#### (Background color and Background opacity)

• Review your setting choice made above by looking in the upper left corner of the displayed setting box (not all selections show the differences selected).

Cable / NTSC (Analog) TV operation

Caption service	CC-1 and T-1	The primary closed captions and text services. The closed captions or text is displayed in the same language as the program's dialog (up to 4 lines of script on the TV screen).
	CC-3 and T-3	Serve as the preferred data channels. The closed captions or text is often a secondary language.
	CC-2, CC-4, T-2 and T-4	Rarely available and broadcasters use them only in special conditions, such as when <b>CC-1</b> and <b>CC-3</b> or <b>T-1</b> and <b>T-3</b> are not available.

• There are 3 display modes according to programs:

Paint-on	Displays characters on the TV screen immediately.	
Pop-on	Once characters are stored in memory, they are displayed all at once.	
Roll-up         Displays the characters continuously by scrol (max. 4 lines).		

## Note(s)

- Digital caption service that you can switch differs depending on the broadcast description Closed captioning service may not be controlled by this unit's menu options if you are watching television through an external cable or satellite set-top box. In which case you will need to use the menu options on the external set-top box to control closed captioning.
- The captions do not always use correct spelling and grammar. Not all TV programs and product commercials include closed caption information. Refer to your
  area TV program listings for the TV channels and times of closed caption shows. The captioned
  programs are usually noted in the TV listings with service marks such as CC.
- Not all captioning services are used by a TV channel during the transmission of a closed caption program
- · Closed caption will NOT be displayed when you are using an HDMI or a component connection
- To show the closed caption on your TV screen, broadcast signal must contain the closed caption data.
- Not all TV programs and commercials have the closed caption or all types of the closed caption
- Caption's and text may not exactly match the TV voice.
- Changing channels may delay the closed caption for a few seconds.
- Adjusting or muting the volume may delay the closed caption for a few seconds. • Abbreviations, symbols and other grammatical shortcuts may be used in order to keep pace
- with the on-screen action. This is not a malfunction.
- The caption or text characters will not be displayed while the Home menu or functions display is shown
- If a black box appears on the TV screen, this means that the closed caption is set to the text mode. To clear the box, select CC-1, CC-2, CC-3 or CC-4.
- If the unit receives poor quality television signals, the captions may contain errors or there might be no captions at all. Some possible causes of poor quality signals are: - Automobile ignition noise
- Electric motor noise
- Weak signal reception
- Multiplex signal reception (ghosts or screen flutter)
- Data dropout and pixelation (for DTV only)
- The unit retains the closed caption setting if the power fails.
- When the unit receives special effects playback signal (e.g. search, slow and still) from a VCR's video output channel (ch3 or ch4), the unit may not display the correct caption or text.
- The EUT setting that satisfies § 79.102 (e) is as follows:
- Font: Mono-font
- Character size: Large

## Sleeptimer

Sleep timer can set the unit to go into standby mode after an incremental period of time.

#### 1 Use $\blacktriangle \forall$ to select **Sleeptimer**, then press **OK**.

- 2 Use  $\blacktriangle$  repeatedly to change the amount of time (increases the time by 5 minutes up to 180 minutes).
  - Each press of ▼ will decrease the time by 5 minutes.
  - Press IINFO once to call up the display for checking the remaining time.
  - To cancel the sleep timer, press ▲ ▼ repeatedly until "O" is displayed.

#### Digital audio preferences

You can set the interpretive broadcasting by an audio explanation.

#### 1 Use ▲ ▼ to select Digital audio preferences, then press OK.

Caption settings Sleeptimer	Accessibility Audio language	
Digital audio preferences	Primary audio selection criteria	
Power indicator		

Accessibility To prioritize VI-Visually Impaired streaming Hearing Impaired streaming: The setting for handicapped users (Main audio, Visually Impaired or Hearing Impaired).	
Audio language	To set your preferred language in the audio streaming ( <b>English</b> , <b>Spanish</b> or <b>French</b> ).
Primary audio selection criteriaTo set TV priority based on either of the ab settings: (Accessibility or Audio language)	

#### Power indicator


To set power indicator on or off.

1 Use  $\blacktriangle V$  to select Power indicator, then press OK.

Off	
On	
	On

## Installation

- 1 Press **↑** and use **↓** to select **Setup** then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle$   $\forall$  to select **Installation**, then press **OK**.

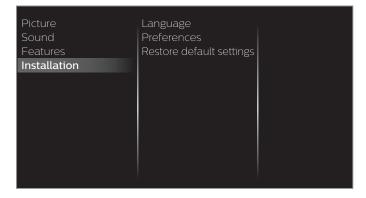

4 Adjust the following items.

## Language

You can set the language for the on-screen display.

1 Use  $\blacktriangle V$  to select Language, then press OK.

Language	English
Preferences	Français
Restore default settings	Español

2 Use ▲ ▼ to select English, Español or Français, then press OK.

=	Note(s)
Use Use Use Use Use	ou need the English menu instead of the Spanish or French menu's, press ♠ ● to select Configuración or Configuration, then press OK ▲ ▼ ● to select Instalación or Installation, then press OK ▲ ▼ to select Instalación or Installation, then press OK ▲ ▼ to select Idioma or Langue, then press OK ▲ ▼ to select English, then press OK set to exit the Home menu.

#### Preferences

You can set the unit to reduce the power consumption or adjust the backlight brightness in **Location** setting. **EasyLink** allows you to operate your connected EasyLink device.

## Setting your location to home

Choosing **Home** gives you full flexibility to change predefined settings for picture and sound.

1 Use  $\blacktriangle \forall$  to select **Preferences**, then press **OK**.

## 2 Use $\blacktriangle$ $\forall$ to select Location, then press OK.

Language	Location	Retail
Preferences	EasyLink	Home
Restore default settings	TV placement E-sticker	

## 3 Use $\blacktriangle$ $\forall$ to select Home, then press OK.

Retail The unit will be set up with predefined settings for retail displays. In this setting, you can set the backl brighter.	
Home	The unit is set to maximize the energy efficiency for home setting and it can be adjusted through a choice of picture and sound quality selections according to your preference.
Note(s)	

You must set **Home** in the menu. Otherwise, personalized picture and sound settings will not
be memorized after the unit goes into standby mode.

## TV placement

To apply the best settings for your TV, select wall mount or stand mount.

- 1 Use  $\blacktriangle V$  to select **Preferences**, then press **OK**.
- 2 Use  $\blacktriangle \forall$  to select **TV placement**, then press **OK**.
- 3 Use  $\blacktriangle \nabla$  to select Wall mounted or On a TV stand, then press OK.

#### E-sticker

When you set **Location** to **Retail**, E-sticker (Electronic Sticker) is displayed. E-sticker can be turned off using procedure below.

- 1 Use ▲ ▼ to select **Preferences**, then press **OK**.
- 2 Use  $\blacktriangle V$  to select E-sticker, then press OK.
- 3 Use  $\blacktriangle V$  to select Off, then press OK.

## Use Philips EasyLink

Your TV supports Philips EasyLink, which enables one-touch play and one-touch standby between EasyLink-compliant devices. Compliant devices must be connected via an HDMI connector.

## One-touch play

When you connect your TV to devices that support one-touch play, you can control your TV and the devices with one remote control. For example, when you press (**Play**) on your DVD remote control, your TV automatically switches to the correct channel to show the DVD content.

## One-touch standby

When you connect your TV to devices that support standby, you can use your TV remote control to put your TV and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

## System audio control

When you connect your TV to HDMI CEC compliant devices, your TV can switch automatically to play audio from the connected device. To use one-touch audio, you must map the audio input from the connected device to your TV. You can use the remote control from the connected device to adjust the volume.

## Remote control (RC) key forwarding

RC key forwarding allows you to control EasyLink-compliant devices using your TV remote control.

## HDMI-ARC (Audio Return Channel) (HDMI 1 only)

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI CEC and ARC compliant, and that the TV is connected to the device using an HDMI cable attached to both HDMI-ARC connectors.

#### Note(s)

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.
- The EasyLink-compliant device must be switched on and selected as the source

## EasyLink (HDMI CEC)

This function allows you to operate the linked functions between our brand devices with a EasyLink feature and this unit connecting through an HDMI cable. You must connect this unit to our brand EasyLink devices and be sure its EasyLink (HDMI CEC) setting is also set to on.

1 Use  $\blacktriangle$  to select **Preferences**, then press **OK**.

2 Use  $\blacktriangle$   $\forall$  to select EasyLink, then press OK.



Use  $\blacktriangle \forall \blacktriangleleft \triangleright$  to select the item you want to adjust, then press **OK**.

Leestice	Master Freddink	0"
Location	Master EasyLink	Off
EasyLink	Auto TV On	On
TV placement	RC key forwarding	
E-sticker	HDMI-ARC	

Set the **Master EasyLink** to **On** or **Off**. The following additional settings will be grayed out when you set them to **Off**.

in be glayed but when you set them to on.		
	Off	Disables all EasyLink.
Master EasyLink	On	Selects if you have connected an external device that is compatible with the EasyLink function.

This unit will turn on when the power on signal is sent from your connected EasyLink device.

Auto TV On	Off	This unit stays in Standby mode even if you turn on your connected EasyLink device.
Auto IV OII	On	This unit turns on automatically when you turn on your connected EasyLink device.

You can operate some functions such as disc playback or call up the menu of the connected devices, by using this unit's remote control.

	Off	Disable RC key forwarding.
RC key forwarding	On	PLAY, PAUSE ► II / STOP ■ / FWD ► > / REV ◄ / VOL + / - / ◄ <sup>©</sup> (MUTE) / 至 OPTIONS / ▲ ▼ ▲ > / OK / ← BACK / the NUMBER buttons can be used to control your connected EasyLink devices by this unit's remote control.

#### Note(s)

Pause may not work properly on some devices even if they are EasyLink (HDMI CEC) compliant.

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

	Off	Disable HDMI-ARC.	
HDMI-ARC (HDMI 1 only)	On	You can output TV audio through the HDMI cable solely, provided both the TV and device are HDMI-ARC compliant.	

## Return your settings to default values

You can return settings to their default values.

- 1 Use ▲ ▼ to select **Restore default settings**, then press **OK**.
- 2 Use ▲▼ to select Reset AV settings or Reset all settings, then press OK.

	Return picture and sound settings to their default values. The channel installation settings are not affected.
Reset all settings	Return all the settings to their default values.

## Search for channels


Be sure the RF cable is correctly connected to this unit and you are registered with your cable TV provider when you install cable channels.

- 1 Press ♠ and use ◀► to select Setup, then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Search for channels, then press OK.
- 3 Use  $\triangleleft$  to select Start, then press OK.

## Install channels


You can search and store all channels. If you move the unit to a different area after the initial setting, it is recommended to perform Autoprogramming.

- 4 Use  $\blacktriangle$  to select Antenna or Cable, then press OK.
- 5 Press OK on Start.
  - When the scanning and memorizing of available channels is completed, the lowest memorized channel will be displayed.
- 6 Follow the on-screen instructions to complete the installation.

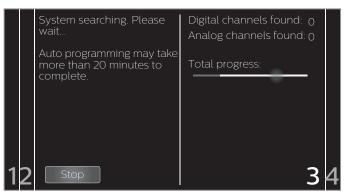

## **Channel settings**

- 1 Press ♠ and use ◀► to select Setup, then press OK.
- 2 Use ▲▼◀▶ to select Channel settings, then press OK.
- **3** Adjust the following items.

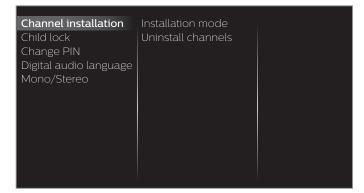

## Channel installation

Be sure the RF cable is correctly connected to this unit and you are registered with your cable TV provider when you install cable channels.

#### Installation mode

- 1 Use ▲ ▼ to select Channel installation, then press OK.
- 2 Use  $\blacktriangle \forall$  to select Installation mode, then press OK.
- 3 Use  $\blacktriangle$  to select Antenna or Cable, then press OK.
  - When **Antenna** is selected, the TV detects antenna signals. It searches for DTV and analog TV channels available in your area.
  - When **Cable** is selected, the TV detects signals supplied by cable. It searches for DTV, analog TV and cable channels available in your area.

## Uninstall channels

The channels selected here can be skipped when selecting the channels using  ${\rm CH+/-}$ 

Those channels can still be selected with the NUMBER buttons.

- 1 Use ▲ ▼ to select Channel installation, then press OK.
- 2 Use  $\blacktriangle \forall$  to select Uninstall channels, then press OK.
- 3 Use ▲▼ to select the channel you want to remove, then press OK.
   The removed channels are not displayed on the list of favorite channels.
  - To reactivate a removed channel, use  $\blacktriangle \forall$  then press **OK**.

## Child lock

You can prevent your children from watching certain programs or certain channels by locking the TV controls and by using ratings.

## 1 Use $\blacktriangle \forall$ to select **Child lock**, then press **OK**.

Channel installation Child lock	TV ratings lock Movie ratings lock	
Change PIN Digital audio language Mono/Stereo	Canadian English rating Canadian French rating Region ratings lock	

- 2 Use the NUMBER buttons to enter the 4-digit numbers for your PIN code.
  - When you have not set up your PIN code, enter **0**, **0**, **0**, **0**.
  - When the PIN code is correct, **Child lock** menu is displayed.

See the following description for setting each item.

Channel installation	TV ratings lock	🗌 All
Child lock	Movie ratings lock	🛛 None
Change PIN	Canadian English rating	🔲 TV-Y
Digital audio language	Canadian French rating	🗌 TV-Y7
Mono/Stereo	Region ratings lock	🔲 TV-G
		🔲 TV-PG
		🗌 TV-14
		🔲 TV-MA

#### Note(s)

- When you select the higher rating and set it to 🛛 the lower ratings will be blocked automatically.
- To remove all blocks place a check in the **All** box and then remove that check to remove all blocks.
- Region ratings lock will be available when the unit receives a digital broadcast using the new rating system.
- To block any inappropriate programs, set your limits in TV ratings lock, Movie ratings lock and Region ratings lock.
- For the United States, the unit may download the region ratings lock table, if required.
- The Canadian rating systems on this unit are based on CEA-766-A and CRTC policy.

## Setting TV and movie ratings

Movie ratings lock is the rating system created by MPAA. TV ratings lock has controlled access to individual programs based on their age ratings and content rating.

- 3 Use  $\blacktriangle V$  to select TV ratings lock or Movie ratings lock, then press OK.
- 4 Use  $\blacktriangle \forall$  to select the desired rating, then press **OK** repeatedly to switch between block and view.
  - 🛛 indicates that the rating is locked (Blocked).
  - 🗖 indicates that the sub rating is locked (Blocked).
  - Indicates that the rating is not locked (Viewable).



TV ratings lock	🗌 All	
Movie ratings lock	🛛 None	
Canadian English rating	🔲 TV-Y	
Canadian French rating	🔲 TV-Y7	
Region ratings lock	🔲 TV-G	
	TV-PG	
	□ TV-14	
	TV-MA	

#### Movie ratings lock

TV ratings lock	🗆 All	
Movie ratings lock	🛛 NR	
Canadian English rating	G	
Canadian French rating	🗆 PG	
Region ratings lock	🗌 PG-13	
	R	
	🗌 NC-17	
	□ X	

US movie ratings	US TV ratings	Description	
All		All ratings locked including no rating	
NR	None	No rating	
-	TV-Y	Appropriate for all children	
-	TV-Y7	Appropriate for all children 7 and older	
G	TV-G	General audience	
PG	TV-PG	Parental guidance suggested	
PG-13	_	Unsuitable for children under 13	
_	TV-14	Unsuitable for children under 14	
R	_	Restricted under 17 requires accompanying parent or adult guardian	
NC-17	_	No one under 17 admitted	
X	TV-MA	Mature audience only	

#### To set the sub ratings (displayed in the right column)

For TV ratings lock, you can further set the sub ratings to block specific elements of programming. To set the sub ratings, follow the step below.

Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired rating, then press **OK** repeatedly to switch between  $\blacksquare$  and  $\square$ .

	_	
TV ratings lock	🗌 All	🛛 Fantasy Violence
Movie ratings lock	🗌 None	
Canadian English rating	🔲 TV-Y	
Canadian French rating	🛛 TV-Y7	
Region ratings lock	🔲 TV-G	
	🔲 TV-PG	
	🔲 TV-14	
	🔲 TV-MA	

US TV ratings	Sub rating
TV-Y7	Fantasy Violence
TV-PG	Violence
TV-14	Sex Language Dialog
TV-MA	Violence Sex Language

#### Note(s)

• Blocked sub rating's will appear beside the main rating category in **TV ratings lock** menu.

• You cannot block a sub rating if the main rating is set to 🗖

- Changing the category to  ${\bf \boxtimes}$  or  ${\bf \square}$  automatically changes all its sub ratings to the ( ${\bf \boxtimes}$  or  ${\bf \square}$ ).

#### Canadian English or Canadian French ratings

You can select the rating for Canadian English or Canadian French broadcasting.

- 3 Use  $\blacktriangle \nabla$  to select Canadian English rating or Canadian French rating, then press OK.
- 4 Use  $\blacktriangle \forall$  to select the desired rating, then press **OK** repeatedly to switch between block and view.
  - Indicates that the rating is locked (Blocked).
  - Indicates that the rating is not locked (Viewable).

Canadian English rating	Canadian French rating	Description	
	All	Locked all ratings	
	E	Exempt program	
C	—	For all children	
C8+ –		For all children 8 and older	
G		General audience	
- 8 ans+		Unsuitable for ages under 8	
PG	_	Parental guidance suggested	
– 13 ans+		Unsuitable for ages under 13	
14+ – l		Unsuitable for ages under 14	
– <b>16 ans+</b> U		Unsuitable for ages under 16	
18+ 18 ans+ Adult audience only		Adult audience only	

Note(s)

The V-Chip can block non rated programs as per "CEA-608-E sec. L.3". If the option to block NR, None or E programs are used in Movie ratings lock, TV ratings lock, Canadian English rating or Canadian French rating accordingly "unusual results may occur and the unit may not receive emergency bulletins or other types of programming". Hemergency bulletins (Such as EAS messages, weather warnings and others) / Locally originated programming / News / Political / Public service announcements / Religious / Sports / Weather.

# Change PIN

Although the default PIN code (0000) is supplied with the unit, you can set your own PIN code.

- 1 Use ▲ ▼ to select Change PIN, then press OK.
- 2 Press the NUMBER buttons to enter the current 4-digit PIN code.
- **3** Press **the NUMBER buttons** to enter the new 4-digit PIN code.
  - Enter PIN code again to confirm.

### Note(s)

- Make sure new PIN code and confirm PIN code must be exactly the same. If they are different,
- the space is cleared for reentering.
- If you have forgotten your PIN code, enter 0711 to reset the PIN code.

# Digital audio language

You can select the audio language while your TV is receiving the digital broadcasting.

1	1 Use $\blacktriangle$ $\forall$ to select Digital audio language, then press OK.			
	Digital audio	To select the language according to your preference. (It differs depending on the program.)		

# Mono/Stereo

Cable / NTSC (Analog) TV operation

You can select an audio format while your TV is receiving the analog broadcasting.

- 1 Use ▲ ▼ to select Mono/Stereo, then press OK.
- 2 Use ▲ ▼ to select Mono, Stereo or SAP (Second Audio Program), then press OK.


## Connect to network

Setup network connection settings in order to use Net TV or network upgrade functions.

<ul> <li>The meanings of abbreviations are defined as below.</li> <li>AP : Wireless LAN access point</li> <li>SSID : Wireless network name</li> <li>The key entry screen will appear when you select SSID, WEP / others or proxy address.</li> </ul>	
Network settings	
If your router has an easy connect feature, select Easy Connect and press OK.	
If your router does not have an easy connect feature, select Manual and press OK.	
Text	
• Enter the key of the selected wireless network using $\blacktriangle igvee igvee igvee$ , then	
press <b>OK</b> .	
Clear : Clear the entered number or word.	
All clear : Clear all the entered numbers or words.	
<b>abc</b> : Switch to the small letter mode.	
ABC : Switch to the capital letter mode.	
123+/; : Switch to the numeral and symbol mode.	
<b>Cancel</b> : Shows the cancellation display.	
OK : Set the entered number or word	

1 Press  $\square$  and use  $\triangleleft$  to select Setup, then press OK.

2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Connect to network, then press OK.

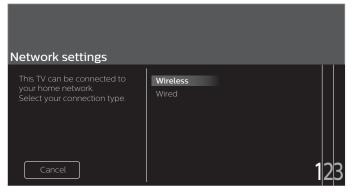

**3** Adjust the following items.

# Wireless setting

Select to use a wireless LAN to connect to the internet by a wireless connection.

- 1 Use  $\blacktriangle$   $\forall$  to select Wireless, then press OK.
- 2 Use **◄**► to select the desired setting, then press **OK**, and follow the on-screen instructions.

Easy Connect	Select this setting if your router has an easy connect button. Start scanning for wireless networks on the TV after pressing the easy connect button on your router. If connection test fails, refer to the router's manual for more details.
Scan Search for wireless networks automatically an select the wireless network name (SSID) from list.	
Manual entrySet up the connection to the wireless LAN A Point (AP) (e.g. wireless router) manually by entering the wireless network name (SSID).	

\* Easy Connect cannot be used when the security protocol is set to WEP. Change the Access Point's security mode from WEP to others (recommended).

# Wired setting

Select to use an Ethernet cable to connect to the internet by a wired connection. Please purchase shielded Ethernet cables at your local store and use it when you connect to network equipment.

- 1 Use ▲ ▼ to select Wired, then press OK.
  - Connection test will start automatically. 🛶 p. 41

English

# Network settings

- 1 Press **↑** and use **↓** to select **Setup**, then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Network settings, then press OK.
- 3 Adjust the following items.

# Manual network settings

1 Use  $\blacktriangle$   $\forall$  to select Manual network settings, then press OK.

Manual network settings	Network selection
Connection test	Wireless network setting
Setting status	IP configuration
Home network	Proxy configuration
Wake-on-LAN(DIAL)	
Net TV	
Reset network settings	

# **Network selection**

- 2 Use ▲ ▼ to select **Network selection**, then press **OK**.
- 3 Use  $\blacktriangle \mathbf{V}$  to select the desired setting, then press **OK**.

	If you connect to an Ethernet cable, select <b>Wired</b> to connect to the internet.
Wireless	If you have a router with easy connect function, select <b>Wireless</b> to connect to the internet.

# Wireless network setting

This menu is displayed only when you set Wireless in Network selection. In order to use a wireless network, you must set up a connection to the AP (e.g. wireless router).

# 2 Use $\blacktriangle V$ to select Wireless network setting, then press OK.

## Auto

Search for wireless networks automatically and select the SSID from the list.



3 Use  $\blacktriangle V$  to select Auto, then press OK.



4 The list of wireless networks will be displayed. Use  $\blacktriangle V$  to select the appropriate the SSID, then press OK.

Auto	Router 1	Easy Connect
Manually enter your SSID	<ul> <li>☐ Router 2</li> <li>☐ Router 3</li> <li>☐ Router 4</li> <li>☐ Router 4</li> </ul>	

- If you select the SSID with A, WEP\*2 / others Key entry screen will appear. Enter the WEP\*2 / others key of the selected wireless network using  $\blacktriangle \bigtriangledown \blacklozenge \blacklozenge$ , then press **OK**.
- If you select the SSID has an easy connect, the easy connect setting screen will appear. Use  $\blacktriangle \lor \blacklozenge \lor$  to select a setting, then press OK.

Easy Connect	Select this setting if your router has an easy connect button. Start scanning for wireless networks on the TV after pressing the easy connect button on your router. If connection test fails, try <b>Easy Connect</b> again. <sup>41</sup> If it fails then refer to the router's manual for more details.	
Pin code	Pin code Select this setting if your router has an easy connect feature but does not have an easy connect button. Enter the 8-digit PIN code show on your TV in the Router settings menu via PC before <b>Connect</b> is selected.	
Manual	If your wireless network with authentication setting (WEP*2, others), WEP*2 / others Key entry screen will appear. Enter the WEP*2 / others key of the selected wireless network using $\blacktriangle \forall \blacklozenge  brace$ , then press <b>OK</b> .	

- \*1 Easy Connect cannot be used when the security protocol is set to WEP. Change the Access Point's security mode from WEP to others (recommended).
- \*7 WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

Confirmation message will appear. Select OK to complete the settings.

# Note(s)

• For a wireless network with authentication setting, key icon appears to the right hand of the

SSID

- Signal icon shows the strength of the signal.
- WEP\*2 / others key appears as asterisks on the confirmation screen.
- The wireless LAN supports following specifications. – Wireless standards: IEEE 802.11 a/b/g/n/ac
- Frequency spectrum: 2.4GHz / 5GHz
- Security protocol: WEP\*2 / others

#### Manually enter your SSID

Set up the connection to the AP (e.g. wireless router) manually by entering the SSID.

- 3 Use ▲▼ to select Manually enter your SSID, then press OK.
   AP (e.g. wireless router) SSID entry screen will appear.
  Enter the SSID using ▲▼ ◄▶, then press OK.
- 4 Use  $\blacktriangle V$  to select the authentication setting of the selected wireless network.
  - For a wireless network with authentication setting, select the authentication setting, according to the security type of the wireless network.

Auto	XXXXXXXXXXXXXXXX	None
Manually enter your SSID		WEP
		Others

None	Set the authentication setting to <b>None</b> .
WEP	Set the authentication setting to <b>WEP</b> *.
Others	Set the authentication setting to <b>Others</b> .

- For a wireless network without authentication setting, select None.
- If you select WEP\* or Others, WEP\* / others Key entry screen will appear. Enter the WEP\* / others key of the selected wireless network using
   T
   , then press OK.
- Confirmation message will appear. Select **Yes** to complete the settings.
- \* WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

#### **IP** configuration

In following cases, select **IP configuration** to set each setting as necessary.

- -When connection test failed with the setting of **Connection test**.
- When instructed by your Internet service provider to make specific settings in accordance with your network environment.
- 2 Use  $\blacktriangle \forall$  to select IP configuration, then press OK
- 3 Use  $\blacktriangle$   $\forall$  to select a setting, then press OK.

Network selection	IP setting mode	Auto
Wireless network setting	IP address	Manual
IP configuration	Subnet mask	
Proxy configuration	Default gateway DNS setting mode Primary DNS Secondary DNS MAC address	

IP setting	Auto	Sets the IP setting automatically.
mode	Manual	Sets the IP setting manually.
IP address *1, 3		A set of numbers which are assigned to devices participating in a computer network.
Subnet i	mask *1, 3	A mask which is used to determine what subnet an IP address belongs to.
Default gateway *1, 3		IP address of the network device (such as router) which provides internet access.
DNS setting	Auto	Sets the DNS setting automatically.
mode	Manual	Sets the DNS setting manually.
Primary DNS *2, 3		A server which handles the name and IP address over the internet.
Secondary DNS *2, 3		A server which handles the name and IP address over the internet.
MAC address		An address which recognizes the devices connecting to the network. It is also called hardware address.

\*1 Items can be selected only when IP setting mode is set to Manual.

\*2 Items can be selected only when DNS setting mode is set to Manual.

\*3 Use ▲ ▼ or the NUMBER buttons to input numbers. When you use ▲ ▼ to input numbers, then press OK or input the triple digits by using the NUMBER buttons, the cursor moves to the next entry field. When you use ▲ ▼ to input numbers, then press OK or input the triple digits by using the NUMBER buttons at the rightmost entry field, numbers will be stored and go back to the previous menu.

## Note(s)

- The range of input numbers is between 0 and 255.
- If you enter a number larger than 255, the number will automatically be 255.
- The manually entered number will be saved even if you change the setting to Auto.
- If you want to enter 1 or 2 digit number in one cell, press **OK** to move on to the next cell.
- If the entered IP address or the default gateway or primary DNS number is same as the default
- setting, IP address setting will be set to **Auto**. (The manually entered number will be saved).
- When IP address setting is set to Manual, the setting of DNS setting will automatically be Manual and when IP address setting is set to Auto, you can set either Auto or Manual for DNS setting.

#### **Proxy configuration**

- 2 Use  $\blacktriangle \forall$  to select Proxy configuration, then press OK.
- 3 Use  $\blacktriangle V$  to select a setting, then press **OK**.

Network selection	Proxy setting	Do not use
Wireless network setting		Use
IP configuration	Proxy port	
Proxy configuration		

- Do not use is selected for default settings.
- If you need to change the proxy setting as instructed by your internet service provider to set the designated proxy address and port, select **Use**.

Proxy setting	Do not use	Does not use the proxy server.
FIONY Setting	Use	Uses the proxy server.
Proxy address *		Selects the number or word by using $\blacktriangle \forall \blacktriangleleft \triangleright$ , then press <b>OK</b> .
Proxy port *		Use <b>A V</b> or <b>the NUMBER buttons</b> to input numbers.

\* Items can be selected only when Proxy setting is set to Use.

## Note(s)

- The range of input numbers for the port number is between 0 and 65535. (If you enter a number larger than 65535, it will be regarded as 65535.)
- For proxy port, the selected ports may be blocked and not be able to use depending on your network environment.
- If the proxy address is entered with blank only, proxy server setting will be set to **Do not use**.

Perform the following steps to test your internet connection after you have connected an Ethernet cable or entered network settings such as IP address, DNS settings, etc. manually.

- 1 Use ▲ ▼ to select Connection test, then press OK.
  - Connection test will start automatically and the test result for home network and internet will appear right after the connection test finishes.

• "Testing" is displayed while the connection test is in p	orogress.
--	-----------

0			
Home network	Internet	Description	
Pass	Pass	Connection test is successfully completed.	
Fail	_	Connection test for home network failed. Check the connection settings.	
Pass	Fail	Connection test for internet failed. Check the connection settings.	

 If the connection test for internet passes, speed test will start automatically.

2 Press OK to go to the list on network status confirmation screen.

#### Note(s)

- If the connection test for both home network and internet pass, you are ready to use Net TV or
- network upgrade functions using the internet without making any additional settings.
- If the connection test fails, check if the Ethernet cable is connected to this TV properly or if you
  have entered all the required details for the wireless LAN connection properly.

# Setting status

You can check the status of network settings.

- 1 Use ▲ ▼ to select Setting status, then press OK.
  - Network setting list will be displayed.
  - MAC address of this unit will be displayed in the list.

# Home network

\_

You can turn your TV into a Digital Media Renderer (DMR), which can play video, music and photo files stored on certified home media servers connected to your home network.

1	Use 🛦 🗸	<b>/</b> to select <b>Home net</b>	work, then press OK.
---	---------	------------------------------------	----------------------

2	Use 🛦 🛡 ◀ 🕨	• to select the item	you want to adjus	st, then press <b>OK</b> .
---	-------------	----------------------	-------------------	----------------------------

Renderer	Off	Disable DMR.
	On	Enable this unit to play files using DMC.
Renderer name	Change the display name of this TV to other devices on the home network.	

# Wake-on-LAN(DIAL)

You can turn your TV on when you use remote control via IP.

1	Use 🛦 🛡	to select Wake-on-LAN(DIAL), then press OK	
---	---------	--	--

2	Use <b>A</b>	' to select <b>O</b>	n or Off.	then press	OK.
				chieft press	· • · · ·

Off	To set Wake-on-LAN(DIAL) to off.
On	To set Wake-on-LAN(DIAL) to on.

# Net TV

Displays the deactivation setting for Net TV and Netflix ESN information.

## Netflix deactivation

Displays the deactivation setting for Netflix.

1	Use 🛦 🛡	to select Net	TV, then press OK.	
---	---------	---------------	--------------------	--

- 2 Use  $\blacktriangle \forall$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle \lor$  to select **Netflix**, then press **OK**.
- 4 Use  $\triangleleft \triangleright$  to select the desired option, then press OK.

Yes	Deactivate the connection to Netflix.
No	Activate the connection to Netflix.

## VUDU deactivation

Displays the deactivation setting for VUDU.

- 1 Use ▲ ▼ to select **Net TV**, then press **OK**.
- 2 Use  $\blacktriangle V$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle \forall$  to select VUDU, then press OK.
- 4 Use  $\triangleleft \triangleright$  to select the desired option, then press **OK**.

Yes	Deactivate the connection to VUDU.
No	Activate the connection to VUDU.

## YouTube deactivation

Displays the deactivation setting for YouTube.

- 1 Use  $\blacktriangle$   $\forall$  to select Net TV, then press OK.
- 2 Use  $\blacktriangle$   $\forall$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle \lor$  to select YouTube, then press OK.

4 Use <b>∢</b> ► to se	Use $\blacktriangleleft ightarrow$ to select the desired option, then press <b>OK</b> .		
Yes	Deactivate the connection to YouTube.		
No	Activate the connection to YouTube.		

## Netflix ESN

Displays the ESN information.

- 1 Use  $\blacktriangle$   $\forall$  to select **Net TV**, then press **OK**.
- 2 Use  $\blacktriangle \forall$  to select Netflix ESN, then press OK.
  - Displays the ESN (Electronic Serial Number) to get any services from Netflix.

### Netflix software version

Displays the Netflix version.

- 1 Use  $\blacktriangle$   $\forall$  to select **Net TV**, then press **OK**.
- 2 Use  $\blacktriangle \forall$  to select Netflix software version, then press OK.

# Reset network settings

You can reset the status of network settings.

- 1 Use  $\blacktriangle$   $\forall$  to select **Reset network settings**, then press **OK**.
- 2 Use  $\triangleleft \triangleright$  to select the desired option, then press **OK**.

# <u>Upd</u>ate software

Philips continuously tries to improve its products and we strongly recommend that you upgrade the TV software when upgrades are available.

New software can be downloaded from our website at **www.philips.com/support** using the model number of your TV to find information.

You can update the software through these methods:

- Update with USB memory stick
- Update from digital broadcast Software auto-update 🛶 p. 44

This section describes how to upgrade the software by using USB memory stick.

# Preparing for the software upgrade

You require the following equipment:

- A PC with web browsing capability
- An archive utility that supports the ZIP-format (e.g. WinZip for Windows or StuffIt for Mac OS)
- An empty clean formatted USB memory stick

#### Note(s)

- Only FAT / DOS-formatted portable memory is supported.
- Use only software upgrades that can be found on the Philips web site.

#### Warning

- When the software upgrade is running, don't press any buttons.
- Do not remove the USB memory stick during the software upgrade.
- If an error occurs during the upgrade, retry the procedure or for further assistance, please contact call center.

# Downloading the software

Find information and software related to your TV and download the latest software upgrade file to your PC.

Prepare a blank USB memory stick for software update. Access


*www.philips.com/support* and download the latest version software to a blank USB memory stick using a PC by following the directions described on the website.

- Use a blank USB memory stick, download the software on your PC and write the software in the root directory of the USB memory stick.
- For more details on how to download the software, please refer to the website.

# USB upgrade

You can upgrade the software by using USB memory stick.

 Connect your USB memory stick with the upgrade file to the USB terminal on the side of your TV.

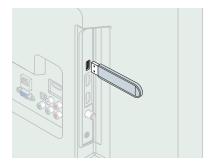

- 2 Press **↑** and use **↓** to select **Setup**, then press **OK**.
- 3 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Update software, then press OK.
- 4 Use  $\blacktriangle \forall$  to select USB, then press OK.
- 5 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired update file, then press OK.
- 6 Use ◀► to select Yes, then press OK.
  - Read the on-screen instructions and confirm that you want to continue with the installation.

Software update is in progress. Please wait. Do not remove the USB storage device or turn the TV off while upgrade is in progress.

- 7 When the software upgrade is completed, press  $\oplus$  to set the unit into standby mode, then remove the USB memory stick.
- 8 Unplug the AC power cord for a few seconds from AC outlet and plug it again.
- 9 Press 🕁 again to turn the unit on.
  - The TV starts up with the new software
  - For further assistance, please contact call center.

# Network updates

You can update the software by connecting the unit to the internet.

- 1 Press  $\square$  and use  $\triangleleft$  to select Setup, then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Update software, then press OK.
- 3 Use  $\blacktriangle$   $\forall$  to select **Network**, then press **OK**.

## 4 Use ◀► to select Yes, then press OK.

- This unit will then start checking for the latest FirmWare (software) version.
- 5 Confirmation message will appear.

#### Use **I** to select **Yes**, then press **OK**.

- The unit will start downloading the latest FirmWare (software) version.
- The unit will start updating the FirmWare (software) version.
- It may take a while to complete the updating.
- 6 When the software update is complete, press to make sure the unit goes to standby mode.
- 7 Unplug the AC power cord for a few seconds from AC outlet and plug it again.
- 8 Press  $\bigcirc$  again to turn the unit on.
  - The TV starts up with the new software.
  - For further assistance, please contact call center.

### Note(s)

#### Network settings - p. 39

- Please do not unplug the AC power cord or Ethernet cable while executing the Network
   updates
- All settings will remain the same even if you update the software version.
- The version of net service will also be updated if newer version of net service is available when updating the firmware.
- When you start up the TV or a net service after executing the software update, a message may appear on the screen prompting for software update again. In this case, please select Update to start USB update or network update. For further assistance, please contact call center.

# Software settings

# Software

- 1 Press ♠ and use ◀► to select Setup, then press OK.
- 2 Use ▲▼◀▶ to select Software settings, then press OK.
- 3 Use  $\blacktriangle \lor$  to select **Software**, then press **OK**.

#### Checking your current software version number

- 1 Use  $\blacktriangle$   $\forall$  to select **Software information**, then press **OK**.
  - The version and a description of the current software is displayed.

#### Software auto-update

You can download the latest software through the air and update this unit automatically while the unit is in standby mode.

1 Use ▲ ▼ to select Software auto-update, then press OK.

2 Use ▲ ▼ to se	2 Use $\blacktriangle V$ to select the desired option, then press OK.		
Off	Disable auto-update for latest software.		
i ()n	A message will appear if there is the latest software on the network server.		

### License

Displays the licenses of open source software used in this unit.

- 1 Use ▲ ▼ to select License, then press OK.
  - Licenses of open source software used in this unit are displayed.

#### Digital rights management

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.


- 1 Use  $\blacktriangle$  to select **Digital rights management**, then press **OK**.
  - Digital rights management is displayed.

# Wireless Screencasting

You can wirelessly cast or mirror the screen of your Smartphone, Tablet or PC to the TV directly using Wireless Screencasting.

### Using Wireless Screencasting

- 1 Press ♠ and use ◀► to select Wireless Screencasting, then press OK.
  - Wireless Screencasting mode screen appears.

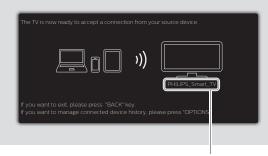

Your TV name

- 2 Activate Wireless Screencasting feature on your device.
  - For the operation of your device, please check the instruction manual of the device.
  - · Select Your TV name on your device if needed.
  - If PIN code is required on your device, please enter the 8-digit code appearing in the left-hand side of the TV screen.
- **3** Once connected, the screen of your device will appear on your TV screen.
  - Press 🗊 INFO to display your device name at the bottom of TV screen.
  - Press I or OK to pause playback. Press I or OK again to resume playback.

#### Using Wireless Screencasting device list

In Wireless Screencasting device list, you can find the connected devices.

- Press ₩ OPTIONS on remote when Wireless Screencasting mode is on the TV screen.
  - Only the connected device names are listed
  - It will be sorted from newest connection to oldest connection. A maximum of 64 connections can be recognized.
  - If you would like to delete a listed connection, press ▲ ▼ to select the device name, then press OK first. Once the confirmation message appears, please use ∢ ► to select Yes, then press OK.

#### Note(s)

Funal Corporation Inc. does not warrant Wireless Screencasting compatibility with all source devices such as smartphones, tablets, laptops, etc. due to large variability in hardware, firmware, drivers, software and implementation of wireless casting applications on these source devices. Although Funai Corporation Inc. will strive to enhance compatibility and performance across a range of source devices, Funai Corporation Inc. does not warrant compatibility with specific source devices.

# View photos, play music and watch videos using home network

On your TV you can play video, music and photo files stored on home network certified home media servers connected to your home network. In order to use this feature, you must connect this unit to the internet.

# It is recommended that files to be played back in this unit are recorded under the following specifications:

Picture (JPEG / Progressive JPEG)		
JPEG Upper limit 4000x4000 pixels		
Progressive JPEG	Upper limit	1024x768 pixels

Music (MP3 / WAV / AAC)			
MP3	Sampling frequency	16 kHz – 48 kHz	
	Constant bit rate	8 kbps - 320 kbps	
WAV	Sampling frequency	8 kHz – 48 kHz	
	Constant bit rate	64 kbps – 1.5 Mbps	
AAC	Sampling frequency	8 kHz – 48 kHz	
	Constant bit rate	-	

# Video (MPEG / VOB / AVI / MP4)

Maximum video	H.264, H.265/HEVC, MPEG: 1920x1080@60fps					
Extension	.avi	.mpg, .mpeg	.ts, .trp, .tp	.vob	.mp4	.mkv
Video codec Audio codec	MPEG1, MPEG2, MPEG4, H.264	MPEG1, MPEG2, MPEG4	MPEG1, MPEG2, H.264, H.265/ HEVC	MPEG1, MPEG2	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC
Dolby Digital	YES	YES	YES	YES	YES	YES
MPEG1/2 audio layer1/2/3	YES	YES	YES	YES	NO	YES
LPCM	YES	YES	YES	YES	YES	YES
AAC-LC	YES	YES	YES	YES	YES	YES

#### Note(s)

- A maximum of 1,023 folders or files can be recognized.
- For the home server list, maximum of 16 servers can be displayed.
- The 10th and deeper hierarchies cannot be displayed
- Unplayable files in the home server will not be displayed in the file list.
- For some files, playback is not available even if displayed in the file list.
- In order to play back the contents in home servers, the player and the servers must be connected to the same access point.
- Compatibility and available playback function may differ depending on the home server.
- Video files with unsupported audio format will be skipped.
- The quality of the playback picture or audio differs depending on your network condition

## Before using home network

Follow the procedure below before using home network.

- Connect this unit to the internet.
  - Connecting the TV to the internet using an Ethernet cable  $\implies$  p. 14 or Connecting the TV to the internet using a wireless LAN  $\implies$  p. 15 • Broadband internet connection of 8Mbps or faster is required.
- 2 Set up the necessary network connection settings. Connect to network → p. 38


### Using home network

- Start home network media servers in your home network.
   For details, refer to the instruction book of the home network certified device.
- 2 Press f on the remote control.

## 3 Use ◀► to select Home Network.

- This unit will start loading the home server list.
- 4 After loading, home server list will appear. Select a home server you want to access, then press **OK**.

## Guide to home network

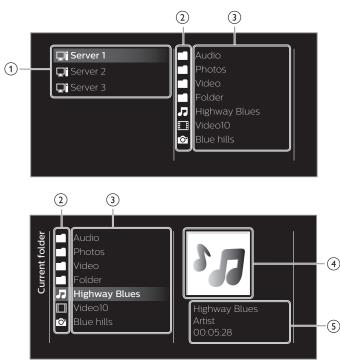

- Home server list
- (2) Folder / media icon
- (3) Group (folder) / file list
- (4) Image
- (5) Current file info

#### View your pictures using home network

- 1 Press  $\blacktriangle \nabla$  to select a file or a folder.
- 2 Press OK or ►II to start a slide show of the files.
  - Press OK or 
     If to pause the slide show.
     The II icon appears.

  - Press ← BACK or to stop the slide show.
  - Press  $\rightleftharpoons$  OPTIONS to display the optional menu, then use  $\blacktriangle \lor$  to select the desired item.

	Off	Sets repeat playback to off.
Repeat *1	One	Sets repeat playback for a selected image file.
	All	Sets repeat playback for all image files in the current folder.
	Short	Switches to the next image in 5 seconds.
Slide time *1	Medium	Switches to the next image in 10 seconds.
	Long	Switches to the next image in 15 seconds.
	None	No effect when switching images.
	Dissolve	Overlaps the next image on the current image.
	Wipe right	Pushes the current image out from left.
	Wipe left	Pushes the current image out from right.
Transitions *1	Wipe up	Pushes the current image out from bottom.
	Wipe down	Pushes the current image out from top.
	Box in	The next image comes to the center from the outside.
	Box out	The next image goes to the outside from the center.
	0	Displays an image in its original direction.
Rotate *2	90	Rotates an image 90 degrees clockwise.
Rotate *2	180	Rotates an image 180 degrees clockwise.
	270	Rotates an image 270 degrees clockwise.
	1X	Displays an image in its original size.
Zoom *2	2X	Magnifies a current image by 2 times.
	4X	Magnifies a current image by 4 times.
Auto picture *1		ure mode according to your preference. ural, Vivid, Sports, Movie, Game, Energy saving deo)

\*1 You can set **Repeat**, **Slide time**, **Transitions** and **Auto picture** when images are in slide show.

\*2 You can set Rotate and Zoom when slide show is in pause mode.

### Listen to music using home network

- 1 Press  $\blacktriangle \lor$  to select a file or a folder.
- 2 Press OK or ►II to play the selected files.
  - Press OK or ▶ II to pause, press OK or ▶ II again to resume.

  - Press 📢 to skip down the previous file.
  - Press 🗖 to stop playback.
  - Press  $\doteqdot$  OPTIONS to display the optional menu, then use  $\blacktriangle \lor$  to select the desired item.

	Off	Sets repeat playback to off.	
Repeat	One	Sets repeat playback for a selected music file.	
	All	Sets repeat playback for all music files in the current folder.	
	Off	Sets shuffle playback to Off.	
Shuffle	On	Sets shuffle playback for all music files in the current folder.	
	Off	The sound will not be output from the unit's speakers.	
TV Speakers	On	The sound will be output from the unit's speakers.	
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.	
Auto sound	Selects the sound mode according to your preference. ( <b>Standard, Vivid, Sports, Movie, Music</b> and <b>News</b> )		

## Watch videos using home network

- 1 Press  $\blacktriangle \nabla$  to select a file or a folder.
- 2 Press **OK** or **\trianglerightII** to play the selected files.
  - Press **OK** or **▶ ||** to pause, press **OK** or **▶ ||** again to resume.
  - Press >> to fast-forward search.

  - Press to stop playback.
  - Press It o resume from the point at which playback was stopped.
     Press OK to play from the beginning of the file at which playback was stopped.
  - Press CH + to play the next file.
  - Press CH to play the current file at the beginning.
     Press CH twice within 5 seconds to play the previous file.
  - Press  $\rightleftharpoons$  OPTIONS to display the optional menu, then use  $\blacktriangle \forall$  to select the desired item.

Repeat	Off	Sets repeat playback to off.	
	One	Sets repeat playback for a selected video file.	
	All	Sets repeat playback for all video files in the current folder.	
	Off	The sound will not be output from the unit's speakers.	
TV speakers	On	The sound will be output from the unit's speakers.	
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.	
Auto picture	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)		
Auto sound	Selects the sound mode according to your preference. ( <b>Standard</b> , <b>Vivid</b> , <b>Sports</b> , <b>Movie</b> , <b>Music</b> and <b>News</b> )		

#### Note(s)

• The resume information will be kept even when the unit is Turned off.

If you play another file while the previously viewed file is being resumed, the resume information
of the previously viewed file will be deleted.

The file or the folder in resume stop mode will be highlighted in gray on List or Thumbnails.

# Net TV

Net TV offers internet services for your TV. Use the TV remote control to browse the Net TV pages. You can play movies, listen to music and much more, all from your TV screen.

- Because Net TV is an online system, it can be modified over time to better serve its purpose.
- Some Net TV services can be added, changed or stopped after some time.
- You cannot download and save files or install plug-ins.

## Before using Net TV

Follow the procedure below before using Net TV.

- 1 Connect this unit to the internet.
- 2 Set up the necessary network connection settings. (Refer to Connect to network → p. 38)

## Using Net TV


## 1 Press NET TV.

- Net TV screen will appear, then use  $\mathbf{A} \mathbf{V} \mathbf{A} \mathbf{F}$  to select service icon.
- For the first time only, Terms of Use screen will appear. After confirming the content, use ▲ ▼ to select Agree, then press OK.

## Guide to Net TV menu screen

Net TV start screen

6 Option

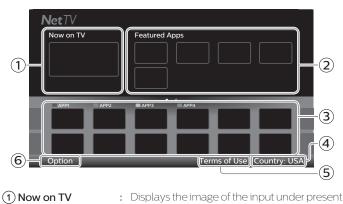

- tuning.(2) Featured Apps: Displays fixed net service icons.(3) Selected Apps: Displays movable net service icons.(4) Country: Selects what country you live in.(5) Terms of Use: Displays a copy of net service.
  - : Remove or move App.

## My Apps functions


## Remove App

- 1 Use  $\blacktriangle \forall \triangleleft \triangleright$  to select the desired App, then press  $\Xi$  OPTIONS.
- 2 Use ▲▼ to select Remove App, then press OK.
   The selected App will be removed from My Apps list.

### Move App

- 1 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired App, then press  $\Xi$  OPTIONS.
- 2 Use ▲▼ to select Move App, then press OK.
   The selected App icon will be smaller.
- 3 Use  $\blacktriangle \lor \blacklozenge \lor$  to the point you want to place, then press OK.

### Guide to App Gallery

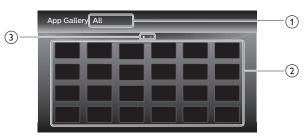

- 1 Category menu: List of category menu.
- (2) Icon list: Displays unregistered net service icons on My Apps list.
- (3) Page guide: Displays the order of pages. The current page will be highlighted.
- Press ➡ NET TV, then use ▲ ▼ ◄► to select App Gallery.
- 2 Use ▲▼ ◀► to select the desired App in My Apps list, then press OK.
  - You can also choose from Category menu. Use  $\blacktriangle \lor \checkmark \lor$  to select All, then use  $\blacktriangle \lor \lor \lor \lor$  to select the desired category.
  - If you select **Add**, the selected App icon will be placed at the end of **My Apps** list.
  - If you select Add and move, the selected App icon will be smaller and use A V <>> to the point you want to place, then press OK.

Even if you press **G** BACK to cancel this function, the selected App icon will be placed at the end of **My Apps** list.

#### Information on network services

For detailed information on 3rd party internet services, please visit the service providers website:

- Netflix : http://www.netflix.com
- VUDU : http://www.vudu.com
- CinemaNow : http://www.cinemanow.com

For additional help, refer to the Frequently Asked Questions FAQs at www.philips.com/support. Select TV and enter your model number.

# Pandora<sup>®</sup> operations

With this unit, you can instantly listen to personalized radio stations streamed over the internet from Pandora.

To learn more about Pandora, please visit www.pandora.com

## Activating Pandora

In order to listen to internet radio streamed from Pandora via the internet, you must create a Pandora account and activate this unit.

- 1 Press NET TV, then use A V <> to select PANDORA
- 2 Use  $\blacktriangle \mathbf{V}$  to select I am new to Pandora., then press OK.
- 3 Note the activation code and website address displayed on the TV screen.
- 4 On your PC, visit the website address noted at step 4.
- 5 Follow directions on the website to create your account.
- 6 On this unit, select **Go Back** and press **OK** to complete activation.

#### Adding Pandora user accounts

You can add the Pandora user account.

- 1 Press NET TV, then use A V I to select PANDORA
- 2 Use  $\blacktriangle$  to select I have a Pandora account. then press OK.
- 3 Enter your e-mail address, then press **OK** while **OK** is selected.
- 4 Enter a password, then press OK while OK is selected.
- 5 Use  $\blacktriangle V$  to select Sign In, then press OK.
  - Your account is added to the user list and player screen appears on the TV screen.

#### Note(s)

Pandora is available only in the United States.

## Creating a new station

By entering your favorite artists or tracks, Pandora selects music and creates a new station for you on the basis of the entered information.

- 1 On the station list screen, Use  $\blacktriangle \lor \blacklozenge \lor$  to select New Station, then press OK.
- Enter a name of your favorite artist or tracks, then press **OK** while **OK** 2 is selected.
  - Search result will appear on the right side of the TV screen.
  - If the selection screen with the result type appears, use ▲ ▼ to select the desired type, then press OK.
- 3 Use  $\blacktriangle \nabla$  to select the desired station, then press **OK** to start the playback.

/ II Resumes the playback / pause the playback.	
	Resumes the playback.
	Pauses the playback.
	Skips to the next track.


Note(s)

(

On the Tool Menu, you can delete or rename the currently selected station.

## Guide to the player screen

On the player screen, you can set various options to the currently playing track.

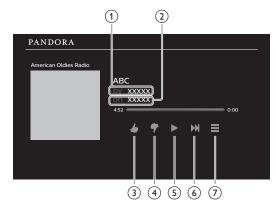

1	Artist name	: Displays artist name.
2	Album name	: Displays album name.
3	4	: Give thumbs up to the currently playing track. Pandora will play tracks similar to the track.
4	4	: Give thumbs down to the currently playing track. Pandora will skip and will not play the track.
5	► / II	: Resumes the playback / pause the playback.
6		: Skips to the next track.
$\overline{\mathbf{A}}$	_	· Displays the Tool menu

- ack
- Displays the Tool menu.

# 5 Useful tips

# FAQ

Question	Answer	
	Check the antenna or cable connection to the main unit.	
	Check the batteries on the remote control.	
	Check if there is an obstacle between the infrared sensor window and the remote control.	
	• Test the IR signal output use IR signal check. 🛶 p. 53	
My remote control does not	If okay, then possible infrared sensor trouble.	
work. What should I do?	Aim the remote control directly at the infrared sensor window on the front of the unit.	
What should I do?	Reduce the distance to the unit.	
	• Re-insert or replace the AAA batteries with their polarities (+/–) as indicated on the remote control battery area.	
	When there is an infrared-equipped device such as PC near this unit, it may interrupt the remote control signal on this unit. Move the infrared-equipped device away from this unit, change the angle of the device's infrared sensor or turn off the infrared communication function.	
How come the initial setup appears every time I turn on this unit?	Make sure to complete the initial setup before the unit goes into standby mode.	
	Autoprogram must be completed when you set up the unit for the first time or move it to a location where previously	
	unavailable channels are broadcast.	
	<ul> <li>Make sure auto programming has been completed.</li></ul>	
Why can I not watch some RF	The selected channel may not be broadcasting.	
signal TV programs?	<ul> <li>When Auto programming is interrupted and not completed, some channels will not be received. Make sure to complete the Autoprogram. → p. 35</li> </ul>	
	$\cdot$ The selected channel cannot be viewed by the Child lock setting. $ ightarrow$ p. 36	
	<ul> <li>The unit requires some kind of antenna input. An indoor antenna (Digital or VHF / UHF), an external antenna (Digital or VHF / UHF) or an RF coaxial cable from your wall cable or set-top box needs to be plugged into the unit.</li> </ul>	
	<ul> <li>Check if the correct input mode is selected by pressing</li></ul>	
How come there is no image from the connected external	Check the antenna, cable or other input connection to the unit.	
devices?	When using the component video connection check that the green (Y), blue (Pb/Cb) and red (Pr/Cr) connectors are connected to their corresponding colored jacks on the unit.	
When I enter a channel number, why does it change automatically?• Many digital channels have alternate channel numbers. The unit changes the numbers automatically to the ones a the broadcasting station's channel number. These basic numbers used for the previous analog broadcasts. (e.g. digital ch# 30 automatically changes to digital ch# 8.1)		
Why are captions not displayed entirely? Or why are captions delayed behind the dialog?	<ul> <li>Closed captions that are delayed a few seconds behind the actual dialog are common for live broadcasts. Most captioning production companies can display a dialog to maximum of 220 words per minute. If a dialog exceeds that rate, selective editing is used to insure that the closed captions remain up-to date with the current TV screen dialog.</li> </ul>	
How can I set the clock?	There is no clock function on this unit.	
My PIN code no longer	• Although the default PIN code (0000) is supplied with the unit, the PIN code will be required once you set a PIN code in	
works, how can I change the child lock setting?	Child lock. → p. 36 When you forget your PIN code, enter 0711 in Change PIN to reset the PIN code. → p. 37	
When I start up the TV or a net service, a message appears on the screen prompting for software update again.	<ul> <li>When you start up the TV or a net service after executing the software update, a message may appear on the screen prompting for software update again. In this case, please select Update to start USB update or network update.          — p. 43     </li> </ul>	

If the unit does not perform properly when operated as instructed in this manual,

## Please check the following Troubleshooting tips and all connections once before calling for service.

#### Power

#### No power

- Make sure the AC power cord is plugged in.
- Make sure that the AC outlet supplies the proper voltage, plug another electrical
- appliance into the AC outlet to ensure that the AC outlet operates normally If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself

#### Remote

#### Control buttons do not work.

- Do NOT press more than one button at the same time.
- · Ensure that no buttons on the remote control are depressed and move freely. Universal remote control does not work properly.
- Refer to the User manual of the universal remote control for the Philips code.

#### Picture

#### Power is on but no screen image.

- Check whether the connection for the antenna, cable or set-top box is
- connected correctly
- Check whether all the cables to the unit are connected to the correct output jack on your separate device like Blu-ray disc / DVD recorder
- Make sure that the selected input mode is connected to the working input jack.
- Check if your computer is NOT in sleep mode when the input mode on this unit is in PC mode. Tap any key on the computer keyboard to wake it up
- Check if the correct input mode is selected by pressing SOURCE.

#### No color

· View other TV channels. The problem might be limited to the broadcasting station

#### Adjust Color in Picture settings. — p. 28

#### Picture poor

- Adjust Contrast and Brightness in Picture settings. 🛶 p. 28
- For the best picture quality, watch "High Definition" wide screen programs. If the HD content is not available, watch "Standard Definition" programs instead.
- You see pixelation on the screen.

 When the capabilities of the unit exceed the capabilities of the digital broadcasting, the signal will be increased to match the capabilities of the display on the unit. This may cause pixelation, noise or trash

#### Unusual picture appears and the TV does not operate.

- · Press the power button first. If it does not solve, follow the procedure below (1)
- Press the buttons on the remote control in the order shown below  $\blacktriangleright \rightarrow A \rightarrow \Box \rightarrow b$
- (2) Unplug the AC power cord, then wait for 1 minute, and then plug it in again.

#### Sound

#### No sound is heard when using the HDMI digital connection.

Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.

#### No sound, distorted sound or incorrect audio sound is heard when using the HDMI-DVI connections.

- Make sure that the analog audio signals from the HDMI-DVI device are connected to the analog audio input L/R jacks.
- When using Component analog video, Composite analog video or PC VGA video, make sure that the analog audio (L/R) connectors are mounted into the audio (L/R) input jacks.

#### Sound intermittent or no sound.

Check if the audio cable is connected into the unit correctly.

#### You switch to a different input and the volume changes.

- This unit will memorize the volume level from the last time you adjusted it. • If the volume of the sound from another device is higher or lower, then the
- loudness will change

## Picture & Sound

#### No sound with distorted picture occurs when using the HDMI digital connection.

• Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications

#### No picture or sound

- Check if the power is on.
- Check whether all the cables to the unit are connected to the correct output jack on your separate device like Blu-ray disc / DVD recorder.
- View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.
- Unplug the AC power cord and wait for about 1 minute, then plug the AC power cord and turn on the unit again.
- Check whether the connection of the antenna or cable / satellite set-top box is connected correctly.
- Make sure that the selected input mode is connected to the working input jack. Check if your computer is NOT in sleep mode when the input mode of this unit
- is in PC mode. Tap any key on the keyboard to wake up your computer • Make sure that the sound is not muted. Press 🗬 so that the volume bar and
- current volume level will appear on the TV screen • Make sure that the volume is NOT set to **0** or **I** or **I** so, use **VOL + / -** to adjust to
- the desired volume Make sure that the headphone is NOT connected to the headphone audio
- output jack.
- Make sure that the TV speakers is NOT set to Off.

#### Adjusted Picture or Sound settings are not effective every time the unit is turned on.

You must set Home in Location. → p. 33 (Otherwise, the settings you adjusted will not be memorized after the unit goes into standby mode.)

#### You see a distorted picture or hear an unusual sound. (Analog TV - NTSC signal)

- You may be getting NTSC (Analog) TV signal (not HDTV signal) interference from electrical appliances, automobiles, motorcycles or fluorescent lights.
- Try moving the unit to another location to see if this is the cause of the problem. Ghosts, lines or streaks in picture.
- · Electrical interference from nearby appliances may affect picture quality
- View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

#### Picture poor, sound intermittent or no sound

 View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

#### Child and rating lock

- Forgotten PIN code.
- Enter "0711" to clear your password.

#### Screer

#### You switch to a different input and the screen size changes.

- This unit will memorize the viewing mode from the last time you used the particular input modes
- The display image does not cover the entire screen.
- you are using the unit as a PC monitor, make sure that Horizontal position and
- If you are watching TV or using the Composite video, Component video or HDMI with 480i input, press FORMAT repeatedly to switch to various screen modes

#### Different color marks on the TV screen

 View other TV channels. The problem might be limited to the broadcasting station, missing data or pixelation due to weak signal strength.

#### Closed captions

#### Closed captions are displayed as a white box. No closed captions are displayed in the closed captions-supported program.

- Interference from buildings or weather conditions may cause closed captions to be incomplete if watching analog TV signals.
- Broadcasting station may shorten the program to insert advertisements. The closed caption decoder cannot read the information of the shortened program.

#### Black box is displayed on the TV screen.

• The text mode is selected for caption. Select CC-1, CC-2, CC-3 or CC-4.

#### Software update

#### A message appears on the screen prompting for software update again.

 When you start up the TV or a net service after executing the software update, a message may appear on the screen prompting for software update again. In this case, please select Update to start USB update or network update. 
 — p. 43

#### Network

#### Cannot connect to the network.

- Check if the Ethernet cable connection is properly made. Turn on the broadband router and/or modem.
- Check the network settings.
- Check if the broadband router and/or modem is correctly connected

#### Sometimes video quality is poor when using the wireless LAN.

 The wireless network connection quality varies depending on the distance or obstacles (e.g. wall, basement, 2nd floor) between the TV wireless LAN adapter and the wireless router (access point), from other wireless networks, and brand and type of the wireless router (access point). When using the wireless LAN of the TV, it is suggested to place the wireless router as close as possible to the television.

#### Wireless LAN connection fails or wireless connection is poor.

- Check the installation location of the TV and wireless router (access point). Signal quality may be affected for the following reasons.
  - Interference of other wireless devices, microwaves, fluorescent lights, etc., are placed nearby.
  - There are floors or walls between the wireless router and TV.
  - If the problems continue even after checking the above, try making a wired LAN connection.

#### Cannot use the wireless connection.

- Check if the wireless LAN Access Point (AP) (e.g. wireless router) is oriented properly or not placed too close between them.
- Once you have activated the wireless connection please wait 30 seconds for the connection to be established after turning on the unit, before trying to access network features such as Net TV.

#### Cannot use Netflix feature.

- Check if the network connection is properly made.
- Visit http://www.netflix.com on your PC and become a Netflix member.
- · Some network services may not be available in your country

#### Cannot add movies or TV episodes to the Instant Queue.

Visit www.netflix.com on your PC

# Even though the speed of the internet connection improves during playback, the picture quality of Netflix streaming movie does not improve.

• The picture quality does not change during playback. It differs depending on the speed of internet connection at the time of loading.

#### Cannot use VUDU feature.

- VUDU is available only in the United States and Mexico.
- Check if the network connection is properly made.

#### Cannot rent or buy movies / TV episodes on VUDU.

- You need to activate the VUDU account. For detailed information, please visit the service providers website at http://www.vudu.com
- Log into your account at *http://my.vudu.com* and check your payment

#### information

#### The picture quality of streaming movie (Netflix, VUDU or CinemaNow) is poor.

Check the speed of your internet connection. You need speeds of at least 8 Mbps to this player for high quality uninterrupted playback.

#### Streaming movie (Netflix, VUDU or CinemaNow) often stops or starts buffering during playback.

 Contact your internet service provider to troubleshoot your internet connection for speed and line quality. Consistent line quality and speed are very important for internet video playback.

#### Cannot connect to the network while my PC is connected to the network.

Check the content of your internet service contract to see if your internet service
 provider prevents multiple terminals connecting at the same time.

#### Cannot use Easy Connect to connect to the access point.

- Connect the unit to the access point using scan or manual entry mode. If the access point's security mode is set to WEP\*, change the setting to others (recommended), then try Easy connect again. (For access point configuration, please consult its user manual or manufacturer.)
- WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

## Folder or files stored on home network media server are not displayed in the file

#### list or cannot be played back.

- Check the setting on your home media server. (Refer to the user manual of the home media server.)
- Check the network connection and settings.

#### Cannot use Pandora feature.

- · Check if the network connection is properly made.
- Pandora is available only in the United States.
- You must create a Pandora account and activate this unit.
- Activating Pandora → p. 49 Wireless Screencasting
- Connectivity with all Wireless Screencasting compatible devices is not guaranteed
- Devices that do not comply with Wireless Screencasting standards may have compatibility issues.

#### Note(s)

- The LCD screen is manufactured to provide many years of useful life.
   Occasionally a few non active pixels may appear as a fixed point of blue, green or red.
- This is not to be considered a defect in the LCD screen.
- Some functions are not available in specific modes, but this is not a malfunction. Read the description in this manual for more details on correct operations.

For additional troubleshooting, refer to the Frequently Asked Questions or FAQs on www.philips.com/support.

# 6 Information

# Glossary

#### Analog TV (NTSC)

Acronym that stands for National Television Systems Committee and the name of analog broadcasting standards.

Off the air analog TV signals are no longer being sent by major broadcasting stations in the USA.

#### ARC (Audio Return Channel) (HDMI 1 only)

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI CEC and ARC compliant, and that the TV is connected to the device using an HDMI cable attached to both HDMI-ARC connectors.

#### Aspect ratio

The width of a TV screen relative to its height. Conventional TVs are 4:3 (in other words, the TV screen is almost square); widescreen models are 16:9 (the TV screen is almost twice as wide as its height).

#### **CEC** (Consumer Electronics Control)

This allows you to operate the linked functions between our brand devices with CEC feature and this unit. We do not guarantee 100% interoperability with other brands of CEC compliant devices.

#### Component video

This is a Video signal format that conveys each of 3 principal colors of light (red, blue and green) through different signal lines. This allows the viewers to experience picture colors as original as it is. There are several signal formats, including Y / Pb / Pr and Y / Cb / Cr.

#### **Dolby Digital**

The system developed by Dolby Laboratories to compress digital sound. It offers stereo sound (2ch) or multi-channel audio.

#### DTV (ATSC)

Abbreviation that stands for Advanced Television Systems Committee and the name of the digital broadcasting standards.

#### E-sticker

E-sticker is showing set features, technical information, etc on this TV set that is displayed on the TV screen mainly used by TV retailers. Previously the information was on a printed sticker that was put on the display.

#### HDMI (High-Definition Multimedia Interface)

Interface that supports all uncompressed, digital audio / video formats including set-top box, Blu-ray / DVD recorder or digital television, over a single cable.

#### HDTV (High-Definition TV)

Ultimate digital format that produces high resolution and high picture quality.

#### PIN code

A stored 4-digit number that allows access to parental control features.

#### SAP (Secondary Audio Program)

Second-audio channel delivered separately from the Main-audio channel. This audio channel is used as an alternate in bilingual broadcasting.

#### SDTV (Standard Definition TV)

Standard digital format that is similar to the analog TV picture quality.

#### Sonic Emotion

Sonic Emotion delivers immersive sound with clear voice.

# Maintenance

#### Cleaning

- Clean the front panel and other exterior surfaces of the unit with a soft microfiber cloth or lens brush. Before cleaning the panel, disconnect the AC power cord.
- Never use a solvent or alcohol. Do not spray insecticide liquid near the unit. Such chemicals may cause damage and discoloration to the exposed surfaces.
- Do not spray any liquids on the screen or other exterior surfaces of this unit. If liquids enter the unit, they could cause shorts, electric shocks or fire damage.



#### Servicing

Should your unit become inoperative, do not try to correct the problem yourself. There are no user serviceable parts inside. Call our toll free customer support line found on the cover of this User manual to locate an authorized service center.

#### IR signal check

If the remote control is not working properly, you can use a digital or cell phone camera to see if it is sending out an infrared signal.



e.g.) With a digital camera:

Point the digital camera towards the remote control infrared diode at the front of the remote control. Press and hold any key on the remote control and look at the camera display. If an infrared pulsating light appears on the display, the remote control is sending out an IR signal.

Note: Some cameras may have an IR filter

or dual camera cell phones may have an IR filter in one of the camera's and both will not display the IR signal.

# 7 Specifications

Model #		55PFL4901	50PFL4901	43PFL4901		
Picture						
Туре		FHD (1920 x 1080 pixels 60H	lz)			
Diagonal screen size / aspect ratio		54.6"/ 16:9	49.5"/ 16:9	43"/ 16:9		
Viewing angles		176° (V) by 176° (H)				
Built-in digital /	Analog tuner	ATSC (Digital) / NTSC (Analo	g)			
Sound						
Mono / Stereo		Mono, Stereo, Sonic Emotion	Premium			
Power output (R	MS watts)	10W x 2		8W x 2		
Equalizer		5 Band				
Ease of use						
	SD (4:3 source)	: Automatic / Super zoom / 4	:3 / Movie expand 14:9 / Movi	e expand 16:9 / Wide screen		
Picture format	HD (16:9 source)	: Automatic / 4:3 / Wide scree	en / Unscaled or Full			
Photo slide show	V	JPEG, Progressive JPEG				
Music playback		MP3, WAV, AAC				
Video playback		MPEG1, MPEG2, H.264, MPE	G4, H.265/HEVC			
Channel						
		Over-the-Air DTV : VHF: (ATSC) UHF:	2~13 14~69 (Each channel may hav	ve e.g. 2.1~2.9, 3.1~3.9, etc)		
Channel coverage		Over-the-Air Analog: VHF: 2~13(NTSC)UHF: 14~69				
CATV (Analog NTSC)		2~13, A~W W+1~W+94 (Analog W+1~W+84), A-5~A-1, 5A				
Tuning system		Channel frequency synthesiz				
Channel access		Direct access number keyboard, Programmable scan, Channel +(up) / -(down) and PREV. CH (Previous channel)				
Connectivity						
Component video input (Y/Pb/Pr)		1 Supporting video signals : 48	0i/p, 720p, 1080i/p @60Hz			
Composite video input (Shared Y green terminal with component video)		1				
		3				
HDMI input		Supporting HDMI video signals : 480i/p, 720p, 1080i @60Hz, 1080p @24/30/60Hz Supporting HDMI digital audio signals : LPCM, AC3, DD+				
		Supporting PC-input video signal up to FHD (1920 x 1080)				
Analog audio L/I	R input	1 (L audio / R audio)				
PC input		Via VGA, HDMI and HDMI-DVI + Analog audio L/R				
USB		1				
Wireless LAN		Supporting wireless standards : IEEE 802.1 1a/b/g/n/ac (2.4GHz/5GHz)				
Ethernet port		1				
Digital audio output		1 Supporting Dolby Digital and Dolby Digital Plus				
Headphone output		1 1/8 inch (3.5mm)				
Power						
Power requireme	ents	120V~ +/- 10%, 60Hz +/- 0.59	%			
Temperature						
Operating tempe	erature	41 °F (5 °C) to 104 °F (40 °C)				

Specifications are subject to change without prior notice.

#### Warranty coverage :

This warranty obligation is limited to the terms as set forth below.

#### Who is covered:

This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

#### What is covered:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.

**Note:** Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

#### What is not covered - Exclusions and limitations:

This Limited Warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

#### This Limited Warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per user manual.

To obtain assistance... Contact the Customer Care Center at: 1-866-813-3283

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Funai Service Corporation, 2425 Spiegel Drive, Groveport, OH 43125, USA

# License

Funai Corporation, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Funai Corporation, Inc. You should write to Funai Service Corporation OSS Request, 2425 Spiegel Drive, Groveport, OH 43125, USA. Funai Corporation, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Funai Corporation, Inc. shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it. Funai Corporation, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code.



Funai Corporation, Inc. 12489 Lakeland Road, Santa Fe Springs, CA 90670, USA

This product has been manufactured by and is sold under the responsibility of Funai Corporation, Inc., and Funai Corporation, Inc. is the warrantor in relation to this product.

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.

# **PHILIPS**

# Televisions

4000 series

55PFL4901 50PFL4901 43PFL4901



# Register your product and get support at

# www.philips.com/welcome

# EN User manual

- ES Manual del usuario
- FR Manuel d'utilisation

ΞN	For further assistance, call the customer support service in your
	country.
	To obtain assistance, contact Philips customer care center;
	In the U.S.A., Canada, Puerto Rico, or the U.S. Virgin Islands
	1 866 813 3283
	México D.F. and área metropolitana; <b>58 87 97 36</b> Interior de la republica; <b>01 800 839 19 89</b>
ΞS	Para obtener más información, llame al servicio de soporte al cliente
	de su país.
	Para obtener asistencia, comuníquese con centro de atención al
	cliente de Philips;
	En los Estados Unidos, en Canadá, Puerto Rico o en las Islas Vírgenes
	de los Estados Unidos; <b>1 866 813 3283</b>
	México D.F. y área metropolitana; <b>58 87 97 36</b> Interior de la republica; <b>01 800 839 19 89</b>
-R	Pour obtenir de l'aide supplémentaire, communiquez avec le centre
	de service à la clientèle de votre pays.
	Pour obtenir de l'aide, communiquez avec le centre de service à la
	clientèle Philips au;
	Dans le États-Unis, au Canada, à Puerto Rico ou aux Îles Vierges
	américaines; <b>1 866 813 3283</b>
	México D.F. et área metropolitana; <b>58 87 97 36</b>
	Interior de la republica; <b>01 800 839 19 89</b>

# Contents

1	Notice	5
2	Important	7
	Positioning the TV Regulatory notices Environmental care Batteries usage Preparing to move/ship the unit	7 7 7 7 7
3	Getting started	8
	Features Supplied accessories Symbols used in this User manual Stand assembly Attaching the base Installing the remote control batteries Remote control Control panel Terminals Connecting Antenna or Cable / Satellite / IPTV set-top box Plugging in the AC power cord Selecting your connection quality Connecting your devices Initial setup	8 9 9 10 11 12 12 13 13 17
4	Use your TV	19
	Switching on your TV and putting it in standby mode Adjusting volume Switching channels Watching channels from an external device Access the Home menu Create a list of favorite channels Changing Picture format TV screen information Using options menu USB	19 19 20 21 21 22 23 24
5	Getting more from your TV	27
	Picture and sound setup TV settings Picture Sound Features Installation	28 28 28 30 31 31

	Search for channels Install channels Channel settings Channel installation	35 35 35 35
	Child lock Change PIN Digital audio language	36 37 37
	Mono/Stereo	37
	Connect to network Wireless setting Wired setting Network settings	38 38 38 39
	Manual network settings Connection test Setting status Home network	39 41 41 42
	Wake-on-LAN(DIAL) Net TV Samba interactive TV settings	42 42 42
	Reset network settings Update software	42 43
	Preparing for the software upgrade Downloading the software USB upgrade	43 43 43
	Network updates Software settings Software Wireless Screencasting	44 44 45
	Vieuess Screen Lasting View photos, play music and watch videos using home network Net TV	45 45 48
	Pandora® operations	49
6	Useful tips	50
	FAQ	50
	Troubleshooting tips	51
7	Information	53
	Glossary Maintenance	53 53

## 8 Specifications 54

9

33

Warranty	55
License	end of book

• Displays and illustrations may differ depending on the product you purchase.

Installation

Accessibility

# Register online today at www.philips.com/welcome today to get the most benefits from your purchase.

Registering your model with Philips makes you eligible for all of the valuable benefits listed below, so don't miss out. **Register Online at www.philips.com/welcome** to ensure:

# \*Product safety notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

# Know these **safety** symbols



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The caution marking is located on the rear or bottom of the cabinet.

# \*Additional benefits

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the apparatus's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

- CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- **ATTENTION:** Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

**PHILIPS** For fastest support visit us online for chat and self service solutions at www.philips.com/support

# CHILD SAFETY: PROPER TELEVISION PLACEMENT MATTERS

# THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old– must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

# TUNE IN TO SAFETY

- ALWAYS follow the manufacturer's recommendations for the safe installation of your television.
- ALWAYS read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- ALWAYS install the television where it cannot be pushed, pulled over or knocked down.
- ALWAYS route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

# CTA.tech/safety Consumer Technology

Association

# WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- ALWAYS use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- ALWAYS follow all instructions supplied by the television and mount manufacturers.
- ALWAYS make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

## MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- ALWAYS place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- ALWAYS make sure your older CRT television does not hang over the edge of your furniture.

# Important safety instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **9.** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **10.** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- **11.** Only use attachments / accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.

Brand

SANUS

Wall mount bracket kit

55PFL4901

50PFL4901

43PFL4901



Screw dimension

M6 x 0.472" (12mm)


M4 x 0.472" (12mm)

- **13.** Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

# Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

# Example of antenna grounding as per NEC -National Electric Code

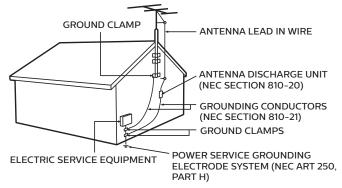

# Funai Corporation is not liable for these types of accidents or injuries noted below.

- Install the wall mount bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and wall mount bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a wall mounting bracket.
- Do not mount the TV onto the wall mounting bracket while your TV is plugged in or turned on. It may result in an electrical shock injury.

## When installing the unit on the wall, allow this much space.

Тор	: 11.8 inches (30cm)
Left and right side	: 5.9 inches (15cm)
Bottom	: 3.9 inches (10cm)

model.
The recommended wall mount bracket kit (sold separately) allows the mounting of the TV on the wall.

Your TV meets the VESA standard for wall mounting. Consult with your

local dealer for a wall mount bracket which is compatible with your TV

Model #

PLA50B

SAN25BB

- For detailed information on installing the wall mount, refer to the wall mount Instruction book.
- Funai Corporation is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV wall mount bracket or mount the TV onto the bracket on your own.
- The wall mount bracket must be installed by experts.

# 1 Notice

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Funai Corporation reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this Owner's Manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Funai Corporation warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Funai Corporation cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Funai Corporation will be adapted and published on the Funai Corporation support website as soon as possible.

# **Pixel characteristics**

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

# Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Service Centers and official repair shops. Failure to do so shall void any warranty, stated or implied. Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

# Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

## Declaration of conformity

Trade name	:	PHILIPS
Responsible party	:	Funai Corporation, Inc.
Model	:	55PFL4901, 50PFL4901, 43PFL4901
Address	:	12489 Lakeland Road, Santa Fe Springs, CA 90670, USA*
		1 866 813 3283

Telephone number : 1866 813 3283

\* This is not the mailing address for Open Source Software or Customer service.

# Modifications

This apparatus may generate or use radio frequency energy. Changes or Modifications to this apparatus may cause harmful interference.

Any Modifications to the apparatus must be Approved by Funai Corporation.

The user could lose the authority to operate this apparatus if an unauthorized Change or Modification is made.

# Cables

Connections to this device must be made with shielded cables with metallic RFI / EMI connector hoods to maintain compliance with FCC Rules and Regulations.

# Canadian notice

CAN ICES-3 (B)/NMB-3 (B)

Standard Televísion Receiving Apparatus, Canada BETS-7 / NTMR-7.

The following FCC/IC RSS applies to the Wireless LAN adapter included in this product. FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Country Code Statement

For product available in the USA market, only channel  $1 \sim 11$  can be operated. Selection of other channels is not possible.

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that do not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

# Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Manufactured under license from Dolby Laboratories. Dolby and

trademarks of Dolby Laboratories

the double-D symbol are

Licensing Corporation.



sonic

Sonic Emotion and the Sonic emotion PREMIUM Emotion logo symbol are ABSOLUTE **3D** SOUND registered trademarks of sonic emotion ag



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

# Consumer Notice:

This TV has been set to maximize energy efficiency while delivering the best possible picture using the factory installed home mode settings.

Changing or enabling other features in this TV (e.g. brightened backlighting) will possibly increase energy consumption beyond the original ENERGY STAR® qualified limits.



Netflix is available in certain countries. Streaming membership required. More information at www.netflix.com.

VUDU™ is a trademark of

VUDU. Inc.











PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission.

YouTube and the YouTube logo

are trademarks of Google Inc.

CinemaNow and the CinemaNow logo are trademarks of BestBuy Stores L.P. and BestBuy Canada LTD.

Hotlist, Samba, Samba TV and associated logos are trademarks of Free Stream Media Corp.

Portions of this software are copyright © The FreeType Project (www.freetype.org).

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

Some features may require an always-on broadband internet connection, firmware update and/or a minimum bandwidth. Internet services vary by location.

Funai Corporation Inc. does not warrant access to the portal or to any of the services, content, software and advertising. Funai Corporation Inc. may, in its sole discretion, add or remove access to any specific services, content, software and advertising at any time. Although Funai Corporation Inc. will strive to provide a good selection of services, content or software, Funai Corporation Inc. does not warrant continued access to any specific services, and content or software.

Funai Corporation Inc. does not warrant Wireless Screencasting compatibility with all source devices such as smartphones, tablets, laptops, etc. due to large variability in hardware, firmware, drivers, software and implementation of wireless casting applications on these source devices. Although Funai Corporation Inc. will strive to enhance compatibility and performance across a range of source devices, Funai Corporation Inc. does not warrant compatibility with specific source devices.

# 2 Important

# Positioning the TV

- Large screen TVs are heavy. 2 people are required to carry and handle a large screen TV. Make sure to hold the upper and
- bottom frames of the unit firmly as illustrated.
- Install the unit in a horizontal and stable position
- Do not install the unit in direct sunlight or in a place subject to dust or strong vibration
- Depending on the environment, the temperature of this unit may increase slightly. This is not a malfunction.

- Avoid a place with drastic temperature changes. Do not place anything directly on top or bottom of the unit. Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the unit is placed too close to them. In this case, please ensure enough
- space between the external devices and the unit. Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC Power Cord and Outlet to disconnect the TV from the AC Outlet.
- Before you move the TV, disconnect attached Cables to prevent damage to Connectors, especially the TV Tuner. Be sure to Unplug the AC Power Plug from the AC outlet
- When moving the TV and then Setting it down, please be careful not to pinch the AC Power Cord under the unit. Do not place this unit in an area where it may be exposed to
- water, oil or grease such as:
- near a bathtub, basin, kitchen sink, washing tub, swimming pool, kitchen exhaust fan, etc., or in a damp basement.


# **Regulatory notices**

Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling unit can cause serious injury or even death. This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided. Make sure to leave a space of 4 inches (10cm) or more around this apparatus.

Press () to turn the unit On and go into Standby mode.

To completely turn Off the unit, you must unplug the AC power Plug from the AC Power Outlet.

Disconnect the AC Power Plug to shut the unit Off when trouble is found or not in use. The AC Plug shall remain readily available.

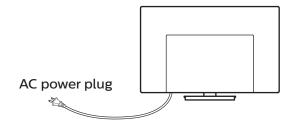

Never use a gas duster on this TV.

The gas trapped inside of this unit may cause ignition and explosion.

CAUTION:	Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
WARNING:	Batteries (battery pack or battery installed) should not be exposed to excessive heat such as sunshine, fire or the like.
WARNING:	To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions. Tipping, shaking or rocking the unit may cause injury / death.

# Environmental care



The packaging of this product is intended to be recycled. Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit www.recycle.philips.com

## End of life directives

Philips pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

# Disposal of used batteries


The batteries supplied do not contain the heavy metals mercury and cadmium, however in certain localities, disposing batteries with household waste is not permitted. Please ensure you dispose of batteries according to local regulations.

# A Batteries usage

- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, Li-ion, etc.) batteries.

# Preparing to move/ship the unit

Please pack the unit properly by following the diagram on the carton (as noted below).

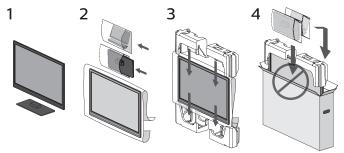

To avoid damage to the screen, do not pack the stand on the same side as the TV screen, refer to the step 4 above



# 2 Getting started

# Features

- DTV / Analog TV / CATV
- You can use your remote control to select channels which are broadcast in digital format and conventional analog format. Also, cable and satellite subscribers can access their TV channels.
- Information display
   You can display on the TV screen the title, contents (DTV only) and other information on the current
   program.
- Autoprogram

This unit automatically scans and memorizes channels available in your area, eliminating difficult setup procedures.

Net TV

This unit lets you enjoy internet services. Use the remote control to browse the Net TV pages. You can play movies and much more, all from your TV screen.

- Child lock
   This feature allows you to block children's access to inappropriate programs.
- Closed caption decoder

Built-in closed caption decoder displays text for closed caption supported programs. • MTS / SAP tuner

- Audio can be selected from the remote control.
- Auto standby If there is no input signal and no operation for 15 minutes, the unit will go into standby mode automatically.
- Sleep timer You can set the unit to go into standby mode after a specific amount of time
- Choices for on-screen language
   Select your on-screen language: English, Spanish or French.
- Stereo sound function
- PLL frequency synthesized tuning

Provides free and easy channel selection and lets you tune directly to any channel using the number and decimal point \*\* keys on the remote control.

- Various adjustments for picture and sound
   Customizes picture quality suitable for your room and sets your sound preference
- EasyLink via HDMI link
   EasyLink allows your other HDMI link devices to be controlled by the HDMI cable connected to
   your TV.
- HDMI input
- HDMI-DVI input

If your video device has a DVI output jack, use an HDMI-DVI conversion cable to connect the unit

- Component video input
- PC input
- AV input
   Audio and video input from an external device
- USB terminal
- The picture, music and video files stored on a USB memory stick can be played back on this unit. • Digital audio output
- Headphone audio output

Headphone 3.5mm stereo jack for personal listening.

User manual

cccssones

Quick start guide

Quick start gui

 
#### Caution sheet



55" / 50"



Remote control and Batteries



TV base and Screws



Screws packed with this unit.

Model	Quantity	Size
55PEL 4901	8	M4 x 0.472"(12mm)
55PFL4901	2	M5 x 0.472"(12mm)
50PFL4901	8	M4 x 0.472"(12mm)
43PFL4901	3	M4 x 0.787"(20mm)

\* Caution sheet is not included in 43PFL4901.

Note(s)

- If you lose the screws, please purchase the above-mentioned Phillips head screws at your local store.
- If you need to replace these accessories, please refer to the part name or No. with the illustrations and call our toll free customer support line found on the cover of this User manual.

#### When using a universal remote control to operate this unit.

- Make sure the component code on your universal remote control is set to our brand. Refer to
  the instruction book accompanying your remote control for more details.
- We do not guarantee 100% interoperability with all universal remote controls.


# Symbols used in this User manual

The following is the description for the symbols used in this User manual. Description refers to:

**Digital TV operation** 

Cable / NTSC (Analog) TV operation

• If neither symbol appears, the operation is applicable to both.

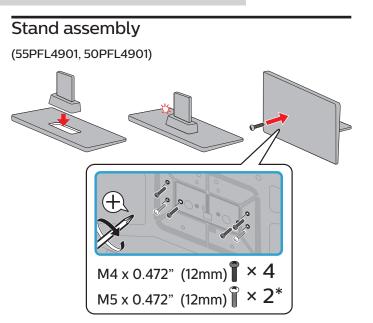


\* For 55PFL4901 only.

# Attaching the base


You must attach the base to the unit to have it as a table top unit. Be sure the front and rear of the base match the proper direction. For large screen TVs, at least 2 people are required for these steps.

#### (55PFL4901, 50PFL4901)


#### 1

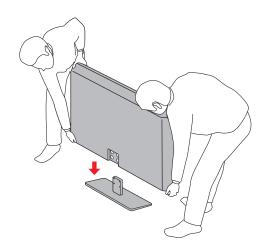

2

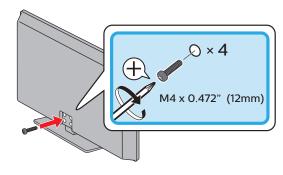


1

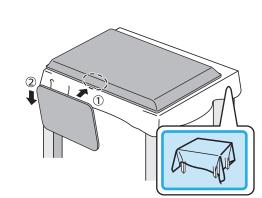




2

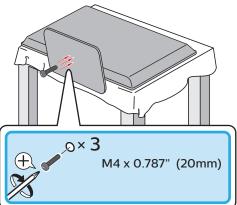

### Note(s)

- Make sure to use a table which can support the weight of this unit and is larger than this unit.
  Make sure the table is in a stable location.
- A Phillips-head screwdriver is required to fasten the stands to the TV set.
- When attaching the base, ensure that all screws are tightly fastened. If the base is not properly attached, it could cause the unit to fall, resulting in injuries as well as damage to the unit.
- To remove the base from this unit, unscrew the Phillips-head screws by reversing the procedure. Be careful not to drop the base when you remove it.
 
# Installing the remote control batteries



- 1 Slide the battery cover off the back of the remote control.
- 2 Insert the two supplied batteries (AAA, 1.5V). Be sure the + and ends of the batteries line up with the markings inside the case.
- 3 Slide the cover back into position.

#### Note(s)

• Remove the batteries if not using the remote control for an extended period of time.

# Remote control



10

English

- (1) () (POWER) Turns the TV on from standby or off to standby.
- (2) VUDU
  - Access directly to VUDU.

## ③ EasyLink buttons

- ◄</>> : Searches backward or forward through the disc.
- Starts, pauses or resumes playback.
  - : Stops the disc playback

### Note(s)

 Pause may not work properly on some devices even if they are EasyLink (HDMI CEC) compliant.

## (4) YouTube

Access directly to YouTube.

- 5 SAP
- Selects audio mode (MONO / STEREO / SAP) / audio language.
- 6 **†** (Home)
  - Displays the main menu.
- 7 🗓 INFO
  - Displays information about the current program.

### 8 OK

Press to decide the command of setting when the Home menu is displayed.

(9) ▲▼◀► (NAVIGATION buttons)

Moves the cursor, selects the on-screen menu items.

### 10 OPTIONS

Displays a list of menu items applicable to the highlighted object or screen.

- (1) E SOURCE Selects connected devices
- (12) CH + / –

#### Selects a channel

#### (13) COLOR buttons

Works as direct access to user specified net apps.

- O 9 (NUMBER buttons)
   Used to enter a channel / program number.
  - (DOT) : Use with 0-9 to select digital channels. For example, to enter 2.1, press



- **PREV.CH** : Returns to the previously viewed channel.
- (15) •**(**MUTE)


Turns the sound on and off.

- (16) VOL + / -
  - Adjusts the volume.
- ⑦ ➡ BACK Returns to the previous menu operation.
- - Adjusts the picture size on the TV screen.
- (19) CC
  - Selects closed caption settings (Off, On, CC w/ mute).
- 20 NETTV
  - Access to Net TV menu directly.

## (21) NETFLIX

Access directly to Netflix.

# Control panel

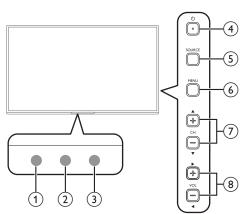

### (1) Remote control sensor

Receives IR signal from remote control.

#### (2) Ambient light sensor

Alters the brightness of the TV screen automatically by detecting your room lighting level. Do not block this light sensor window which allows proper operation.

#### (3) Power on / Standby indicator

(On : lights in white, Standby : no light)

#### (4) (DOWER)

Turns the TV on or switches the TV into standby mode.

#### 5 SOURCE

Selects connected devices.

## 6 MENU

Opens the main on-screen menu.

## ⑦ CH▲(+)/▼(–)

Selects a channel. In the menu screen, moves the cursor up (  $\blacktriangle$  ) ( – ) / down (  $\bigtriangledown$  ) (+).

## ⑧ VOL◀(-)/▶(+)


Adjusts the volume. In the menu screen, moves the cursor left ( $\blacktriangleleft$ ) (–)/ right ( $\triangleright$ ) (+).

### VOL < (-): Volume down

VOL►(+): Volume up

# Terminals



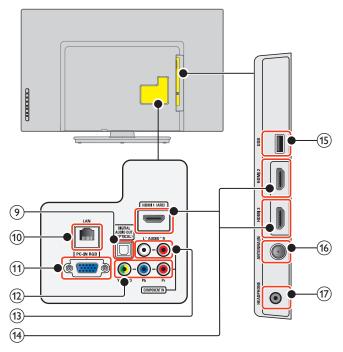

#### (9) Digital audio output jack

Digital audio (S/PDIF) output to home theaters and other digital audio systems.

### 10 Ethernet port

For internet connection using an Ethernet cable with an RJ-45 connector.

## 1 PC input jack

VGA cable connection for PC.

#### Component (Y/Pb/Pr) / Composite video (VIDEO) input jack(s) for VIDEO

Composite video input (VIDEO) jack is a shared jack with component video input (Y) jack.

## (13) Analog audio (L/R) input jacks

- Connect analog audio signals from;
- HDMI-DVI / Analog audio (L/R) jacks signal
- Component video / Analog audio (L/R) jacks signal
- Composite video / Analog audio (L/R) jacks signal
- PC connection / Analog audio (L/R) jacks signal with stereo mini 3. 5mm plug audio cable on PC

#### (14) HDMI input jack(s)

Digital audio and video input from high definition digital devices such as DVD / Blu-ray disc players, cable / satellite set-top boxes, PC's, etc.

\* For HDMI 1 only

In addition to normal HDMI and HDMI-DVI functionality, it outputs TV audio to an HDMI-ARC-compliant device, such as a home theater system.

#### (15) USB terminal

Data input from USB memory stick only. Do not connect any device to this terminal such as digital camera, keyboard, mouse, etc.

#### (16) 75 ohm cable / Antenna connection

Signal input from an antenna or cable / satellite set-top boxes.


# (17) Headphone audio output jack

Headphone 3.5mm stereo jack for personal listening.

Be sure your antenna or another device is connected properly before plugging in the AC power cord.


#### If connecting to an antenna through an RF cable

Any DTV programs that are broadcast in your area can be received for free through an antenna connection.

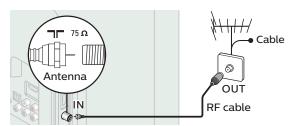


# If connecting Cable / Satellite / IPTV set-top box using an RF cable

If the TV is connected to a cable or set-top box via a coaxial connection, set the TV to channel 3/4 or the channel specified by the service provider

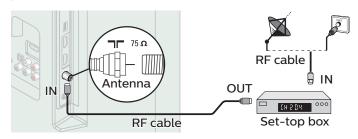


# If connecting Cable / Satellite / IPTV set-top box using an HDMI cable

If the TV is connected to a cable / satellite set-top box via an HDMI cable, make sure you select the correct source by using **D** SOURCE.

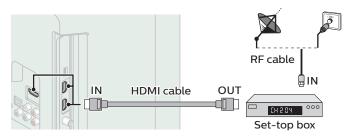


# If connecting Cable / Satellite / IPTV set-top box using component video input

If the TV is connected to a cable / satellite set-top box via component video input, make sure you select the correct component video source by using **+D SOURCE**.

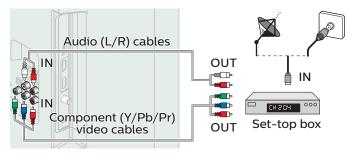

### Connecting a Cable / Satellite / IPTV set-top box, Bluray disc / DVD recorder via composite connectors and analog audio

Do not place your recorder too close to the screen because some recorders can be susceptible to harmful interference from the TV.

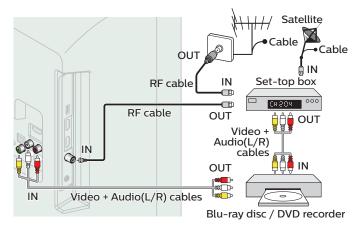

## Note(s)

- If you have any question about the DTV's antenna, visit www.antennaweb.org for further information.
- Depending on your antenna system, you may need different types of combiners (mixers) or separators (splitters) for HDTV signal. The minimum RF bandpass on these devices is 2,000MHz or 2GHz.
- For your safety and to avoid damage to this unit, please unplug the RF coaxial cable from the antenna input jack before moving the unit.
- If you did use an antenna to receive analog TV, it should also work for DTV reception. Outdoor
  or attic antennas will be more effective than a set-top box or inside antenna.
- To turn on your reception source easily between antenna and cable, install an antenna selector.
- If you are not receiving a signal from your cable service, contact the cable provider.

# Plugging in the AC power cord

Make sure that the AC power cord must be plugged to an AC outlet after all the necessary connections are made.

# Caution(s)

 $\bullet$  Connect the analog audio signal cables from the external device to the analog audio L/R input jacks.

• If you have an amplifier, connect the HDMI cable to the HDMI input via your amplifier.

#### Note(s)

• Each time you plug in the AC power cord, no operations will be performed for several seconds. This is not a malfunction.

### No supplied cables are used with these connections:


Please purchase the necessary cables at your local sto

#### Before you connect the AC power cord:

Be sure other devices are connected properly before plugging in the AC power cord.

# Selecting your connection quality

#### HDMI - Highest quality

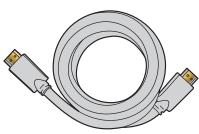


Supports high-definition digital signals and gives highest picture and sound quality. Video and audio signals are combined in one cable. You must use HDMI for full high-definition video and to enable EasyLink(HDMI CEC).

#### Note(s)

- Philips HDMI supports HDCP (High-bandwidth Digital Contents Protection). HDCP is a form of
- digital rights management that protects high-definition content in Blu-ray discs or DVDs.
- The HDMI-ARC connector on the TV features HDMI-ARC functionality. This allows output of TV audio to an HDMI-ARC-compliant device.
- TV addio to all HDMI-ARC-compliant device.

## Component (Y Pb Pr) - High quality

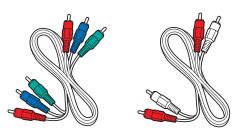

Supports high-definition analog signals but gives lower picture quality than HDMI. Component (Y/Pb/Pr) video cables combine red / green / blue video cables with red / white audio (L/R) cables. Match the cable colors when you connect to the TV.

### Composite - Basic quality




For analog connections. Composite video / Audio analog cable usually combine a yellow video cable with red / white audio (L/R) cables. With this unit, yellow cable must be connected to Y (green) jack on the component video input jacks.

# Connecting your devices

#### HDMI digital connection

HDMI connection offers the highest picture quality. HDMI (High-Definition Multimedia Interface) transports high-definition digital video and multi-channel digital audio through a single cable.

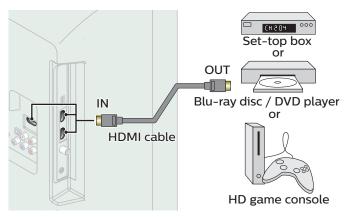


#### Note(s)

- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i / 480p / 720p / 1080i, 1080p 24/30/60Hz of video signals, 32kHz / 44.1kHz and 48kHz of audio signals.
- This unit accepts LPCM, AC-3, DD+ audio signal.
- This unit accepts only signals in compliance with EIA861.

#### **HDMI-DVI** connection


This unit can be connected to your device that has a DVI terminal. Use an HDMI-DVI conversion cable for this connection and it requires audio cable for analog audio signal as well.

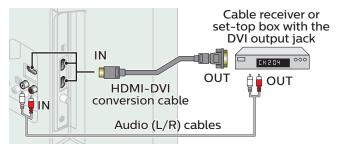

#### Note(s)

- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Some newer HDMI devices may output signals that this TV cannot receive (such as 4K or HDR).
   For such devices you will need to change the output of that device to a compatible signal.
   Please consult with the manufacturer or the user manual of that device.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i, 480p, 720p, 1080i and 1080p video signals.
- HDMI-DVI connection requires separate audio connections as well and the audio signals are output as analog (L/R) audio.
- DVI does not display 480i image which is not in compliance with EIA/CEA-861/861B.

HDMI-ARC allows you to use EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

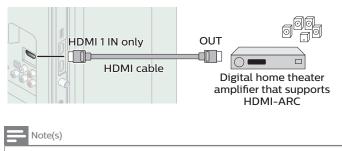


- The HDMI 1 connector is HDMI Audio Return Channel (ARC) compliant. Use it to output digital audio to an HDMI home theater system.
- Be sure that the device is HDMI CEC and ARC compliant and that the TV is connected to the device using an HDMI cable attached to HDMI-ARC connectors.

## Component analog video connection

Component analog video connection offers better picture quality for video devices connected to the unit.

If you connect to the unit's component video (Y/Pb/Pr) input jacks, connect analog audio cables to the analog audio (L/R) input jacks.

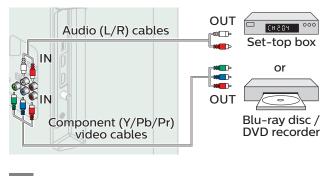


#### Note(s)

• The unit accepts 480i, 480p, 720p, 1080i and 1080p of video signals for this connection.

## Composite analog video connection

Composite analog video connection offers standard picture quality for video devices connected to the unit.


If you connect to the unit's component/composite video (Y/VIDEO) input jack (green), connect audio cables to the audio (L/R) input jacks. When the audio is monaural, then only connect to the audio L input jack.

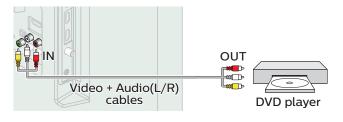

### Note(s)

- With this unit, yellow cable must be connected to Y (green) jack on the component video input jacks.
- Whenever you connect to the composite video input jack (Y/VIDEO), you must disconnect the component video input jacks (Pb and Pr). If you leave those jacks connected, it may cause an unstable picture.


# Connecting the TV to the internet using an Ethernet cable

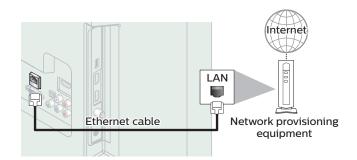

#### Note(s)

- Please purchase shielded Ethernet cables at your local store and use them when you connect to network equipment.
- After connecting an Ethernet cable, set up necessary network settings. Connect to network p. 38
- Do not insert any cable other than an Ethernet cable to the Ethernet port to avoid damaging the unit.
- If your telecommunications equipment (modem, etc.) does not have broadband router functions, connect a broadband router.
- If your telecommunications equipment (modem, etc.) has broadband router functions but there
  is no vacant port, then add a hub.
- For a broadband router, use a router which supports 10BASE-T / 100BASE-TX.
- Do not connect your PC directly to the Ethernet port of this unit.

## Connecting the TV to the internet using a wireless LAN

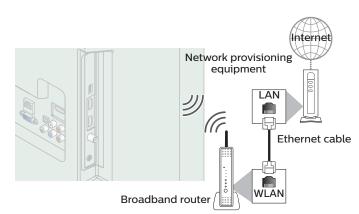


#### Note(s)

- After you make the wireless connection, set up the necessary network settings. Connect to network 
  p. 38
- Use a wireless LAN Access Point (AP) (e.g. broadband wireless router) which supports IEEE 802.11 a/b/g/n/ac. (n is recommended for stable operation of the wireless network)
- This unit does not support Ad-hoc mode.
- Other radio devices or obstacles may cause interference to the wireless network connection.

## Digital audio output connection

If you connect this unit to an external digital audio device, you can enjoy multi-channel audio like 5.1ch digital broadcasting sound.

 
Use a digital audio optical cable to connect the unit to external digital audio devices.



## PC connection


#### HDMI connection

 This unit can be connected to your PC that has an HDMI terminal. Use an HDMI cable for this digital connection.



#### HDMI-DVI connection


This unit can be connected to your PC that has a DVI terminal. Use an HDMI-DVI conversion cable for this video digital connection and it requires stereo mini 3.5mm plug audio cable for analog audio signal as well.

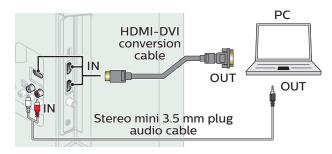

#### VGA connection

This unit is equipped with a PC input jack. If you connect this unit to your PC, you can use this unit as a PC monitor.

Use a VGA cable for this video connection and it requires a stereo mini 3. 5mm plug audio cable for analog audio signal as well.

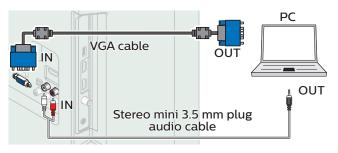

The following PC-input video signals can be displayed:

Format	Resolution	Refresh rate
VGA	640 x 480	
SVGA	800 x 600	
XGA	1,024 x 768	60Hz
WXGA	1,280 x 768	
WAGA	1,360 x 768	
FHD	1,920 x 1,080	24/30/60Hz

Other formats or non-standard signals will not be displayed correctly.

#### Note(s)

- Please purchase a VGA cable that has a ferrite core (0.6 inches (15mm) or more in diameter).
- Please purchase a HDMI-DVI conversion cable that has a ferrite core.
- The following operations may reduce noise.
- Attach a ferrite core to the AC power cord of your PC.
- Unplug the AC power cord and use the built-in battery of your portable / laptop PC.
- Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
- Use an HDMI cable with the HDMI logo (a certified HDMI cable). High speed HDMI cable is recommended for the better compatibility.
- The unit accepts 480i, 480p, 720p, 1080i and 1080p video signals only when using the HDMI connection and HDMI-DVI connection.
- $\cdot$  HDMI-DVI connection requires separate audio connections as well and the audio signals are output as analog (L/R) audio.
- DVI does not display 480i image which is not in compliance with EIA/CEA-861/861B.

#### USB memory stick

This unit offers easy playback of picture, music and video files.

Insert the USB memory stick into the USB terminal shown below. For a complete list of file formats and specifications supported, refer to USB Section  $\implies p. 24$ 



#### Note(s)

- The unit recognizes only a USB memory stick.
- Do not use a USB hub or an extension cable to connect an external hard disk drive to the unit. (Not supported.)
- Always insert a USB memory stick directly to this unit.
- A USB memory stick is not supplied with this unit.
- We do not guarantee that all USB memory sticks can be supported by this unit.
- Be sure to keep a backup copy of the original files on your USB device before you play them back on this unit. We have no responsibilities for damage or loss of your USB stored data.
- To protect your USB memory stick files from being erased place the write protect sliding tab in the protect position (if available).
- When you are ready to remove a USB memory stick, set the unit to go into standby mode to avoid any damage to your data and the unit.
- A USB memory stick that requires its own driver or the device with a special system such as
- fingerprint recognition are not supported.
- This unit is not allowed to use the USB memory stick which requires an external power supply (500mA or more).

These operations are accessible by remote control. Some may also be accessible by the main unit's control panel

## Initial setup

This section will guide you through the unit's Initial setting which includes selecting a language for your on-screen menu, country, location and Autoprogram, which automatically scans and memorizes viewable channels. You can also set the network connection in this setting.

#### Before you begin:

Make sure the unit is connected to an antenna or cable.


- 1 After making all the necessary connections, press  ${\scriptstyle \diamondsuit}$  to turn on the unit.
  - It may take a few moments to turn on the unit for the first time.
  - Initial setup menu appears automatically after the unit is turned on.
- 2 Use ▲▼ to select the on-screen language, Voice guide, country, TV placement and location in the middle of the TV screen, then press OK.
  - You must set Home in location setting. Otherwise, Picture and Sound settings you adjusted will not be memorized after the unit goes into standby mode.
- 3 Use ◀▶ to select Skip or Next on network setup screen.
- 4 Use  $\blacktriangle \forall$  to select Wireless or Wired, then press OK.



WIRELESS	If you have a wireless router, select <b>Wireless</b> to connect to the internet.
	If you connect with an Ethernet cable, select <b>Wired</b> to connect to the internet.

- If you have a router with easy connect function, select **Wireless** and use **4** to select **Easy Connect**, then press **OK**.
- When you select On in the selection screen for Software update notification, A message will appear later if there is the latest software on the network server.


- 5 Use  $\blacktriangle \lor$  to select the signal type.
  - If the TV is connected to a cable or satellite set-top box, select the 2nd one and skip to step **7**.

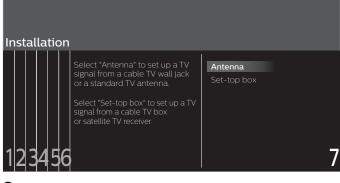

6 Use ▲▼ to select Antenna for TV channels or Cable for CATV channels, then press OK.

Installatio	n	
12345	Make sure that you have attached your antenna or cable signal into the jack on the back of your TV labeled "ANTENNA IN". Now select either Antenna or Cable, using up/down key of the remote control. Once you have made your selection, press the OK button to proceed.	Antenna Cable Skip 7

- When Antenna is selected, the TV detects antenna signals. It searches for DTV and analog TV channels available in your area.
- When Cable is selected, the TV detects signals supplied by cable.
   It searches for DTV, analog TV and cable channels available in your area.
- · Auto programming will begin.

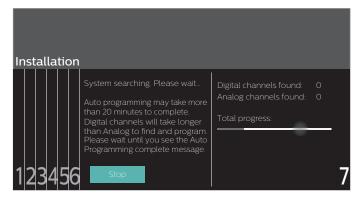

7 Use  $\blacktriangle$   $\forall$  to select your preferred picture setting, then press OK.

Please select your preferred picture mode. The energy consumption in the "Standard" setting is Energy Star certified.	Natural <b>Vivid</b> Sports	
Skip	1	2

8 Use  $\blacktriangle \lor$  to select your preferred sound setting, then press OK.



**9** After **Picture and sound setup** is completed, a message will appear if there is the latest software on the network server.


Note(s)
If you are not receiving a signal from your cable service, contact the cable provider.
$\cdot$ If you press ${f d}$ during Autoprogram, this setup of TV channels will be cancelled.
• The initial Autoprogram function can be executed for either Antenna or Cable only once. When you change the connection (Antenna / Cable), select Search for channels again. $\Rightarrow$ p. 35

#### After an initial setup is completed...

- If you want to scan the channels automatically again.
   Search for channels → p. 35
- If you want to change to another language.
   Language p. 31
- If you want to change the country setting.
   Country → p. 48
- If you want to change the location setting.
   Location 
   p. 32
- If you want to change the network setting.
   Connect to network 
   p. 38
- If you want to restore the picture and sound setting.
   Picture and sound setup → p. 28

## 3 Use your TV

## Switching on your TV and putting it in standby mode

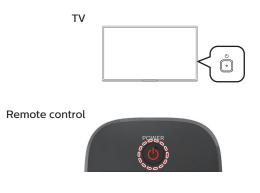


## To turn the TV on from standby or off to standby

• Press 🕁 on the TV or the remote control.



 Energy consumption contributes to air and water pollution. When the AC power cord is plugged in, your TV consumes energy with a very low standby power consumption.

## Adjusting volume

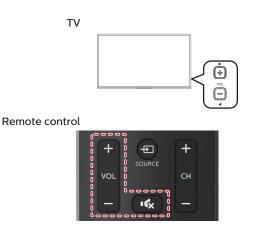


#### To decrease or increase volume

- Press VOL 
   / → on the TV or press VOL + / on the remote control.
   VOL 
   (-): Volume down
   VOL → (+): Volume up
- To mute or unmute sound
- Press 🚓 on the remote control to mute the sound.
- Press K again or VOL + / to recover the original sound.

## Switching channels

 тν



#### Remote control



#### To select channels by using CH $\blacktriangle$ / $\blacksquare$ or CH + / -

- Press CH ▲ (up) / ▼ (down) on the TV or press CH + / on the remote control.
- To select channels by using the NUMBER buttons

#### **Digital TV operation**

- For digital channels, press a number followed by a dot "•" and the corresponding sub channel number.
  - When selecting digital channel 11.1
  - Be sure to press before entering the subchannel number.



Cable / NTSC (Analog) TV operation

– When selecting cable or analog channel 11



Press **PREV.CH** to return to the previously viewed channel.

#### Note(s)

- To select the non-memorized channels, use **the NUMBER buttons**.
- Channel not available or No signal will appear on the TV screen after the subchannel broadcast is over.
- Audio only message will appear on the TV screen, when you receive only sound signal.

## Watching channels from an external device

Switching each input mode can easily switch with the remote control between TV and external devices when they are connected to the unit.

1 Turn on the set-top box or the connected device.



(1) Press D SOURCE and use D to select the set-top box or the connected device and wait a few seconds till the picture appears.




② Use the remote control of the set-top box or the connected device to select channels.

## Access the Home menu





### Guide to Home menu

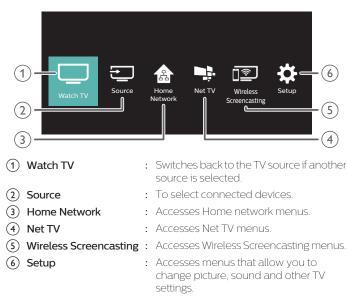

## Lock or unlock your device from the Home menu

This section describes how to lock or unlock specified device.

- 1 Press SOURCE on the remote control.
- 2 Use **I** to select a device to lock or unlock.
- 3 Press @ OPTIONS on the remote control.
- 4 Use  $\blacktriangle$   $\forall$  to select Lock or Unlock, then press OK.
  - If device lock is unlocked, Lock will be displayed. If device lock is locked, Unlock will be displayed at the top right of the device icons.
- 5 Enter your PIN. Change PIN 🛶 p. 37

#### Changing device type

You can change device icons displayed in the source list.

- 1 Press SOURCE on the remote control.
- 2 Use  $\triangleleft \triangleright$  to select the desired device.
- 3 Press red button on the remote control.
- 4 Use  $\blacktriangle \nabla$  to select the desired type, then press OK.

#### To reset the type

 Press 
 OPTIONS on the remote control at step 3, then select Original icon.

#### Scan connections

You can rescan TV connections and update the source list.

#### Before you begin:

You must set On in Master EasyLink. 🛶 p. 33

- 1 Press SOURCE on the remote control.
- 2 Use  $\triangleleft \triangleright$  to move the cursor to any device.
- 3 Press OPTIONS on the remote control.
- 4 Use  $\blacktriangle$   $\forall$  to select Scan connections, then press OK.

## Create a list of favorite channels

You can create lists of your preferred TV channels so that you can find those channels easily.

- 1 Press **OK** while viewing a TV program.
- 2 Use ▲▼ ◀► to select the desired channel, then press **yellow** button.
- 3 Use ▲▼ to select the desired favorite list (Favorites 1 Favorites 4), then press OK to add or remove on the list of favorite channels.
  - $\boxdot$  indicates that the channel is added.
  - Indicates that the channel is removed.
  - The channel will be marked with ♦ icon.

#### Display the list of favorite channels

- 1 Press **OK** while viewing a TV program.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Favorites.

#### To change the favorite list

- 1 Press blue button.
- 2 Use  $\blacktriangle \lor$  to select the desired favorite list (Favorites 1 Favorites 4).

#### To remove a channel from the favorite list

- 1 Select the desired channel, then press **yellow** button.
- 2 Use ◀▶ to select Yes, then press OK.

## Changing Picture format


Display modes can be selected when your TV receives a 16:9 or 4:3 video signal.

Three types of display modes can be selected for a PC input signal.

Press EF FORMAT repeatedly to switch the TV aspect ratio.



#### For 16:9 video signal

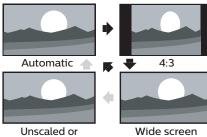


Full\*(1080i/p only)

Automatic	Other than DTV and HDMI connected devices, enlarges the picture to best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.
4:3	Displays a 16:9 picture at a 4:3 size; the picture is shortened horizontally. Sidebars appear on both edges of the screen.
Wide screen	Displays a 16:9 picture that is stretched horizontally and vertically.
<b>Unscaled</b> or <b>Full*</b> (1080i/p only)	Displays a scaled 16:9 picture. Bars appear on both the upper and lower portions of the screen depending on the type of video signal.


\* This part differs depending on the product you have.

For 4:3 video signal

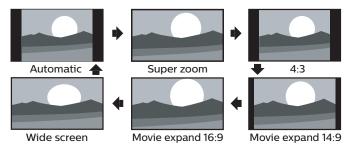

Automatic	Other than DTV and HDMI connected devices, enlarges the picture to best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.
Super zoom	Displays a 4:3 picture at a 16:9 size; the picture is stretched horizontally and vertically and its left and right edges are enlarged. This crops out some of the top and bottom of the picture.
4:3	Displays a 4:3 picture at its original size. Sidebars appear on both edges of the screen.
Movie expand 14:9 Movie expand	
Movie expand 16:9	Displays a 4:3 picture at a 16:9 size; the picture is stretched horizontally and vertically. This crops out some of the top and bottom of the picture.
Wide screen	Displays a picture that is stretched out of proportion to fill the screen.

#### For PC input signal

 

• This unit can also be connected to your PC that has a DVI terminal. Use an HDMI-DVI conversion cable for this video connection and it requires stereo mini 3.5mm plug audio cable for analog audio signal as well.

• Refer to 16:9 video signal on this page if the PC has HDMI output.

4:3	Displays a proportionately stretched picture. Sidebars appear on both edges of the screen.
Wide screen	Displays a picture that is stretched out of proportion to fill the screen.
Unscaled	Displays a picture in its original size.


If the signal source has side or top-bottom bars inserted into the picture, the Picture format function will not eliminate them.

## TV screen information

You can display the currently selected channel or other information such as the aspect ratio on the TV screen.

In the digital mode, the detailed broadcasting information for the current off-the-air channel such as program title and program guides are displayed.

1 Press I INFO.

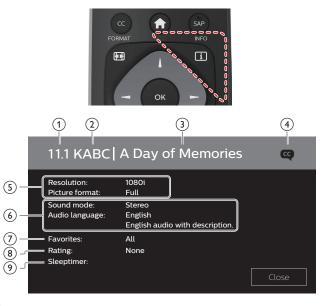

Channel number / Input mode

Switching channels 🛶 p. 19

Watching channels from an external device 🛶 p. 20

- 2 Broadcast station
- (3) Program title (for DTV only)
- (4) CC (not available if Closed caption is set to Off)
   Caption settings → p. 34

5 Program's image aspect ratio

Changing Picture format 🛶 p. 21

- 6 Audio language (DTV) / Audio mode (Analog TV)
- Sound 🛶 p. 30
- Favorites

Create a list of favorite channels → p. 21
(8) Child lock rating

- Child lock → p. 36
- (9) Remaining time on sleep timer
   Sleeptimer → p. 31
- 2 Press I INFO to hide the information.

Note(s)

• While the program guide is displayed, the closed caption function is interrupted.

• The information display will automatically disappear in 5 seconds.


## Using options menu

 You can access to some TV settings directly by using 🗗 OPTIONS.

1 Press 🗗 OPTIONS to display options menu, then press OK.



2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select a desired setting, then press OK.



#### (1) Options

Following settings can be configured.

Voice guide toggle	To set Voice guide on or off. <b>Voice guide toggle ⊪ p. 33</b>	
Closed captions	To choose the Closed captions display setting. Closed captions 🛶 p. 34	
Digital audio language	To Select the language according to your preference. (It differs depending on the program.) Digital audio language <b></b> p. 37	
Mono/Stereo	To Select an audio format. Mono/Stereo 🛶 p. 37	

#### Controls

If you have our brand products such as Blu-ray disc player or DVD recorder that are compatible with EasyLink functions, connect them to this unit via an HDMI cable so you can simply operate various items from this unit's remote control.

#### Before you begin:

select a device connected to an HDMI connection. → p. 20 You must set On in Master EasyLink. → p. 33 Otherwise, LINK does not work even if you connected our brand devices to this unit.

1 Press 🖻 OPTIONS to display options menu.

2 Use  $\triangleleft \triangleright$  to select **Controls** then press **OK**.

3	Use 🛦 🔻	to select the	desired item,	then press <b>OK</b> .
---	---------	---------------	---------------	------------------------

Device-menu	Controls the menu of your connected EasyLink device.
Device-contents	Controls the top menu of your DVD or Blu-ray discs.
Device-favorite	Controls the pop-up menu of your Blu-ray discs.

#### Note(s)

Some of EasyLink functions may not be available depending on your EasyLink devices or discs.

- You must connect this unit to our brand EasyLink devices and be sure its EasyLink (HDMI CEC) setting is also set to On.
- We do not guarantee 100% interoperability with other brands of HDMI link compliant devices.

③ Picture and sound

Following settings can be configured.

Auto picture	To set predefined picture mode. Picture 🛶 p. 28
Auto sound	To set predefined sound mode. Sound
Headphone volume	To adjust headphone volume. Sound 🛶 p. 30
TV speakers	To Select the audio output from the unit's speakers or not. <b>Sound  p. 30</b>
Picture format	To switch the TV aspect ratio. Changing Picture format 🛶 p. 21
Setup	To display setup menu.

#### (4) ECO settings

Following settings can be configured.

Following sellings can be conligured.		
	You can turn off the unit automatically when there is no operation for specified time. In spite of this setting, the unit goes into standby mode automatically if there is no signal input and no user operation for 15 minutes.	
Switch off timer	Press ▲ repeatedly to change the amount of time (increases the time by 30 minutes up to 240 minutes).	
	Each press of $igvee$ will decrease the time by 30 minutes.	
	To cancel the timer, press <b>▼</b> repeatedly until " <b>0</b> " is displayed.	
Light sensor	To set light sensor On or off. Picture → p. 28	

## USB

Your TV is fitted with a USB connection that enables you to view photos, listen to music or watch video files stored on a USB memory stick.

- 1 Press E SOURCE and use < ► to select USB, then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired file, then press OK.



These recorded files must meet specifications shown below:

JPEG Upper limit 4000x4000 pixels			
sive JPEG Upper limit 1024x768 pixels			
5			

Music (MP3 / WAV / AAC)		
MP3	Sampling frequency	16 kHz – 48 kHz
IVIE 5	Constant bit rate	8 kbps - 320 kbps
WAV	Sampling frequency	8 kHz – 48 kHz
	Constant bit rate	64 kbps – 1.5 Mbps
AAC	Sampling frequency	8 kHz - 48 kHz
	Constant bit rate	-

#### Video (MPEG / VOB / AVI / MP4) H.264, H.265/HEVC, Maximum video MPEG: 1920x1080@60fps .ts. .mpg, Extension .avi .trp, .vob .mp4 .mkv .mpeg .tp MPEG1 MPEG1 MPEG1, Video MPEG1, MPEG2 MPEG2 MPEG1, codec MPEG2, MPEG2 MPEG4 MPEG1. MPEG4 MPEG2. H.264. MPEG4 MPEG2 H.264, H.264, Audio MPEG4 H.265/ H.264 H.265/ H.265/ codec HEVC HEVC HEVC Dolby Digital YES YES YES YES YES YES MPEG1/2 audio YES YES YES YES NO YES layer1/2/3 LPCM YES YES YES YES YES YES AAC-LC YES YES YES YES YES YES

- This unit accepts USB memory stick only. Other storage devices such as external HDD by USB bus power will not work.
- Do not use an extension cord and/or USB hub to connect devices to this unit. Always directly
  insert the USB flash memory stick to this unit directly.
- We cannot be held responsible if your USB memory stick is not supported, nor will we accept any liability for damage or loss of stored data.
- The USB memory stick is not supplied with this TV.
- A maximum of 1,023 folders or files can be recognized.
- A file name exceeding 256 characters or contains a dot character is not supported on this TV.
- A USB memory stick that required its own driver or the device with a special system such as fingerprint recognition are not supported.
- Be sure to keep a backup copy of the original files on your USB device before you play them back on this unit. We have no responsibilities for damage or loss of your USB stored data.
- To avoid damaging the USB memory stick and the unit always turn off the unit before you remove the USB memory stick.
- This unit is not allowed to use the USB memory stick which requires external power supply (500 mA or more).
- This unit does not support MTP (Media Transfer Protocol) or the file other than FAT16 and FAT32 file system. If the file is not supported, an error message appears.
- When the unit does not recognize the USB memory stick, try reconnecting it.
- Playing the files recorded with high bit rates, the images can be interrupted in some occasions.
   This unit does not a report external or bitles.
- This unit does not support external subtitles.
- This unit cannot play back a file which goes over the limit of file restriction limit.

#### Viewing photos

- 1 Use ◀▶ to select **Photo**, then press **OK**.
- 2 Use  $\triangleleft$  to select the desired item, then press **OK**.
- 3 Press OK or ►II to start a slide show of the files.
  - Press OK or ▶ II to pause the slide show.
  - The **∏** icon appears.

  - Press **≤ BACK** or **■** to stop the slide show.
  - Press  $\bigodot$  OPTIONS to display the optional menu, then use  $\blacktriangle \forall$  to select the desired item.

Voice guide	Off	Sets Voice guide to off.		
toggle *1	On	Sets Voice guide to on.		
	Off	Sets repeat playback to off.		
Repeat *2	One	Sets repeat playback for a selected image file.		
	All	Sets repeat playback for all image files in the current folder.		
	Short	Switches to the next image in 5 seconds.		
Slide time *2	Medium	Switches to the next image in 10 seconds.		
	Long	Switches to the next image in 15 seconds.		
	None	No effect when switching images.		
	Dissolve	Overlaps the next image on the current image.		
	Wipe right	Pushes the current image out from left.		
	Wipe left	Pushes the current image out from right.		
Transitions *2	Wipe up	Pushes the current image out from bottom.		
	Wipe down	Pushes the current image out from top.		
	Box in	The next image comes to the center from the outside.		
	Box out	The next image goes to the outside from the center.		
Auto picture *2	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)			
	0	Displays an image in its original direction.		
Rotate *3	90	Rotates an image 90 degrees clockwise.		
	180	Rotates an image 180 degrees clockwise.		
	270	Rotates an image 270 degrees clockwise.		
	1X	Displays an image in its original size.		
Zoom *3	2X	Magnifies a current image by 2 times.		
	4X	Magnifies a current image by 4 times.		

\*1 Voice guide toggle is available in slide show and pause mode.

\*2 You can set **Repeat**, **Slide time**, **Transitions** and **Auto picture** when images are in slide show.

\*3 You can set Rotate and Zoom when slide show is in pause mode.

### **Playing music**

- 1 Use ◀▶ to select Music, then press OK.
- 2 Use  $\triangleleft$  to select the desired item, then press OK.
- $3 \quad \text{Press OK or} \blacktriangleright II \text{ to play the selected files.}$ 
  - Press OK or ▶ II to pause, then press OK or ▶ II again to resume.
  - Press >> to fast-forward search.
  - Press 🗲 to fast-backward search.
  - Press ∎ to stop playback.

Voice guide	Off	Sets Voice guide to off.	
toggle *	On	Sets Voice guide to on.	
	Off	Sets repeat playback to off.	
Repeat	One Sets repeat playback for a selected mini-		
	All	Sets repeat playback for all music files in the current folder.	
	Off	Sets shuffle playback to Off.	
Shuffle	On	Sets shuffle playback for all music files in the current folder.	
	Off	The sound will not be output from the unit's speakers.	
TV Speakers	On	The sound will be output from the unit's speakers.	
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.	
Auto sound	Selects the sound mode according to your preference. ( <b>Standard</b> , <b>Vivid</b> , <b>Sports</b> , <b>Movie</b> , <b>Music</b> and <b>News</b> )		

\* Voice guide toggle is available in slide show and pause mode.

#### **Playing movies**

- 1 Use  $\triangleleft$  to select Movie, then press OK.
- $2 \quad \text{Use} \blacktriangleleft \blacktriangleright \text{ to select the desired item, then press } \textbf{OK}.$
- 3 Press OK or  $\triangleright$  II to play the selected files.
  - Press OK or ▶ || to pause, then press OK or ▶ || again to resume.
  - Press ▶▶ to fast-forward search.
  - Press ┥ to fast-backward search.
  - Press to stop playback.

Press  $\blacktriangleright II$  to resume from the point at which playback was stopped. Press OK to play from the beginning of the file.

- Press  $\boxdot$  OPTIONS to display the optional menu, then use  $\blacktriangle$   $\blacktriangledown$  to select the desired item.

Voice guide	Off	Sets Voice guide to off.		
toggle *	On	Sets Voice guide to on.		
	Off	Sets repeat playback to off.		
Repeat	One	Sets repeat playback for a selected video file.		
	All	Sets repeat playback for all video files in the current folder.		
	Off The sound will not be output from unit's speakers.			
TV speakers	On	The sound will be output from the unit's speakers.		
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.		
Auto picture	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)			
Auto sound	Selects the sound mode according to your preference. ( <b>Standard</b> , <b>Vivid</b> , <b>Sports</b> , <b>Movie</b> , <b>Music</b> and <b>News</b> )			

\* Voice guide toggle is available in slide show and pause mode.

#### Note(s)

• The resume information will be kept even when the unit is Turned off.

• If you play another file while the previously viewed file is being resumed, the resume information

- of the previously viewed file will be deleted.
- The file or the folder in resume stop mode will be highlighted in gray on List or Thumbnails.

# 4 Getting more from your TV

This section describes the overview of the **Setup** menu displayed when you press  $\clubsuit$  and use  $\blacktriangleleft$  to Select **Setup**.

The **Setup** menu consists of the function setting items below.


1 Press **f** to display the Home menu.



2 Use  $\triangleleft$  to select Setup, then press OK.



3 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired menu and an item, then press **OK**.

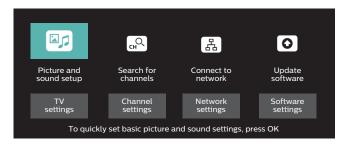

Picture and sound setup → p. 28 Guides you to get the best picture and sound settings.
TV settings p. 28 Accesses menus that allow you to change picture, sound and TV usage settings.
Search for channels→ p. 35Guides you through channel installation.
Channel settings
Connect to network  P. 38 Guides you through network installation.
Network settings
Update software $ ightarrow$ p. 43 Guides you through an update of the TV software.
Software settings $\rightarrow$ p. 44 Accesses menus that allow you to change software settings.

#### Before you begin:

#### You must set Home in Location. 🛶 p. 32

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- Press ♠ and use ◀► to select Setup then press OK.
- 2 Use  $\blacksquare \blacksquare \blacksquare$  to select Picture and sound setup, then press OK.
- 3 Follow steps 7 to 8 in Initial setup 🛶 p. 18

## **TV** settings

## Picture

#### Before you begin:

#### You must set Home in Location. 🛶 p. 32

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \lor$  to select **Picture**, then press **OK**.

<b>Picture</b> Sound Features Installation Accessibility	Auto picture Backlight Contrast Brightness Color Tint Sharpness Pixel Plus HD Advanced settings Picture format Mode selection Auto adjustment Clock	
--	---	--

	To set your TV to a predefined picture setting.	
	Personal	The customized settings you defined using the <b>Picture</b> menu.
	Standard	For normal TV viewing.
Auto picture	Natural	Ideal picture mode for viewing high quality content without any picture enhancements.
	Vivid	Enhanced picture contrast and sharpness for viewing in a well-lit room.
	Sports	Brilliant picture settings for high action.
	Movie	Deep picture settings for a cinematic experience.
	Game	Optimized for PCs and game consoles.
	Energy saving	Eco TV settings for low power consumption.
	Internet video	Optimized for low bit-rate internet video.

When you adjust the following settings, **Personal** picture will be set automatically.

	Cursor V	Cursor 🛦	
Backlight	To reduce power consumption and brightness	To increase power consumption and brightness	
Contrast	To decrease contrast	To increase contrast	
Brightness	To decrease brightness	To increase brightness	
Color	To decrease color intensity	To increase color intensity	
Tint	To add green	To add red	
Sharpness	To soften	To sharpen	
Pixel Plus HD	Enters sub-menus to adjust the following settings: (Dynamic contrast, Color enhancement, Black stretch, 120 PMR, Noise reduction and MPEG artifact reduction)		
Advanced settings	Enters sub-menus to adjust the following settings: (Color alignment, Custom color management, Light sensor*, Gamma and Film mode)		
	Automatic		
	Super zoom		
	4:3		
Picture format	Movie expand 14:9 Changing Picture format p. 21		
	Movie expand 16:9	10111ac may p. 21	
	Wide screen		
	Unscaled		
Mode selection	PC	To turn off image enhancement features which makes the TV to act purely as a monitor	
Mode selection	HDTV	To enable image enhancement features to improve picture quality	
Auto adjustment	To adjust the horizontal / vertical position, clock and phase of the PC screen automatically		
	Cursor <b>V</b>	Cursor 🔺	
Clock	To decrease setting	To increase setting	
Phase	value	value	
Horizontal position To move PC screen left		To move PC screen right	
		romover escreeninghe	

\* Adjusts backlight for the best picture quality by dynamically adjusting the backlight intensity in accordance with the room lighting condition when the **Light sensor** feature is set to **On**. Please ensure the room lighting is stable and the light sensor is not blocked.

Auto picture	Dynamic contrast	Off
Backlight	Color enhancement	Minimum
Contrast	Black stretch	Medium
Brightness	120 PMR	Maximum
Color	Noise reduction	
Tint	MPEG artifact reduction	
Sharpness		
Pixel Plus HD		
Advanced settings		
Picture format		
Mode selection		
Auto adjustment		
Clock		

Dynamic contrast	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
Color	Off	To set color enhancement to off
enhancement	On	To make colors more vivid and bright
Black stretch	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
120 PMR	Off	To set <b>120 PMR</b> to <b>Off</b>
	On	To make the video appear smoother
Noise reduction	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	
MPEG artifact reduction	To select the desired setting, then press <b>OK</b> ( <b>Off, Minimum, Medium</b> and <b>Maximum</b> )	

Auto pictureColor alignmentModeBacklightCustom color managementRed gainContrastLight sensorGreen gainBrightnessGammaBlue gainColorFilm modeRed offsetTintFilm modeGreen offsetSharpnessBlue gainBlue offsetPixel Plus HDHodeBlue offsetAdvanced settingsPicture formatHodeMode selectionAuto adjustmentFilm hode

Т

	Mode	To set the color temperature to <b>Personal</b> , <b>Cool</b> , <b>Normal</b> and <b>Warm</b> . When you adjust the following settings, <b>Personal</b> will be set automatically.		
		Cursor 🔻	Cursor 🛦	
	Red gain	To decrease red contrast	To increase red contrast	
Color alignment	Green gain	To decrease green contrast	To increase green contrast	
auginient	Blue gain	To decrease blue contrast	To increase blue contrast	
	Red offset	To decrease red brightness	To increase red brightness	
	Green offset	To decrease green brightness	To increase green brightness	
	Blue offset	To decrease blue brightness	To increase blue brightness	
	To select the desired setting, then press <b>OK</b> ( <b>Red</b> , <b>Yellow</b> , <b>Green</b> , <b>Cyan</b> , <b>Blue</b> and <b>Magenta</b> )			
		Cursor <b>V</b>	Cursor 🛦	
Custom color		To rotate only	To rotate only	
	Tint	selected color tint in clockwise direction	selected color tint in counterclockwise direction	
Custom color management	Tint Saturation	selected color tint in	counterclockwise	
		selected color tint in clockwise direction To decrease color with only selected	counterclockwise direction To increase color with only selected	
	Saturation	selected color tint in clockwise direction To decrease color with only selected color To decrease brightness with only	counterclockwise direction To increase color with only selected color To increase brightness with only selected color	
	Saturation Brightness	selected color tint in clockwise direction To decrease color with only selected color To decrease brightness with only selected color	counterclockwise direction To increase color with only selected color To increase brightness with only selected color off or the best picture ly adjusting the accordance with	
management	Saturation Brightness Off On To select the	selected color tint in clockwise direction To decrease color with only selected color To decrease brightness with only selected color To set light sensor to To adjust backlight for quality by dynamical backlight intensity in lighting condition in t desired setting, then p om, Dark Room, Norr	counterclockwise direction To increase color with only selected color To increase brightness with only selected color off or the best picture ly adjusting the accordance with he room	
Light sensor	Saturation Brightness Off On To select the (Very Dark Rc	selected color tint in clockwise direction To decrease color with only selected color To decrease brightness with only selected color To set light sensor to To adjust backlight for quality by dynamical backlight intensity in lighting condition in t desired setting, then p om, Dark Room, Norr	counterclockwise direction To increase color with only selected color To increase brightness with only selected color off or the best picture Ily adjusting the accordance with he room oress OK mal, Bright Room and	

\* Adjusts backlight for the best picture quality by dynamically adjusting the backlight intensity in accordance with the room lighting condition when the **Light sensor** feature is set to **On**. Please ensure the room lighting is stable and the light sensor is not blocked.

#### Note(s)

Mode selection is available only if

- The external input modes are selected HDMI 1, HDMI 2 or HDMI 3.

- The connected HDMI device is outputting a video signal.

#### Before you begin:

#### You must set Home in Location. 🛶 p. 32

Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \forall$  to select **Sound**, then press **OK**.

Picture Sound Features Installation Accessibility	Auto sound Equalizer Balance Sonic Emotion Premium Auto volume leveling TV speakers Headphone volume Digital output format Delta volume	
---	---	--

4 Use ▲▼ ◄► to select the item you want to adjust, then press OK. The following sound settings can be configured. Depending on the format of the broadcasting, some sound settings are not available.

of the broadcasting, some sound settings are not available.			
To set your TV to a predefined sound setting. When you adjust the following settings ( <b>Equalize</b> <b>Sonic Emotion Premium</b> and <b>Auto volume level</b> <b>Personal</b> sound will be set automatically.			
	Personal The customized settings you defined using the Sound methods and methods are setting to the sound methods are setting to the sound methods are setting to the setting setting are setting as a setting setting are setting as a setting setting setting as a setting setting setting setting as a setting set		
	Standard	For normal TV viewing.	
Auto sound	Vivid	Enhanced sound.	
	Sports	Clear sound for high action.	
	Movie	Powerful sound settings for a cinematic experience.	
	Music	Optimized for music playback.	
	News	Set the anchor's voice at a comfortable volume.	

Adjust the tonal quality for each frequency.

	Cursor 🛦	Cursor <b>V</b>
Equalizer	Equalizer To adjust each level of tonal quality	
	Press SBACK to go back to the previous menu.	

Adjust the speakers to suit your listening preference.

Balance	Cursor 🛦	Cursor <b>V</b>
	To adjust the balance of t	he right and left speakers

This selects sound modes for more spatial or surround sound reproduction.

Sonic Emotion Premium Bass Enhanceme	Sonic	Off	To set Sonic Emotion to off
	Emotion	On	To set Sonic Emotion to on
	Dialog Enhancement	Off	To set Dialog Enhancement to off
		On	To set Dialog Enhancement to on
	Bass Enhancement	Off	To set Bass Enhancement to off
		On	To set Bass Enhancement to on
	Absolute 3D Sound	Off	To set Absolute 3D Sound to off
		On	To set Absolute 3D Sound to on

This function keeps a constant Loudness differential between the TV commercials and the programs.

Auto volume	Off	To remove the Auto volume leveling
leveling	On	To reduce volume differences between the TV commercials and the programs

You can select the audio output from the unit's speakers or not. If your amplifier is HDMI link function compatible and connected by an HDMI cable to this unit, some sound operations such as volume up can be changed by using this unit's remote control. Make sure **Master EasyLink** is set to **On**.  $\implies$  **p. 32** 

	Off	No output sound from the unit's speakers
TV speakers	On	To output sound from the unit's speakers
i v spearers	Speakers EasyLink	To control audio output from your connected EasyLink compliant devices with <b>VOL + /</b> – by using this unit's remote control.

Adjust headphone volume.

Headphone	Cursor 🛦	Cursor 🔻
volume	To decrease or increase	volume

You can set the digital audio output format from SPDIF/ARC.

	PCM	To output PCM format
Digital output format		To output audio in its native format as Bitstream to connected audio receiver

If a channel or input device is too loud or too soft, navigate to that channel or input device.

	Cursor 🛦	Cursor <b>V</b>	
	Provides the ability to set a custom volume level for the current channel or input source.		
Delta volume	If the source volume is too loud, set a negative value (-1 to -12)		
	If the source volume is too soft, set a positive va (+1 to +12)		

## Features

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \forall$  to select **Features**, then press **OK**.

Picture	Sleeptimer	
Sound	Power indicator	
Features		
Installation		
Accessibility		

4 Adjust the following items.

## Sleeptimer


Sleep timer can set the unit to go into standby mode after an incremental period of time.

- 1 Use  $\blacktriangle$   $\forall$  to select **Sleeptimer**, then press **OK**.
- 2 Use ▲ repeatedly to change the amount of time (increases the time by 5 minutes up to 180 minutes).
  - Each press of igvee will decrease the time by 5 minutes.
  - Press INFO once to call up the display for checking the remaining time.
  - To cancel the sleep timer, press ▲ ▼ repeatedly until "O" is displayed.

## Power indicator

To set power indicator on or off.

1 Use  $\blacktriangle V$  to select Power indicator, then press OK.

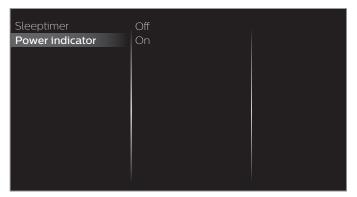

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup then press OK.
- 2 Use  $\blacksquare \blacksquare \blacksquare \blacksquare$  to select TV settings, then press OK.
- 3 Use  $\blacktriangle \forall$  to select **Installation**, then press OK.

Picture	Language
Sound	Preferences
Features	Restore default settings
Installation	
Accessibility	

4 Adjust the following items.

#### Language

You can set the language for the on-screen display.

1 Use  $\blacktriangle \forall$  to select Language, then press OK.

Picture	Language	English
Sound	Preferences	Français
Features	Restore default settings	Español
Installation		
Accessibility		

2 Use  $\blacktriangle$  to select English, Español or Français, then press OK.

Note(s)	
If you need the English menu instead of the Spanish or French menu's, press the select Configuration or Configuration, then press OK use ▲ ▼ to select Ajustes de TV or Réglages de la télévision, then press O use ▲ ▼ to select Instalación or Installation, then press OK use ▲ ▼ to select Idioma or Langue, then press OK use ▲ ▼ to select English, then press OK use △ ▼ to select English, then press OK use △ ▼ to select English, then press OK use △ ▼ to select English, then press OK use △ ▼ to select English, then press OK use △ To select English, then press OK use △ To select English, then press OK use △ To select A use △ To select	-

#### Preferences

You can set the unit to reduce the power consumption or adjust the backlight brightness in **Location** setting. **EasyLink** allows you to operate your connected EasyLink device.

#### Setting your location to home

Choosing **Home** gives you full flexibility to change predefined settings for picture and sound.

- 1 Use ▲ ▼ to select Preferences, then press OK.
- 2 Use  $\blacktriangle \forall$  to select Location, then press OK.

Language	Location	Retail
Preferences	EasyLink	Home
Restore default settings	TV placement E-sticker	

#### **3** Use $\blacktriangle \lor$ to select **Home**, then press **OK**.

Retail	The unit will be set up with predefined settings for retail displays. In this setting, you can set the backlight brighter.
Home	The unit is set to maximize the energy efficiency for home setting and it can be adjusted through a choice of picture and sound quality selections according to your preference.

#### Note(s)

 You must set Home in the menu. Otherwise, personalized picture and sound settings will not be memorized after the unit goes into standby mode.

#### **TV placement**

To apply the best settings for your TV, select wall mount or stand mount.

- 1 Use ▲ ▼ to select Preferences, then press OK.
- 2 Use  $\blacktriangle V$  to select TV placement, then press OK
- 3 Use  $\blacktriangle$  to select Wall mounted or On a TV stand, then press OK.

#### **E-sticker**

When you set **Location** to **Retail**, E-sticker (Electronic Sticker) is displayed. E-sticker can be turned off using procedure below.

- 1 Use  $\blacktriangle \nabla$  to select **Preferences**, then press **OK**.
- 2 Use  $\blacktriangle$   $\forall$  to select E-sticker, then press OK.
- 3 Use  $\blacktriangle \lor$  to select Off, then press OK.

#### Use Philips EasyLink

Your TV supports Philips EasyLink, which enables one-touch play and one-touch standby between EasyLink-compliant devices. Compliant devices must be connected via an HDMI connector.

#### **One-touch play**

When you connect your TV to devices that support one-touch play, you can control your TV and the devices with one remote control. For example, when you press (**Play**) on your DVD remote control, your TV automatically switches to the correct channel to show the DVD content.

#### One-touch standby

When you connect your TV to devices that support standby, you can use your TV remote control to put your TV and all connected HDMI devices in standby mode. You can perform one-touch standby using the remote control from any of the connected HDMI devices.

#### System audio control

When you connect your TV to HDMI CEC compliant devices, your TV can switch automatically to play audio from the connected device. To use one-touch audio, you must map the audio input from the connected device to your TV. You can use the remote control from the connected device to adjust the volume.

#### Remote control (RC) key forwarding

RC key forwarding allows you to control EasyLink-compliant devices using your TV remote control.

#### HDMI-ARC (Audio Return Channel) (HDMI 1 only)

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI CEC and ARC compliant, and that the TV is connected to the device using an HDMI cable attached to both HDMI-ARC connectors.

#### Note(s)

• Philips does not guarantee 100% interoperability with all HDMI CEC devices.

• The EasyLink-compliant device must be switched on and selected as the source

#### EasyLink (HDMI CEC)

This function allows you to operate the linked functions between our brand devices with a EasyLink feature and this unit connecting through an HDMI cable. You must connect this unit to our brand EasyLink devices and be sure its EasyLink (HDMI CEC) setting is also set to on.

- 1 Use ▲ ▼ to select **Preferences**, then press **OK**
- 2 Use  $\blacktriangle$  to select EasyLink, then press OK.
- 3 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the item you want to adjust, then press OK.

Location	Master EasyLink	Off
EasyLink	Auto TV On	On
TV placement	RC key forwarding	
E-sticker	HDMI-ARC	

Set the Master EasyLink to On or Off. The following additional settings will be grayed out when you set them to Off.

	Off	Disables all EasyLink.
Master EasyLink	On	Selects if you have connected an external device that is compatible with the EasyLink function.

This unit will turn on when the power on signal is sent from your connected EasyLink device.

Auto TV On	Off	This unit stays in Standby mode even if you turn on your connected EasyLink device.
Auto IV OII	On	This unit turns on automatically when you turn on your connected EasyLink device.

You can operate some functions such as disc playback or call up the menu of the connected devices, by using this unit's remote control.

	Off	Disable RC key forwarding.
RC key forwarding	On	PLAY, PAUSE ► II / STOP ■ / FWD ►► / REV ◄◀ / VOL + / - / י‰ (MUTE) / ੳ OPTIONS / ▲ ▼ ◀► / OK / ⇒ BACK / the NUMBER buttons can be used to control your connected EasyLink devices by this unit's remote control.

#### Note(s)

 Pause may not work properly on some devices even if they are EasyLink (HDMI CEC) compliant.

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable.

	Off	Disable HDMI-ARC.
HDMI-ARC (HDMI 1 only)	On	You can output TV audio through the HDMI cable solely, provided both the TV and device are HDMI-ARC compliant.

### Return your settings to default values

You can return settings to their default values.

- 1 Use ▲ ▼ to select **Restore default settings**, then press **OK**.
- 2 Use ▲ ▼ to select **Reset AV settings** or **Reset all settings**, then press OK.

	Return picture and sound settings to their default values. The channel installation settings are not affected.
Reset all settings	Return all the settings to their default values.

## Accessibility

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup then press OK.
- 2 Use  $\blacktriangle \blacksquare \blacksquare \blacksquare$  to select **TV settings**, then press **OK**.
- 3 Use  $\blacktriangle$  to select Accessibility, then press OK.

Picture	Voice guide	
Sound	Caption settings	
Features	Digital audio preferences	
Installation		
Accessibility		

4 Adjust the following items.

### Voice guide

Lets you configure voice guide and its settings.

1 Use $\blacktriangle$ $\forall$ to select Voice guide, then press OK.			
Voice guide toggle	Off	To set Voice guide off	
voice guide toggte	On	To set Voice guide on	
	Fast		
Speed	Normal	Set voice guide speed based on vour preference	
	Slow	your preference	
	High		
Pitch	Normal	Set voice guide pitch based on your preference	
	Low		
	Verbose	Set voice guide explanation	
Verbosity	Succinct	verbosity based on your preference	
Volume level	Loud		
	Normal	Set voice guide volume based on vour preference	
	Soft	, our presence	

#### Caption settings

Closed captions displays the audio portion of the program as superimposed text over the video.

#### 1 Use ▲ ▼ to select Caption settings, then press OK.

		- "
Voice guide	Closed captions	Off
Caption settings	Caption service	On
Digital audio preferences	Digital caption service Digital caption options	CC w/ mute

	Off	Closed caption is not displayed.
Closed captions	On	Closed caption is always displayed.
	CC w/ mute	Closed caption is displayed when the sound is off.

#### Digital TV operation

In addition to the basic closed caption, DTV has its own closed caption called digital caption service. Use this menu to change the settings for digital caption service.

Digital caption service	CS-1 to CS-6	Select one of these before changing any other item in <b>Caption</b> settings menu. Choose <b>CS-1</b> under normal conditions.
----------------------------	--------------	--

You can choose the size, font, color, background and other characteristics of the caption text.

Digital caption	Reset to default	You can reset the status of digital caption options.
	You can change closed captioning font style, size, color and transparency. (Font style, Font size, Font color and Font opacity)	
options	transparency	nge background color and of the displayed caption. <b>color</b> and <b>Background opacity</b> )
	You can change edge color and type of the displayed caption text. ( <b>Edge color</b> and <b>Edge type</b> )	

#### Picture display



Text font

(Font style, Font size, Font color and Font opacity) Text edge

(Edge color and Edge type)

#### Background

#### (Background color and Background opacity)

• Review your setting choice made above by looking in the upper left corner of the displayed setting box (not all selections show the differences selected).

#### Cable / NTSC (Analog) TV operation

Caption service	CC-1 and T-1	The primary closed captions and text services. The closed captions or text is displayed in the same language as the program's dialog (up to 4 lines of script on the TV screen).
	CC-3 and T-3	Serve as the preferred data channels. The closed captions or text is often a secondary language.
		Rarely available and broadcasters use them only in special conditions, such as when <b>CC-1</b> and <b>CC-3</b> or <b>T-1</b> and <b>T-3</b> are not available.

#### There are 3 display modes according to programs:

Paint-on	${\sf Displays} {\sf characters} {\sf on} {\sf the} {\sf TV} {\sf screen} {\sf immediately}.$
	Once characters are stored in memory, they are displayed all at once.
	Displays the characters continuously by scrolling (max. 4 lines).

#### Note(s)

- Digital caption service that you can switch differs depending on the broadcast description.
   Closed captioning service may not be controlled by this unit's menu options if you are watching television through an external cable or satellite set-top box. In which case you will need to use the menu options on the external set-top box to control closed captioning.
- The captions do not always use correct spelling and grammar
- Not all TV programs and product commercials include closed caption information. Refer to your
  area TV program listings for the TV channels and times of closed caption shows. The captioned
  programs are usually noted in the TV listings with service marks such as CC.
- Not all captioning services are used by a TV channel during the transmission of a closed caption program.
- Closed caption will NOT be displayed when you are using an HDMI or a component connection.
- To show the closed caption on your TV screen, broadcast signal must contain the closed caption data.
- Not all TV programs and commercials have the closed caption or all types of the closed caption.
- Caption's and text may not exactly match the TV voice.
- Changing channels may delay the closed caption for a few seconds.
- Adjusting or muting the volume may delay the closed caption for a few seconds.
- Abbreviations, symbols and other grammatical shortcuts may be used in order to keep pace with the on-screen action. This is not a malfunction.
- The caption or text characters will not be displayed while the Main menu or functions display is shown.
- If a black box appears on the TV screen, this means that the closed caption is set to the text mode. To clear the box, select CC-1, CC-2, CC-3 or CC-4.
- If the unit receives poor quality television signals, the captions may contain errors or there might be no captions at all. Some possible causes of poor quality signals are:

   Automobile ignition noise
  - Electric motor noise
  - Weak signal reception
  - Multiplex signal reception (ghosts or screen flutter)
  - Multiplex signal reception (gnosis or screen nulle)
  - Data dropout and pixelation (for DTV only)
- The unit retains the closed caption setting if the power fails.
- When the unit receives special effects playback signal (e.g. search, slow and still) from a VCR's video output channel (ch3 or ch4), the unit may not display the correct caption or text.
- The EUT setting that satisfies § 79.102 (e) is as follows:
- Font: Mono-font
- Character size: Large

#### Digital audio preferences

You can set the interpretive broadcasting by an audio explanation.

#### 1 Use $\blacktriangle$ $\forall$ to select **Digital audio preferences**, then press **OK**.

Audio accossibility	
Audio accessibility	
Audio language	
Primary audio selection criteria	

Audio accessibility	To prioritize VI-Visually Impaired streaming or HI- Hearing Impaired streaming: The setting for handicapped users ( <b>Main audio</b> , <b>Visually</b> <b>Impaired</b> or <b>Hearing Impaired</b> ).	
Audio language	To set your preferred language in the audio streaming ( <b>English, Spanish</b> or <b>French</b> ).	
Primary audio selection criteria	To set TV priority based on either of the above settings: ( <b>Audio accessibility</b> or <b>Audio language</b> ).	

## Search for channels

Be sure the RF cable is correctly connected to this unit and you are registered with your cable TV provider when you install cable channels.

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select **Setup**, then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Search for channels, then press OK.
- 3 Use  $\triangleleft \triangleright$  to select **Start**, then press **OK**.


## Install channels

You can search and store all channels. If you move the unit to a different area after the initial setting, it is recommended to perform Autoprogramming.

4 Use  $\blacktriangle \forall$  to select Antenna or Cable, then press OK.

#### 5 Press OK on Start.

- When the scanning and memorizing of available channels is completed, the lowest memorized channel will be displayed.
- 6 Follow the on-screen instructions to complete the installation.

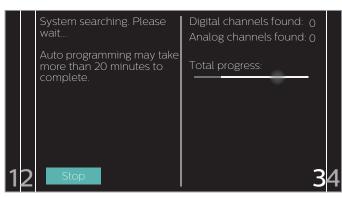

## **Channel settings**

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select **Setup**, then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Channel settings, then press OK.
- **3** Adjust the following items.

Characterization and the stress	The shall all and so and a
Channel installation	Installation mode
Child lock	Uninstall channels
Change PIN	
Digital audio language	
Mono/Stereo	

## Channel installation

Be sure the RF cable is correctly connected to this unit and you are registered with your cable TV provider when you install cable channels.

#### Installation mode

- 1 Use  $\blacktriangle \nabla$  to select Channel installation, then press OK.
- 2 Use  $\blacktriangle \forall$  to select Installation mode, then press OK.
- 3 Use  $\blacktriangle \lor$  to select Antenna or Cable, then press OK.
  - When Antenna is selected, the TV detects antenna signals. It searches for DTV and analog TV channels available in your area.
  - When Cable is selected, the TV detects signals supplied by cable. It searches for DTV, analog TV and cable channels available in your area.

### Uninstall channels

The channels selected here can be skipped when selecting the channels using  ${\rm CH+/-}.$ 

Those channels can still be selected with the NUMBER buttons.

- 1 Use  $\blacktriangle \nabla$  to select Channel installation, then press OK
- 2 Use  $\blacktriangle$   $\forall$  to select Uninstall channels, then press OK.
- 3 Use  $\blacktriangle$   $\forall$  to select the channel you want to remove, then press OK.
  - The removed channels are not displayed on the list of favorite channels.
  - To reactivate a removed channel, use  $\blacktriangle V$  then press OK.

## Child lock

You can prevent your children from watching certain programs or certain channels by locking the TV controls and by using ratings.

#### 1 Use $\blacktriangle \forall$ to select **Child lock**, then press **OK**.

Child lockMaChange PINCaDigital audio languageCa	/ ratings lock ovie ratings lock anadian English rating anadian French rating egion ratings lock
--	--

- 2 Use the NUMBER buttons to enter the 4-digit numbers for your PIN code.
  - When you have not set up your PIN code, enter **0**, **0**, **0**, **0**.
  - When the PIN code is correct, **Child lock** menu is displayed.

See the following description for setting each item.

Channel installation	TV ratings lock	🗌 All
Child lock	Movie ratings lock	🖸 None
Change PIN	Canadian English rating	🔲 TV-Y
Digital audio language	Canadian French rating	🔲 TV-Y7
Mono/Stereo	Region ratings lock	🔲 TV-G
		🔲 TV-PG
		🔲 TV-14
		🔲 TV-MA

#### Note(s)

- When you select the higher rating and set it to 🗹 the lower ratings will be blocked automatically.
- To remove all blocks place a check in the **All** box and then remove that check to remove all blocks.
- Region ratings lock will be available when the unit receives a digital broadcast using the new
  rating system.
- To block any inappropriate programs, set your limits in TV ratings lock, Movie ratings lock and Region ratings lock.
- For the United States, the unit may download the region ratings lock table, if required.
- The Canadian rating systems on this unit are based on CEA-766-A and CRTC policy.

#### Setting TV and movie ratings

Movie ratings lock is the rating system created by MPAA. TV ratings lock has controlled access to individual programs based on their age ratings and content rating.

- 3 Use  $\blacktriangle V$  to select TV ratings lock or Movie ratings lock, then press OK.
- 4 Use  $\blacktriangle \forall$  to select the desired rating, then press **OK** repeatedly to switch between block and view.
  - ☑ indicates that the rating is locked (Blocked).
  - 🗖 indicates that the sub rating is locked (Blocked).
  - Indicates that the rating is not locked (Viewable).



TV ratings lock	🗆 All
Movie ratings lock	🗹 None
Canadian English rating	TV-Y
Canadian French rating	□ TV-Y7
Region ratings lock	🔲 TV-G
	🔲 TV-PG
	🔲 TV-14
	🔲 TV-MA

#### Movie ratings lock

TV ratings lock		
Movie ratings lock	Ø NR	
Canadian English rating	G	
Canadian French rating	🗌 PG	
Region ratings lock	🗌 PG-13	
	🗆 R	
	🗌 NC-17	
	□ X	

US movie ratings	US TV ratings	Description
A	ll	All ratings locked including no rating
NR	None	No rating
-	TV-Y	Appropriate for all children
-	TV-Y7	Appropriate for all children 7 and older
G	TV-G	General audience
PG	TV-PG	Parental guidance suggested
PG-13	_	Unsuitable for children under 13
_	TV-14	Unsuitable for children under 14
R	_	Restricted under 17 requires accompanying parent or adult guardian
NC-17	_	No one under 17 admitted
X	TV-MA	Mature audience only

#### To set the sub ratings (displayed in the right column)

For TV ratings lock, you can further set the sub ratings to block specific elements of programming. To set the sub ratings, follow the step below.

Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired rating, then press **OK** repeatedly to switch between  $\boxdot$  and  $\square$ .

	_	
TV ratings lock	🗌 All	Fantasy Violence
Movie ratings lock	🗌 None	
Canadian English rating	🗌 TV-Y	
Canadian French rating	☑ TV-Y7	
Region ratings lock	🔲 TV-G	
	🔲 TV-PG	
	🔲 TV-14	
	🔲 TV-MA	

US TV ratings	Sub rating
TV-Y7	Fantasy Violence
TV-PG	Violence
TV-14	Sex Language Dialog
TV-MA	Violence Sex Language

#### Note(s)

Blocked sub rating's will appear beside the main rating category in **TV ratings lock** menu.

• You cannot block a sub rating if the main rating is set to 🗖

• Changing the category to  $\boxdot$  or  $\square$  automatically changes all its sub ratings to the ( $\boxdot$  or  $\square$ ).

#### Canadian English or Canadian French ratings

You can select the rating for Canadian English or Canadian French broadcasting.

- 3 Use  $\blacktriangle \nabla$  to select Canadian English rating or Canadian French rating, then press OK.
- 4 Use  $\blacktriangle \forall$  to select the desired rating, then press **OK** repeatedly to switch between block and view.
  - ☑ indicates that the rating is locked (Blocked).
  - Indicates that the rating is not locked (Viewable).

Canadian English rating	Canadian French rating	Description
	All	Locked all ratings
	E	Exempt program
C	_	For all children
C8+	_	For all children 8 and older
G		General audience
-	8 ans+	Unsuitable for ages under 8
PG	—	Parental guidance suggested
-	13 ans+	Unsuitable for ages under 13
14+	_	Unsuitable for ages under 14
_	16 ans+	Unsuitable for ages under 16
18+	18 ans+	Adult audience only

Note(s)

 The V-Chip can block non rated programs as per "CEA-608-E sec. L.3". If the option to block NR, None or E programs are used in Movie ratings lock, TV ratings lock, Canadian English rating or Canadian French rating accordingly "unusual results may occur and the unit may not receive emergency bulletins or other types of programming": / Emergency bulletins (Such as EAS messages, weather warnings and others) / Locally originated programming / News / Political / Public service announcements / Religious / Sports / Weather.

## Change PIN

Although the default PIN code (0000) is supplied with the unit, you can set your own PIN code.

- 1 Use ▲ ▼ to select Change PIN, then press OK.
- 2 Press the NUMBER buttons to enter the current 4-digit PIN code.
- **3** Press **the NUMBER buttons** to enter the new 4-digit PIN code.
  - Enter PIN code again to confirm.

#### Note(s)

- Make sure new PIN code and confirm PIN code must be exactly the same. If they are different,
- the space is cleared for reentering.
- If you have forgotten your PIN code, enter 0711 to reset the PIN code.

## Digital audio language

You can select the audio language while your TV is receiving the digital broadcasting.

1 Use $\blacktriangle$ $\forall$ to select <b>Digital audio language</b> , then press <b>OK</b> .		
	To select the language according to your preference. (It differs depending on the program.)	

## Mono/Stereo

Cable / NTSC (Analog) TV operation

You can select an audio format while your TV is receiving the analog broadcasting.

- 1 Use ▲ ▼ to select Mono/Stereo, then press OK.
- 2 Use ▲ ▼ to select Mono, Stereo or SAP (Second Audio Program), then press OK.


## Connect to network

Setup network connection settings in order to use Net TV or network upgrade functions.

<ul> <li>The meanings of abbreviations are defined as below.</li> <li>AP : Wireless LAN access point</li> <li>SSID : Wireless network name</li> <li>The key entry screen will appear when you select SSID, WEP / others or proxy address.</li> </ul>	
Network settings	
If your router has an easy connect feature, select Easy Connect and press OK. If your router does not have an easy connect feature, select Manual and press OK. Text	8
<ul> <li>Enter the key of the selected wireless network using ▲ ▼ ◆ ▶, then press OK.</li> <li>Clear : Clear the entered number or word.</li> <li>All clear : Clear all the entered numbers or words.</li> <li>abc : Switch to the small letter mode.</li> <li>ABC : Switch to the capital letter mode.</li> <li>123+/; : Switch to the numeral and symbol mode.</li> <li>Cancel : Shows the cancellation display.</li> <li>OK : Set the entered number or word.</li> </ul>	ſ

1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup, then press OK.

2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Connect to network, then press OK.

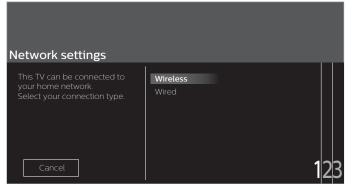

**3** Adjust the following items.

## Wireless setting

Select to use a wireless LAN to connect to the internet by a wireless connection.

- 1 Use  $\blacktriangle$   $\forall$  to select Wireless, then press OK.
- 2 Use **◄**► to select the desired setting, then press **OK**, and follow the on-screen instructions.

Easy Connect	Select this setting if your router has an easy connect button. Start scanning for wireless networks on the TV after pressing the easy connect button on your router. If connection test fails, refer to the router's manual for more details.
Scan	Search for wireless networks automatically and select the wireless network name (SSID) from the list.
Manual entry	Set up the connection to the wireless LAN Access Point (AP) (e.g. wireless router) manually by entering the wireless network name (SSID).

\* Easy Connect cannot be used when the security protocol is set to WEP. Change the Access Point's security mode from WEP to others (recommended).

## Wired setting

Select to use an Ethernet cable to connect to the internet by a wired connection. Please purchase shielded Ethernet cables at your local store and use it when you connect to network equipment.


- 1 Use ▲ ▼ to select Wired, then press OK.
  - Connection test will start automatically. 🛶 p. 41

## Network settings

- 1 Press **↑** and use **<** to select **Setup**, then press **OK**.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Network settings, then press OK.
- 3 Adjust the following items.

## Manual network settings

1 Use ▲ ▼ to select Manual network settings, then press OK.

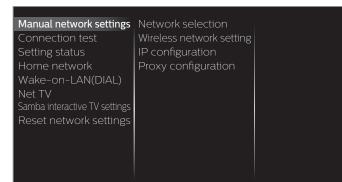

## Network selection

#### 2 Use $\blacktriangle$ $\forall$ to select **Network selection**, then press **OK**.

3 Use  $\blacktriangle$   $\forall$  to select the desired setting, then press **OK**.

	If you connect to an Ethernet cable, select <b>Wired</b> to connect to the internet.
Wireless	If you have a router with easy connect function, select <b>Wireless</b> to connect to the internet.

### Wireless network setting

This menu is displayed only when you set Wireless in Network selection. In order to use a wireless network, you must set up a connection to the AP (e.g. wireless router).

## 2 Use $\blacktriangle$ $\forall$ to select Wireless network setting, then press OK.

#### Auto

Search for wireless networks automatically and select the SSID from the list.



3 Use  $\blacktriangle V$  to select Auto, then press OK.



4 The list of wireless networks will be displayed. Use  $\blacktriangle \nabla$  to select the appropriate the SSID, then press OK.

Auto	Router 1	Connect
Manually enter your SSID	<ul> <li>☐ Router 2 n111 Pin c</li> <li>☐ Router 3 n111 Man</li> <li>☐ Router 4 n111</li> </ul>	ode

- If you select the SSID with A, WEP\*2 / others Key entry screen will appear. Enter the WEP\*2 / others key of the selected wireless network using  $\blacktriangle \bigtriangledown \blacklozenge \blacklozenge$ , then press **OK**.
- If you select the SSID has an easy connect, the easy connect setting screen will appear. Use  $\blacktriangle \lor \blacklozenge \lor$  to select a setting, then press OK.

Easy Connect	Select this setting if your router has an easy connect button. Start scanning for wireless networks on the TV after pressing the easy connect button on your router. If connection test fails, try <b>Easy Connect</b> again. <sup>4</sup> If it fails then refer to the router's manual for more details.
Pin code	Select this setting if your router has an easy connect feature but does not have an easy connect button. Enter the 8-digit PIN code shown on your TV in the Router settings menu via PC before <b>Connect</b> is selected.
Manual	If your wireless network with authentication setting (WEP•2, others), WEP•2 / others Key entry screen will appear. Enter the WEP•2 / others key of the selected wireless network using <b>A V I&gt;</b> , then press <b>OK</b> .

- \*1 Easy Connect cannot be used when the security protocol is set to WEP. Change the Access Point's security mode from WEP to others (recommended).
- \*7 WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

Confirmation message will appear. Select OK to complete the settings.

## Note(s)

• For a wireless network with authentication setting, key icon appears to the right hand of the

SSID

- Signal icon shows the strength of the signal. • WEP\*2 / others key appears as asterisks on the confirmation screen.
- The wireless LAN supports following specifications.
- Wireless standards: IEEE 802.11 a/b/g/n/ac
- Frequency spectrum: 2.4GHz / 5GHz
- Security protocol: WEP\*2 / others

#### Manually enter your SSID

Set up the connection to the AP (e.g. wireless router) manually by entering the SSID.

- 3 Use ▲▼ to select Manually enter your SSID, then press OK.
   AP (e.g. wireless router) SSID entry screen will appear.
  Enter the SSID using ▲▼ ◄▶, then press OK.
- 4 Use  $\blacktriangle V$  to select the authentication setting of the selected wireless network.
  - For a wireless network with authentication setting, select the authentication setting, according to the security type of the wireless network.

Auto	XXXXXXXXXXXXXXXX	None
Manually enter your SSID		WEP
		Others

None	Set the authentication setting to <b>None</b> .
WEP	Set the authentication setting to <b>WEP</b> *.
Others	Set the authentication setting to <b>Others</b> .

- For a wireless network without authentication setting, select None.
- If you select WEP\* or Others, WEP\* / others Key entry screen will appear. Enter the WEP\* / others key of the selected wireless network using
   T<</li>
   , then press OK.
- Confirmation message will appear. Select **Yes** to complete the settings.
- \* WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

#### **IP** configuration

In following cases, select **IP configuration** to set each setting as necessary.

- -When connection test failed with the setting of Connection test.
- When instructed by your Internet service provider to make specific settings in accordance with your network environment.
- 2 Use  $\blacktriangle \forall$  to select IP configuration, then press OK
- 3 Use  $\blacktriangle$   $\forall$  to select a setting, then press OK.

Network selection	IP setting mode	Auto
Wireless network setting	IP address	Manual
IP configuration	Subnet mask	
Proxy configuration	Default gateway DNS setting mode Primary DNS Secondary DNS MAC address	

IP setting	Auto	Sets the IP setting automatically.	
mode	Manual	Sets the IP setting manually.	
IP address *1, 3		A set of numbers which are assigned to devices participating in a computer network.	
Subnet mask *1, 3		A mask which is used to determine what subnet an IP address belongs to.	
Default gateway *1, 3		IP address of the network device (such as router) which provides internet access.	
DNS setting	Auto	Sets the DNS setting automatically.	
mode	Manual	Sets the DNS setting manually.	
Primary DNS *2, 3		A server which handles the name and IP address over the internet.	
Secondary DNS *2, 3		A server which handles the name and IP address over the internet.	
MAC address		An address which recognizes the devices connecting to the network. It is also called hardware address.	

\*1 Items can be selected only when IP setting mode is set to Manual.

\*2 Items can be selected only when DNS setting mode is set to Manual.

\*3 Use ▲ ▼ or the NUMBER buttons to input numbers. When you use ▲ ▼ to input numbers, then press OK or input the triple digits by using the NUMBER buttons, the cursor moves to the next entry field. When you use ▲ ▼ to input numbers, then press OK or input the triple digits by using the NUMBER buttons at the rightmost entry field, numbers will be stored and go back to the previous menu.

## Note(s)

- The range of input numbers is between 0 and 255.
- If you enter a number larger than 255, the number will automatically be 255.
- The manually entered number will be saved even if you change the setting to Auto.
- If you want to enter 1 or 2 digit number in one cell, press **OK** to move on to the next cell.
- If the entered IP address or the default gateway or primary DNS number is same as the default
- setting, IP address setting will be set to **Auto**. (The manually entered number will be saved).
- When IP address setting is set to Manual, the setting of DNS setting will automatically be Manual and when IP address setting is set to Auto, you can set either Auto or Manual for DNS setting.

#### Proxy configuration

- 2 Use  $\blacktriangle$  to select Proxy configuration, then press OK.
- 3 Use  $\blacktriangle V$  to select a setting, then press **OK**.

Network selection	Proxy setting	Do not use
Wireless network setting	Proxy address	Use
IP configuration	Proxy port	
Proxy configuration		

- Do not use is selected for default settings.
- If you need to change the proxy setting as instructed by your internet service provider to set the designated proxy address and port, select Use.

Proxy setting	Do not use	Does not use the proxy server.
	Use	Uses the proxy server.
Proxy address *		Selects the number or word by using $\blacktriangle \forall \dashv \triangleright$ , then press <b>OK</b> .
Proxy port *		Use <b>A V</b> or <b>the NUMBER buttons</b> to input numbers.

\* Items can be selected only when Proxy setting is set to Use.

#### Note(s)

- The range of input numbers for the port number is between 0 and 65535. (If you enter a number larger than 65535, it will be regarded as 65535.)
- For proxy port, the selected ports may be blocked and not be able to use depending on your network environment.
- If the proxy address is entered with blank only, proxy server setting will be set to **Do not use**.

## **Connection test**

Perform the following steps to test your internet connection after you have connected an Ethernet cable or entered network settings such as IP address, DNS settings, etc. manually.

- 1 Use ▲ ▼ to select Connection test, then press OK.
  - Connection test will start automatically and the test result for home network and internet will appear right after the connection test finishes.

Home network	Internet	Description
Pass	Pass	Connection test is successfully completed.
Fail	_	Connection test for home network failed. Check the connection settings.
Pass	Fail	Connection test for internet failed. Check the connection settings.

 If the connection test for internet passes, speed test will start automatically.

2 Press OK to go to the list on network status confirmation screen.

#### Note(s)

• If the connection test for both home network and internet pass, you are ready to use Net TV or

network upgrade functions using the internet without making any additional settings.

If the connection test fails, check if the Ethernet cable is connected to this TV properly or if you
have entered all the required details for the wireless LAN connection properly.

## Setting status

You can check the status of network settings.

- 1 Use ▲ ▼ to select Setting status, then press OK.
  - Network setting list will be displayed.
  - MAC address of this unit will be displayed in the list.

## Home network

\_

You can turn your TV into a Digital Media Renderer (DMR), which can play video, music and photo files stored on certified home media servers connected to your home network.

1	Use 🛦 🗸	<b>'</b> to select <b>Home net</b>	work, then press OK.
---	---------	------------------------------------	----------------------

2	Use 🛦 🛡 ┥ Þ	• to select the item	you want to adjus	st, then press <b>OK</b> .
---	-------------	----------------------	-------------------	----------------------------

Renderer	Off	Disable DMR.
	l ()n	Enable this unit to play files using DMC.
Renderer name	Change the display name of this TV to other devices on the home network.	

## Wake-on-LAN(DIAL)

You can turn your TV on when you use remote control via IP.

1	Use 🛦 🕻	to select Wake-on-LAN(DIAL), then press OK.	
---	---------	---	--

011	TO SET WAKE-ON-LAN(DIAL) TO OTT.
On	To set Wake-on-LAN(DIAL) to on.

## Net TV

Displays the deactivation settings for Net TV, Netflix ESN and Netflix software version.

#### Netflix deactivation

Displays the deactivation setting for Netflix.

- 1 Use  $\blacktriangle$   $\forall$  to select **Net TV**, then press **OK**.
- 2 Use  $\blacktriangle$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle$   $\forall$  to select Netflix, then press OK.
- 4 Use  $\triangleleft \triangleright$  to select the desired option, then press OK.

Yes	Deactivate the connection to Netflix.
No	Activate the connection to Netflix.

#### **VUDU** deactivation

Displays the deactivation setting for VUDU.

- 1 Use  $\blacktriangle V$  to select Net TV, then press OK.
- 2 Use  $\blacktriangle$   $\forall$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle$  **v** to select **vudu**, then press **ok**.
- 4 Use **◄**► to select the desired option, then press **OK**.

Yes Deactivate the connection to VUDU.	
No	Activate the connection to VUDU.

#### YouTube deactivation

Displays the deactivation setting for YouTube.

- 1 Use  $\blacktriangle$   $\forall$  to select Net TV, then press OK.
- 2 Use  $\blacktriangle$   $\forall$  to select Net TV deactivation, then press OK.
- 3 Use  $\blacktriangle \lor$  to select YouTube, then press OK.

4	Use $\triangleleft$ to select the desired option, then press <b>OK</b> .		
Yes Deactivate the connection to YouTube.		Deactivate the connection to YouTube.	

Activate the connection to YouTube.

#### Netflix ESN

No

Displays the ESN information.

- 1 Use  $\blacktriangle V$  to select **Net TV**, then press **OK**.
- 2 Use  $\blacktriangle \forall$  to select **Netflix ESN**, then press **OK**.
  - Displays the ESN (Electronic Serial Number) to get any services from Netflix.

#### Netflix software version

Displays the Netflix version.

- 1 Use  $\blacktriangle$   $\forall$  to select Net TV, then press OK.
- 2 Use  $\blacktriangle \forall$  to select Netflix software version, then press OK.

## Samba interactive TV settings

Displays the setting for Samba TV.

To learn more about Samba TV, please visit *https://www.samba.tv/* 

- 1 Use ▲ ▼ to select Samba interactive TV settings, then press OK.
- 2 Use  $\blacktriangle \forall \blacktriangleleft \flat$  to select the desired option, then press **OK**.

Note(s)

• Samba interactive TV settings item is displayed only when the country setting is USA.

## Reset network settings

You can reset the status of network settings.

- 1 Use ▲ ▼ to select **Reset network settings**, then press **OK**.
- 2 Use  $\triangleleft \triangleright$  to select the desired option, then press OK.

## <u>Upd</u>ate software

Philips continuously tries to improve its products and we strongly recommend that you upgrade the TV software when upgrades are available.

New software can be downloaded from our website at **www.philips.com/support** using the model number of your TV to find information.

You can update the software through these methods:

- Update with USB memory stick
- Update from digital broadcast Update notification p. 44

This section describes how to upgrade the software by using USB memory stick.

## Preparing for the software upgrade

You require the following equipment:

- A PC with web browsing capability
- An archive utility that supports the ZIP-format (e.g. WinZip for Windows or StuffIt for Mac OS)
- An empty clean formatted USB memory stick

#### Note(s)

- Only FAT / DOS-formatted portable memory is supported.
- Use only software upgrades that can be found on the Philips web site.

#### I Warning

- When the software upgrade is running, don't press any buttons.
- Do not remove the USB memory stick during the software upgrade.
- If an error occurs during the upgrade, retry the procedure or for further assistance, please contact call center.

## Downloading the software

Find information and software related to your TV and download the latest software upgrade file to your PC.

Prepare a blank USB memory stick for software update. Access

*www.philips.com/support* and download the latest version software to a blank USB memory stick using a PC by following the directions described on the website.

- Use a blank USB memory stick, download the software on your PC and write the software in the root directory of the USB memory stick.
- For more details on how to download the software, please refer to the website.

## USB upgrade

You can upgrade the software by using USB memory stick.

 Connect your USB memory stick with the upgrade file to the USB terminal on the side of your TV.



- 2 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup, then press OK.
- 3 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Update software, then press OK.
- 4 Use  $\blacktriangle \forall$  to select USB, then press OK.
- 5 Use  $\blacktriangle \lor \blacklozenge \lor$  to select the desired update file, then press OK.
- 6 Use ◀► to select Yes, then press OK.
  - Read the on-screen instructions and confirm that you want to continue with the installation.

Software update is in progress. Please wait. Do not remove the USB storage device or turn the TV off while upgrade is in progress.

- 7 When the software upgrade is completed, press  $\Phi$  to set the unit into standby mode, then remove the USB memory stick.
- **8** Unplug the AC power cord for a few seconds from AC outlet and plug it again.
- 9 Press 🕁 again to turn the unit on.
  - The TV starts up with the new software
  - For further assistance, please contact call center.

## **Network updates**

You can update the software by connecting the unit to the internet.

- 1 Press  $\Uparrow$  and use  $\blacktriangleleft$  to select Setup, then press OK.
- 2 Use  $\blacktriangle \lor \blacklozenge \lor$  to select Update software, then press OK.
- 3 Use  $\blacktriangle \forall$  to select **Network**, then press **OK**.

#### 4 Use ◀► to select Yes, then press OK.

- This unit will then start checking for the latest FirmWare (software) version.
- 5 Confirmation message will appear.

#### Use ◀▶ to select **Yes**, then press **OK**.

- The unit will start downloading the latest FirmWare (software) version.
- The unit will start updating the FirmWare (software) version.
- It may take a while to complete the updating.
- 6 When the software update is complete, press to make sure the unit goes to standby mode.
- 7 Unplug the AC power cord for a few seconds from AC outlet and plug it again.
- 8 Press  $\bigcirc$  again to turn the unit on.
  - The TV starts up with the new software.
  - For further assistance, please contact call center.

#### Note(s)

#### Network settings - p. 39

- Please do not unplug the AC power cord or Ethernet cable while executing the **Network** updates.
- All settings will remain the same even if you update the software version.
- The version of net service will also be updated if newer version of net service is available when
   updating the firmware.
- When you start up the TV or a net service after executing the software update, a message may appear on the screen prompting for software update again. In this case, please select Update to start USB update or network update. For further assistance, please contact call center.

## Software settings

## Software

- 1 Press **↑** and use **<** to select **Setup**, then press **OK**.
- 2 Use ▲▼◀▶ to select Software settings, then press OK.
- 3 Use  $\blacktriangle \lor$  to select **Software**, then press **OK**.

#### Checking your current software version number

- 1 Use  $\blacktriangle$   $\forall$  to select **Software information**, then press **OK**.
  - The version and a description of the current software is displayed.

#### Update notification

You can download the latest software through the air and update this unit automatically while the unit is in standby mode.

1 Use  $\blacktriangle$  **v** to select Update notification, then press OK.

2	Use 🛦 🔻	to select the	desired option,	then press <b>OK</b> .
---	---------	---------------	-----------------	------------------------

Off	Disable auto-update for latest software.	
l ()n	A message will appear if there is the latest software on the network server.	

#### License

Displays the licenses of open source software used in this unit.

- 1 Use ▲ ▼ to select License, then press OK.
  - Licenses of open source software used in this unit are displayed.

#### Digital rights management

This product contains technology subject to certain intellectual property rights of Microsoft. Use or distribution of this technology outside of this product is prohibited without the appropriate license(s) from Microsoft.


- 1 Use  $\blacktriangle$  to select **Digital rights management**, then press **OK**.
  - Digital rights management is displayed

## Wireless Screencasting

You can wirelessly cast or mirror the screen of your Smartphone, Tablet or PC to the TV directly using Wireless Screencasting.

#### Using Wireless Screencasting

- 1 Press ♠ and use ◀► to select Wireless Screencasting, then press OK.
  - Wireless Screencasting mode screen appears.

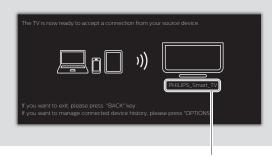

Your TV name

- 2 Activate Wireless Screencasting feature on your device.
  - For the operation of your device, please check the instruction manual of the device.
  - · Select Your TV name on your device if needed.
  - If PIN code is required on your device, please enter the 8-digit code appearing in the left-hand side of the TV screen.
- **3** Once connected, the screen of your device will appear on your TV screen.
  - Press 🗊 INFO to display your device name at the bottom of TV screen.
  - Press I or OK to pause playback. Press I or OK again to resume playback.

#### Using Wireless Screencasting device list

In Wireless Screencasting device list, you can find the connected devices.

- Press G OPTIONS on remote when Wireless Screencasting mode is on the TV screen.
  - Only the connected device names are listed
  - It will be sorted from newest connection to oldest connection. A maximum of 64 connections can be recognized.
  - If you would like to delete a listed connection, press ▲ ▼ to select the device name, then press OK first. Once the confirmation message appears, please use ∢ ► to select Yes, then press OK.

#### Note(s)

Funal Corporation Inc. does not warrant Wireless Screencasting compatibility with all source devices such as smartphones, tablets, laptops, etc. due to large variability in hardware, firmware, drivers, software and implementation of wireless casting applications on these source devices. Although Funai Corporation Inc. will strive to enhance compatibility and performance across a range of source devices, Funai Corporation Inc. does not warrant compatibility with specific source devices.

## View photos, play music and watch videos using home network

On your TV you can play video, music and photo files stored on home network certified home media servers connected to your home network. In order to use this feature, you must connect this unit to the internet.

## It is recommended that files to be played back in this unit are recorded under the following specifications:

Picture (JPEG / Progressive JPEG)				
JPEG Upper limit 4000x4000 pixels				
Progressive JPEG	Upper limit	1024x768 pixels		

Music (MP3 / WAV / AAC)				
MP3	Sampling frequency	16 kHz - 48 kHz		
	Constant bit rate	8 kbps – 320 kbps		
WAV	Sampling frequency	8 kHz – 48 kHz		
	Constant bit rate	64 kbps – 1.5 Mbps		
AAC	Sampling frequency	8 kHz - 48 kHz		
	Constant bit rate	-		

## Video (MPEG / VOB / AVI / MP4)

Maximum video	H.264, H.265/HEVC, MPEG: 1920x1080@60fps					
Extension	.avi	.mpg, .mpeg	.ts, .trp, .tp	.vob	.mp4	.mkv
Video codec Audio codec	MPEG1, MPEG2, MPEG4, H.264	MPEG1, MPEG2, MPEG4	MPEG1, MPEG2, H.264, H.265/ HEVC	MPEG1, MPEG2	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC	MPEG1, MPEG2, MPEG4, H.264, H.265/ HEVC
Dolby Digital	YES	YES	YES	YES	YES	YES
MPEG1/2 audio layer1/2/3	YES	YES	YES	YES	NO	YES
LPCM	YES	YES	YES	YES	YES	YES
AAC-LC	YES	YES	YES	YES	YES	YES

#### Note(s)

- A maximum of 1,023 folders or files can be recognized.
- For the home server list, maximum of 16 servers can be displayed.
- The 10th and deeper hierarchies cannot be displayed
- Unplayable files in the home server will not be displayed in the file list.
- For some files, playback is not available even if displayed in the file list.
- In order to play back the contents in home servers, the player and the servers must be connected to the same access point.
- Compatibility and available playback function may differ depending on the home server.
- Video files with unsupported audio format will be skipped.
- The quality of the playback picture or audio differs depending on your network condition

#### Before using home network

Follow the procedure below before using home network.

- Connect this unit to the internet.
  - Connecting the TV to the internet using an Ethernet cable  $\implies$  p. 14 or Connecting the TV to the internet using a wireless LAN  $\implies$  p. 15 • Broadband internet connection of 8Mbps or faster is required.
- 2 Set up the necessary network connection settings. Connect to network → p. 38


#### Using home network

- Start home network media servers in your home network.
   For details, refer to the instruction book of the home network certified device.
- 2 Press **f** on the remote control.

### 3 Use **◄**► to select **Home Network**.

- This unit will start loading the home server list.
- 4 After loading, home server list will appear. Select a home server you want to access, then press **OK**.

#### Guide to home network

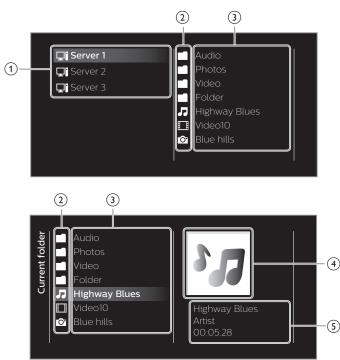

- Home server list
- 2 Folder / media icon
- (3) Group (folder) / file list
- (4) Image
- (5) Current file info

#### View your pictures using home network

- 1 Press  $\blacktriangle \lor$  to select a file or a folder.
- 2 Press OK or **I** to start a slide show of the files.
  - Press OK or ► II to pause the slide show.
     The II icon appears.

  - Press 
     **BACK** or
     **BACK** or
     **b** to stop the slide show.

Voice guide	Off	Sets Voice guide to off.			
toggle *1	On	Sets Voice guide to on.			
	Off	Sets repeat playback to off.			
Repeat *2	One	Sets repeat playback for a selected image file			
hepear 2	All	Sets repeat playback for all image files in the current folder.			
	Short	Switches to the next image in 5 seconds.			
Slide time *2	Medium	Switches to the next image in 10 seconds.			
	Long	Switches to the next image in 15 seconds.			
	None	No effect when switching images.			
	Dissolve	Overlaps the next image on the current image.			
	Wipe right	Pushes the current image out from left.			
	Wipe left	Pushes the current image out from right.			
Transitions *2	Wipe up	Pushes the current image out from bottom.			
	Wipe down	Pushes the current image out from top.			
	Box in	The next image comes to the center from the outside.			
	Box out	The next image goes to the outside from the center.			
Auto picture *2	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)				
	0	Displays an image in its original direction.			
Rotate *3	90	Rotates an image 90 degrees clockwise.			
Rolale 3	180	Rotates an image 180 degrees clockwise.			
	270	Rotates an image 270 degrees clockwise.			
	1X	Displays an image in its original size.			
Zoom *3	2X	Magnifies a current image by 2 times.			
	4X	Magnifies a current image by 4 times.			

\*1 Voice guide toggle is available in slide show and pause mode.

\*2 You can set **Repeat**, **Slide time**, **Transitions** and **Auto picture** when images are in slide show.

\*3 You can set Rotate and Zoom when slide show is in pause mode.

#### Listen to music using home network

- 1 Press  $\blacktriangle$   $\forall$  to select a file or a folder.
- 2 Press OK or ►II to play the selected files.
  - Press OK or ▶ II to pause, press OK or ▶ II again to resume.
  - Press ▶▶ to skip up the next file.
  - Press 📢 to skip down the previous file.
  - Press 🗖 to stop playback.

Voice guide	Off	Sets Voice guide to off.	
toggle *	On	Sets Voice guide to on.	
	Off	Sets repeat playback to off.	
Repeat	One	Sets repeat playback for a selected music file.	
	All	Sets repeat playback for all music files in the current folder.	
	Off	Sets shuffle playback to Off.	
Shuffle	On	Sets shuffle playback for all music files in the current folder.	
TV Speakers	Off	The sound will not be output from the unit's speakers.	
	On	The sound will be output from the unit's speakers.	
	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.	
Auto sound	Selects the sound mode according to your preference. ( <b>Standard, Vivid, Sports, Movie, Music</b> and <b>News</b> )		

\* Voice guide toggle is available in slide show and pause mode.

#### Watch videos using home network

- 1 Press  $\blacktriangle \nabla$  to select a file or a folder.
- 2 Press **OK** or **\triangleright II** to play the selected files.
  - Press **OK** or **▶ ||** to pause, press **OK** or **▶ ||** again to resume.
  - Press ▶ to fast-forward search.

  - Press to stop playback.
  - Press I to resume from the point at which playback was stopped.
     Press OK to play from the beginning of the file at which playback was stopped.
  - Press CH + to play the next file.
  - Press CH to play the current file at the beginning.
     Press CH twice within 5 seconds to play the previous file.
  - Press  $\boxdot$  OPTIONS to display the optional menu, then use  $\blacktriangle$   $\blacktriangledown$  to select the desired item.

Voice guide	Off	Sets Voice guide to off.		
toggle *	On	Sets Voice guide to on.		
	Off	Sets repeat playback to off.		
Repeat	One	Sets repeat playback for a selected video file.		
	All	Sets repeat playback for all video files in the current folder.		
	Off	The sound will not be output from the unit's speakers.		
TV speakers	On	The sound will be output from the unit's speakers.		
i v speakers	Speakers EasyLink	You can control audio output from your connected EasyLink compliant devices with <b>VOL + / –</b> by using this unit's remote control.		
Auto picture	Selects the picture mode according to your preference. (Standard, Natural, Vivid, Sports, Movie, Game, Energy saving and Internet video)			
Auto sound	Selects the sound mode according to your preference. ( <b>Standard, Vivid, Sports, Movie, Music</b> and <b>News</b> )			

\* Voice guide toggle is available in slide show and pause mode.

Note(s)

- The resume information will be kept even when the unit is Turned off.
- If you play another file while the previously viewed file is being resumed, the resume information
  of the previously viewed file will be deleted.
- The file or the folder in resume stop mode will be highlighted in gray on List or Thumbnails

## Net TV

Net TV offers internet services for your TV. Use the TV remote control to browse the Net TV pages. You can play movies, listen to music and much more, all from your TV screen.

- Because Net TV is an online system, it can be modified over time to better serve its purpose.
- Some Net TV services can be added, changed or stopped after some time.
- You cannot download and save files or install plug-ins.

#### Before using Net TV

Follow the procedure below before using Net TV.

- 1 Connect this unit to the internet.
- 2 Set up the necessary network connection settings. (Refer to Connect to network → p. 38)


#### Using Net TV

#### 1 Press NETTV.

- Net TV screen will appear, then use  $\mathbf{A} \mathbf{V} \mathbf{A} \mathbf{F}$  to select service icon.
- For the first time only, Terms of Use screen will appear. After confirming the content, use ▲ ▼ to select Agree, then press OK.

#### Guide to Net TV menu screen

Net TV start screen

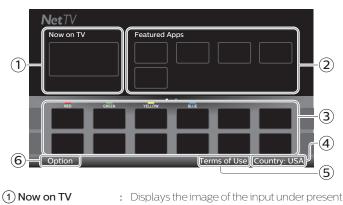

		tuning.
2 Featured Apps :		Displays fixed net service icons.
③ Selected Apps : Displays movable net servi		Displays movable net service icons.
(4) Country :		Selects what country you live in.
(5) Terms of Use :		Displays a copy of net service.
6 Option :		Remove or move App.

## My Apps functions


#### Remove App

- 1 Use ▲▼◀▶ to select the desired App, then press 🗗 OPTIONS.
- 2 Use ▲▼ to select Remove App, then press OK.
   The selected App will be removed from My Apps list.

#### Move App

- 1 Use ▲ ▼ ◀ ▶ to select the desired App, then press 🗗 OPTIONS.
- 2 Use ▲▼ to select Move App, then press OK.
   The selected App icon will be smaller.
- 3 Use  $\blacktriangle \lor \blacklozenge \lor$  to the point you want to place, then press OK.

#### Guide to App Gallery

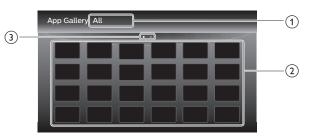

- 1 Category menu: List of category menu.
- (2) Icon list: Displays unregistered net service icons on My Apps list.
- (3) Page guide: Displays the order of pages. The current page will be highlighted.
- Press NETTV, then use ▲ ▼ ◄► to select App Gallery.
- 2 Use ▲▼ ◀► to select the desired App in My Apps list, then press OK.
  - You can also choose from Category menu. Use  $\blacktriangle \lor \blacklozenge \lor \diamondsuit$  to select All, then use  $\blacktriangle \lor \lor \lor \lor$  to select the desired category.
  - If you select **Add**, the selected App icon will be placed at the end of **My Apps** list.
  - If you select Add and move, the selected App icon will be smaller and use AV <>> to the point you want to place, then press OK.

Even if you press **D** BACK to cancel this function, the selected App icon will be placed at the end of **My Apps** list.

#### Information on network services

For detailed information on 3rd party internet services, please visit the service providers website:

- Netflix : http://www.netflix.com
- VUDU : http://www.vudu.com
- CinemaNow : http://www.cinemanow.com

For additional help, refer to the Frequently Asked Questions FAQs at www.philips.com/support. Select TV and enter your model number.

## Pandora<sup>®</sup> operations

With this unit, you can instantly listen to personalized radio stations streamed over the internet from Pandora.

To learn more about Pandora, please visit www.pandora.com

#### Activating Pandora

In order to listen to internet radio streamed from Pandora via the internet, you must create a Pandora account and activate this unit.

- 1 Press NETTV, then use  $\blacktriangle \lor \blacklozenge \lor$  to select PANDORA.
- 2 Use  $\blacktriangle$  to select I am new to Pandora., then press OK
- 3 Note the activation code and website address displayed on the TV screen.
- 4 On your PC, visit the website address noted at step 4.
- 5 Follow directions on the website to create your account.
- 6 On this unit, select **Go Back** and press **OK** to complete activation.

#### Adding Pandora user accounts

You can add the Pandora user account.

- 1 Press **NETTV**, then use **A V I b** to select **PANDORA**.
- 2 Use  $\blacktriangle \mathbf{V}$  to select I have a Pandora account., then press OK.
- 3 Enter your e-mail address, then press **OK** while **OK** is selected.
- 4 Enter a password, then press **OK** while **OK** is selected.
- 5 Use  $\blacktriangle V$  to select Sign In, then press OK.
  - Your account is added to the user list and player screen appears on the TV screen.

#### Note(s)

Pandora is available only in the United States.

#### Creating a new station

By entering your favorite artists or tracks, Pandora selects music and creates a new station for you on the basis of the entered information.

- 1 On the station list screen, Use  $\blacktriangle \lor \blacklozenge \lor$  to select **New Station**, then press OK.
- 2 Enter a name of your favorite artist or tracks, then press **OK** while **OK** is selected.
  - Search result will appear on the right side of the TV screen.
  - If the selection screen with the result type appears, use ▲ ▼ to select the desired type, then press OK.
- 3 Use  $\blacktriangle \nabla$  to select the desired station, then press **OK** to start the playback.


► / II	Resumes the playback / pause the playback.		
	Resumes the playback.		
11	Pauses the playback.		
Skips to the next track.			

Note(s)

On the Tool Menu, you can delete or rename the currently selected station.

## Guide to the player screen

On the player screen, you can set various options to the currently playing track.

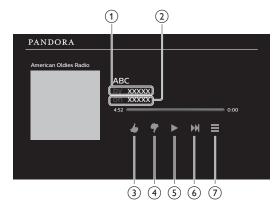

1	Artist name Album name	: Displays artist name.
2 3	Album name	: Displays album name. : Give thumbs up to the currently playing track.
9	•	Pandora will play tracks similar to the track.
4	7	: Give thumbs down to the currently playing track. Pandora will skip and will not play the track.
5	► / <b>II</b>	: Resumes the playback / pause the playback.
6		: Skips to the next track.
$\overline{7}$	≡	: Displays the Tool menu.

English

49

## 5 Useful tips

## FAQ

Question	Answer			
	Check the antenna or cable connection to the main unit.			
	Check the batteries on the remote control.			
	Check if there is an obstacle between the infrared sensor window and the remote control.			
	<ul> <li>Test the IR signal output use IR signal check.</li></ul>			
My remote control does not work.	If okay, then possible infrared sensor trouble.			
What should I do?	<ul> <li>Aim the remote control directly at the infrared sensor window on the front of the unit.</li> <li>Reduce the distance to the unit</li> </ul>			
	<ul> <li>Reduce the distance to the drift.</li> <li>Re-insert or replace the AAA batteries with their polarities (+/-) as indicated on the remote control battery area.</li> </ul>			
	<ul> <li>When there is an infrared-equipped device such as PC near this unit, it may interrupt the remote control signal on this unit Move the infrared-equipped device away from this unit, change the angle of the device's infrared sensor or turn off the infrared communication function.</li> </ul>			
How come the initial setup appears every time I turn on	<ul> <li>Make sure to complete the initial setup before the unit goes into standby mode.</li> </ul>			
this unit?	make solie to complete the initial setup before the drift goes into standay mode.			
	Autoprogram must be completed when you set up the unit for the first time or move it to a location where previously unavailable channels are broadcast.			
	• Make sure auto programming has been completed. 🛶 p. 35			
Why can I not watch some RF	The selected channel may not be broadcasting.			
signal TV programs?	<ul> <li>When Auto programming is interrupted and not completed, some channels will not be received. Make sure to complete the Autoprogram.</li></ul>			
	$\cdot$ The selected channel cannot be viewed by the Child lock setting. $\implies$ p. 36			
	<ul> <li>The unit requires some kind of antenna input. An indoor antenna (Digital or VHF / UHF), an external antenna (Digital or VHF / UHF) or an RF coaxial cable from your wall cable or set-top box needs to be plugged into the unit.</li> </ul>			
	Check if the correct input mode is selected by pressing -→ SOURCE. → p. 20			
How come there is no image from the connected external	Check the antenna, cable or other input connection to the unit.			
devices?	<ul> <li>When using the component video connection check that the green (Y), blue (Pb/Cb) and red (Pr/Cr) connectors are connected to their corresponding colored jacks on the unit.</li> </ul>			
When I enter a channel number, why does it change automatically?	<ul> <li>Many digital channels have alternate channel numbers. The unit changes the numbers automatically to the ones signifying the broadcasting station's channel number. These basic numbers used for the previous analog broadcasts. (e.g., input digital ch# 30 automatically changes to digital ch# 8.1)</li> </ul>			
Why are captions not displayed entirely? Or why are captions delayed behind the dialog?	Closed captions that are delayed a few seconds behind the actual dialog are common for live broadcasts. Most captioning production companies can display a dialog to maximum of 220 words per minute. If a dialog exceeds that rate, selective editing is used to insure that the closed captions remain up-to date with the current TV screen dialog.			
How can I set the clock?	There is no clock function on this unit.			
My PIN code no longer	• Although the default PIN code (0000) is supplied with the unit, the PIN code will be required once you set a PIN code in			
works, how can I change the child lock setting?	Child lock. Imp p. 36 When you forget your PIN code, enter 0711 in Change PIN to reset the PIN code. Imp p. 37			
When I start up the TV or a net service, a message appears on the screen prompting for software update again.	<ul> <li>When you start up the TV or a net service after executing the software update, a message may appear on the screen prompting for software update again. In this case, please select Update to start USB update or network update.  p. 43</li> </ul>			

## Troubleshooting tips

If the unit does not perform properly when operated as instructed in this manual,

#### Please check the following Troubleshooting tips and all connections once before calling for service.

#### Power

#### No power

- Make sure the AC power cord is plugged in.
- Make sure that the AC outlet supplies the proper voltage, plug another electrical
- appliance into the AC outlet to ensure that the AC outlet operates normally If a power failure occurs, unplug the AC power cord for 1 minute to allow the unit to reset itself

#### Remote

#### Control buttons do not work.

- Do NOT press more than one button at the same time.
- · Ensure that no buttons on the remote control are depressed and move freely. Universal remote control does not work properly.
- Refer to the User manual of the universal remote control for the Philips code.

#### Picture

#### Power is on but no screen image.

- Check whether the connection for the antenna, cable or set-top box is
- connected correctly
- Check whether all the cables to the unit are connected to the correct output jack on your separate device like Blu-ray disc / DVD recorder
- Make sure that the selected input mode is connected to the working input jack.
- Check if your computer is NOT in sleep mode when the input mode on this unit is in PC mode. Tap any key on the computer keyboard to wake it up
- Check if the correct input mode is selected by pressing 

   SOURCE.

#### No color

· View other TV channels. The problem might be limited to the broadcasting station

#### Adjust Color in Picture settings. — p. 28

#### Picture poor

- Adjust Contrast and Brightness in Picture settings. 🛶 p. 28
- For the best picture quality, watch "High Definition" wide screen programs. If the HD content is not available, watch "Standard Definition" programs instead.
- You see pixelation on the screen.
- When the capabilities of the unit exceed the capabilities of the digital broadcasting, the signal will be increased to match the capabilities of the display on the unit. This may cause pixelation, noise or trash

#### Unusual picture appears and the TV does not operate.

- · Press the power button first. If it does not solve, follow the procedure below
- Press the buttons on the remote control in the order shown below
   → ▲ → ▼ → ◊
- (2) Unplug the AC power cord, then wait for 1 minute, and then plug it in again.

#### Sound

#### No sound is heard when using the HDMI digital connection.

Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.

#### No sound, distorted sound or incorrect audio sound is heard when using the HDMI-DVI connections.

- Make sure that the analog audio signals from the HDMI-DVI device are connected to the analog audio input L/R jacks.
- When using Component analog video, Composite analog video or PC VGA video, make sure that the analog audio (L/R) connectors are mounted into the audio (L/R) input jacks.

#### Sound intermittent or no sound.

- Check if the audio cable is connected into the unit correctly.
- You switch to a different input and the volume changes.
- This unit will memorize the volume level from the last time you adjusted it. • If the volume of the sound from another device is higher or lower, then the loudness will change

#### Picture & Sound

#### No sound with distorted picture occurs when using the HDMI digital connection.

• Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications

#### No picture or sound

- Check if the power is on.
- Check whether all the cables to the unit are connected to the correct output jack on your separate device like Blu-ray disc / DVD recorder.
- View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.
- Unplug the AC power cord and wait for about 1 minute, then plug the AC power cord and turn on the unit again.
- Check whether the connection of the antenna or cable / satellite set-top box is connected correctly.
- Make sure that the selected input mode is connected to the working input jack. Check if your computer is NOT in sleep mode when the input mode of this unit
- is in PC mode. Tap any key on the keyboard to wake up your computer
- Make sure that the sound is not muted. Press of so that the volume bar and current volume level will appear on the TV screen. • Make sure that the volume is NOT set to **0** or **I** or **I** so, use **VOL + / -** to adjust to
- the desired volume
- Make sure that the headphone is NOT connected to the headphone audio output jack.
- Make sure that the TV speakers is NOT set to Off.

#### Adjusted Picture or Sound settings are not effective every time the unit is turned on.

You must set Home in Location. → p. 32 (Otherwise, the settings you adjusted will not be memorized after the unit goes into standby mode.)

#### You see a distorted picture or hear an unusual sound. (Analog TV - NTSC signal)

- You may be getting NTSC (Analog) TV signal (not HDTV signal) interference from electrical appliances, automobiles, motorcycles or fluorescent lights
- Try moving the unit to another location to see if this is the cause of the problem. Ghosts, lines or streaks in picture.
- · Electrical interference from nearby appliances may affect picture quality
- View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

#### Picture poor, sound intermittent or no sound

 View other TV channels. The problem might be limited to the broadcasting station or weak signal strength.

#### Child and rating lock

#### Forgotten PIN code.

Enter "0711" to clear your password.

#### Screer

#### You switch to a different input and the screen size changes.

- This unit will memorize the viewing mode from the last time you used the particular input modes
- The display image does not cover the entire screen.
- you are using the unit as a PC monitor, make sure that Horizontal position and
- If you are watching TV or using the Composite video, Component video or HDMI with 480i input, press FORMAT repeatedly to switch to various screen modes

#### Different color marks on the TV screen

 View other TV channels. The problem might be limited to the broadcasting station, missing data or pixelation due to weak signal strength.

#### Closed captions

#### Closed captions are displayed as a white box. No closed captions are displayed in the closed captions-supported program.

- Interference from buildings or weather conditions may cause closed captions to be incomplete if watching analog TV signals.
- Broadcasting station may shorten the program to insert advertisements. The closed caption decoder cannot read the information of the shortened program.

#### Black box is displayed on the TV screen.

The text mode is selected for caption. Select CC-1, CC-2, CC-3 or CC-4.

#### Software update

- A message appears on the screen prompting for software update again.
- When you start up the TV or a net service after executing the software update, a
  message may appear on the screen prompting for software update again. In this
  case, please select Update to start USB update or network update. 
   — p. 43

#### Network

#### Cannot connect to the network.

- Check if the Ethernet cable connection is properly made. Turn on the broadband router and/or modem.
- Check the network settings.
- Check if the broadband router and/or modem is correctly connected

#### Sometimes video quality is poor when using the wireless LAN.

 The wireless network connection quality varies depending on the distance or obstacles (e.g. wall, basement, 2nd floor) between the TV wireless LAN adapter and the wireless router (access point), from other wireless networks, and brand and type of the wireless router (access point). When using the wireless LAN of the TV, it is suggested to place the wireless router as close as possible to the television.

#### Wireless LAN connection fails or wireless connection is poor.

- Check the installation location of the TV and wireless router (access point). Signal quality may be affected for the following reasons.
  - Interference of other wireless devices, microwaves, fluorescent lights, etc., are placed nearby.
  - There are floors or walls between the wireless router and TV.
  - If the problems continue even after checking the above, try making a wired LAN connection.

#### Cannot use the wireless connection.

- Check if the wireless LAN Access Point (AP) (e.g. wireless router) is oriented properly or not placed too close between them.
- Once you have activated the wireless connection please wait 30 seconds for the connection to be established after turning on the unit, before trying to access network features such as Net TV.

#### Cannot use Netflix feature.

- Check if the network connection is properly made.
- Visit http://www.netflix.com on your PC and become a Netflix member.
- · Some network services may not be available in your country
- Cannot add movies or TV episodes to the Instant Queue.
- Visit www.netflix.com on your PC

## Even though the speed of the internet connection improves during playback, the picture quality of Netflix streaming movie does not improve.

• The picture quality does not change during playback. It differs depending on the speed of internet connection at the time of loading.

#### Cannot use VUDU feature.

- VUDU is available only in the United States and Mexico.
- Check if the network connection is properly made.

#### Cannot rent or buy movies / TV episodes on VUDU.

- You need to activate the VUDU account. For detailed information, please visit the service providers website at http://www.vudu.com
- Log into your account at *http://my.vudu.com* and check your payment

#### information

#### The picture quality of streaming movie (Netflix, VUDU or CinemaNow) is poor.

Check the speed of your internet connection. You need speeds of at least 8 Mbps to this player for high quality uninterrupted playback.

#### Streaming movie (Netflix, VUDU or CinemaNow) often stops or starts buffering during playback.

 Contact your internet service provider to troubleshoot your internet connection for speed and line quality. Consistent line quality and speed are very important for internet video playback.

#### Cannot connect to the network while my PC is connected to the network.

Check the content of your internet service contract to see if your internet service
 provider prevents multiple terminals connecting at the same time.

#### Cannot use Easy Connect to connect to the access point.

- Connect the unit to the access point using scan or manual entry mode. If the access point's security mode is set to WEP\*, change the setting to others (recommended), then try Easy connect again. (For access point configuration, please consult its user manual or manufacturer.)
- WEP is not recommended to be used due to its major security flaws. Change the security protocol on the wireless router to others (recommended) mode.

#### protocol on the wireless router to others (recommended) mode. Folder or files stored on home network media server are not displayed in the file

#### list or cannot be played back.

- Check the setting on your home media server. (Refer to the user manual of the home media server.)
- Check the network connection and settings.

#### Cannot use Pandora feature.

- Check if the network connection is properly made.
- Pandora is available only in the United States.
- You must create a Pandora account and activate this unit.

#### Activating Pandora → p. 49 Wireless Screencasting

- Connectivity with all Wireless Screencasting compatible devices is not guaranteed
- Devices that do not comply with Wireless Screencasting standards may have compatibility issues.

#### Note(s)

- The LCD screen is manufactured to provide many years of useful life.
   Occasionally a few non active pixels may appear as a fixed point of blue, green or red.
- This is not to be considered a defect in the LCD screen.
- Some functions are not available in specific modes, but this is not a malfunction. Read the description in this manual for more details on correct operations.

For additional troubleshooting, refer to the Frequently Asked Questions or FAQs on www.philips.com/support.

## 6 Information

## Glossary

#### Analog TV (NTSC)

Acronym that stands for National Television Systems Committee and the name of analog broadcasting standards.

Off the air analog TV signals are no longer being sent by major broadcasting stations in the USA.

#### ARC (Audio Return Channel) (HDMI 1 only)

HDMI-ARC allows you to use Philips EasyLink to output TV audio directly to a connected audio device, without the need for an additional digital audio cable. Be sure that the device is HDMI CEC and ARC compliant, and that the TV is connected to the device using an HDMI cable attached to both HDMI-ARC connectors.

#### Aspect ratio

The width of a TV screen relative to its height. Conventional TVs are 4:3 (in other words, the TV screen is almost square); widescreen models are 16:9 (the TV screen is almost twice as wide as its height).

#### **CEC** (Consumer Electronics Control)

This allows you to operate the linked functions between our brand devices with CEC feature and this unit. We do not guarantee 100% interoperability with other brands of CEC compliant devices.

#### Component video

This is a Video signal format that conveys each of 3 principal colors of light (red, blue and green) through different signal lines. This allows the viewers to experience picture colors as original as it is. There are several signal formats, including Y / Pb / Pr and Y / Cb / Cr.

#### Dolby Digital

The system developed by Dolby Laboratories to compress digital sound. It offers stereo sound (2ch) or multi-channel audio.

#### DTV (ATSC)

Abbreviation that stands for Advanced Television Systems Committee and the name of the digital broadcasting standards.

#### E-sticker

E-sticker is showing set features, technical information, etc on this TV set that is displayed on the TV screen mainly used by TV retailers. Previously the information was on a printed sticker that was put on the display.

#### HDMI (High-Definition Multimedia Interface)

Interface that supports all uncompressed, digital audio / video formats including set-top box, Blu-ray / DVD recorder or digital television, over a single cable.

#### HDTV (High-Definition TV)

Ultimate digital format that produces high resolution and high picture quality.

#### PIN code

A stored 4-digit number that allows access to parental control features.

#### SAP (Secondary Audio Program)

Second-audio channel delivered separately from the Main-audio channel. This audio channel is used as an alternate in bilingual broadcasting.

#### SDTV (Standard Definition TV)

Standard digital format that is similar to the analog TV picture quality.

#### Sonic Emotion Premium

Sonic Emotion Premium fills your surroundings with the right ambience, clarifies voice, and details the sound stage, making your experience more immersive and enjoyable.

## Maintenance

#### Cleaning

- Clean the front panel and other exterior surfaces of the unit with a soft microfiber cloth or lens brush. Before cleaning the panel, disconnect the AC power cord.
- Never use a solvent or alcohol. Do not spray insecticide liquid near the unit. Such chemicals may cause damage and discoloration to the exposed surfaces.
- Do not spray any liquids on the screen or other exterior surfaces of this unit. If liquids enter the unit, they could cause shorts, electric shocks or fire damage.



#### Servicing

Should your unit become inoperative, do not try to correct the problem yourself. There are no user serviceable parts inside. Call our toll free customer support line found on the cover of this User manual to locate an authorized service center.

#### IR signal check

If the remote control is not working properly, you can use a digital or cell phone camera to see if it is sending out an infrared signal.



e.g.) With a digital camera:

Point the digital camera towards the remote control infrared diode at the front of the remote control. Press and hold any key on the remote control and look at the camera display. If an infrared pulsating light appears on the display, the remote control is sending out an IR signal.

Note: Some cameras may have an IR filter

or dual camera cell phones may have an IR filter in one of the camera's and both will not display the IR signal.

## 7 Specifications

Model #	55PFL4901	50PFL4901	43PFL4901				
Picture							
Туре	FHD (1920 x 1080 pixels 60H	lz)					
Diagonal screen size / aspect ratio	54.6"/16:9	49.5"/16:9	43"/16:9				
Viewing angles	176° (V) by 176° (H)	· · · ·					
Built-in digital / Analog tuner	ATSC (Digital) / NTSC (Analog	g)					
Sound							
Mono / Stereo	Mono, Stereo, Sonic Emotion	Mono, Stereo, Sonic Emotion Premium					
Power output (RMS watts)	10W x 2						
Equalizer	5 Band						
Ease of use							
SD (4:3 source)	: Automatic / Super zoom / 4	:3 / Movie expand 14:9 / Movie	e expand 16:9 / Wide screen				
Picture format HD (16:9 source) : Automatic / 4:3 / Wide screen / Unscaled or Full							
Photo slide show	JPEG, Progressive JPEG	JPEG, Progressive JPEG					
Music playback	MP3, WAV, AAC						
Video playback	MPEG1, MPEG2, H.264, MPE	G4, H.265/HEVC					
Channel							
	Over-the-Air DTV : VHF: 2~13 (ATSC) UHF: 14~69 (Each channel may have e.g. 2.1~2.9, 3.1~3.9, etc)						
Channel coverage	Over-the-Air Analog: VHF: 2~13(NTSC)UHF: 14~69						
CATV (Analog NTSC)	2~13, A~W W+1~W+94 (Analog W+1~W+84), A-5~A-1, 5A						
Tuning system	Channel frequency synthesiz	ed tuning system					
Channel access	Direct access number keyboa PREV. CH (Previous channel)	ard, Programmable scan, Chan	nel +(up) / -(down) and				
Connectivity	·						
Component video input (Y/Pb/Pr)	1 Supporting video signals : 48	1 Supporting video signals : 480i/p, 720p, 1080i/p @60Hz					
Composite video input (Shared Y green terminal with component video)	1						
	3						
HDMI input	Supporting HDMI video signals : 480i/p, 720p, 1080i @60Hz, 1080p @24/30/60Hz Supporting HDMI digital audio signals : LPCM, AC3, DD+						
	Supporting PC-input video signal up to FHD (1920 x 1080)						
Analog audio L/R input	1 (L audio / R audio)						
PC input	Via VGA, HDMI and HDMI-DVI + Analog audio L/R						
USB	1						
Wireless LAN	Supporting wireless standards : IEEE 802.11a/b/g/n/ac (2.4GHz/5GHz)						
Ethernet port 1							
Digital audio output	1 Supporting Dolby Digital and Dolby Digital Plus						
Headphone output	1 1/8 inch (3.5mm)						
Power							
Power requirements	120V~ +/- 10%, 60Hz +/- 0.59	%					
Temperature							
Operating temperature	41 °F (5 °C) to 104 °F (40 °C)						

Specifications are subject to change without prior notice.

#### Warranty coverage :

This warranty obligation is limited to the terms as set forth below.

#### Who is covered:

This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

#### What is covered:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in current inventory, or (3) refund the original purchase price of the product.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.

**Note:** Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

#### What is not covered - Exclusions and limitations:

This Limited Warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

#### This Limited Warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per user manual.

To obtain assistance... Contact the Customer Care Center at: 1-866-813-3283

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Funai Service Corporation, 2425 Spiegel Drive, Groveport, OH 43125, USA

## License

Funai Corporation, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact Funai Corporation, Inc. You should write to Funai Service Corporation OSS Request, 2425 Spiegel Drive, Groveport, OH 43125, USA. Funai Corporation, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. Funai Corporation, Inc. shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it. Funai Corporation, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code.



Funai Corporation, Inc. 12489 Lakeland Road, Santa Fe Springs, CA 90670, USA

This product has been manufactured by and is sold under the responsibility of Funai Corporation, Inc., and Funai Corporation, Inc. is the warrantor in relation to this product.

The Philips trademark and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. used under license.