



Quick Start Guide & FAQs 快速入門指南與常見問題解答


EN ----- 01 TC ----- 05



1. Rinsing

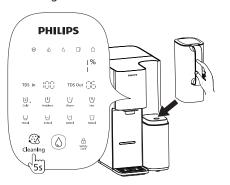

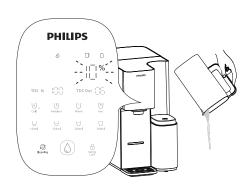

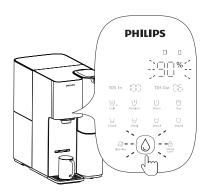



(3) When the progress reaches "90%" flashes, there is no need to empty the water. Place a container with volume no less than 2 liters under the water outlet and press " (" . When it shows "100%", it means that the rinsing process completes.

Please note:


- Please follow the rinsing progress until it reaches "100%".
 During the rinsing process, in case of special circumstances, you can exit the rinsing program by long-pressing the " "button for 5 seconds.
- During the first time use, please check if any water leaks from
 or gathers around the dispenser. If there is any strange noise,
 burnt smell or smoke coming out from the machine, please
 disconnect the power cord immediately. Contact customer
 services if you find any of the situations above.
- During the rinsing process, when air passes through the high-precision filter elements, micro bubbles are generated, causing the water in the filtered water jug appears white and cloudy. This is a normal phenomenon.

 2. User Interface

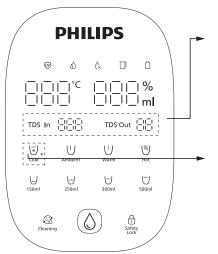




Cold water light		Status	
KI .	Light off	Cooling function not activated	
Cold .	Flashing blue light	Cooling in progress	
	Constant blue light	Cooling completed	

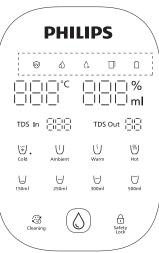


Icon	Status	Meaning	
⊌ :	Constant white light	UV sterilization in progress.	
	Constant white light	Filtration process is ongoing, you can still extract water.	
0	Flashing white light	Filtration process is ongoing, the water level in the filtered water jug is insufficient for extraction.	
	Flashing white light	The tap water in the tap water tank has not been replaced for a long time.	
<u>(</u>	Flashing red light	The tap water in the tap water tank is at a low level or the water quality is poor, please empty the remaining water in the tank and refill it with fresh tap water.	
i	"When " (\hat{X}_i) " indicator of changing water flashes, the water in the tap water tank needs to be changed. Please discarding the drain water before adding fresh tap water into the tap water tank.		
	Constant white light	Filtered water jug is in place.	
U 	Flashing white light	Filtered water jug is not in place. Please put it back.	
	Constant white light	More than 10% of the filter cartridge's lifetime remaining.	
	Flashing red light	Less than 10% of the filter cartridge's lifetime left. Please replace the filter soon.	
	Red light on	Less than 7 days of the filter cartridge's lifetime remaining. Please replace the filter as soon as possible.	

首次使用指南


1. 產品沖洗

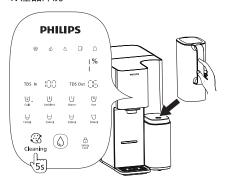

(1) 原水箱裝滿水,接通電源,安裝好純淨水壺, 長按" (1) 75秒進入沖洗。

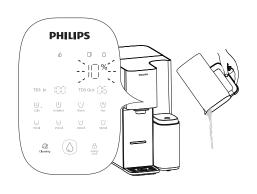

▍▋首次使用指南

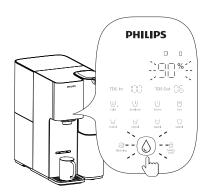


(3) 當進度到"90%"閃爍時,無需倒水,放置 一個超過2公升容量的容器到接水口, 按"〇)"。當螢幕顯示100%代表沖洗完成。

請註意:


- 請按沖洗程式冲洗到100%。冲洗過程中如有特殊情況,可長按 "《~"5秒退出冲洗程式。
- 觀察產品是否有水滲出或積水,或發現異響、焦糊味、冒煙等,如 有上述情況,請斷開電源連接並與售後人員聯繫。
- 在沖洗過程中,水箱水壺出現白色渾濁為空氣經過高精度濾芯產生的微氣泡導致,若出現黑色雜質為濾芯活性炭殘留,均為正常現象。

首次使用指南

2. 狀態顯示

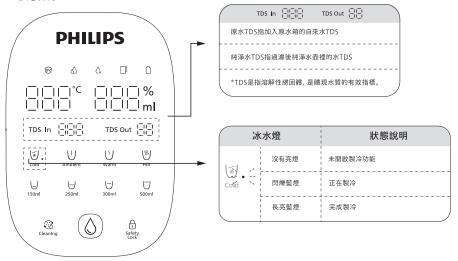

首次使用指南

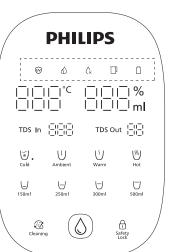

	狀態燈	狀態說明		
₩ :	亮白燈	正在殺菌。		
8	亮白燈	正在總水及仍可取水。		
	閃白燈	正在淺水,純淨水壺水量不足,暫無法取水。		
	閃白燈	原水箱長時間未換水,建議更換。		
	閃紅燈	原水箱缺水或水質狀況差,請將原水箱剩餘的水倒掉,再重新加水。		
	*當" ⟨x" 提示換水時, 保證淨水效果。	原水箱內刺餘的水是過速後的廢水或水質較差,請務必倒掉再添加自來水,以保護進芯,		
	亮白燈	純淨水壺已放好。		
ושו	閃白燈	纯淨水壺未放好,請放回。		
	亮白燈	濾芯壽命在10%以上,請放心使用。		
	閃紅燈	遮芯壽命少於10%,需及時購買遮芯。		
	亮紅燈	遮芯壽命少於七天, 需及時更換遮芯。		



Register your product and learn more in the website link below: https://www.philips.com.hk/c-m-ho/water-drinking-solutions/latest#

Specifications are subject to change without notice

© 2023 AquaShield

All rights reserved.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Hong Kong AquaShield Health Technology Company Limited and Hong Kong AquaShield Health Technology Company Limited is the warrantor in relation to this product.

Rev B SEP 23

