

ENG Quick Start Guide

Install the car audio

your Philips car audio dealer.

These instructions are for a typical installation.

However, if your car has different requirements,

make the corresponding adjustment. If you have

any questions regarding installation kits, consult

This unit is designed for negative ground

• Always install this unit in the car dashboard.

Other locations can be dangerous as the

• To avoid short-circuit: before you connect,

• Ensure that you connect the yellow and red

power supply leads after all other leads are

• Ensure that all loose leads are insulated with

Ensure that the leads do not get caught

under screws orin parts that will move

• Ensure that all ground (earth) leads are run

• Use only the supplied mounting hardware

Improper fuses can cause damage or fire.

Note on the power supply lead (yellow)

all the connected devices.

body or chassis of the car.

Notes on speaker connection

to one another.

• When you connect other devices to this

system, ensure that the rating of the car

Never connect speaker wires to the metal

• Never connect speaker wires with stripes

circuit is higher than the total fuse value of

When you need to change the fuse, consult

to a common ground (earth) point.

for a safe and secure installation.

rear of the unit heats up during use.

(earth) 12 V DC operation only.

ensure that the ignition is off.

connected.

electrical tape.

(e.g. seat rail).

a professional.



## Mount in the dashboard 1



 Check wire connection before you mount the unit into a car.

 If preset radio stations are lost when the ignition key is turned OFF and then back ON, reconnect the red leads crosswise to the yellow ones.

1 If the car does not have an on-board drive or navigation computer, disconnect the

- negative terminal of the car battery. • If you disconnect the car battery in a car that has an on-board drive or navigation computer, the computer may lost its memory.
- If the car battery is not disconnected, to avoid short-circuit, ensure that bare wires do not touch each other.
- 2 Take out the original car audio and keep the screws.
- 3 Mount the screw and buffer (supplied). ⓐ
- 4 Connect wires (see "Connect wires"
- 5 Slide the unit into the dashboard until a click sound is heard. 6
- 6 Fix the unit onto the dashboard with screws, 🔾
- 7 Reconnect the negative terminal of the car battery.

### Connect wires 2

 Ensure that all loose leads are insulated with electrical tape.

1 Check the car's wiring carefully, then do the other connections:

## Turn on

adjust settings while you drive.

1 Press ① to turn on the unit.

→ The available OSD (On-Screen Display)



2 Touch a language to select.

- → The OSD language is changed to the selected language immediately.
- → To turn off the unit, press ① for

### Set date and time



• If necessary, touch € in the middle right side of the screen to display the 2nd

### 2 Touch [Settings].

Risk of road accidents! Never watch video or

languages are displayed.



- 3 seconds.

1 Touch the upper left corner to display main



2 Touch on [12H] or[24H] to select clock

3 Touch [Time].

Set date

1 Touch [Date].

Set clock mode

1 Touch [Time mode].

→ The date/time setup menu is displayed.



2 Touch on the displayed date information.

General Time Sound Wideo Blustech Language Walner

3 Touch ♠ or ♥ to set year, month and day.

→ A submenu is displayed.



• When date/time is set, touch 🗢 to return to main menu.

## Adjust screen

### To turn off the screen

1 Press **DISP** for over 2 seconds

- → To turn on the screen, press **DISP**.

## To adjust screen brightness

- 1 Press **DISP**.
- 2 Rotate TUNE/►Ⅲ SELECT to adjust the

## Use map

2 Touch [Navigation].

few seconds.

You may need to upgrade the map before

using it (see "Upgrade the map" section)

1 Touch the upper left corner to display home

→ The navigation menu is displayed in a

Refer to the map manual (in Chinese) to

operate the navigation tool.

Note

88 88 888

C [SANYO O

### 1 Touch [Time].

Set time

2 Touch on the displayed time.

→ A submenu is displayed.



3 Touch ♠ or ♥ to set hour and minute.



→ The screen is turned off.

→ Brightness bar is displayed.

 You can press NAVI to enter/exit the navigation system.

## Listen to Radio

1 Touch the upper left corner to display home menu.

(1) Connect the AV IN cabel to the AV IN socket on front panel.

### 2 Touch [Radio].

AV system

→ Band and frequency information is displayed.



- 3 Touch on **FM** or **AM** to select band:
- 4 Briefly touch ◀ or ▶ to tune to a radio station by step.
- tune to a radio station automatically.

## Play disc 3

You can play video, audio or images stored on the following discs:

- DVD video, DVD-R, DVD-RW
- Note

• Ensure that the disc contains playable content.

DVD region code	Country
	China

→ Play starts automatically.

Optional accessory

O Red O White



- FM band options: FM1, FM2, FM3
- AM band options: AM1, AM2
- Touch ◀ or ▶ for over 1 seconds to

 VCD Audio CD, CD-R, CD-RW

You can play DVD discs with the following region

DVD region code	Country
	China

### 1 Insert the disc into the disc slot with label side facing up.

- → To remove the disc, press the **b**utton.
- → When the disc is ejected, the unit switches to the previous source, if connected. Otherwise, the unit switches to [Radio] mode automatically.

## Play USB device 4



- Ensure that the device contains playable content.
- 1 Open the USB door.
- 2 Insert the USB device to the USB socket.



 To remove the USB device, switch to disc, radio or other source first.

# Play with Bluetooth device

→ Play starts automatically.

# Pair the Bluetooth-enabled devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once.

- You can pair up to eight devices.
- 1 Search for Bluetooth device with the device.
- 2 Select "CID3288" in the pairing list.
- 3 Enter default password "0000". → if pairing succeeds. phone call record is displayed.

Make a call

home menu.

3 Touch [Bluetooth].

then touch 🗢.

from the following list:

1 Pair the phone with the unit.

2 Touch the upper left corner to display the

→ The Bluetooth menu is displayed.

4

By default, all incoming calls are received automatically.

Receive call


1 If there is incoming call, [Incoming call...] flashes on the screen. Speak into the Bluetooth microphone.



2 When conversation ends, touch • (red) to terminate the call.



 You can select to receive calls manually by set [Auto answer] to [Off] status.

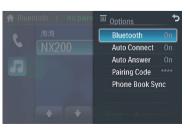

4 Touch ♠ or ♥ to select the paired phone,

5 Touch ♠ or ♥ to search for phone number

Or touch III to dial number directly, then touch



© 2010 Koninklijke Philips Electronics N.V. All rights reserved. CID3288\_93\_QSG\_V1.0