

Register your product and get support at
www.philips.com/welcome

DS9000



EN	User manual	3
ZH-CN	用户手册	21

PHILIPS

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Housing 外壳	○	○	○	○	○	○
Loudspeakers 喇叭单元	○	○	○	○	○	○
PWBs 电路板组件	X	○	○	○	○	○
Accessories (Remote control & cables) 附件 (遥控器, 电源 线, 连接线)	X	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 – 2006.

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 – 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period (10 years)

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，电子信息产品用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.

Contents

1	Important	4
	Safety	4
	Notice	6
2	Your Docking Entertainment System	8
	Introduction	8
	What's in the box	8
	Overview of the main unit	9
	Overview of the remote control	11
3	Get started	13
	Prepare the remote control	13
	Connect power	14
	Turn on	14
4	Play	16
	Play from iPod/iPhone	16
	Play from an external device	17
	Adjust volume level	17
	Mute sound	17
5	Product information	18
	Specifications	18
6	Troubleshooting	19

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

- ① **Read these instructions.**
- ② **Keep these instructions.**
- ③ **Heed all warnings.**
- ④ **Follow all instructions.**
- ⑤ **Do not use this apparatus near water.**
- ⑥ **Clean only with dry cloth.**
- ⑦ **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.**
- ⑧ **Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.**

- ⑨ For countries with a polarized mains, do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Caution: To prevent electric shock, match the wide blade of the plug to the wide slot, fully insert.



- ⑩ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑮ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:
- Install all batteries correctly, + and - as marked on the apparatus.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑯ **The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.**
- ⑰ **Apparatus shall not be exposed to dripping or splashing.**
- ⑱ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**



Warning

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Note

- The type plate is located on the bottom of the apparatus.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy audio from the iPod/iPhone and other audio devices.

 
What's in the box

Check and identify the contents of your package:

- Main unit
- Remote control
- 1 × AC power cord
- 1 × MP3 link cable
- User manual


Overview of the main unit

Front View

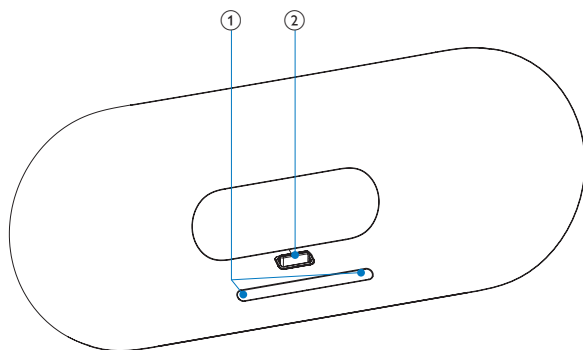

 
- ① - VOL +
 - Adjust volume.
- ② iPod/iPhone dock

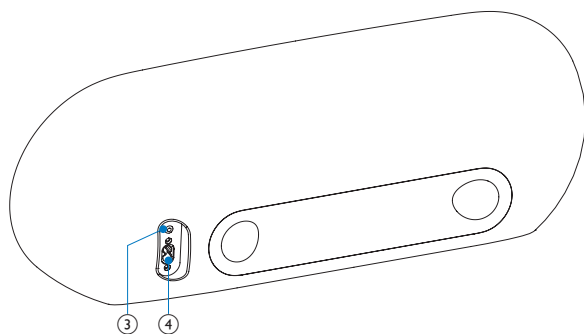


Back View



 - ③ **AUX IN**
 - Jack for an external audio device.
- ④ **Power supply socket**

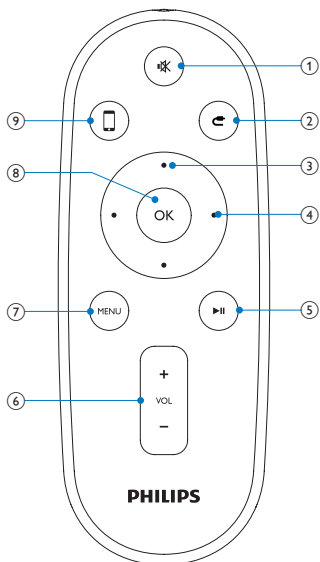Overview of the remote control



- 1 
 - Mute or restore volume.
- 2 
 - Select the MP3 link mode.
- 3 **Up/down keys**
 - Navigate through the iPod/iPhone menu.
- 4 **Fast forward/backward keys**
 - Fast reverse or fast forward within a track or iPhone/iPod.
 - Skip to the previous/next track.
- 5 
 - Start or pause play.
- 6 **VOL +/-**
 - Adjust volume.

7 MENU

- Access the iPod menu.

8 OK

- Confirm a selection.

9 

- Select the iPod/iPhone dock mode

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Prepare the remote control



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

For first-time use:

 
1 Remove the protective tab to activate the remote control battery.

To replace the remote control battery:

1 Open the battery compartment.

2 Insert one CR2032 battery with correct polarity (+/-) as indicated.

3 Close the battery compartment.

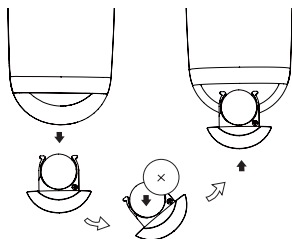

Note

 
- Before pressing any function button on the remote control, first select the correct source with the remote control instead of the main unit.
- If you are not going to use the remote control for a long time, remove the battery.

Connect power

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.

- 1 Connect the AC power cord to the wall outlet.

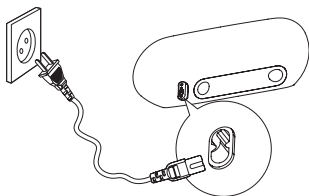

Turn on

- 1 The unit turns on automatically after power connection.
 - ↳ When the user approaches the unit, the LED light under the volume button on the main unit turns on automatically.

Switch to Eco Power Standby

The unit switches to the standby mode automatically when:

- the iPod/iPhone is disconnected from the unit in the dock mode.
- the connected device stops music play for more than 15 minutes in the MP3 link mode.

4 Play

Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector:

Made for:

 
- iPod nano (2nd generation)
- iPod nano (3rd generation)
- iPod nano (4th generation)
- iPod classic
- iPod touch (1st generation)
- iPod touch (2nd generation)

Works with:

- iPhone
 - iPhone 3G
 - iPhone 3GS
-

Load the iPod/iPhone

- 1 Place the iPod/iPhone in the dock.

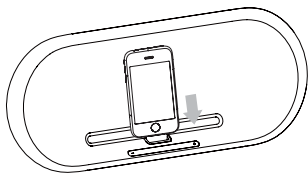

To remove the iPod/iPhone

- 1 Pull the iPod/iPhone out of the dock.

Listen to the iPod/iPhone

- 1 Ensure that the iPod/iPhone has been loaded correctly.
- 2 Press **□** to select the dock mode.
- 3 Press **▶||**.
 - ↳ The connected iPod/iPhone starts to play.
 - To pause/resume play, press **▶||**.
 - To skip to a track, press the fast forward/backward keys.
 - To search during play, press and hold the fast forward/backward keys, then release to resume normal play.
 - To navigate through the menu, press **MENU**, then press the up/down key to select, and press **OK** to confirm.

Charge the iPod/iPhone

The docked iPod/iPhone begins to charge as soon as the unit is connected to AC power.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **Ⓞ** to select the MP3 link mode.
- 2 Connect the supplied MP3 link cable to:
 - the **AUX IN** jack (3.5mm) on the back of the unit.
 - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

Adjust volume level

- 1 During play, press **VOL +/-** to increase/decrease the volume level.

Mute sound

- 1 During play, press **MUTE** to mute/unmute sound.

5 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2X50 W RMS
Signal to Noise Ratio	85 dB
MP3 Link	0.6 V RMS 10 kohm

General information

AC power	100-240V~, 50/60Hz
Operation Power Consumption	<35W
Standby Power Consumption	<1W
Dimensions - Main Unit (W x H x D)	562 x 219 x 180 mm
Weight - Main Unit	6.4 kg

6 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.



© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
DS9000_93_UM_V1.0_1021



100% recycled paper
100% papier recyclé