

DS7520




Quick start guide 快速启用指南


# **PHILIPS**

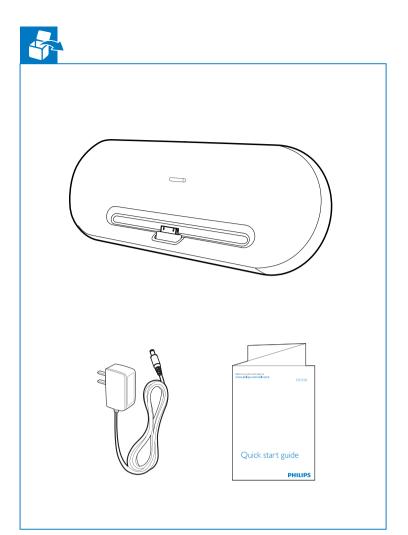


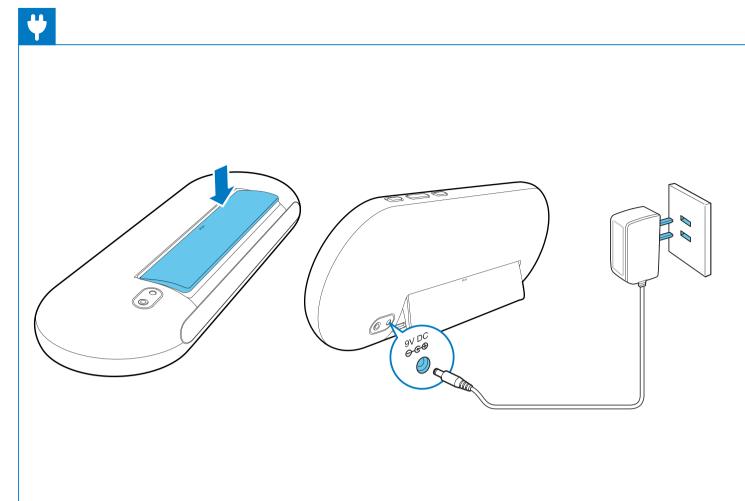

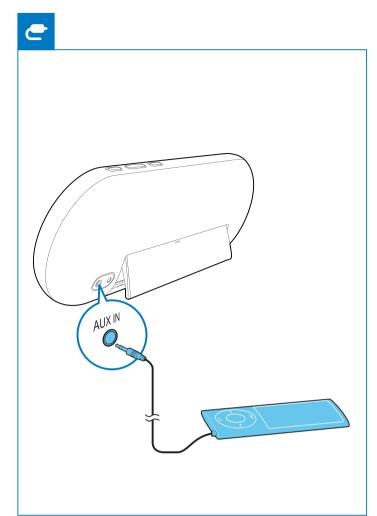




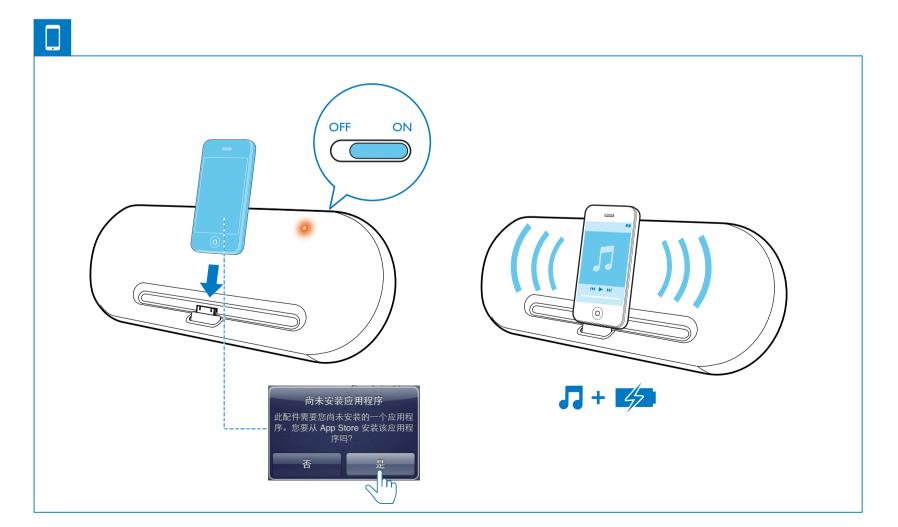


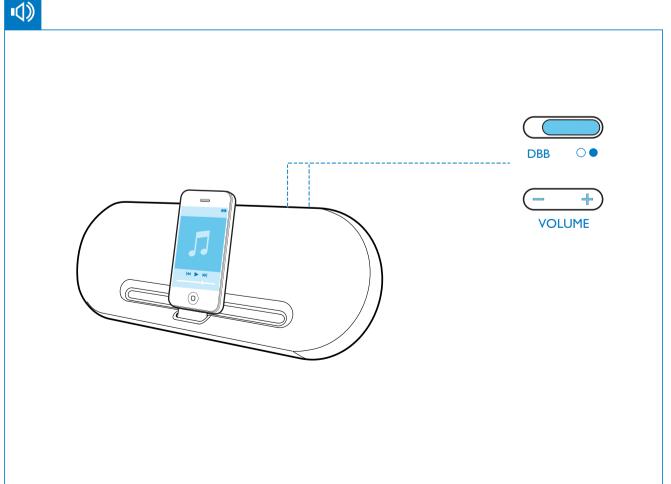


All registered and unregistered trademarks are property of their respective owners.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.




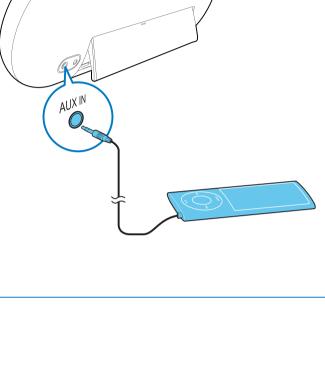

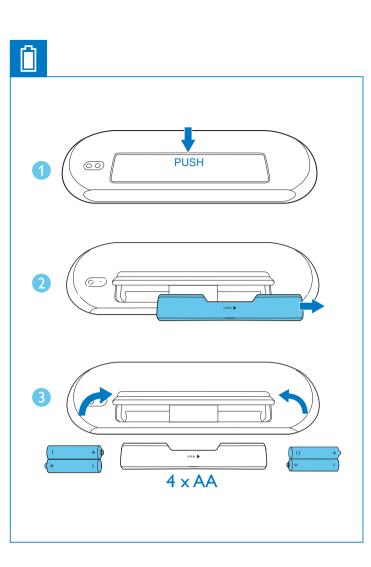

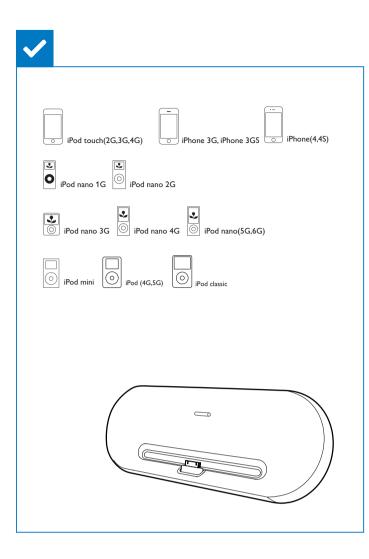



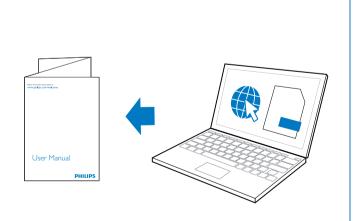

To get the detailed instructions for use, visit www.philips.com/support.

详尽的使用说明请登录 www.philips.com/support.



## 1 Important

- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel, Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and as marked on the unit.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



- Never remove the casing of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power

### 2 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

### Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area. Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The type plate is located inside the stand foot of the docking speaker.

### Product information



Product information is subject to change without prior notice.

### **Specifications**

Amplifier		
Total Output Power	2 × 5 W RMS	
Signal to Noise Ratio	>60 dBA	
MP3 Link	0.6V RMS 22 kohm	

### General information

AC Power	Model: S018KC0900200			
	Input: $100-240 \text{ V} \sim 50/60 \text{Hz}$ , $500 \text{mA}$ ;			
	Output: 9 V === 2000 mA			
Battery power	4 x AA batteries			
Operation Power Consumption	<18 W			
Eco Standby Power Consumption	<0.5 W			
Max. load for iPod/iPhone	5 V === 1 A			
Dimensions				
- Main Unit ( $W \times H \times D$ )	311 × 111 × 37.6mm			
Weight				
- Main Unit	0.28 kg			

## 1 注意事项

- 不要堵塞任何通风口。 按照制造商的说明进行安装。
- 不要在任何热源附近安装,如散热器、蓄热器、炉具或其它发热设备(包括功放器)。
- 防止电源线被踩踏或挤夹,特别是在插头、电源插座和设备电源线出口位置。
- 仅使用制造商指定的附件/配件。
- 在雷电天气期间或长期不用的情况下,请拔下本装置的电源插头。
- 所有维修均应由合格的维修人员来执行。 本装置有任何损坏时,如电源线或插 头损坏,液体泼溅到或物体跌落到装置上,装置淋雨或受潮,无法正常运行, 或者跌落,均需要进行维修。
- 电池使用注意事项 为防止电池泄漏而造成人身伤害、财产损失或装置损坏,请:
- 按照装置上标明的 + 极和 极, 正确安装所有电池。
- 请勿混合使用电池(旧电池与新电池或碳电池与碱性电池,等等)。
- 若打算长期不用本装置, 应取出电池。
- 不可将电池(电池组或安装的电池)置于高温环境,如阳光直射处、明火或类似环境。
- 切勿将本装置置于漏水或溅水环境下
- 不要将任何危险源放在本装置上(例如装有液体的物体、点燃的蜡烛)。
- 如果将直插式适配器的插头用作断开设备,则断开设备应可以随时使用。

## 警告

- 切勿拆下本产品的外壳。
- 切勿将本装置放在其它电器设备上面。
- 应让本设备远离阳光直射、明火或高温。 确保始终可轻易地接触到电源线、电源插头或适配器,以便于将本装置从电源上断开。

## 2 注意

如果用户未经 Philips 优质生活部门的明确许可而擅自对此设备进行更改或修改,则 可能导致其无权操作此设备。



'Made for iPod"和 "Made for iPhone"表示电子附件专为连接 iPod 或 iPhone 而设计,并经开发人员认证,符合 Apple 性能标准。 Apple 对该设备的操作及其是 否符合安全和法规标准不负任何责任。 请注意,通过 iPod 或 iPhone 使用该附件可 能影响无线性能

iPod 和 iPhone 是 Apple Inc. 在美国 和其它国家/地区注册的商标。

### 旧产品和电池的处理

本产品采用可回收利用的高性能材料和组件制造而成。

切勿将本产品与其它生活垃圾一起处理。请自行了解当地关于分类收集电子、电气 产品及电池的规定。正确弃置这些产品有助干避免对环境和人体健康造成潜在的负面影响。 本产品所含的电池不能与一般的生活垃圾一同弃置。

请自行了解当地关于分类收集电池的规定。正确弃置电池有助于避免对环境和人类 健康造成潜在的负面影响。

关于您所在地区回收中心的更多信息,请访问 www.recycle.philips.com。 环境信息

已省去所有不必要的包装。 我们努力使包装易于分为三种材料: 纸板(盒)、泡沫 塑料(缓冲物)和聚乙烯(袋、保护性泡沫片)。

您的系统包含可回收利用的材料(如果由专业公司拆卸)。 请遵守当地有关包装材 料、废电池和旧设备的处理的规定。



• 型号铭牌位于音乐基座的支架脚内。

## 3 产品信息



• 产品信息如有更改,恕不另行通知。

### 规格

功放器		
总输出功率	2×5瓦RMS	
信噪比	>60 dBA	
MD2 Link	0.6 仕 PMC 22 千欧	

一般信息	
交流电源	型号: S018KC0900200 输入: 约 100-240 伏, 50/60 赫兹, 500 毫安 输出: 9 伏 === 2000 毫安
电池	4个AA 电池
操作功耗	< 18 瓦
	< 0.5 瓦
最大 iPod/iPhone 的载入	5 伏 === 1 安
- 主装置 ( 宽 x 高 x 厚 )	311 x 111 x 37.6 毫米
重量	
- 主装置	0.28 千克

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance						
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬(Chromium 6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
Housing 外壳	0	0	0	0	0	0	
Loudspeakers 喇叭单元	0	0	0	0	0	0	
PWBs 电路板组件	×	0	0	0	0	0	
Accessories (Cables) 附件(电源线,连 接线)	Х	0	0	0	0	0	

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363 - 2006 标准规定的限量要求以下。 O'Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363 - 2006 标准规定的限量要

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

This logo refers to the period ( 10 years )

电子信息产品中含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变,电子信息产品用户使 用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重 损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.