www.philips.com/welcome

AZD102



User manual



Contents

1	Important	2
2	Your CD Soundmachine Introduction What's in the box Overview of the main unit	3 3 3 4
3	Get started Connect power Turn on Turn off	6 6 7 7
4	Play Play disc Play from iPod/iPhone Listen to FM radio Play from an external device	8 8 8 9
5	Play options Pause/resume play Select play modes Adjust volume Mute sound Enhance bass	10 10 10 10 10
6	Product information Specifications Maintenance	11 11 11
7	Troubleshooting	12
8	Notice Disposal of your old product and	13
	batteries	13

1 Important

- Read these instructions.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- The unit shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).

 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- · Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

2 Your CD Soundmachine

Introduction

With this CD Soundmachine, you can enjoy audio from discs, iPod/iPhone, other external devices, or FM radio stations.


The unit offers you Dynamic Bass Boost (DBB) to enrich sound.

What's in the box

Check and identify the contents of the package:

- Main unit
- AC power cord
- Quick start guide

Overview of the main unit

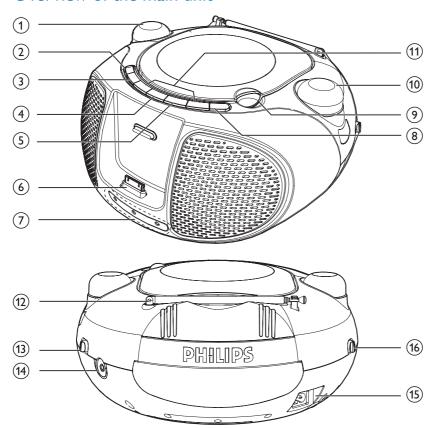

- 1 VOLUME +
 - · Adjust volume.
- ② ≍
 - In CD mode, play tracks randomly.
- 3 🕏
 - In CD mode, play a track or tracks repeatedly.
- (4) ►II
 - Start or pause play.
- (5) **I**
 - Stop play.

- (6) DOCK for iPod/iPhone
- (7) LED indicators
 - In CD mode, show play status.
- (8) 🕸
 - Mute sound.
- (9) LIFT TO OPEN
 - Open or close the disc compartment.
- 10 -TUNING +
 - Tune to FM radio stations.
- 11 |44/ >>|
 - Skip to the previous or next track.
 - Search within a track,

- (12) FM antenna
 - Improve FM reception.
- (13) Source selector
 - Select a source: DOCK, FM, or CD.
 - Turn the unit off.
- (14) MP3 LINK
 - Connect an external audio device.
- (15) AC~ MAINS
 - Connect power.
- (16) DBB
 - ON/OFF: turn dynamic bass boost on or off.

3 Get started



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No.	
Serial No	

Connect power

The unit can be powered by either AC power or batteries.

Option 1:AC power




Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.

Connect the AC power cord to:

- the AC~ MAINS socket on the unit.
- the wall socket.

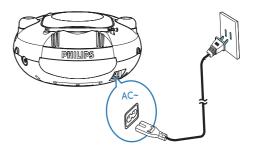



Vote

 To switch the unit off completely, disconnect the power cord from the power supply socket.

Option 2: Battery power




Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Remove battery if it is exhausted or will not be used for a long time.
- Batteries contain chemical substances, so they should be disposed of properly.



Note

- · Batteries are not supplied with the accessories.
- 1 Open the battery compartment.
- 2 Insert 6 batteries (type: R14/ UM2/ C Cell) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

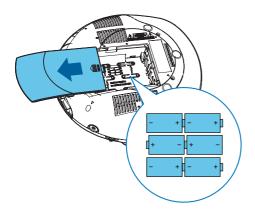

Turn on

Switch the source selector to DOCK, FM, or CD.

Turn off

Switch the source selector to **OFF**.

4 Play

Play disc

- 1 Switch the source selector to CD.
- 2 Lift to open the disc compartment.
- Insert a disc with the printed side facing up, then close the disc compartment.
- 4 Press ►II to start play.
 - To pause or resume play, press ►II.
 - To stop play, press
 - To select another track, press I◄◄ / ▶▶I.
 - To search within a track, press and hold I◀◀ / ▶▶I, then release to resume normal play.

Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

Compatible iPod/iPhone

The unit supports the following iPod and iPhone models:

Made for

- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod classic
- iPod with video
- iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)
- iPod with color display
- iPod mini
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Listen to the iPod/iPhone

- 1 Switch the source selector to **DOCK**.
- 2 Place the iPod/iPhone into the dock.



- 3 Play audio on your iPod/iPhone.
 - To pause or resume play, press ►II.
 - To skip to a track, press I◄◄ / ▶►I.
 - To search during play, press and hold I◀◀ / ▶▶I, then release to resume normal play.

Charge the iPod/iPhone

When the unit is connected to power and **DOCK** source is selected, the docked iPod/ iPhone begins to charge.



Note

 Your iPod/iPhone can only be charged in Dock or MP3 link mode, not in FM or CD mode.

Remove the iPod/iPhone

Pull the iPod/iPhone out of the dock.

Listen to FM radio



Note

- Position the antenna as far as possible from TV,VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.
- 1 Switch the source selector to FM.
- 2 Rotate TUNING + to tune to an FM radio station.

Play from an external device

You can also listen to an external audio device through this unit.



Note

- When you connect an external device to MP3-LINK socket, the unit switches to MP3 link source automatically,
- 1 Connect the MP3 link cable (not supplied) to:
 - the MP3-LINK socket on the unit.
 - the headphone socket on an external device.
- Play the external device (see the device's user manual).



Note

• The MP3-LINK socket is not applied to headphones.

5 Play options

Pause/resume play

During play, press ►II to pause or resume play.

→ In CD mode, the LED indicator ► II lights up when play is started, and blinks when play is paused.

Select play modes

Repeat

In CD mode, press repeatedly to select a repeat mode.

- → When the corresponding LED indicator blinks, the current track is played repeatedly.
- → When the corresponding LED indicator lights up, all tracks are played repeatedly.

Shuffle

In CD mode, press \Rightarrow to play all tracks randomly.

Adjust volume

During play, rotate - **VOLUME** + to adjust volume.

Mute sound

During play, press repeatedly to mute or resume sound.

In CD mode, if the sound is muted, both LED indicators and will be lighted up.

Enhance bass

To turn dynamic bass enhancement on or off, switch **DBB** to **ON** or **OFF**.

6 Product information



Note

 Product information is subject to change without prior notice.

Specifications

Amplifier			
Rated Output Power	2 × 1 W RMS		
Frequency Response	63 -14000 Hz, -3 dB		
Signal to Noise Ratio	>57 dBA		
Total Harmonic Distortion	<1 %		
MP3 Link Input	650 mV RMS		

Disc

Total Harmonic Distortion	<1 %
Frequency Response	63 -14000 Hz,
	-3 dB
S/N Ratio	>57 dBA

Tuner

Tuning Range	FM: 87.5 -
	108MHz
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50 dBA

General

Power supply		
- AC Power	110 V, 60 Hz	
- Battery	9 V, 1.5 × 6 R14/UM2	

Operation Power	15 W	
Consumption		
Standby Power		
Consumption	< 0.5 W	
Dimensions		
- Main Unit		
$(W \times H \times D)$	262 x 123 x 266 mm	
Weight		
- With Packing	1.8 kg	
- Main Unit	1.1 kg	

Maintenance

Clean the cabinet

 Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Clean discs

 When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



 Do not use solvents such as benzene, thinner; commercially available cleaners, or antistatic spray intended for analogue records.

Clean the disc lens

 After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

7 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www. philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Insert the batteries with their polarities (+/– signs) aligned as indicated.
- Replace the battery.

No sound

Adjust the volume.

No response from the unit

- Take out the batteries and turn on the unit again.
- Disconnect and reconnect the AC power plug, then turn on the unit again.

No disc detected

- Insert a disc.
- · Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Poor radio reception

- Increase the distance between the unit and yourTV orVCR.
- Fully extend the FM antenna.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Made for liPhone

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes these labels:



Class II equipment symbol



This symbol indicates that the apparatus has a double insulation system.



Note

 The type plate is located on the bottom of the apparatus.

