


3 Enjoy


Start disc playback

- 1 Press to open the disc compartment.

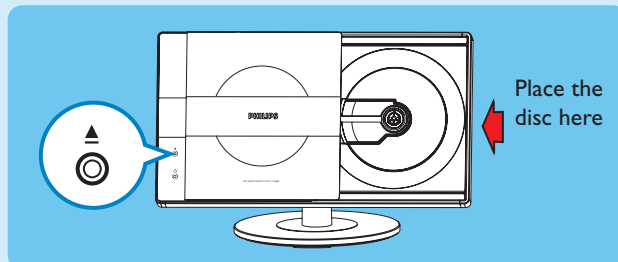


- 2 Place a disc with the disc label facing towards you.
- 3 Press to close the disc compartment.
- 4 Playback starts automatically.
- 5 If the disc menu appears on the TV, use cursor keys to select an option in the menu and press **OK** to start playback.
- 6 Press to stop playback.

Note When you press button, playback resumes from where it last stopped. To start playback from the beginning, you have to press .

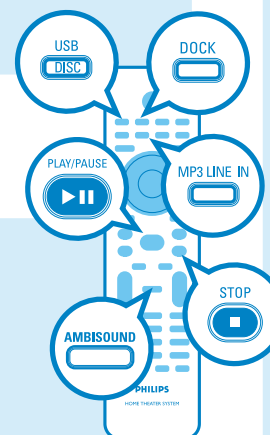

Playback other supported devices

The connections to other devices are located at the left side of the main unit.

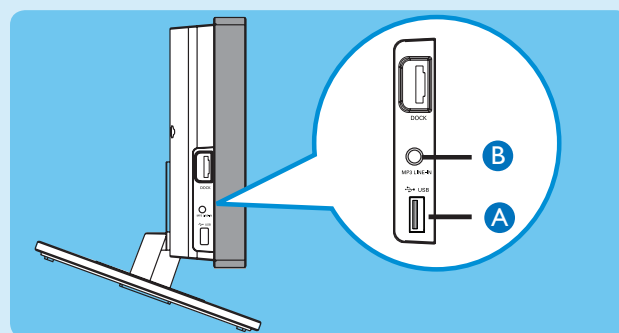

USB device

- 1 Insert your USB device to **A**.
- 2 Press **DISC/USB** to switch to 'USB' mode.
- 3 Press to start playback.
- 4 To stop playback, press **DISC/USB** to switch to 'DISC' mode. You can unplug your USB device now.

Other portable audio player

- 1 Use the supplied MP3 LINE-IN cable to connect the headphone output socket on your portable audio player to **B**.
- 2 Press **PLAY** on your portable audio player.
- 3 Press **MP3 LINE-IN** to listen to the playback.

DOCK (optional feature - not available in Europe)

- This is an advance feature that is compatible only with the Philips HTD7001 docking station (currently not available in Europe).

Need help?

User Manual

See the user manual that came with your Philips DVD Home Theatre System.

Online

Go to www.philips.com/welcome




2007 © Koninklijke Philips N.V.
All rights reserved.
12 NC 3139 245 25613
www.philips.com

Quick Start Guide



- 1 Connect
- 2 Set up
- 3 Enjoy

What's in the box?

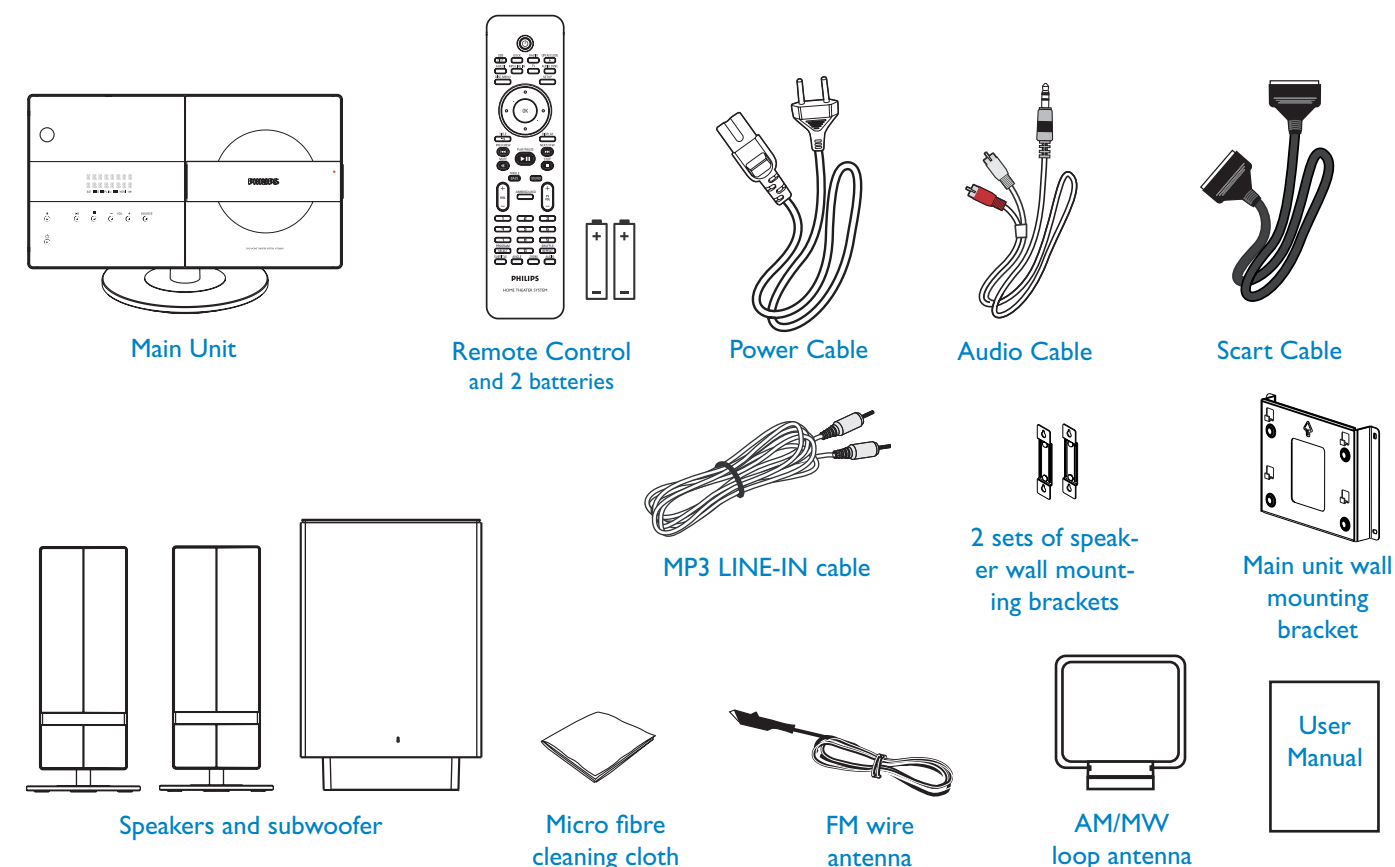


PHILIPS

1 Connect


A Placement

Proper speakers system placement is important to ensure optimum sound performance.

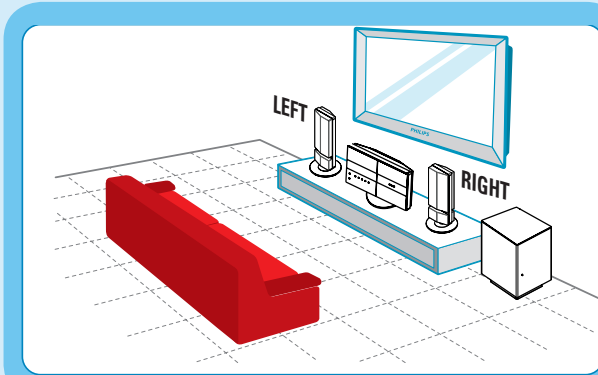


- 1 Place the speakers at the normal listening ear level, equal distance from the TV and face it straight ahead towards the listening area.
- 2 Place the subwoofer on the floor, at least one metre away from the TV.

B Remove rear cover from main unit

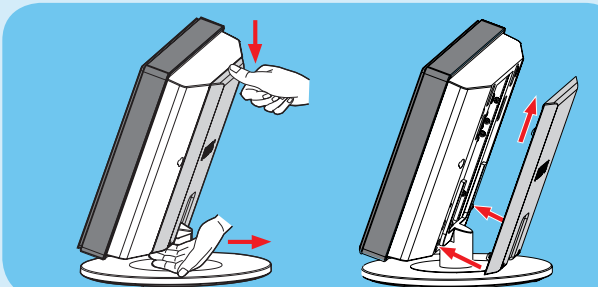


- 1 Carefully push down the rear cover from the top and detach it from the main unit.
- 2 After all the connections have been made (see the following sections for details), close the rear cover by fitting the catches into the holes and pushing upwards.

C Connect the speakers and main unit to subwoofer

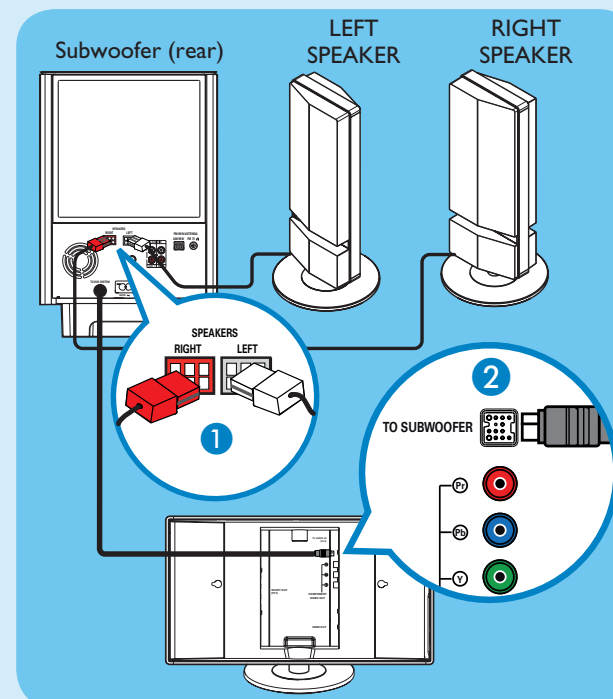

- 1 Connect the left speaker to the SPEAKER LEFT socket and the right speaker to the SPEAKER RIGHT socket at the rear of the subwoofer.
- 2 Connect the TO MAIN UNIT cable from the subwoofer to the TO SUBWOOFER socket at the rear of the main unit.


D Connect the main unit to TV

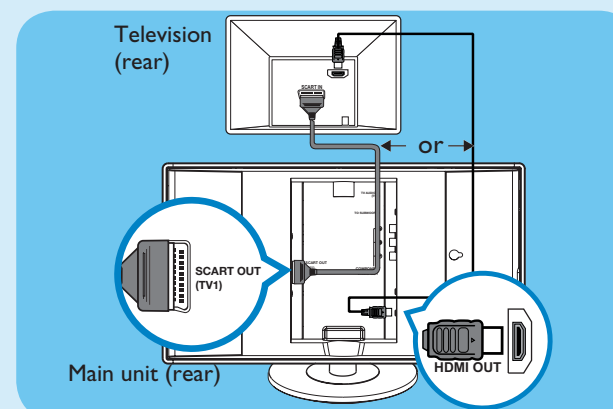

- Connect a scart cable (supplied) from the SCART OUT (TV1) socket on the main unit to the SCART IN socket on your TV.
- If your TV supports HDMI, connect the HDMI cable (not supplied) from the HDMI OUT to the HDMI IN socket on your TV.

E Connect the radio antennas and power cable


Keep the antennas away from the electronic devices to prevent unwanted interference.

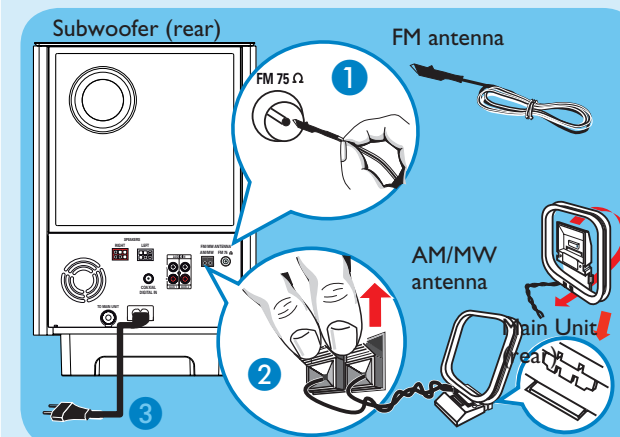

- 1 Connect the FM antenna to the inner pin of the FM 75 Ω socket. Extend the antenna for optimum reception.
- 2 Unfold the AM/MW loop antenna and fix the claw into the slot. Push the tabs and insert the wires into the AM/MW sockets.
- 3 Connect the power cable from subwoofer to the AC power outlet.

F Connect audio output from other device (optional)

Use a red and white audio cables (not supplied) to connect the AUDIO IN-AUX1 or AUX2 sockets on the subwoofer to the AUDIO OUT sockets on the connected device (for example, DVD recorder, VCR, Cable/Satellite Box).

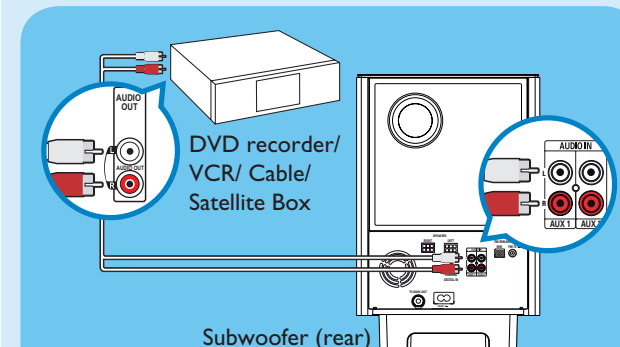

Note Press **AUX/DI** on the remote control to select 'AUX1' or 'AUX2' as the source you want to listen to.

2 Set up

A Finding the viewing channel

- 1 Press **⏻** (STANDBY ON) on the main unit to turn it on.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

Note To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **⏻** button) until you see the Video In channel.

B Setting up the speakers

When you turn on this unit for the first time, the speaker setup message appears on the TV.

- 1 Press **SETUP** on the remote control to enter 'General Setup Page'.
- 2 Press cursor down to highlight { **Ambisound Setup** } followed by pressing cursor right key.
- 3 Select one of the options below and press cursor right key.

{ Room Acoustics }

{ Hard } - for concrete or wooden walls.
{ Soft } - for curtains or an open space.


{ Speakers Distance }

{ Near } - 'X' is less than 1.2 metres (3.9 ft).
{ Default } - 'X' is between 1.2~2 metres (3.9~6.5 ft).
{ Far } - 'X' is more than 2 metres (6.5 ft).

{ Listening Position }

{ Near } - 'Z' is less than 2 metres (6.5 ft).
{ Default } - 'Z' is between 2~3 metres (6.5~9.8 ft).
{ Far } - 'Z' is more than 3 metres (9.8 ft).

Note The underlined options are the default setting.

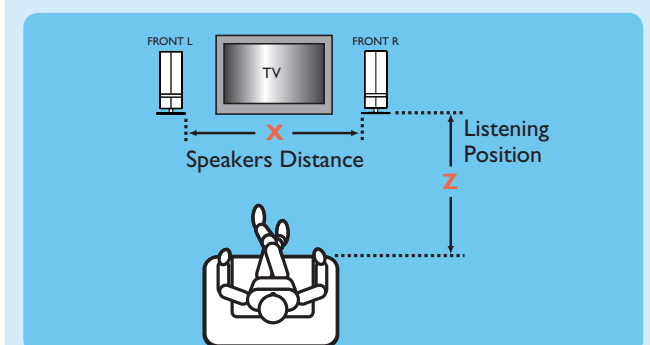

- 4 Select a most suitable predefined setting and press **OK** to confirm.
- 5 Once complete, press **SETUP** to exit the menu.

Note Refer to the accompanying user manual for other setup options.