

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

AZ1066



---

EN User manual

---

**PHILIPS**

# Contents

<b>1</b>	<b>Important</b>	<b>5</b>
<b>2</b>	<b>Your CD Soundmachine</b>	<b>6</b>
	Introduction	6
	What's in the box	6
	Overview of the main unit	7
<b>3</b>	<b>Get started</b>	<b>10</b>
	Install batteries	10
	Connect AC power	11
<b>4</b>	<b>Play a CD</b>	<b>12</b>
	Select a track	13
	Find a passage within a track	13
	Program play sequence	13
	Repeat play	14
	Shuffle play	15
<b>5</b>	<b>Play cassette recorder</b>	<b>16</b>
	Find a passage within a tape	16
	Record from CD	16
	Record from radio	17
<b>6</b>	<b>Use Learning function</b>	<b>18</b>
	Listen to the recorded content repeatedly	18
	Record your voice	19
	Compare your voice with the original recording	19
	Exit Learning mode	19

<b>7</b>	<b>Listen to radio</b>	<b>20</b>
<b>8</b>	<b>Troubleshooting</b>	<b>21</b>
<b>9</b>	<b>Product information</b>	<b>23</b>
<b>10</b>	<b>Notice</b>	<b>24</b>
	Recycling	25

# 1 Important

- Read and understand all instructions before you use the apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- Never remove the casing of this apparatus.
- Never look into the laser beam inside this apparatus.
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- Never place any objects other than discs into the disc tray/slot.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.
- The apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.

# 2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

## Introduction

With the CD Soundmachine you can

- play audio disc
- play cassette tape
- listen to FM/MW radio
- recording music/voice to tape.
- You can also enhance the sound with the Dynamic Bass Boost feature.


---

## What's in the box

Check and identify the contents of the package:

- CD Soundmachine
- AC power cord
- User Manual

# Overview of the main unit

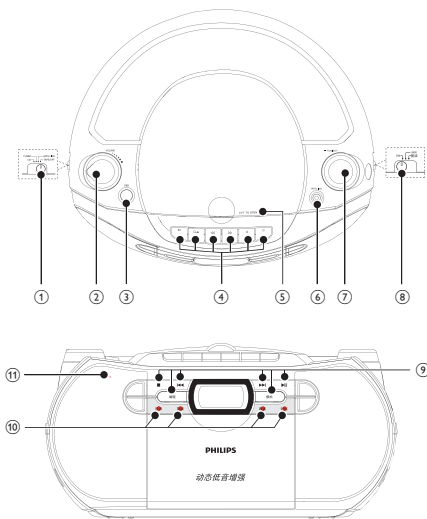

## ① Source selector: **CD, TUNER, MP3 LINK, TAPE/OFF**

- Select source: CD, radio, MP3 or Tape
- Switch to standby mode







## ② **VOLUME**

- Adjust volume level

### ③ **DBB**

- Turn the bass enhancement on/off

### ④ **Cassette recorder buttons**

-  Pause play or record
-  Stop cassette play or record  
Open the cassette holder
-  Fast forward
-  Fast rewind
-  Start cassette play
-  Start cassette record

### ⑤ **LIFT TO OPEN**

- Open/Close the CD compartment

### ⑥ **MP3 LINK**

- Socket for audio input

### ⑦ **TUNING +/-**

- Tune to radio stations

### ⑧ **FM/MW/复读**

- Select radio band: FM or MW
- Switch to Repeat mode.

### ⑨ **CD buttons**

- 

Stop CD play

Erase a CD program

- 

Select the previous/next track

Fast search backward/forward within the current track

- 

Start or pause CD play

- 模式

Select a play mode: REPEAT or SHUFFLE

- 编程

Program tracks and browse the program

## ⑩ Repeat function buttons

- 复读

Repeat the previous 120 seconds' CD or tape content

- 跟读

Record voice

- 对比

Play the recorded voice

Play both the recorded voice and repeat content for comparison

- 放音

Cancel repeat and start playing CD or tape

## ⑪ Built-in microphone



# 3 Get started



## Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:


Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

## Install batteries

- 1 Open the battery compartment.

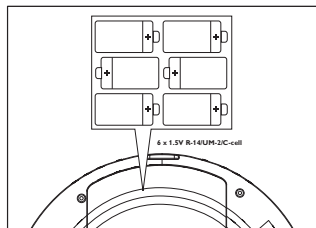

- 2 Insert 6 x 1.5V R14/UM-2/C-cell batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



## Tip

- If you want to save battery life, use the supplied power cord.

# Connect AC power




## Warning

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.



## Note

- Install the unit near the power supply socket and where the AC power plug can be easily reached.

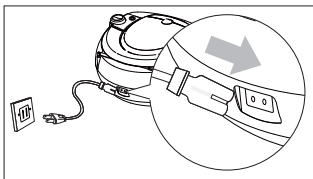

- 1 Connect the power cord to the **AC MAINS~** socket on the CD Soundmachine and to the power supply socket.

- To switch the CD Soundmachine off completely, disconnect the power cord from the power supply socket.



## Tip

- To save energy: After use, set the source selector to **OFF**. To turn off the CD Soundmachine completely, disconnect the plug from the power supply socket.

## 4 Play a CD



### Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio:

- CDs
- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)

- 1 Switch the source selector to CD.
- 2 Lift the lid of the CD compartment.
- 3 Insert a CD with the printed side facing up.
- 4 Close the CD lid gently.  
↳ The total number of tracks is displayed.
- 5 Press ►|| to start play.  
↳ [►] is displayed.



- To pause CD play, press ►||.
- To resume CD play, press ►|| again.
- To stop CD play, press ■.

## Select a track

- 1 During play, press **|◀▶|** to select a track.

## Find a passage within a track

- 1 During play, press and hold **|◀▶|**.  
↳ The CD is played at high speed and with reduced volume.
- 2 Release **|◀▶|** to resume normal play.



Tip

- When search reaches the end of the last track, the CD stops.

## Program play sequence

You can store up to 20 tracks in the desired sequence.

- 1 In stop mode, press **编程** to start to program play sequence.  
↳ [PROG] and [00] are displayed.



- 2 Press **|◀▶|** to select a track.
- 3 Press **编程** to store the track.
- 4 Repeat steps 2 to 3 to select and store all tracks.  
↳ When all 20 tracks are stored, no more tracks can be selected and the display shows [---].

## 5 To play program, press ►||.

- In stop mode, press 编程 repeatedly to browse stored tracks.
- To cancel program, press ■ twice.



Tip

- When program play stops, the CD Soundmachine returns to normal play. To play program again, repeat steps 1 to 5.

---

## Repeat play

You can repeat a track, a disc, or a program.

- [↺] – plays the current track continuously
- [↺ ALL] – repeats the entire CD/program

### 1 During play, press 模式 repeatedly until the display shows the repeat icon.

- Repeat one track.



- Repeat the entire CD.



- To stop repeat play, press 模式 repeatedly until the repeat icon is no longer displayed.

## Shuffle play





You can play all tracks in random order.

- 1 During play, press 模式 repeatedly until the display shows the shuffle icon.





- To stop shuffle play, press 模式 again.

# 5 Play cassette recorder

- 1 Switch the source selector to **TAPE/OFF**.
- 2 Press  to open the cassette holder.
- 3 Insert a cassette tape with the full reel on right side, and then close the cassette holder.
- 4 Press  to start play.
  - To pause play, press .
  - To stop the play, press .






---

## Find a passage within a tape






- 1 During stop, press  to search for a desired passage in a tape.
- 2 To stop fast search, press .

---

## Record from CD

- 1 Switch the source selector to **CD**.
- 2 Insert a CD with the printed side facing up.
- 3 If you want to record tracks in the desired sequence, program the desired tracks. (See 'Program play sequence' section)
- 4 Press  to open the cassette holder.
- 5 Insert a blank cassette, and close the holder.
- 6 Press  to start to record.
  - To pause, press .
  - To resume, press  again.
  - To stop, press .

## Record from radio

- 1 Switch the source selector to **TUNER**.
- 2 Tune to a radio station.
- 3 Press  to open the cassette holder.
- 4 Insert a blank cassette with the full reel on the right side, then close the holder.
- 5 Press  to start to record.
  - To pause, press .
  - To resume, press  again.
  - To stop, press .



## 6 Use Learning function

When you are listening to CD or tape, you can let the CD soundmachine to play repeatedly the last played 120 seconds' content. You can also record down your own voice for comparison. This is especially useful for language learning or whatever.

- 1 Switch the source selector to **CD** or **TAPE/OFF**.
- 2 Set **FM/MW/复读** switch to 复读 mode.
- 3 Press ►|| or ◀ to start play.
  - ↳ The red light under the 放音 button illuminates.
  - ↳ The CD soundmachine starts recording what is played onto its built-in memory. Maximum recording length is 120 seconds.

---

### Listen to the recorded content repeatedly

- 1 Press 复读.
  - ↳ The red light under 复读 button illuminates.
  - ↳ CD or Tape stop playing. It plays the recorded content repeatedly.
- 2 To pause, press 复读.
  - To resume, press 复读 again.



Tip

- if you want the CD soundmachine to start record on other position, play the source at the position you want and then press 放音 to start the recording again and replace the previous recording.

## Record your voice



### Note

- To ensure recording quality, keep the distance between you and the microphone within 30cm.
- The maximum recording length is also 120 seconds.

- 1 Press 跟读.  
↳ The red light under the 跟读 button illuminates.
- 2 Speak/sing to the built-in microphone which is located on the top side of the left speaker.
  - To erase what's recorded, press 跟读 again.
 Speak/sing to the microphone to record new content.

## Compare your voice with the original recording

- 1 Press 对比 briefly.
  - ↳ The red light under the 对比 button illuminates. It plays the record of your voice repeatedly.
  - ↳ To pause, press 对比. Press 对比 again to resume repeatedly playing.
- 2 Press 对比 for more than 3 seconds.
  - ↳ It plays both the recorded voice and the original recording repeatedly.

## Exit Learning mode

To stop Repeat, recording or comparing, press 放音.

↳ CD or Tape resume playing.

To exit Learning mode

- 1 Switch FM/MW/复读/ to **FM** or **MW** position.

# 7 Listen to radio

- 1 Switch the source selector to **TUNER**.
- 2 Switch **BAND** to **FM** or **MW**.
- 3 Turn **TUNING +/-** to find a station.



Tip

- To improve FM reception, you can extend, incline or turn the telescopic antenna for best reception.
- To improve MW reception, turn the CD Soundmachine to face a different direction.

# 8 Troubleshooting



## Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the <brand> web site ([www.<brand>.com/support](http://www.<brand>.com/support)), or contact <brand> (see Contact information). When you contact <brand>, ensure that the apparatus is nearby and the model number and serial number are available.

## No power

- Ensure that the power cord is connected securely.
- Ensure that there is power at the power supply socket.
- Ensure that the batteries are installed correctly.

## No sound

- Adjust the volume.
- Check if it's in Repeat mode.
- Ensure that the track played is of a compatible format.

## Display does not function properly./No reaction to operation of any of the controls.

- 1 Disconnect the AC power cord.
- 2 Connect the AC power cord after a few seconds.

## Cannot play disc

- Ensure that the disc label is inserted with the printed side facing up.
- Wipe the disc with fibre cleaning cloth from the centre to the edge in a straight line.
- This disc may be defective. Play another disc.
- Ensure that the CD is a finalised CD/CD-R/CD-RW.
- Ensure that the laser lens is clean.
- Ensure that the CD is not encoded with copyright protection technologies.

### **The CD skips tracks**

- Ensure that the CD is not damaged or dirty.
- Ensure that program/shuffle mode is deactivated.

### **Poor cassette sound quality**

- Ensure that heads in the cassette holder are clean.
- Ensure that a NORMAL (IECI) cassette tape is used for record.

### **Cassette does not work for record**

- Ensure that cassette tabs are not broken.
- Check if it's in Repeat mode. If yes, exit Repeat mode first. (See 'Play Repeat function' section).

# 9 Product information



## Note

- Product information is subject to change without prior notice.

Dimensions (Main unit) (W × H × D)	291 × 146 × 243 mm 11.5 × 5.8 × 9.6 inches
Weight (Main unit)	1.8 kg 3.8 pound
Power supply	DC 9V 1.5 A AC 220V/50Hz
Power consumption	Active 12W Standby < 2W
Power output	2 × 1W RMS
Operating temperature range	-10°C - +50°C 14°F - 122°F

# 10 Notice

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

**This apparatus includes this label:**



Any changes or modifications made to this device that are not expressly approved by Philips Consumer Electronics may void the user's authority to operate the equipment.



Warning

- Keep this apparatus away from direct sunlight, naked flames or heat.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

---

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.





© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

AZ1066\_93\_UM\_V1.0\_EN