

Register your product and get support at
www.philips.com/welcome

AE5230



EN User manual

PHILIPS

Contents

1	Important	4
	Safety	4
	Notice	5
2	Your FM/DAB radio	7
	Introduction	7
	What's in the box	7
	Overview of the main unit	8
3	Get started	10
	Place the radio	10
	Prepare FM/DAB antenna	10
	Connect power	10
	Turn on	12
	Adjust the volume level	12
4	Listen to FM radio	13
	Tune to FM radio	13
	Store FM stations manually	13
	Select a preset FM radio station	13
5	Listen to DAB radio	14
	Tune to DAB radio	14
	Change DAB station	14
	Scan DAB radio stations	15
	Display station information	15
	Store DAB stations manually	15
	Select a preset DAB radio station	16
	Use DAB menu	16
6	Product information	18
	Tuner (FM)	18
	Tuner (DAB)	18
	General information	18
7	Troubleshooting	19
8	About DAB	20

1 Important

Safety

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this unit.
- Never lubricate any part of this unit.
- Place this unit on a flat, hard and stable surface.
- Never place this unit on other electrical equipment.
- Only use this unit indoors. Keep this unit away from water, moisture and liquid-filled objects.
- Keep this unit away from direct sunlight, naked flames or heat.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2 Your FM/DAB radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy both FM radio and Digital Audio Broadcasting (DAB) radio.

 
Digital Audio Broadcasting (DAB), is a way of broadcasting radio digitally through a network of transmitters. It provides you with more choice, better sound quality and more information.



What's in the box

Check and identify the contents of your package:

- Main unit
- AC adaptor
- User manual

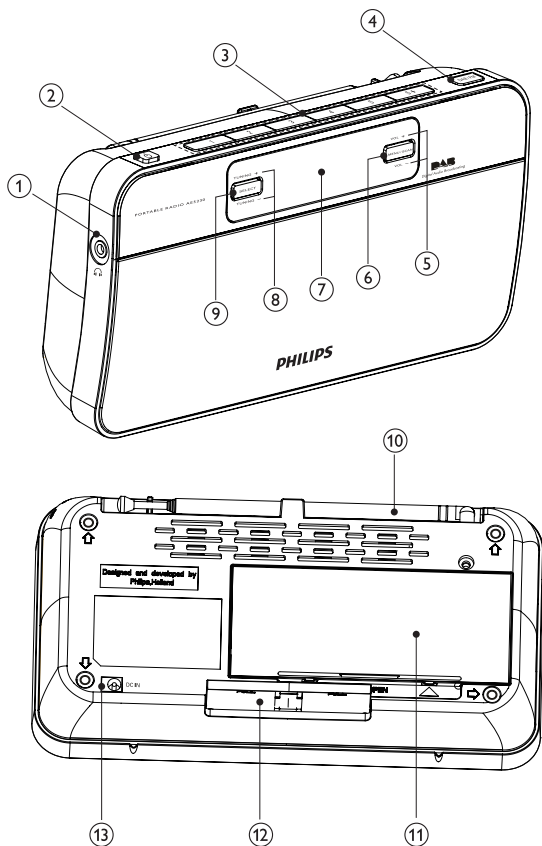Overview of the main unit



- ① 
 - Jack for the headphone.
- ② 
 - Turn on or off the unit.
- ③ **1 - 5+**
 - Numeric keypads: Set/select a preset radio station.
- ④ **DAB/FM**
 - Select DAB or FM radio.
- ⑤ **VOL+/-**
 - Adjust volume.
- ⑥ **MENU/SCAN**
 - Select DAB menu option.
 - Scan DAB radio stations.
- ⑦ **Display panel**
 - Display current status.
- ⑧ **TUNING +/-**
 - FM mode: Tune to a radio station.
 - DAB mode: Navigate DAB station list/menu.
- ⑨ **SELECT**
 - Display DAB station information.
 - Confirm DAB station/menu selection.
- ⑩ **FM/DAB antenna**
 - Improve FM/DAB reception.
- ⑪ **Battery compartment door**
- ⑫ **Retractable stand**
 - Provide stand support.
- ⑬ **DC**
 - Jack for the AC adaptor(supplied).

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Place the radio

To place the unit on a flat, stable surface, pull out the retractable stand from bottom of the unit at back-side.

Prepare FM/DAB antenna

For optimal reception, fully extend and adjust the position of the FM/DAB antenna.



Tip

- Position the antenna as far away as possible from your TV, VCR or other radiation source to prevent interference.

Connect power

You can use this radio player on AC power or battery power.

Battery Life (Approx. hours)

When using	FM	DAB
alkaline R6 (size AA)	9	9

Option 1: AC power



Caution

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Use only the AC adaptor specified by the manufacturer or sold with this unit.



Note

- The type plate is located on the back of the apparatus.

- 1 Connect one end of the AC adaptor to the **DC** socket on the main unit.

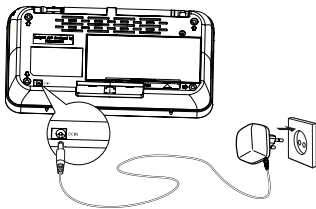

- 2 Connect the other end of the AC adaptor to the wall outlet.


Option 2: Battery power



Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the unit is not to be used for a long time.

 - 1 Open the battery compartment at the back of the unit.
- 2 Insert 6 R6/UM-3/AA size batteries (not supplied) with correct polarity (+/-) as indicated, then close the battery compartment.

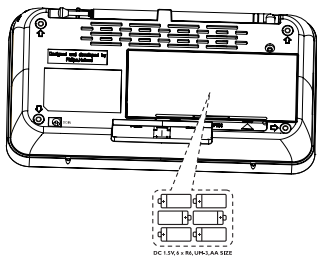

3 The unit is ready to operate.



Tip

- “Battery low” message is shown when the battery power is low. Change batteries to ensure normal operation.



Note

- Batteries contain chemical substances, so they should be disposed of properly.

Turn on

- 1 Press .
 ↳ The unit switches to the last selected source.

To turn off the unit:

- 1 Press again.

Adjust the volume level

- 1 During play, press **VOL+/-** to increase/decrease the volume level.

4 Listen to FM radio

Tune to FM radio

- 1 Press **DAB/FM** repeatedly to select FM radio.
- 2 Press **TUNING +/-** to tune to a radio station.

Search FM radio stations

- 1 Tune to FM radio.
- 2 Press and hold **TUNING +/-** for more than two seconds to start searching stations.
↳ The FM tuner tunes to a station with strong reception automatically.
- 3 Repeat step 1 if necessary until you find the desired station.

Store FM stations manually

You can program a maximum of 10 preset FM radio stations.

- 1 Tune to your desired FM station.
- 2 To preset number 1 - 5, press and hold the numeric keypad 1 - 5 for two seconds;
To select the preset number 6 - 10, press and hold the numeric keypads 5+ simultaneously with other keypad (e.g. 5+ with 1 for 6; 5+ with 5 for 10) for two seconds.
↳ The preset number of the saved station appears.



Note

- To overwrite a preset station, store another station in its place.

Select a preset FM radio station

 
- 1 Press **DAB/FM** repeatedly to select FM radio.
- 2 Press numeric keypads to select a preset number.

5 Listen to DAB radio

Tune to DAB radio

When you enter the DAB mode for the first time, the radio player automatically scans DAB radio stations. Then station list is retained in memory so the next time the radio player is switched on, the station scan does not take place.

- 1 Press **DAB/FM** repeatedly to select DAB radio.
↳ A bar graph indicates the progress of the search and the number of stations found increase as the scan progresses.

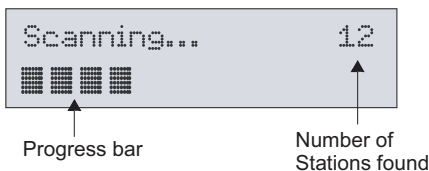

- (A) When scan is completed, the stations are listed in numerical then alphabetic order.
↳ First available station is played.
- (B) If there is no DAB coverage currently available
↳ "Station list" is displayed.
 - ① Change the location or adjust antenna.
 - ② Press **SELECT** to scan again.

Change DAB station

- 1 Tune to a DAB station.
- 2 Use **TUNING +/-** to navigate through available stations.
- 3 Press **SELECT** to choose a station.

Scan DAB radio stations

- 1 When playing a DAB station, or the current station is not available, press and hold **MENU/SCAN** for more than two seconds.
 - ↳ The radio player scans all available DAB radio stations and broadcasts the current station.



Tip

- New stations and services will be added in the DAB broadcast. To make new DAB stations and services available on your radio player, do scan on a regular base.

Display station information

- 1 Tune to a DAB radio station.
- 2 Press **SELECT** repeatedly to scroll through the following information (if available):
 - ↳ Dynamic label segment (DLS)
 - ↳ Program type (PTY)
 - ↳ Ensemble Name
 - ↳ Channel and frequency
 - ↳ Signal error rate
 - ↳ Bit rate and audio status
 - ↳ Time
 - ↳ Date

Store DAB stations manually

You can store a maximum of 10 preset DAB radio stations.

- 1 Tune to your desired DAB station.
- 2 To preset number 1 - 5, press and hold the numeric keypad 1 - 5 for two seconds;
To select the preset number 6 - 10, press and hold the numeric keypads 5+ simultaneously with other keypad (e.g. 5+ with 1 for 6; 5+ with 5 for 10) for two seconds.
 - ↳ The preset number of the saved station appears.



- To overwrite a preset station, store another station in its place.

Select a preset DAB radio station

- 1 Press **DAB/FM** repeatedly to select DAB radio.
- 2 Press numeric keypads to select a preset number.

Use DAB menu

- 1 In DAB mode, press **MENU/SCAN** to enter the DAB menu.
- 2 Press **TUNING +/-** to scroll the menu options:
 - **[Station list]**
 - **[Main menu]**
 - **[Station order]**
 - **[DRC]** (dynamic range control)
 - **[Manual tune]**
 - **[Full scan]**
 - **[Local scan]**
- 3 To select an option, press **SELECT**.
- 4 Repeat step 2-3 if sub-option is available under one option.

[Main menu]

- **[Info]** (Software version of the radio player is shown.)
- **[Factory reset]** (Resets all the settings of this radio player to factory default.)
- Press 'SELECT' to confirm rest.

[Station order]

This function enables you to define how the stations are arranged when scrolling the stations list.

- **[Alphanumeric]** This is the default setting. The stations are arranged in alphabetical order.
- **[Valid]** This option lists valid stations first, alphanumerically, then off-air station.
- **[Ensemble]** This option lists groups of stations that are broadcast together on the same ensemble (i.e.: BBC or South Wales local).

[Manual tune]

It is possible to manually tune to a specific channel/frequency and add this to the station list.

This function can be used to obtain the optimum reception for a specific channel/frequency, taking into account the position of the aerial.

- ➡ A rectangle will be displayed on first line of the display. The position of this rectangle indicates the signal strength (the further towards the right, the greater the signal strength).
- ➡ The second line of the display shows the selected channel and its frequency. The first line of the display shows a rectangle.



Tip

- Adjust the position of the antenna to obtain the optimum signal strength.

[DRC]

Dynamic range control (DRC) adds or removes a degree of compensation for the differences in the dynamic range between radio stations.

- **[DRC high]** (DRC is switched on; the default setting recommended for noisy environment.)
- **[DRC low]** (DRC is set to half normal level.)
- **[DRC off]** (DRC is switched off.)

[Full scan] and [Local scan]

Local scan is used to perform a small range of DAB radio search (in UK).

Full scan is used to perform a wide range of DAB radio search (outside UK).



Note

- If no button is pressed within seven seconds, the menu exits.

6 Product information



Note

- Product information is subject to change without prior notice.

Tuner (FM)

Tuning Range	87.5 - 108MHz
Tuning grid	50KHz

Tuner (DAB)

Tuning Range	174.928MHz - 239.200MHz (Band III)
--------------	------------------------------------

General information

AC/DC adaptor	
- Brand name	PHILIPS
- Model	OH-075V0500T-SAA
- Input	230-240V~, 50Hz, 35mA
- Output	7.5V \equiv 500mA
Operation Power Consumption	5W
Standby Power Consumption	<1W
Power output	0.3W (10% THD)
Battery power input	1.5V \times 6
Headphone output power	12mW \times 2 (32 ohm)
Dimensions	
- Main Unit (W \times H \times D)	317 \times 133 \times 90 mm
Weight	
- Main Unit	0.884kg

7 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site www.philips.com/welcome. When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the battery.

No sound

- Adjust the volume.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the antenna.

8 About DAB

About Digital Audio Broadcasting (DAB)

DAB digital radio is a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choice and information delivered in crystal clear, crackle-free sound quality.

– The technology allows the receiver to lock on to the strongest signal it can find.

– With DAB digital stations there are no frequencies to remember; and sets are tuned by station name, so there's no returning on the move.

What is a multiplex?

Digital radio operation is made up of a single block of frequencies called a multiplex. Each multiplex works within a frequency spectrum, such as Band III for DAB broadcasts.

DAB BROADCASTERS AND DLS

Each DAB broadcaster (or multiplex operator) also provides text and audio data services. Some programmes are supported by Dynamic Label Segments (DLS). This is data which you can read as scrolling text on your DAB radio display. Some stations transmit the latest news, travel, and weather, what's on now and next, website addresses and phone numbers.

For more information on digital radio coverage and services, please visit: www.drdb.org.

AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

1 Year free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen size less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for free replacement of faulty accessories.

8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexperienced repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only).
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

Technology Care Centre

1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:.....

Serial number:.....

Date of purchase:.....

Retailer:.....

Philips Consumer Electronics

a division of **Philips Electronics Australia Limited**
ABN 24 008 445 743,
Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after **1st January 2007**

NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller

Philips New Zealand Ltd.

✉ **P.O. Box 41.021**

Auckland

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

AE5230_79_UM_V1.0

