www.philips.com/welcome

DCM2020



EN User manual



Contents

1	Important Safety	4 4
	Notice	5
2	Your Micro Music System	7
	Introduction	7 7
	What's in the box	
	Overview of the main unit	8
	Overview of the remote control	9
3	Get started	11
	Connect speakers	11
	Connect FM aerial	11
	Connect power	11
	Prepare the remote control	12
	Turn on	12
	Set clock	12
	Demonstrate the features	13
	Store radio stations automatically	13
4	Play	13
	Basic play operations	13
	Play from disc	13
	Play from USB	14
	Adjust sound	14
5	Play from iPod/iPhone/iPad	15
	compatible iPod/iPhone/iPad	15
	Load the iPod/iPhone/iPad	15
	Charge the iPod/iPhone/iPad	16
	Listen to the iPod/iPhone/iPad	16
	Remove the iPod/iPhone/iPad	16
6	Listen to FM radio	17
	Tune to FM radio stations	17
	Program radio stations automatically	17
	Program radio stations manually	17
	Tune to a preset radio station	17
	Show PDS information	10

7	Other features Set sleep timer Set alarm timer Listen to external audio device Listen through headphone	18 18 18 19
8	Product information Specifications USB playability information Supported MP3 disc formats	20 20 20 21
9	Troubleshooting	21

1 Important

Safety







This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING:To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- Heed all warnings.
- Follow all instructions.
- Do not use this device near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.

- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the device.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Battery usage CAUTION to prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
 - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Devices shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

A

Warning

- · Never remove the casing of this device.
- · Never lubricate any part of this device.
- Never place this device on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug, or adapter to disconnect the device from the power.

Hearing safety

Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion

Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

Be sure to observe the following guidelines when using your headphones.

• Listen at reasonable volumes for reasonable periods of time.

- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

Mains fuse

This information applies only to products with a UK mains plug.

This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution: To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The making of unauthorized copies of copyprotected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

This apparatus includes this label:





Note

The type plate is located on the back of the unit.

2 Your Micro Music System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can:

- enjoy audio from discs, USB devices, iPod/ iPhone/iPad, and other external devices
- listen to radio stations

You can enrich sound output with these sound effects:

- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)

The unit supports these media formats:








What's in the box

Check and identify the contents of your package:

- Main unit
- Remote control
- 2 x speaker boxes
- FM antenna
- Rubber pad
- User manual
- Quick start guide

Overview of the main unit

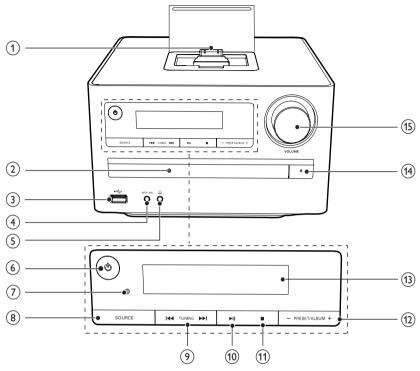

- 1 Dock for iPod/iPhone/iPad
- ② Disc compartment
 - Hold the disc.
- ③ ←
 - USB socket.
- (4) MP3 LINK
 - Connect external audio device.
- (5)
 - Headphone socket.
- (6) _(b)
 - Turn on the unit.
 - Switch to standby or Eco power standby mode.

(7) IR sensor

- Detect signals from the remote control (always point the remote control towards the IR sensor).
- 8 SOURCE
 - Select a source.
- 9 | ◀ / ▶ ▶ |
 - Skip to previous/next track.
 - Search within a track/disc.
 - Tune to a radio station.
- (10) **▶ II**
 - Start or pause play.
- (11)
 - Stop play.
 - Erase a program.

(12) - PRESET/ALBUM+

- Skip to previous/next album.
- Select a preset radio station.
- Navigate through iPod/iPhone/iPad menu.

(13) Display panel

Display current status.


14) **≜**

Open or close the disc tray.

(15) VOLUME

- Adjust volume.
- Adjust time.

Overview of the remote control

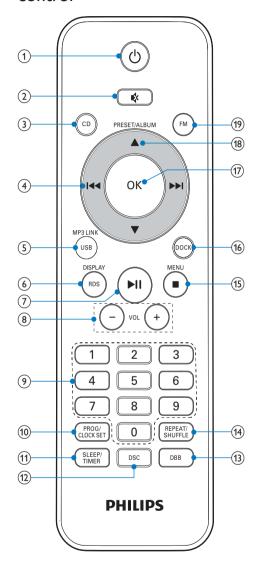

(1) _(j)

- Turn on the unit,
- Switch to standby or Eco power standby mode.

(2) ★

Mute/restore volume.

(3) CD

Select CD source.

(4) |**44**/**>>**|

• Skip to previous/next track,

Search within a track/disc.

• Tune to a radio station.

(5) MP3 LINK/USB

Select MP3 LINK or USB source.

(6) RDS/DISPLAY

 For selected FM radio stations: display RDS information.

Synchronize clock with RDS station.

Display play information.

⑦ ▶Ⅲ

Start or pause play.

(8) VOL +/-

Adjust volume.

9 Numeric keypad

• Select a track directly.

(10) PROG/CLOCK SET

Program tracks.

• Program radio stations.

Set clock.

(11) SLEEP/TIMER

Set sleep timer.

• Set alarm timer.

(12) DSC

Select a preset sound setting.

(13) DBB

 Turn on or off dynamic bass enhancement.

14 REPEAT/SHUFFLE

Select repeat play mode.

Select random play mode.

(15) **■** /MENU

Stop play.

Erase a program.

Access iPod/iPhone/iPad menu.

(16) DOCK

 Select the dock source for iPod/ iPhone/iPad.

(17) OK

• Confirm a selection.

Select FM stereo or FM mono.

(18) PRESET/ALBUM ▲ / ▼

• Skip to previous/next album.

• Select a preset radio station.

Navigate through iPod/iPhone/iPad menu.

(19) FM

• Select FM radio source.

3 Get started



Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. ______


Connect speakers



Note

- · For optimal sound, use the supplied speakers only.
- Connect only speakers with impedance that is the same or higher than the supplied speakers. Refer to the Specifications section of this manual.

Insert the speaker wires completely into the speaker input sockets on the back of the unit.

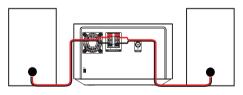


Connect FM aerial



- Tip
- For optimal reception, fully extend and adjust the position of the antenna.
- For better FM stereo reception, connect an outdoor FM antenna to the FM AERIAL socket.
- The unit does not support MW radio reception.

Connect the supplied FM antenna to the FM AERIAL socket on the back of the unit.

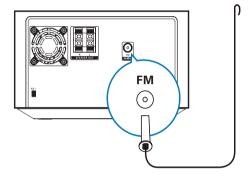


Connect power



Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC power cord, ensure that you have completed all other connections.

Connect the power cable to the wall outlet.

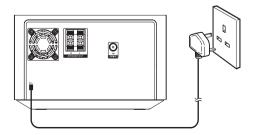

Prepare the remote control




Caution

Risk of explosion! Keep batteries away from heat. sunshine, or fire. Never discard batteries in fire.

To insert the remote control battery:

- Open the battery compartment.
- Insert 2 AAA batteries with correct polarity (+/-) as indicated.
- Close the battery compartment.

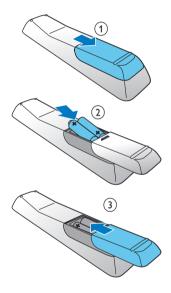



Note

- · If you are not going to use the remote control for a long time, remove the batteries.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed of properly.

Turn on

Press O.

→ The unit switches to the last selected source.

Switch to standby mode

Press O again to switch the unit to standby mode.

→ The clock (if set) is displayed.

To switch to Eco power standby mode:

Press and hold \circ for more than two seconds.

→ The backlight on the display panel turns off.

To switch between normal standby mode and Eco power standby mode:

Press and hold () for more than two seconds



Note

If no button is pressed over 15 minutes in standby mode, this device goes to Eco power standby mode automatically.

Set clock

- In standby mode, press and hold PROG/CLOCK SET for more than two seconds to activate clock setting mode.
 - → [CLOCK SET] (clock set) scrolls on the display, and then the time format [24H] and [12H] is displayed.
- Press ▲ / ▼ to select 24H or 12H, and then press PROG/CLOCK SET.
 - → The hour digits begin to blink.
- Press ▲ / ▼ to set hour, and then press PROG/CLOCK SET again.
 - → The minute digits begin to blink.
- Press ▲ / ▼ to set minute.

5 Press PROG/CLOCK SET to confirm the clock setting.



Note

- To exit clock setting mode without storing, press ■.
- If no button is pressed in 90 seconds, the system exits clock setting mode automatically.

Demonstrate the features

In the standby mode, press ■ until [DEMO ON] (demo on) is displayed.

- → The features of this micro system are displayed one by one.
- To turn off the demonstration, press
 again.

Store radio stations automatically

If no radio stations are stored, the unit can store radio stations automatically.

- 1 Turn on the unit.
- 2 Press FM.
 - □ [AUTO INSTALL -- PRESS PLAY --STOP CANCEL] (press ►II to start automatic installation, or press II to cancel) is displayed.
- 3 Press ►II.
 - → The radio stations with sufficient signal strength are stored automatically.
 - After all available radio stations are stored, the first stored radio station broadcasts automatically.

4 Play

Basic play operations

You can control play through following operations.

Key	Function
 ◀◀ / ▶▶	To select a track or file.
	Press and hold to fast-forward/
	fast-backward the track during
	playback, then release to resume
	play.
►II	To pause/resume play during
	playback.
DISPLAY	To select different play information.
REPEAT/	To select a repeat play mode:
SHUFFLE	[REP] (repeat): play current track
	repeatedly.
	[REP ALL] (repeat all): play all
	tracks repeatedly.
	[SHUF](shuffle): play tracks
	randomly.
	Press repeatedly to return to
	normal play.

You can also use numeric keys to select a track directly.

Play from disc


- 1 Press CD to select the CD source.
- Press ≜ to open the disc compartment.
- 3 Place a disc with the printed side facing up, and then press **≜**.
 - → Play starts automatically.
 - If not, press I◀ / ▶▶I to select a track, and then press ▶ II.

Play from USB



Note

- Ensure that the USB device contains playable audio contents for supported formats.
- 1 Insert a USB device into the USB socket.
- 2 Press **USB** to select the USB source.
 - → Play starts automatically.
 - If not, press PRESET/ALBUM to select a folder and I◀◀ / ▶▶I to select a file, and then press OK to start play.

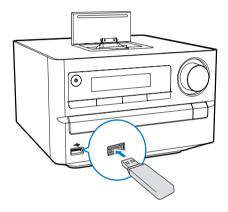

Adjust sound

During play, you can adjust volume through following operations.

Key	Function
VOL +/-	To increase/decrease the volume.
ı X	To mute/restore sound.
DBB	To turn on or off dynamic bass
	enhancement.
	If DBB is activated, [DBB] is
	displayed.
DSC	To select your desired sound
	effect:
	[POP] (pop)
	[JAZZ] (jazz)
	[ROCK] (rock)
	[FLAT] (flat)
	[CLASSIC] (classic)

5 Play from iPod/iPhone/iPad

When the iPod/iPhone/iPad is docked on this Micro System, you can listen to music from the speakers.



Note

• No audio output from the headphone jack in this situation.

compatible iPod/iPhone/iPad


The unit supports these iPod/iPhone/iPad models:

Made for:

- iPod touch (1st, 2nd, 3rd, and 4th generation)
- iPod classic
- · iPod with video
- iPod nano (1st, 2nd, 3rd, 4th, 5th, and 6th generation)
- iPod with color display
- iPod mini
- iPhone 3GS
- iPhone 3G
- iPhone
- iPhone 4
- iPad
- iPad 2

Load the iPod/iPhone/iPad

- Push the lock key to open the lid of the dock.
- 2 Insert your iPod/iPhone/iPad onto the

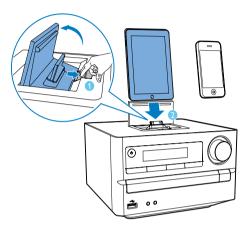


Install the rubber pad



Vote

- If your iPad 2 is not in case, you need to use the supplied rubber pad to keep it stable.
- Open the dock, and place the rubber pad onto the dock compartment as indicated.
- 2 Load your iPad 2.

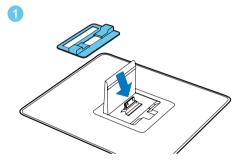





Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad starts charging automatically..



lote

 iPod with color display, iPod classic, and iPod with video are not compatible with dock charging.



Tip

 For certain iPod models, it may take up to a minute before the charging indication appears.

Listen to the iPod/iPhone/iPad

- 1 Press **DOCK** to select the iPod/iPhone/iPad source
- 2 Play the selected track on your docked iPod/iPhone/iPad.
 - To pause/resume the play, press ► II.

 - To scroll through the menu, press
 - **▲** / **▼**.
 - To confirm a selection, press OK to confirm.

Remove the iPod/iPhone/iPad

- 1 Pull the iPod/iPhone/iPad out of the dock
- 2 Flip down the lid to hide the dock.

6 Listen to FM radio

Tune to FM radio stations



Note

- Ensure that you have connected and fully extended the supplied FM antenna.
- 1 Press FM.
- Press and hold I◀ / ▶ for more than two seconds to tune to a radio station.
- When the frequency starts to change, release the button.
 - → The FM tuner tunes to a station with strong reception automatically.
- 4 Repeat steps 2-3 to tune to more stations. To tune to a weak station:

Press I◀◀ / ▶▶I repeatedly until you find optimal reception.

Program radio stations automatically



Note

 You can program a maximum of 20 preset radio stations.

In FM tuner mode, press **PROG/CLOCK SET** for more than two seconds to activate automatic programming.

- → [AUTO] (auto) is displayed.
- → The unit stores all the FM radio stations automatically and broadcasts the first available station.

Program radio stations manually



Note

- You can program a maximum of 20 preset radio stations.
- 1 Tune to a radio station.
- 2 Press PROG/CLOCK SET to activate programming mode.
- 3 Press ▲ / ▼ to select a number from 1-20 for this radio station, and then press PROG/CLOCK SET to confirm.
 - → The preset number and the frequency of the preset station are displayed.
- 4 Repeat steps 2-3 to program other stations.



Note

 To overwrite a programmed station, store another station in its place.

Tune to a preset radio station

Press ▲ / ▼ to select a preset number.

Show RDS information

Radio Data System (RDS) is a service that allows FM stations to show additional information. If you tune to an RDS station, an RDS icon and the station name are displayed.

- 1 Tune to an RDS station.
- 2 Press RDS repeatedly to scroll through the following information (if available):
 - → Station name
 - → Program type such as [NEWS] (news), [SPORT] (sport), [POP M] (pop music)...
 - → RDS clock
 - → Frequency

Synchronize clock with RDS

You can synchronize time shown on the unit with that on the RDS station.

- 1 Tune to an RDS radio station that transmits time signals.
- 2 Press RDS for over 2 seconds.
 - → [CT SYNC] is displayed and the unit reads RDS time automatically.
 - → If no time signal is received, [NO CT] is displayed.



 The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

7 Other features

Set sleep timer

When the unit is turned on, press **SLEEP/TIMER** repeatedly to select a time period (in minutes).

- When sleep timer is activated, zZ is displayed.
- To deactivate sleep timer, press SLEEP/TIMER again until zZ disappears.

Set alarm timer

This unit can be used as an alarm clock. You can select CD, iPod/iPhone/iPad, playlist, FM, or USB as alarm source.



Note

- Make sure that you have set the time correctly.
- In standby mode, press and hold SLEEP/ TIMER until [TIMER SET](timer set) scrolls on the display.
 - → [SELECT SOURCE] (select source) scrolls on the screen.
- Press **SOURCE** repeatedly to select a source: DISC, USB, TUNER, iPod/iPhone/iPad or playlist.
 - If iPod/iPhone/iPad playlist is selected as the alarm source, you need create a playlist called "PHILIPS" in your iPod/iPhone/iPad.
 - If no playlist called "PHILIPS" is created in the iPod/iPhone/iPad or no track is stored in the playlist, the unit switches to TUNER alarm source.
- 3 Press SLEEP/TIMER to confirm.
 - → The hour digits are displayed and begin to blink.

- 4 Press ▲ / ▼ repeatedly to set hour, and then press SLEEP/TIMER.
 - → The minute digits are displayed and begin to blink.
- 5 Press ▲ / ▼ to set minute, and then press SLEEP/TIMER again.
 - → VOL (volume) is displayed and begins to blink.
- 6 Press ▲ / ▼ to adjust volume, and then press SLEEP/TIMER to confirm.
 - → ⓐ is displayed.

Activate/deactivate alarm timer

In standby mode, press **SLEEP/TIMER** repeatedly to activate or deactivate the timer:

→ If timer is activated, ⊕ is displayed.



Note

- Alarm timer is not available in MP3 LINK mode.
- If DISC/USB/iPod/iPhone/iPad source is selected, but no disc is placed or no USB/iPod/iPhone/iPad connected, the system switches to the tuner source automatically.

Add your file to play list

- 1 Select one file.
- Press PROG/CLOCK SET to add this file into the playlist.
- 3 Repeat step 1-2 to add other files.
- 4 Press MENU to view the detailed information about the playlist.

Listen to external audio device

You can listen to an external audio device such as MP3 player through this unit.

- 1 Press MP3 LINK to select MP3 link source.
- 2 Connect the MP3 Link cable to
 - the MP3 LINK jack of the back of the unit
 - the headphone jack on the device
- 3 Start to play the device. (See the device user manual).

Listen through headphone

Plug a headphone into the Ω socket on the unit.



Note

 No audio output from the headphone jack when you listen to the docked iPod/iPhone/iPad. Please listen through the speakers instead.

8 **Product** information



· Product information is subject to change without prior

Specifications

Amplifier

Rated Output Power	$2 \times 10 W RMS$
Frequency Response	40 Hz-20 kHZ, ±3 dB
Signal to Noise Ratio	> 77 dB
MP3-Link Input	600 mV RMS 22 kohm

Disc

LaserType	Semiconductor
Disc Diameter	12 cm/8 cm
Support Disc	CD-DA, CD-R, CD-RW,
	MP3-CD, WMA-CD
Audio DAC	24 Bits / 44.1 kHz
Total Harmonic	<0.8% (1 kHz)
Distortion	
Frequency	4 Hz - 20 kHz (44.1 kHz)
Response	
S/N Ratio	>75 dBA

Tuner (FM)	
Tuning Range	87.5 - 108 MHz
Tuning grid	50 KHz
Sensitivity	
- Mono, 26dB S/N Ratio	< 22 dBf
- Stereo, 46dB S/N Ratio	< 43 dBf
Search Selectivity	> 28 dBf
Total Harmonic Distortion	< 2%
Signal to Noise Ratio	> 55 dB

Speakers

Speaker Impedance	6 ohm
Speaker Driver	10 cm full range
Sensitivity	$> 84 \text{ dB/m/W} \pm 4$
	dB/m/W

General information

AC power	220 - 240 V ~, 50/60 Hz
Operation Power	25 W
Consumption	
Eco Standby Power	< 0.5 W
Consumption	
USB Direct	Version 2.0 HS
Dimensions	
- Main Unit	
$(W \times H \times D)$	$200 \times 118 \times 210 \text{ mm}$
- Speaker Box	
$(W \times H \times D)$	140 x 224 x 144 mm
Weight	
- Main Unit	1.35 kg
- Speaker Box	0.965 kg x 2

USB playability information

Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)

 memory cards (requires an additional card reader to work with this unit)

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum
 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 64 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped.
 For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~320 (kbps), variable bit rates

9 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www. philips.com/welcome). When you contact Philips, ensure that the device is nearby and the model number and serial number are available.

No power

- Ensure that the AC power cord of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check if the speakers are connected correctly.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.

- Insert the battery with its polarities (+/signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and yourTV orVCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power cord has been disconnected.
- Reset the clock/timer.



