
 


Quick start guide

1 Charge your battery

This portable DVD player is designed with a built-in lithium battery to supply power to the player when you are on travel.

- 1 Slide the **OFF**  **ON** switch to the **OFF** position (charging of the DVD player only possible in the power-off mode).





- 2 Connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) to start charging.
 - The **CHG** indicator turns red.
 - When the battery is fully charged, the indicator turns off.
- 3 Disconnect the power adaptor cord (or the car adaptor) when the **CHG** indicator turns off.

Note:

– You can also connect the supplied power adaptor cord (or the car adaptor) to the player and AC mains (or the car cigarette lighter outlet) directly wherever possible.

2 Enjoy (Disc operation)

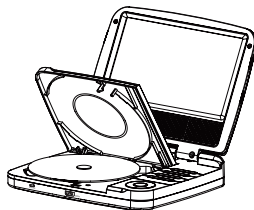

- 1 Open the lid of the player.
- 2 Slide the **OFF**  **ON** switch to **ON** to switch on the DVD player.
 - The **POWER** indicator turns on.
- 3 Slide **OPEN** on the player.
- 4 Remove the protective card (if any) and load a disc with the label side facing up.
- 5 Close the disc door.
 - Playback will start automatically. If not, press **▶II/OK**.
- 6 To stop playback, press **STOP**.

Note:

During play, you can:

- Press **OPTION** to select some play options: audio, subtitle, repeat, and time display.
- Press **◻** directly to adjust brightness of screen backlight to match lighting conditions.

2 Enjoy (AV OUT)

Connecting additional equipment (TV for example)

- 1 Connect the AV OUT socket on the set to the video and audio sockets on a TV as shown directly.
- 2 Switch on the TV and set to the correct video-in channel.
 - You can consult the owner's manual of your TV. (If your TV does not have Audio and Video inputs, you will need to purchase a RF modulator. Please consult your dealer.)

