
# Quick Start Guide



#### What's in the Box?

PHILIPS

You should find these items upon opening the box.

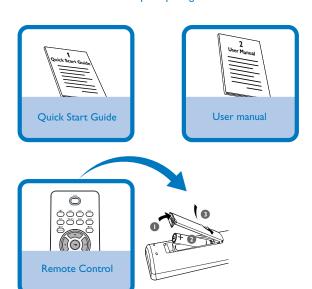






### **Connection**

- 1 Connect the speaker wires to the **SPEAKERS** terminals.
- 2 Connect the power cord of the system to the AC power outlet.

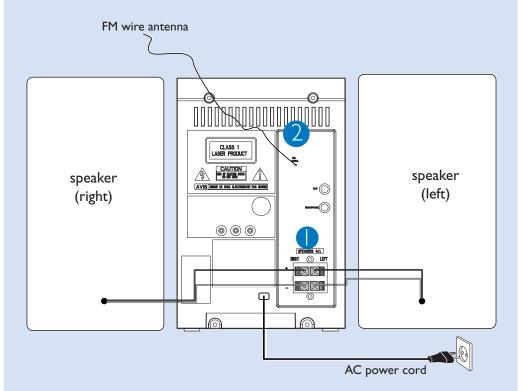

### Tip:

It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

## Step B Setup

### Setting the clock

- 1 In standby mode, press and hold **CLOCK/DISPLAY** on the remote control set for 2 seconds.
- 2 Press **PROG** to select 12-hour or 24-hour display.
- 3 Press CLOCK/DISPLAY to confirm.
  - → The clock digits for the hours flash.
- 4 Press **TUNING** I ►► I (► / ► on the remote control) to set the hours.
- 5 Press CLOCK/DISPLAY again.
  - → The clock digits for the minutes flash.
- 6 Press **TUNING** I ◆ ► ► ( / ► ► on the remote control) to set the minutes.
- 7 Press **CLOCK/DISPLAY** to confirm the time.

## Step C Enjoy

### Playing a disc

- 1 Select CD source.
- **2** Lift the CD door on the top of the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press down on **PULL TO OPEN** to close the CD door.
- 4 Press ► II to start playback.
- 5 Press to stop playback.



CLOCK/DISPLAY

PHILIPS



## Programming and tuning to radio stations

- 1 Select TUNER source.
- 2 Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press ALBUM/PRESET +/- until the desired preset station is displayed

### Tip:

Detailed playback features and additional functions are described in the accompanied owner's manual.

#### Notes for the remote control:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or AUX, for example).
- Then select the desired function (►II,
  I◄, ►I for example).



2008 © Koninklijie Philips Electronics N.V. All rights reserved. http://www.philips.com

