## Shortlist of brands

Switch ON your TV.



 
2 Press and hold the (SETUP) button for 5 seconds until the green Setup light a lights up.



**3** Look up the 4-digit code for your brand in the 'Shortlist of brands' in this Ouick start Guide.



Use the digit buttons to enter the code for your brand.



- Press and hold the button. Release it immediately as soon as the TV switches off.
  - · This step normally takes between 5 and 60 seconds.



If a button does not work as expected, press and hold that button. Release it







Brand 4-digit code	Brand 4-digit code
Akai0074	Medion1787
Basic Line0325	Mivar1857
Blue Sky0395	Panasonic2153
Carrefour0492	Philips2195
Daewoo0692	Proline2274
Emerson0917	Saivod2439
Firstline1008	Samsung2448
Haier1175	Sanyo2462
Hisense1249	Sharp2550
Hitachi1251	Sony2679
JVC1464	TCL2856
LG1628	TechniSat2873
Loewe1660	Toshiba3021
Magnum1709	Vestel3148



For brands not mentioned in this shortlist, refer to the brandlist in the back of the user manual or use '9999' as 4-digit code. Note that '9999' may result in a long setup (up to 15 minutes).

## **Important**

If you made a mistake:

- Press the button twice to exit setup. The green Setup light & turns off.
- Restart from the beginning.

© 2010 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice.

No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number:

3139 235 5256 3/SRU5110/86

December 2010

www.philips.com RTP/5210