

# Quick start guide




### What's in the Box?

You should find these items upon opening the box.

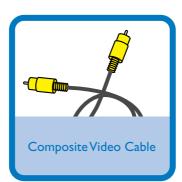

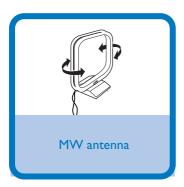


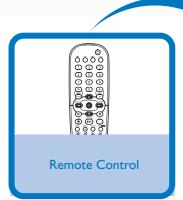







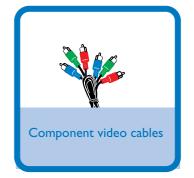






#### Tips

- See the User Manual for other TV connection options.
- It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.
- Connect the speaker and subwoofer cables.
- 2

Connect the MW antenna.

- Connect the composite video and audio cables to a TV.
- Connect the power cords of the system and TV.

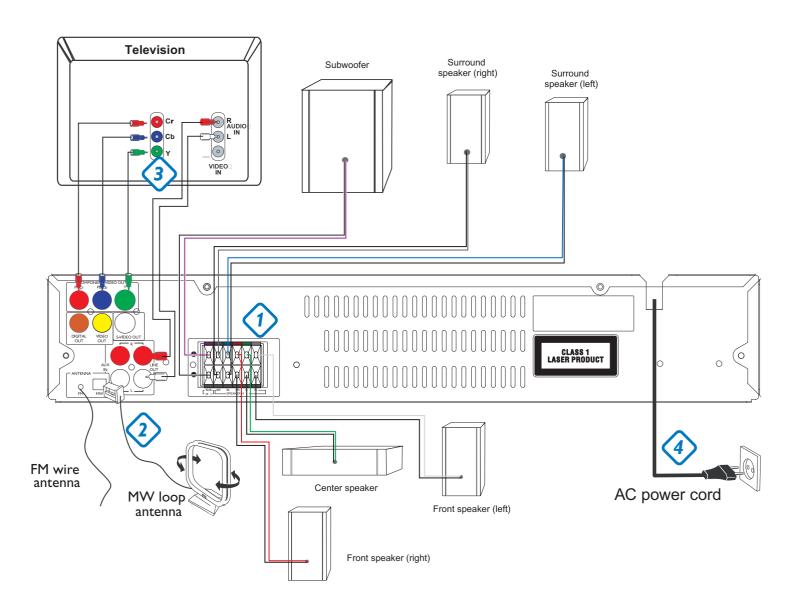





# Setting up the TV

Turn the **SOURCE** control knob to select DISC.

Turn on the TV and set it to the correct Video In channel.

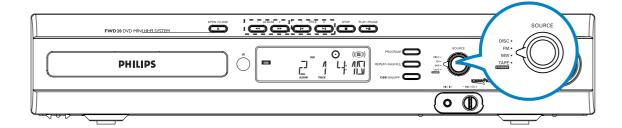


## Setting system menu options

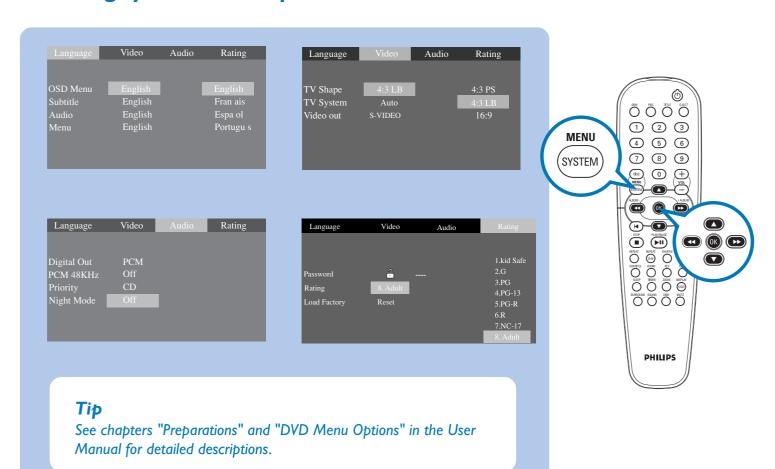



# Playing a disc

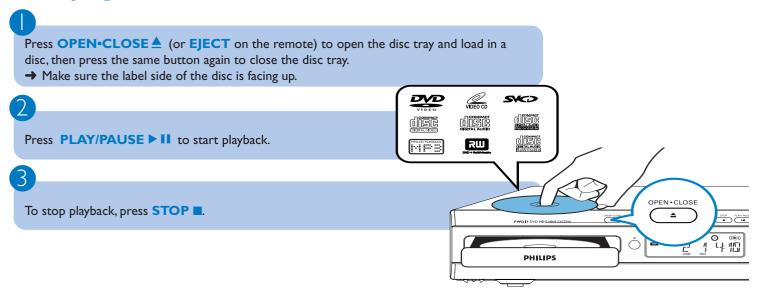

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



2005  $\bigcirc$  Koninklijie Philips Electronics N.V. All rights reserved.

http://www.philips.com

