
FWM143



What's in the Box?

You should find these items upon opening the box.



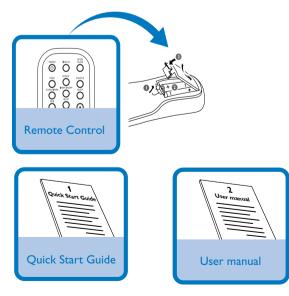




Connection


- 1 Connect the speaker wires to the **SPEAKERS** terminals.
- 2 After ensuring all the above connections have been made, connect the power cord of the system to the AC power outlet.

Tip It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.

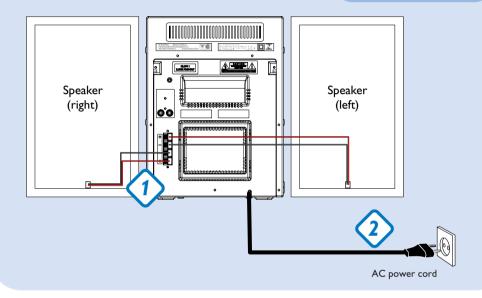

Setting the clock


- 1 In any mode, press **CLOCK/TIMER** twice. The clock digits for the hours flash.
- 2 Press TITILE-/+ I≪ / →→ (I≪ / →) on the remote) to set the hours.
- **3** Press **CLOCK/TIMER** again. The clock digits for the minutes flash.
- 4 Press TITILE-/+ I≪ / →> (I≪ / →) on the remote) to set the minutes.
- 5 Press CLOCK/TIMER to confirm the time.

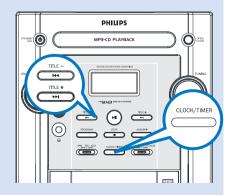



Playing a disc

- 1 Adjust the source selector to select CD source.
- 2 Press **OPEN/CLOSE** on the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press **OPEN**/ **CLOSE** to close the CD door.
- 4 Press I to start playback.
- **5** Press **STOP •** to stop playback.

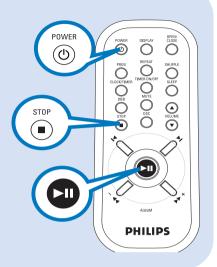

Tip Detailed playback features and additional functions are described in the accompany user's manual.



© Royal Philips Electronics N.V. 2007 All rights reserved.

http://www.philips.com

