

# Quick Start Guide




Step A **Connect**

Step B **Setup**


Step C **Enjoy**

## What's in the Box?


You should find these items upon opening the box.

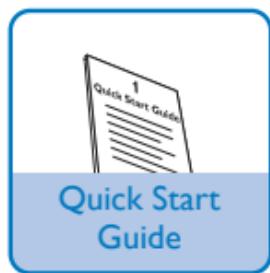

Quick Start  
Guide

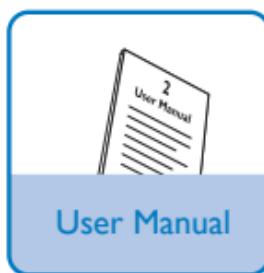

User Manual

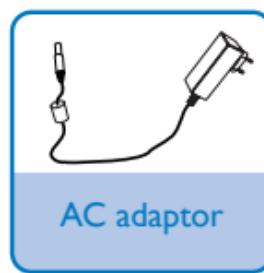


AC adaptor

**PHILIPS**

## Step A Connect

Connect the supplied AC adaptor to the set and to the AC outlet.

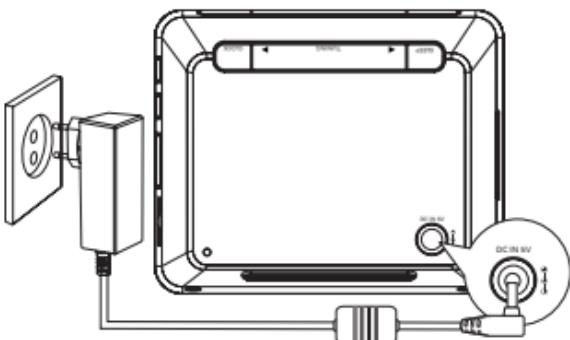

## Step B Setup

### Select on-screen display language

- 1 Press **MENU**.  
→ The home menu appears.
- 2 Select [Settings], then press **OK**.  
→ The setting menu appears.
- 3 Select [Language], then press **OK**.
- 4 Select an option, then press **OK** to confirm.
- 5 Press **MENU** to exit the setting menu.

## Step B Setup

### *Set time and date*

- 1 Press **MENU**.
- 2 Select [Settings] -> [Clock] -> [Set time], then press **OK**.
- 3 Press **▲▼** to set the hour, then press **OK** to confirm.
- 4 Press **▲▼** to set the minute, then press **OK** to confirm.
- 5 Select [Set date], then press **OK**.
- 6 Press **▲▼** to set the day, then press **OK** to confirm.
- 7 Press **▲▼** to set the month, then press **OK** to confirm.
- 8 Press **▲▼** to set the year, then press **OK** to confirm.
- 9 Press **MENU** to exit the setting menu.

### *Set the alarm timer*

- 1 Press **ALARM 1/ALARM 2**.  
→ The Alarm 1/ALarm 2 icon and the clock digits are displayed.
- 2 Press **▲▼** to set the hour, then press **OK** to confirm.

## Step B Setup

3

Press **▲▼** to set the minute, then press **OK** to confirm.

→ At the set time, the alarm sounds and the volume increase gradually.

### Note:

In photo or music mode, press and hold **ALARM**

**1/ALARM 2** to save the current photo/music as the alarm photo/music.

## Step C Enjoy

### Display clock

1

Press **MENU**.

2

Select [Clock], then press **OK**.

→ The current time and alarm status are displayed on a background of photos from the internal memory.

### Note:

- To change the clock position (5 positions available) on the screen, press **CLOCK**.
- You can change clock face (either analog or digital) by selecting [Settings] -> [Clock style] -> [Format].

## Step C Enjoy

### Listen to FM radio

- 1 Press **MENU**.
- 2 Select [Settings] -> [Auto tune], then press **OK**.
  - All available stations are programmed.
  - After all stations are stored, the first preset station automatically plays.
- 3 Press **▲▼** to select the desired radio station.

### View photos

- 1 Insert an SD/MMC card into the **SD/MMC** card slot.
- 2 Select [Photo] from the home menu.
  - Thumbnail previews of the pictures stored in the card are played.
- 3 Press **OK**.
  - A slideshow of the stored pictures starts from the picture selected.

#### Note:

- In photo or clock mode, press **TUNING ▲▼** to select previous/next photo; press **▲▼** to rotate clockwise/anti-clockwise.
- In photo mode, press **CLOCK** to display the clock for 10 seconds.

## Step C Enjoy

### Listen to music

- 1 Insert an SD/MMC card into the **SD/MMC** card slot.
- 2 Select [Music] from the home menu.
- 3 Press **▲▼** to select a folder/file.
- 4 Press **OK**.  
→ The file is played.

#### Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>



PDCC-SY/ZYL-0839