

GRAPHIC DEVELOPMENT MMD	
Product name	PhotoFrame
Project name	7FF2FPA PF QSG
Project no.	
Finishing	Folded sheet
Scale	1:1
Size Spreads	740 (W) x 203 (H) mm
Size	148 (W) x 203 (H) mm
Operator(s)	Howard Y6
Date amended	July 31, 2007
VERSION No.	EN0.1
APPROVAL	
QC Lithographer	
Product Manager	
Date Check	
ARTWORK DOCUMENT	
Paper	140gsm White ArtPaper
Numbers of colours	2Cx2C
Spotcolor	
<input type="checkbox"/> Cropping	
<input checked="" type="checkbox"/> Coating	silk coated
<input type="checkbox"/> Varnishing	
<input type="checkbox"/> Embossing	
<input checked="" type="checkbox"/> Cutterguide	
<input type="checkbox"/> Die-cut	
<input type="checkbox"/> Binding	
<input type="checkbox"/> Glue	

Set Auto on/off timer functions

Photo display can be enabled to turn on and off at pre-set times daily.

- Press **↑**, **↓** keys to select **SETTINGS**. Press **✓** key to enter.
- Press **↑**, **↓** keys to select **Auto On/Off**. Press **✓** key to enter.
- Press **↑**, **↓** keys to select **Set On/Off** to switch. Press **✓** key to set **On** or **Off**, and then press enter.
- Press **↑**, **↓** keys to set auto on or auto off time.
- Press **⏪** key to return main menu and exit **SETTINGS**.

CAUTION Auto on/off settings are erased if the photo frame is unplugged.

Frequently Asked Questions

Q Is the LCD screen touch-enabled?
A The LCD screen is not touch-enabled. Use the keys in the back of the frame to control digital photo display.


Q After copying photos, how can I check to see if the photos are already stored inside?
A The photos are copied after the screen confirms with "Finished" message. You may review them in the internal memory.

Q Can I switch between different photo slideshows by using different memory cards?
A Yes, photo frame will show the slideshow photos in the card currently connected.

Q Can I use photo frame to delete photos on memory card?
A Yes, it supports operations to delete photos on external devices.

Q Can I print photos from Digital photo display?
A No, it does not support direct photo printing.

Welcome to Philips!
 Register your product and get support at
 Online help: www.philips.com/welcome

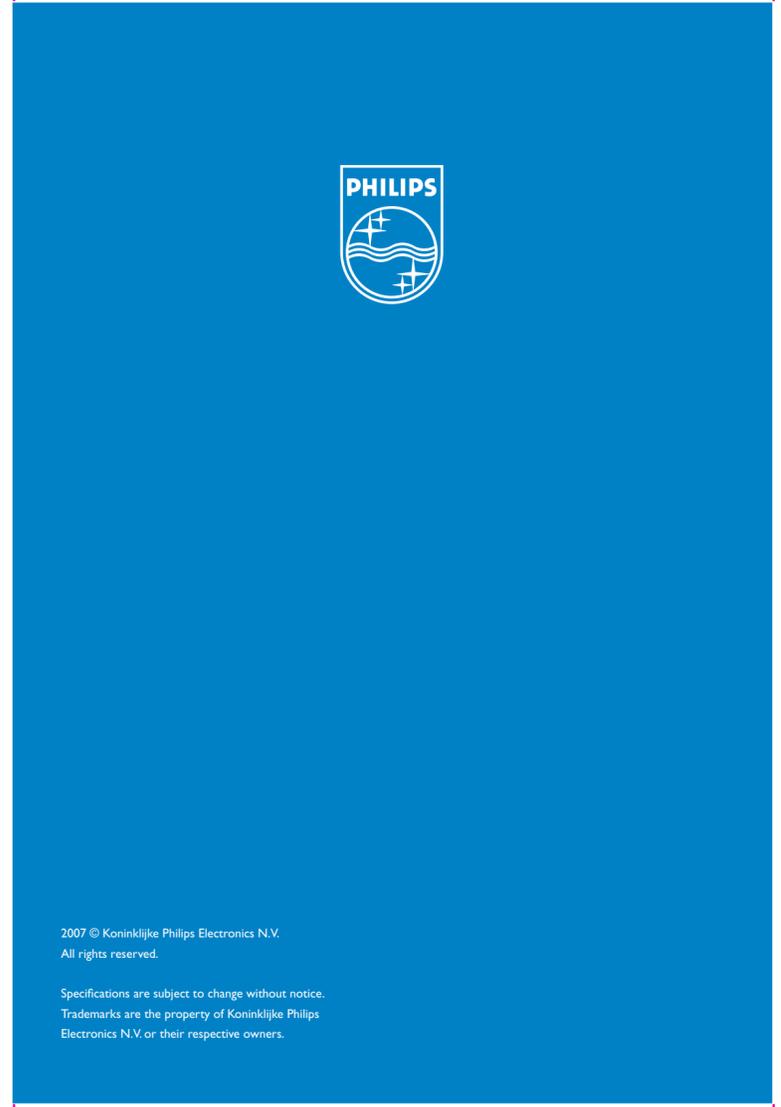

PhotoFrame 7FF2FPA

Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy


What's in the box

- Digital PhotoFrame
- Frame Stand
- Digital user manual
- Quick start guide
- Power adaptor
- USB cable

What else you'll need

- Power outlet
- (your photos on) Memory card
- OR
- (your photos on) PC


2007 © Koninklijke Philips Electronics N.V.
 All rights reserved.
 Specifications are subject to change without notice.
 Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

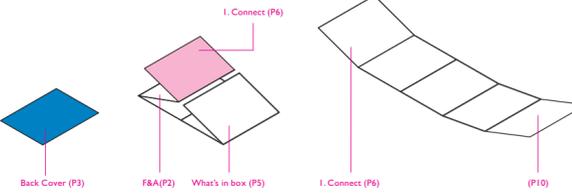

GRAPHIC DEVELOPMENT MMD	
Product name	PhotoFrame
Project name	7FF2FPA PF QSG
Project no.	
Finishing	Folded sheet
Scale	1:1
Size Speeds	740 (W) x 203 (H) mm
Size	148 (W) x 203 (H) mm
Operator(s)	Howard Y
Date amended	July 31, 2007
VERSION No.	EN0.1
APPROVAL	
QC Lithographer	
Product Manager	
Date Check	
ARTWORK DOCUMENT	
Paper	140gsm White ArtPaper
Numbers of colours	2Cx2C
Pantone 3005c	Black
Spotcolor	
Aftertreatment	
<input type="checkbox"/> Cropping	
<input checked="" type="checkbox"/> Coating	silk coated
<input type="checkbox"/> Varnishing	
<input type="checkbox"/> Embossing	
<input checked="" type="checkbox"/> Cutterguide	
<input type="checkbox"/> Die-cut	
<input type="checkbox"/> Binding	
<input type="checkbox"/> Glue	


1 Connect

- A Attach the Stand**
- B Connect the power adaptor**

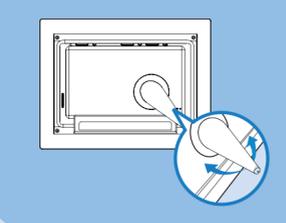

- Place the head of the stand in the socket.
- Rotate counterclockwise until the stand clicks into place.


CAUTION To help prevent damage, do not hold the frame by the stand. Grasp the frame firmly using two hands.

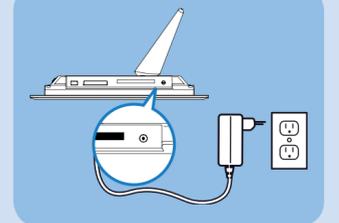

- Connect the supplied power adaptor to the photo frame and then plug it to a power outlet.


2 Setup

Locate the control keys
Control keys on the back of the frame and corresponding function icons on the front of the LCD display enable you to maneuver through the menus and customize your settings.

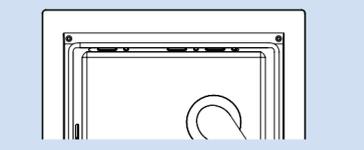


- Back/Left
- Next/Right
- Slide Mode
- Show/Hide menu
- Return
- Up
- Down
- Browse Mode
- Photo menu
- Clock
- Enter
- Main Menu
- Thumbnail Mode
- Add/Cancel photo

A Turn on the PhotoFrame

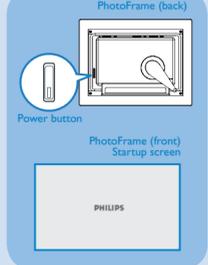

- Push the power button on the back of the frame for approximately **2 seconds**.

B Choose language

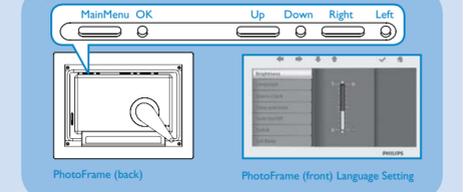

- Menu buttons are on the back of the photo frame. Icons indicate location of buttons found on the back of the panel.
- Press **Up**, **Down** keys to select **SETTINGS**. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select **Language** settings. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select. Press **Enter** key to set your language.
 - Use **Enter** key to return and exit **SETTINGS**.

3 Enjoy


View pre-stored photos



There are 3 view modes to choose from:
Browse Mode: manual viewing of photos one by one.
Thumbnail Mode: list of all photos.
Slide Mode: automatic, rotating display of photos.

- Press **Up**, **Down** keys to select **PHOTO**. Press **Enter** key to enter.
- Press **Up**, **Down** keys to select **Internal Memory**. Press **Enter** key to enter.
- Press **Up**, **Down** keys to select **Album**. Press **Enter** key to enter **Thumbnail Mode**, and press **Enter** key to enter **Slide Mode**, press **Slide Mode** key to enter **Browse Mode**.
- You may also enter **Slide Mode** directly by pressing **Slide Mode** key from the main menu.

View photos from your memory card

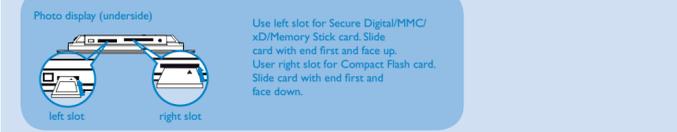

- Press **Up**, **Down** keys to select **PHOTO**. Press **Enter** key to enter.
- Press **Up**, **Down** keys to select inserted memory card. Press **Enter** key to enter.
- Press **Up**, **Down** keys to select **Album**. Press **Enter** key to enter **Thumbnail Mode**. After a few seconds, photos in your memory card will appear.
- Then press **Slide Mode** key to enter **Slide Mode**, press **Slide Mode** key to enter **Browse Mode**.

If the memory card is inserted before the power is ON, Slideshow will automatically start.

Copy or copy all photos from your memory card



- Copying photo mode**
- In the thumbnail mode, use **Left**, **Right** keys to select photo.
 - Press **Enter** key to add/cancel selected photos. After selecting, press **Enter** key to show photo menu.
 - Press **Up**, **Down** keys to select **Copy to** or **Copy all to** your memory card.
 - Press **Enter** key to copy.


Photo frame will keep a resized copy of the photo until it's internal memory is full (message shown).

Delete or Delete all photos from your memory card




- Deleting photo mode**
- In the thumbnail mode, use **Left**, **Right** keys to select photo.
 - Press **Enter** key to add/cancel selected photos. After selecting, press **Enter** key to show photo menu.
 - Press **Up**, **Down** keys to select **Delete** or **Delete all** from your memory card.
 - Press **Enter** key to delete.

Copy/ Delete photos by connecting to your computer

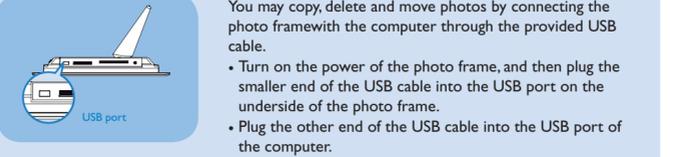

- You may copy, delete and move photos by connecting the photo framewith the computer through the provided USB cable.
- Turn on the power of the photo frame, and then plug the smaller end of the USB cable into the USB port on the underside of the photo frame.
 - Plug the other end of the USB cable into the USB port of the computer.

Set Time and Date functions

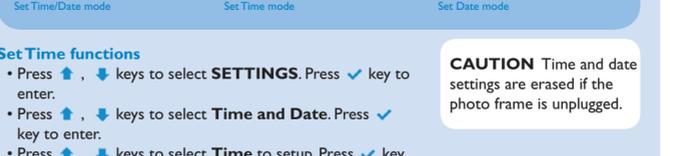

- Set Time functions**
- Press **Up**, **Down** keys to select **SETTINGS**. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select **Time and Date**. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select **Time** to setup. Press **Enter** key to set
 - hour and minutes.
 - Press **Enter** key to return main menu and exit **SETTINGS**.

CAUTION Time and date settings are erased if the photo frame is unplugged.

- Set Date functions**
- Press **Up**, **Down** keys to select **SETTINGS**. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select **Time and Date**. Press **Enter** key to enter.
 - Press **Up**, **Down** keys to select **Date** to setup. Press **Enter** key to set year, month and day.
 - Press **Enter** key to return main menu and exit **SETTINGS**.