

Programming and tuning to radio stations

- 1 Press **TUNER** on the system or **TUN** on the remote control to select TUNER source.
- 2 Press **TUNER** on the system or **TUN** on the remote control once or more to select desired waveband: FM or AM.
- 3 Press and hold **PROGRAM** on the remote control for more than 2 seconds to activate programming.
→ All available stations are programmed in the order of waveband reception strength.
- 4 Press **ALBUM/PRESET +/-** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the user manual.



© Royal Philips Electronics N.V. 2009
All rights reserved.

<http://www.philips.com>

Quick start guide








Step A Connect

Step B Setup

Step C Enjoy

What's in the Box?


You should find these items upon opening the box.

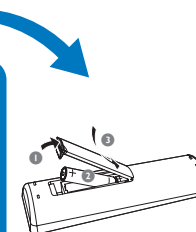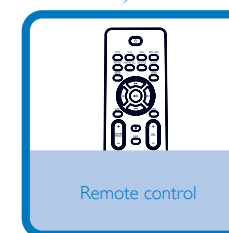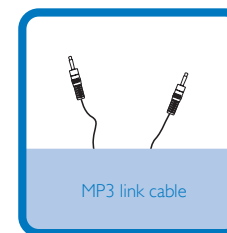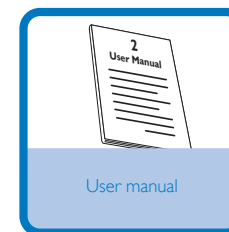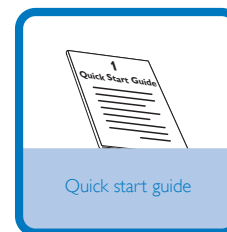

Step A *Connect*

- 1 Connect the speaker cables.
- 2 Connect the power cable of the system.


Tip
See the User Manual for how to connect other equipment to this system.

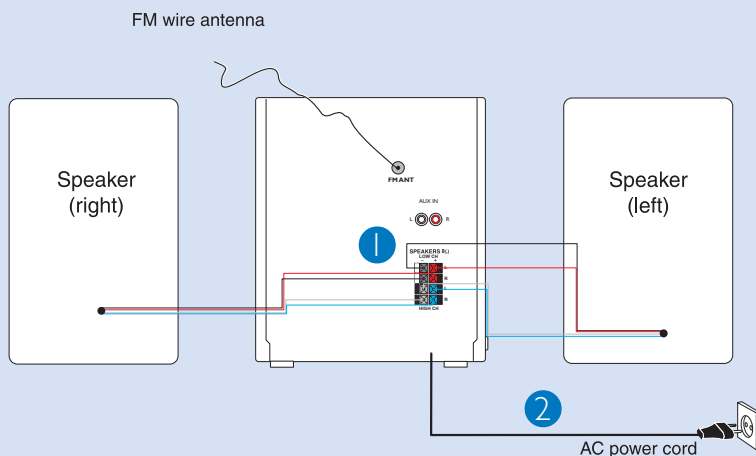

Step B *Setup*

Setting the clock

- 1 In standby mode, press and hold **CLOCK/DISPLAY**.
→ The clock digits for the hours flash.
- 2 Press **◀▶** on the system (**◀▶** on the remote) to set the hours.
- 3 Press **CLOCK/DISPLAY** again.
→ The clock digits for the minutes flash.
- 4 Press **◀▶** on the system (**◀▶** on the remote) to set the minutes.
- 5 Press **CLOCK/DISPLAY** to confirm the time.

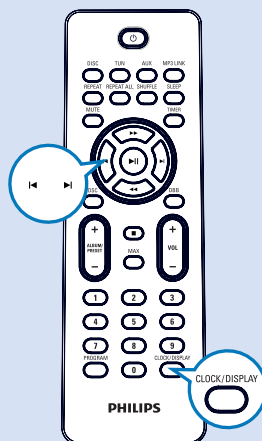

Step C *Enjoy*

Playing a disc

- 1 Press **DISC** to select DISC source.
- 2 Press **OPEN/CLOSE ▲** on the system to open the CD compartment.
- 3 Insert a disc with the printed side facing up and press **OPEN/CLOSE ▲** to close the CD compartment.
→ Play starts automatically.
- 4 To pause, press **▶||**. Press **▶||** again to resume play.
- 5 To stop disc play, press **■**.

