

DVD VIDEO PLAYER

DVP3002

# User manual

***Thank you for choosing Philips.***

***Need help fast?***

*Read your User's Manual first for quick tips that make using your Philips product more enjoyable.*

*If you have read your instructions and still need assistance, you may access our online help at **[www.philips.com/support](http://www.philips.com/support)***



# PHILIPS

## General Information

### Environmental Information

All unnecessary packaging has been omitted. The packaging has been made easy to separate into two materials: cardboard (box, buffer) and polyethylene (bags, protective foam sheet).

Your DVD player consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

*Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.*

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on apparatus.

### For Customer Use:

Read carefully the information located at the rear of your DVD VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVP3002

Serial No. \_\_\_\_\_

### Laser safety

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

**NOTE:**  
**PICTURES SHOWN MAYBE DIFFERENT BETWEEN COUNTRIES.**

**CAUTION**  
**(WARNING LOCATION: ON THE BACKPLATE OF THE SET)**

**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.**

### Important Note:

**Due to the numerous versions of new CD-Audio copy protection or enhanced CD-Audio protection recently available on certain discs, Philips is unable to guarantee that this DVD Player is fully compatible with such new discs. Should you have difficulty playing any such CD-Audio discs, kindly refer them to your CD-Audio disc retailer.**

### LASER

|                 |                                 |
|-----------------|---------------------------------|
| Type            | Semiconductor laser<br>GaAlAs   |
| Wave length     | 650 nm (DVD)<br>780 nm (VCD/CD) |
| Output Power    | 7 mW (DVD)<br>10 mW (VCD/CD)    |
| Beam divergence | 60 degree                       |



## Index

English ----- 6

中文(简体) ----- 32

English

中文(简体)

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*



Manufactured under license from  
Dolby Laboratories, "Dolby"  
and the double-D symbol are  
trademarks of Dolby Laboratories.

Due to the inconsistency of disc formats provided by various disc manufacturers, your DVD system may require a playability enhancement or upgrade. As DVD technology advances, these enhancements will become common and will be easy to complete.  
**Go to [www.philips.com/support](http://www.philips.com/support) for software upgrade.**



## Contents

### Introduction

|                                   |   |
|-----------------------------------|---|
| Supplied accessories .....        | 6 |
| Care and safety information ..... | 6 |

### Connections

|  |     |
|--|-----|
| Connecting TV .....                          | 7-8 |
| Using Composite Video jacks (CVBS) .....     | 7   |
| Using Component Video jacks (Pr Pb Y) ...    | 7   |
| Using an accessory RF modulator .....        | 8   |
| Connecting the power cord .....              | 8   |
| Optional : Connecting to an Audio System .   |     |
| .....  | 9   |
| Stereo system has Dolby Pro Logic or Right   |     |
| / Left Audio In jack .....                   | 9   |
| Optional: Connecting Digital AV Receiver ... |     |
| .....  | 9   |
| Receiver has a PCM, Dolby Digital, or        |     |
| MPEG2 decoder .....                          | 9   |

### Functional Overview

|                      |    |
|----------------------|----|
| Front Panels .....   | 10 |
| Rear Panel .....     | 11 |
| Remote Control ..... | 12 |

### Getting Started

|   |       |
|---|-------|
| Step 1: Inserting batteries into the      |       |
| Remote Control .....                      | 13    |
| Using the Remote Control to operate the   |       |
| Player .....                              | 13    |
| Step 2: Setting up the TV .....           | 13-15 |
| Setting up Progressive Scan feature (for  |       |
| Progressive Scan TV only) .....           | 14    |
| To deactivate Progressive manually .....  | 15    |
| Selecting the colour system that          |       |
| corresponds to your TV .....              | 15    |
| Step 3: Setting language preference ..... | 16    |
| Setting the OSD Language .....            | 16    |
| Setting the Audio, Subtitle and Disc menu |       |
| language .....                            | 16    |

### Disc Operations

|  |    |
|--|----|
| Playable Discs .....                         | 17 |
| Region Codes .....                           | 17 |
| Playing discs .....                          | 17 |
| Basic playback controls .....                | 18 |
| Selecting various repeat/shuffle functions   |    |
| Repeat play mode .....                       | 18 |
| Repeating a section within a chapter/track . |    |
| .....  | 18 |
| Operations for video playback .....          | 19 |
| Using the Disc Menu .....                    | 19 |
| Zooming in .....                             | 19 |
| Resuming playback from the last stopped      |    |
| point .....                                  | 19 |
| OSD (On-Screen Display) .....                | 19 |
| Special DVD features .....                   | 20 |
| Playing a Title .....                        | 20 |
| Camera Angle .....                           | 20 |
| Changing the Audio Language .....            | 20 |
| Subtitles .....                              | 20 |
| Special VCD & SVCD Features .....            | 20 |
| Playback Control (PBC) .....                 | 20 |
| Playing MP3/JPEG (Kodak) Picture CD .....    | 21 |
| General Operation .....                      | 21 |
| Playback selection .....                     | 21 |
| Repeat .....                                 | 21 |
| Fast Forward/Reverse (MP3) .....             | 21 |

## Contents

English

### DVD Menu Options

|  |       |
|--|-------|
| General Setup menu .....                       | 22    |
| Dimming system's display screen .....          | 22    |
| OSD Language .....                             | 22    |
| Sleep .....                                    | 22    |
| Screen Saver - turning on/off .....            | 22    |
| Audio Setup Menu .....                         | 23    |
| Setting the Downmix .....                      | 23    |
| Digital Audio Setup .....                      | 23    |
| Video Setup Menu .....                         | 24-25 |
| TV Type .....                                  | 24    |
| Setting the TV Display .....                   | 24    |
| Progressive - turning on/off .....             | 25    |
| Sharpness .....                                | 25    |
| Brightness/Contrast .....                      | 25    |
| Preference Page .....                          | 26-27 |
| Audio, Subtitle, Disc Menu .....               | 26    |
| Restricting playback by Parental Control ..... | 26    |
| Changing the Password .....                    | 27    |
| Restoring to original settings .....           | 27    |

### Troubleshooting ..... 28-29

### Specifications ..... 30

### Glossary ..... 31

### Language Code ..... 60

 
## Introduction

### Supplied accessories


Video cable  
(yellow)



Audio cable  
(white, red)



Remote Control  
and  
two AA batteries

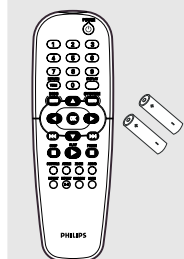

### Care and safety information

 
- **Power consumption**
  - When the system is switched to Standby mode, it is still consuming power. To disconnect the system from the power supply completely, remove the AC power plug from the wall jack.
- **Avoid high temperatures, moisture, water and dust**
  - Do not expose the player, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight.)

- **Avoid condensation problem**

- The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.

- **Do not block the vents**

- Do not operate the DVD Player in an enclosed cabinet, allow about 10 cm (4 inches) of free space all around the player for adequate ventilation.



- **Care of the cabinet**


- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

- **Finding a suitable location**

- Place the player on a flat, hard, and stable surface.

- **Disc handling**


- To clean a CD, wipe it in a straight line from the center towards the edge using a soft, lint-free cloth. A cleaning agent may damage the disc!
- Write only on the printed side of a CDR(W) and only with a soft felt-tipped pen.
- Handle the disc by its edge, do not touch the surface.

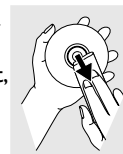

## Connections

English

### Connecting TV

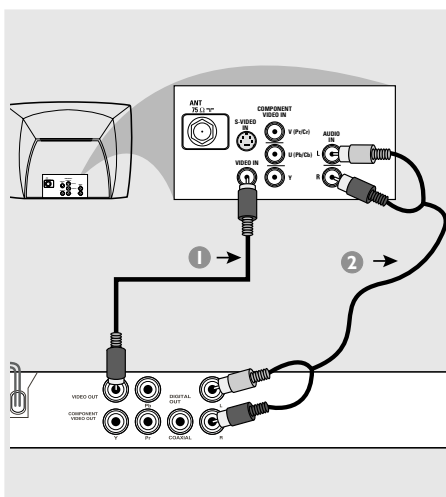


#### IMPORTANT!

- You only need to make one video connection from the following options, depending on the capabilities of your TV system.
- Connect the DVD Player directly to the TV.

#### Using Composite Video jacks (CVBS)

- 1 Use the composite video cable (yellow) to connect the DVD Player's CVBS (VIDEO) jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV (*cable supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).

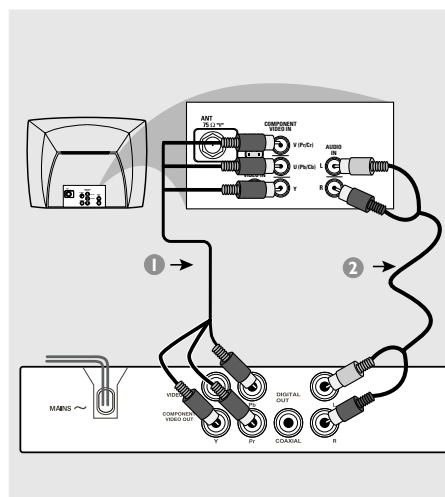

#### IMPORTANT!



- The progressive scan video quality is only possible when using Y Pb Pr and a progressive scan TV is required.

#### Using Component Video jacks (Y Pb Pr)

- 1 Use the component video cables (red/blue/green) to connect the DVD system's Y Pb Pr jacks to the corresponding Component video input jacks (or labeled as Y Pb Pr) on the TV (*cable not supplied*).
- 2 To hear the sound of this DVD Player through your TV, use the audio cables (white/red) to connect AUDIO OUT (L/R) jacks of the DVD Player to the corresponding AUDIO IN jacks on the TV (*cable supplied*).
- 3 Proceed to page 13 for detailed Progressive Scan set up.

## Connections

### Connecting the power cord

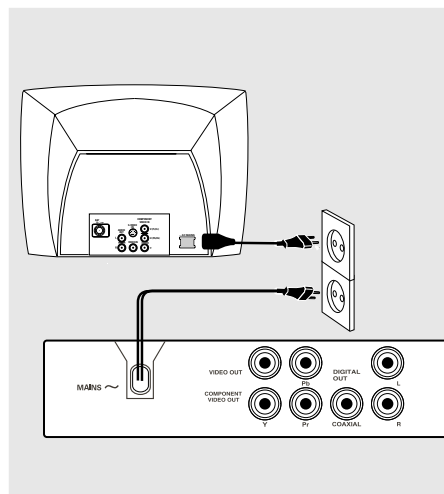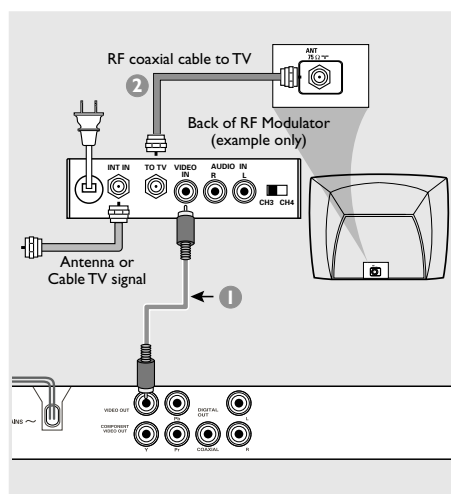

#### IMPORTANT!

– If your TV only has a single Antenna In jack (or labeled as 75 ohm or RF In,) you will need an RF modulator in order to view the DVD playback on the TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.

#### Using an accessory RF modulator

- ① Use the composite video cable (yellow) to connect the DVD Player's **CVBS** jack to the video input jack on the RF modulator.
- ② Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.

After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connections with the power switched on.

When no disc is loaded, press **STANDBY ON** on the DVD Player front panel, "NO DISC" may appear on the display panel.






## Connections

English


### Optional: Connecting to an Audio System

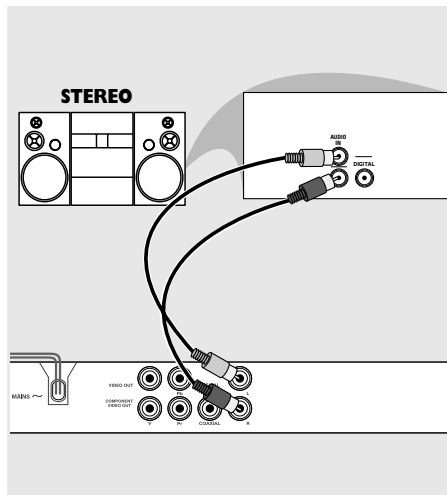

#### Stereo system has Dolby Pro Logic or Right / Left Audio In jack

- 1 Select one of the video connections (CVBS VIDEO IN, SCART or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Use the audio cables (white/red) to connect **AUDIO OUT (L/R)** jacks of the DVD Player to the corresponding AUDIO IN jacks on the stereo system (cable supplied).

### Optional: Connecting Digital AV Receiver

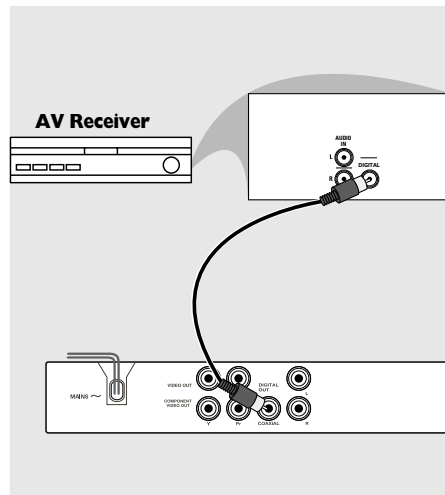

#### Receiver has a PCM, Dolby Digital, or MPEG2 decoder


- 1 Select one of the video connections (CVBS VIDEO IN, SCART or COMPONENT VIDEO IN) depending on the options available on your TV.
- 2 Connect the COAXIAL jack of the DVD Player to the corresponding Digital Audio In jack on your Receiver (cable not supplied).
- 3 Set the DVD Player's Digital Output to PCM-ONLY or ALL depending on the capabilities of your Receiver (see page 23 "Digital Output").

#### Helpful Hint:

– If the audio format of the Digital Output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

## Functional Overview


### Front Panel

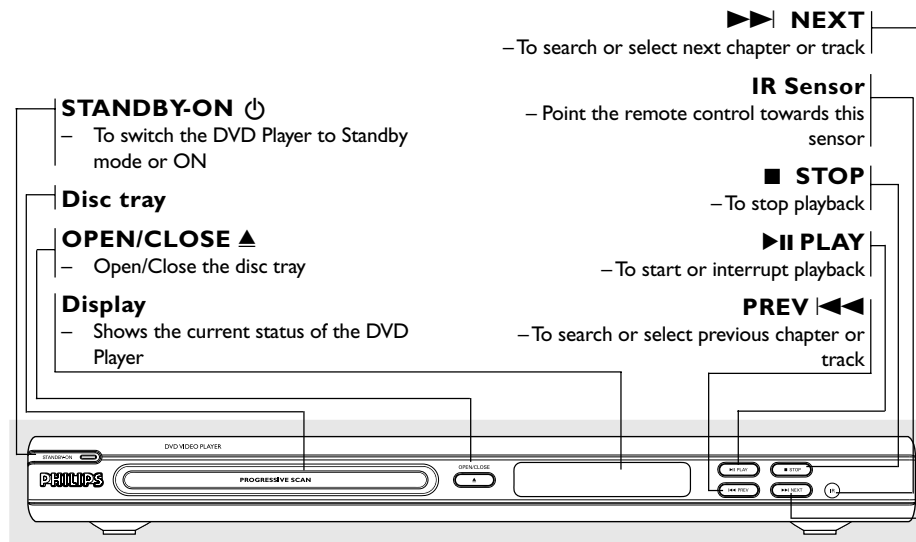

## Functional Overview

### Rear Panel


English

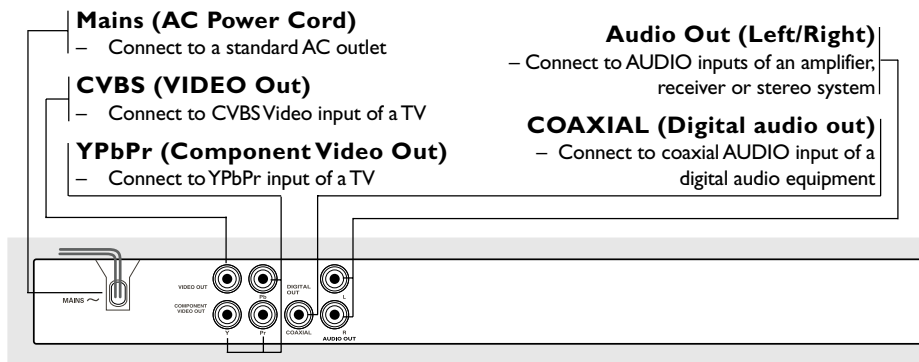

**Caution: Do not touch the inner pins of the jacks on the rear panel.  
Electrostatic discharge may cause permanent damage to the unit.**

## Functional Overview


### Remote Control

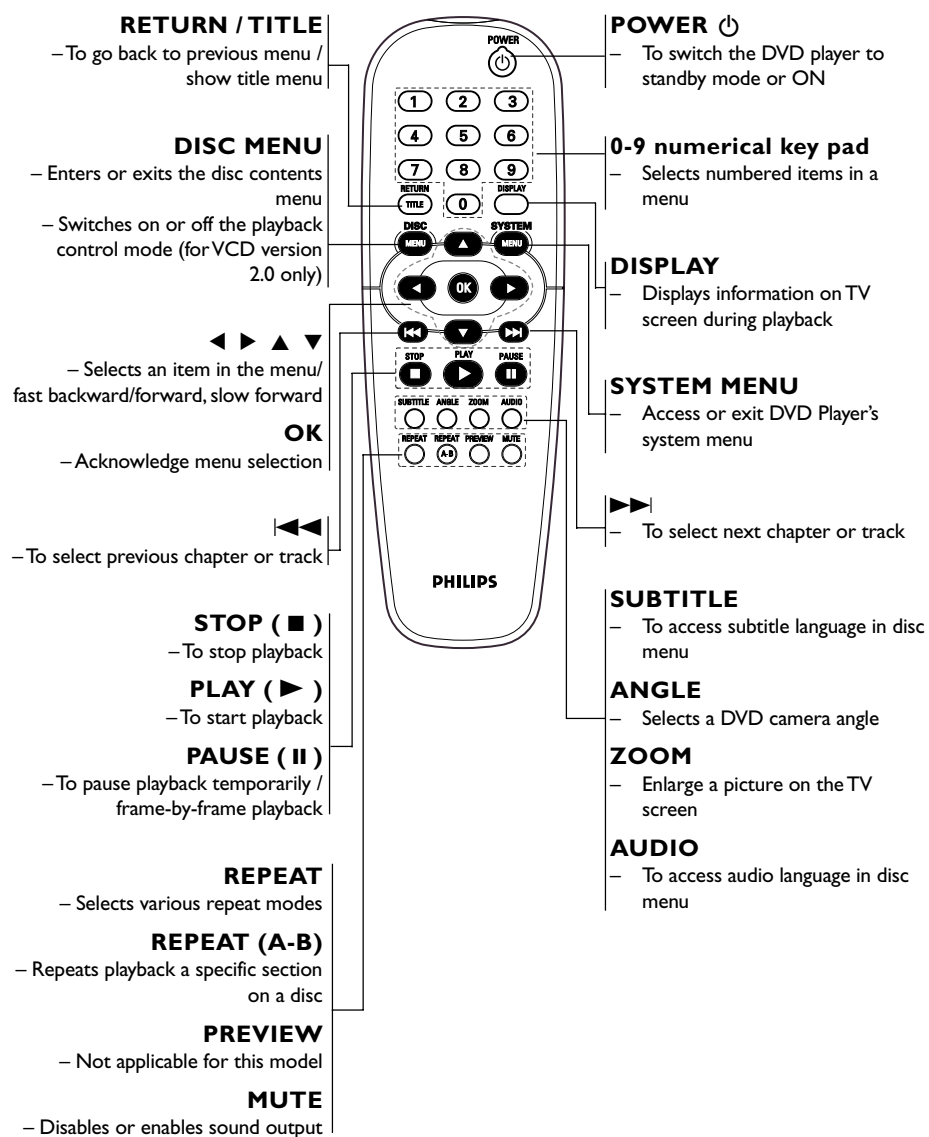

## Getting Started

English


### Step 1: Inserting batteries into the Remote Control

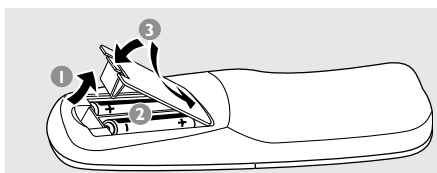

- ❶ Open the battery compartment.
- ❷ Insert two batteries type R06 or AA, following the indications ( + - ) inside the compartment.
- ❸ Close the cover.

### Using the Remote Control to operate the Player

- ❶ Aim the Remote Control directly at the remote sensor (IR) on the front panel.
- ❷ Do not put any objects between the Remote Control and the DVD Player while operating the DVD Player.

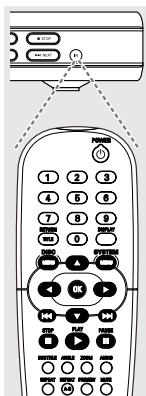

### CAUTION!

- Remove batteries if they are exhausted or if the Remote Control is not being used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed properly.

### Step 2: Setting up the TV

#### IMPORTANT!

**Make sure you have completed all the necessary connections. (See pages 7-8 “Connecting TV”).**

- ❶ Turn on the TV and set to the correct video-in channel. You should see the Philips DVD background screen on the TV.
- ❷ Usually these channels are between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO. See your TV manual for more details.  
→ Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.  
→ Or, the TV Remote Control may have a button or switch that chooses different video modes.  
→ Or, set the TV to channel 3 or 4 if you are using an RF modulator.
- ❸ If you are using external equipment, (eg. audio system or receiver), turn it on and select the appropriate input source for the DVD Player output. Refer to the equipment owner's manual for detail.

## Getting Started

### Setting up Progressive Scan feature (for Progressive Scan TV only)


The progressive scan display twice the number of frames per seconds than interlaced scanning (ordinary normal TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

#### IMPORTANT!

**Before enabling the progressive scan feature, you must ensure:**


- 1) Your TV can accept progressive signals, a progressive scan TV is required.
- 2) You have connected the DVD player to your TV using Y Pb Pr (see page 7.)

- 1 Turn on your TV.
- 2 Turn off your TV progressive scan mode or turn on interlaced mode (refer to your TV user manual.)
- 3 Press **POWER** on the remote control to turn on the DVD player.
- 4 Select the correct Video Input channel.  
(See page 13).  
→ The DVD background screen appears on the TV.
- 5 Press **SYSTEM MENU**.
- 6 Press **▶** repeatedly to select {VIDEO SETUP PAGE}.

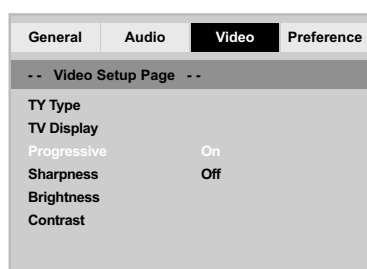

- 7 Select {PROGRESSIVE} to {ON}, then **OK** to confirm.


→ The instruction menu appears on the TV.

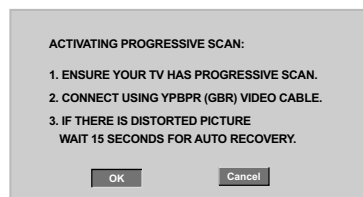

- 8 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.

**There will be a distorted picture on your TV at this state until you turn on the progressive scan mode on your TV.**

- 9 Turn on your TV progressive scan mode (refer to your TV user manual.)  
→ The below menu appears on the TV.

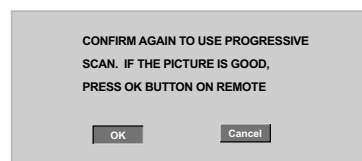

- 10 Press **◀** to highlight **OK** in the menu and press **OK** to confirm.  
→ The set up is complete now and you can start enjoy the high quality picture.

**TIPS:** To return to the previous menu, press **◀**.  
To remove the menu, press **SYSTEM MENU**.


# Getting Started

## To deactivate Progressive manually

- **When the distorted picture still appears on the TV**, it may be due to the connected TV does not accept progressive signals, and progressive is set by mistake. You must reset the unit to interlace format.
- ❶ **Turn off** your TV progressive scan mode or turn on to interlaced mode (refer to your TV user manual.)
- ❷ Press **OPEN/CLOSE** on the DVD player to open the disc tray.
- ❸ Press **numeric keypad ‘1’** on the remote control for few seconds.  
→ The DVD blue background screen will appear on the TV.

## Selecting the colour system that corresponds to your TV

This DVD Player is compatible with both NTSC and PAL. In order for a DVD disc to play on this Player, the colour system of the Disc, the TV and the DVD Player should match.

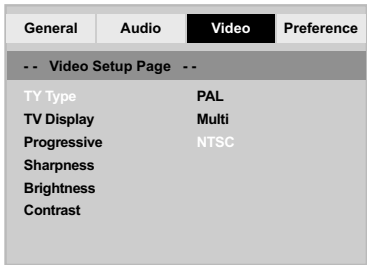

- ❶ Press **SYSTEM MENU**.
- ❷ Press **▶** repeatedly to select {VIDEO SETUP PAGE}.
- ❸ Press **▲ ▼** to highlight {TV TYPE}, then press **▶**.

- ❹ Press **▲ ▼** to highlight one of the options below:

**PAL** – Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.


**NTSC** – Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc (VCD only) and output in NTSC format.

**Multi** – Select this if the connected TV is compatible with both NTSC and PAL (multi-system). The output format will be in accordance with the video signal of the disc.

- ❺ Select an item and press **OK**.

### Helpful Hints:

- **Before changing the current TV Standard setting, ensure that your TV supports the ‘selected TV Type’ system.**
- **If there is no proper picture on your TV, wait for 15 seconds for auto recovery.**

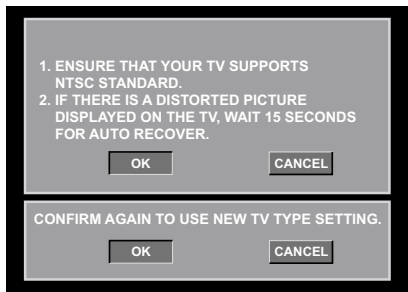

**TIPS:** To return to the previous menu, press **◀**.  
To remove the menu, press **SYSTEM MENU**.

## Getting Started

### Step 3: Setting language preference

The language options are different depending on your country or region. It may not correspond to the illustrations shown on the user manual.

#### Setting the OSD Language


The On-screen language for the system menu will remain as you set it, regardless of various disc languages.



- ① Press **SYSTEM MENU**.
- ② Press **►** to select {GENERAL SETUP PAGE}.
- ③ Press **▲▼** to highlight {OSD LANGUAGE}, then press **►**.
- ④ Press **▲▼** to select a language and press **OK**.

### Setting the Audio, Subtitle and Disc menu language

You can choose your own preferred language or soundtrack from audio, subtitles and disc menu languages. If the language selected is not available on the disc, the disc's default language will be used instead.

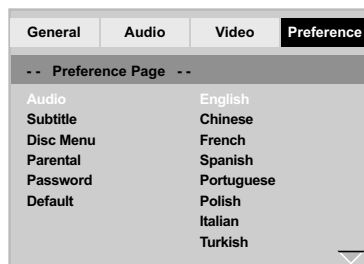

- ① Press **STOP** twice then, press **SYSTEM MENU**.
- ② Press **►** repeatedly to select {PREFERENCE PAGE}.
- ③ Press **▲▼** to highlight one of the options below at a time, then press **►**.
  - 'Audio' (disc's soundtrack)
  - 'Subtitle' (disc's subtitles)
  - 'Disc Menu' (disc's menu)
- ④ Press **▲▼** to select a language and press **OK**.

**If the language you want is not in the list, then select {OTHERS},** then use the **numeric keypad (0-9)** on the remote to enter the 4-digit language code 'XXXX' (see page 60 "Language Code") and press **OK**.

- ⑤ Repeat steps ③~④ for other language settings.

**TIPS:** To return to the previous menu, press **◀**.  
To remove the menu, press **SYSTEM MENU**.



## Disc Operations

### IMPORTANT!

- If the inhibit icon (Ø) appears on the TV screen when a button is pressed, it means the function is not available on the current disc or at the current time.
- Depending on the DVD or VIDEO CD, some operations may be different or restricted.
- Do not push on the disc tray or put any objects other than disc on the disc tray. Doing so may cause the disc player malfunction.

### Playable Discs

#### Your DVD Player will play:

- Digital Versatile Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Recordable[Rewritable] (DVD+R[W])
- Compact Discs (CDs)
- MP3 discs, picture (Kodak, JPEG) files on CD-R(W).
- JPEG/ISO 9660 format
- Maximum 30 characters display.
- Supported sampling frequencies : 32 kHz, 44.1 kHz, 48 kHz (MPEG-1) 16 kHz, 22.05 kHz, 24 kHz (MPEG-2)
- Supported Bit-rates : 32~256 kbps (MPEG-1), 8~160 kbps (MPEG-2) variable bitrates



### Region Codes

DVD discs must be labeled for ALL regions or Region 6 in order to play on this Player. You cannot play Discs that are labeled for other regions.



#### Helpful Hints:

- It may not be possible to play CD-R/RW or DVD-R/RW in all cases due to the type of disc or condition of the recording.
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improper formatted disc will not play on this DVD Player.

### Playing discs

- 1 Connect the power cords of the DVD Player and TV (and any optional stereo or AV receiver) to a power outlet.
- 2 Turn on the TV power and set to the correct Video In channel. (See page 13 "Setting up the TV").
- 3 Press **STANDBY-ON** on the DVD Player front panel.  
→ You should see the Philips DVD background screen on the TV.
- 4 Press **OPEN/CLOSE** ▲ button to open the disc tray and load in a disc, then press the same button again to close the disc tray.  
→ Make sure the label side is facing up. For double-sided discs, load the side you want to play facing up.
- 5 Playback will start automatically. If not press **PLAY** ►.  
→ If a disc menu appears on the TV, see page 19 "Using the Disc Menu".

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Basic playback controls

Unless otherwise stated, all operations described are based on Remote Control use.

### Pausing playback

- ① During playback, press **PAUSE II**.  
→ Playback will pause and sound will be muted.
- ② To resume normal playback, press **PLAY ►**.

### Selecting track/chapter

- ① Press **►►►** / **◄◄◄** briefly during playback to go to the next chapter/track or to return to the beginning of the current chapter/track respectively.
- ② To go directly to any chapter/track, enter the chapter/track number using the numerical keys (0-9).  
(e.g. single number of chapter/track with digit '0' in front, for example '06')
- For DVD  
→ Press **◄◄** twice briefly to step back to the previous chapter/track.
- For VCD  
→ It cannot work when PBC is set to 'ON'.

### Searching backward/forward

- ① Press **◄►** during playback to select the required speed: 2X, 4X, 8X, 16X or 32X (backward or forward).  
→ Sound will be muted (DVD/VCD) or intermittent (CD).
- ② To return to normal speed, press **PLAY ►**.

### Stopping playback

- Press **■**.

### Selecting various repeat/shuffle functions

#### Repeat play mode

- Press **REPEAT** continuously to choose a Repeat mode during playback.

#### CHAPTER (DVD)

- to repeat playback of the current chapter.

#### TRACK/TITLE (CD/SVCD/VCD/DVD)

- to repeat playback of the current track (CD/SVCD/VCD)/title (DVD).

#### ALL

- to repeat playback of the disc.

- Press **REPEAT** repeatedly to cancel the repeat mode.

#### Helpful Hint:

- *REPEAT function is not available for VCD 2.0 when PCB is on.*

#### Repeating a section within a chapter/track

- ① While playing a disc, press **REPEAT A-B** at your chosen starting point.
- ② Press **REPEAT A-B** again at your chosen end point.  
→ The section A and B can be set only within the same chapter/track.  
→ The section will now repeat continuously.
- ③ To exit the sequence, press **REPEAT A-B**.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Operations for video playback (DVD/VCD/SVCD)

#### Using the Disc Menu

Depending on the disc, a menu may appear on the TV screen once you load in the disc.

#### To select a playback feature or item

- Use ◀▶▲▼ keys or **numeric keypad (0-9)** on the remote, then press **OK** to start playback.

#### To access or remove the menu

- Press **DISC MENU** on the remote.

#### Zooming in

This function allows you to enlarge the picture on the TV screen and to pan through the enlarged picture.

- 1 During playback, press **ZOOM** repeatedly to display the picture with different scales.  
→ Use ◀▶▲▼ keys to pan through the enlarged picture.  
→ Playback will continue.
- 2 Press **ZOOM** repeatedly to return to the original size.

#### Resuming playback from the last stopped point

- In stop mode and when the disc has not been ejected, press **PLAY ▶**.

#### To cancel resume mode

- In stop mode, press **STOP ■** again.

#### Helpful Hint:

- Resume option may not be available on some discs.

#### OSD (On-Screen Display)

This function displays disc information on the TV screen during playback.

- 1 During playback, press **DISPLAY** repeatedly.  
→ A list of available disc information appears on the TV screen.
- 2 Use ◀▶ keys to select an option.
- 3 Enter hours, minutes and seconds from left to right in the time edit box using remote control numerical key pad.  
→ Playback will change to the chosen time or to the selected title/chapter/track.

#### For DVD

→ {Title CT:TT Chapter XX/TC}: displays the total available title and chapters in the disc and enable to select a chapter for viewing.

→ {Title CT:TT Time X:XX:XX}: displays the total available title in the disc and enable to select the hour, minute and second of the title.

→ {Chapter CC:TC Time X:XX:XX}: displays the total available chapter in the disc and enable to select the hour, minute and second of the title.

#### For SuperVCD or VCD

→ {Disc Go To XX:XX}: enable to select any part within the disc.

→ {Track Go To XX:XX}: enable to select any part within the current track.

→ {Select Track XX:TT}: enable to select any track.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## Disc Operations

### Special DVD Features

#### Playing a Title

- 1 Press **DISC MENU**.  
→ The disc title menu appears on the TV screen.
- 2 Use **▲▼◀▶** keys or **numeric keypad (0-9)** to select a play option.
- 3 Press **OK** key to confirm.

#### Camera Angle

- Press **ANGLE** repeatedly to select different desired angle.

#### Changing the Audio Language

##### For DVD

- Press **AUDIO** repeatedly to select different audio languages.

##### Changing the Audio Channel

##### For VCD

- Press **AUDIO** to select the available audio channels provided by the disc (LEFT MONO, RIGHT MONO, MIX-MONO, STEREO).

#### Subtitles

- Press **SUBTITLE** repeatedly to select different subtitle languages.

### Special VCD & SVCD Features

#### Playback Control (PBC)

##### For VCD with Playback Control (PBC) feature (version 2.0 only)

- Press **DISC MENU** to toggle between 'PBC ON' and 'PBC OFF'.  
→ If you select 'PBC ON', the disc menu (if available) will appear on the TV.  
→ Use the **◀◀ / ▶▶** or the numeric keypad (0-9) to select a play option.
- During playback, pressing **RETURN/TITLE** will return to the menu screen (if PBC is on).

##### If you want to skip the index menu and playback directly from the beginning,

- Press **DISC MENU** key on the remote control to switch to PBC off.

**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

# Disc Operations

## Playing MP3/JPEG (Kodak) Picture CD

### IMPORTANT!

You have to turn on your TV and set to the correct Video In channel. (See page 13 “Setting up the TV”).

- Load a Picture disc (Kodak Picture CD, JPEG).  
→ For Kodak disc, the slide show will begin.  
→ For JPEG disc, the picture menu appears on the TV screen. Press **PLAY** ► to start the slide-show playback.

### General Operation

- 1 Load an MP3/JPEG Picture CD disc.  
→ The data disc menu appears on the TV screen.
- 2 Press ▲ ▼ to select the folder and press **OK** to open the folder.



- 3 Press ▲ ▼ or use the numeric keypad (0-9) to highlight an option.
- 4 Press **OK** to confirm.  
→ Playback will start from the selected file to the end of the folder.

### Playback selection

During playback, you can;

- Press |◀◀ / ▶▶| to select another track/file in the current folder.
- Press || / ► to pause/resume playback.

### Repeat

- Press **REPEAT** continuously to access different ‘Play Mode’.  
→ SINGLE: play the selected file once, then return to the menu.  
→ REPEAT ONE: keep a JPEG image still on the screen or play an MP3 file repeatedly.  
→ REPEAT FOLDER: play all files in the selected folder repeatedly.  
→ FOLDER: play all files in the selected folder.  
→ SHUFFLE: play all files in the selected folder in random order.

### Fast forward / reverse (MP3)

- During playback, press ◀▶ to fast forward or reverse playback.
- To resume normal playback, press **PLAY** ►.


**TIPS:** The operating features described here might not be possible for certain discs. Always refer to the instructions supplied with the discs.

## DVD Setup Menu Options

This DVD Player setup is carried out via the TV, enabling you to customise the DVD Player to suit your particular requirements.

### General Setup menu

- ① In disc mode, press **SYSTEM MENU**.
- ② Press ◀▶ to select 'General Setup' icon.
- ③ Press **OK** to confirm.

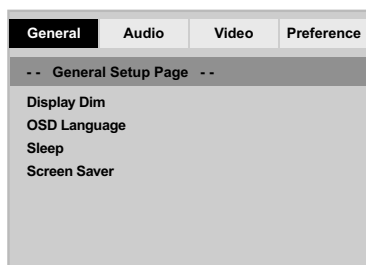

### Dimming player's display panel

You can select different levels of brightness for the display screen.

- ① In 'GENERAL SETUP PAGE', press ▲▼ to highlight {DISPLAY DIM}, then press ▶.

#### **100%**

Select this for full brightness.

#### **70%**

Select this for medium brightness.

#### **40%**

Select this for dimming the display.

- ② Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### OSD Language

This menu contains various language options for display language on the screen. For details, see page 16.

### Sleep

Sleep function allows you to turn off the DVD Player automatically after a preset time.

- ① In 'GENERAL SETUP PAGE', press ▲▼ to highlight {SLEEP}, then press ▶.

#### **15 Mins**

Turn off the DVD Player after 15 minutes.

#### **30 Mins**

Turn off the DVD Player after 30 minutes.

#### **45 Mins**

Turn off the DVD Player after 45 minutes.

#### **60 Mins**

Turn off the DVD Player after 60 minutes.

#### **OFF**

Turn off the sleep function.

- ② Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Screen Saver - turning on/off

The screen saver will help to prevent your TV display device from becoming damaged.

- ① In 'GENERAL SETUP PAGE', press ▲▼ to highlight {SCREEN SAVER}, then press ▶.

#### **ON**

Select this if you wish to turn off the TV screen when disc playback is stopped or paused for more than 5 minutes.

#### **OFF**

Select this to disable the screen saver function.


- ② Press ▲▼ to select a setting, then press **OK** to confirm your selection.

**TIPS:** To return to the previous menu, press ◀.  
To remove the menu, press **SYSTEM MENU**.

## DVD Setup Menu Options

### Audio Setup Menu

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Press ◀▶ to select 'Audio Setup' icon.
- 3 Press **OK** to confirm.

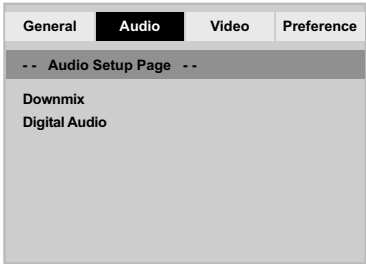

### Setting the Downmix

This options allows you to set the stereo analog output of your DVD Player.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {DOWNMIX}, then press ▶.

#### **STEREO**

Select this to change channel output to stereo which delivers sound from only the two front speakers.

#### **LT/RT**

Select this option if your DVD Player is connected to a Dolby Pro-Logic decoder.

- 2 Press ▲▼ to select a setting, then press **OK** to confirm your selection.

### Digital Audio Setup

The options included in Digital Audio Setup are: 'Digital Output' and 'LPCM'.

- 1 In 'AUDIO SETUP PAGE', press ▲▼ to highlight {DIGITAL AUDIO}, then press ▶.
- 2 Press the ▲▼ keys to highlight an option.
- 3 Enter its submenu by pressing ▶.
- 4 Move the cursor by pressing the ▲▼ keys to highlight the selected item.

#### **Digital Output**

Set the Digital output according to your optional audio equipment connection.

→ **SPDIF Off**: Turn off the digital output.

→ **All**: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

→ **PCM Only**: Only if your receiver is not capable of decoding multi-channel audio.

#### *Helpful Hints:*

- If DIGITAL OUTPUT is set to 'All', all audio settings except MUTE are invalid.

#### **LPCM Output**

If you connect the DVD Player to a PCM compatible receiver via the digital terminals, such as coaxial or optical etc, you may need to adjust 'LPCM'.

Discs are recorded at a certain sampling rate. The higher the sampling rate, the better the sound quality.

→ **48kHz**: Playback a disc recorded at the sampling rate of 48kHz.


→ **96kHz**: Playback a disc recorded at the sampling rate of 96kHz.

**TIPS:** To return to the previous menu, press ◀.  
To remove the menu, press **SYSTEM MENU**.

## DVD Setup Menu Options

### Video Setup Menu

- ① In disc mode, press **SYSTEM MENU**.
- ② Press ◀▶ to select 'Video Setup' icon.
- ③ Press **OK** to confirm.

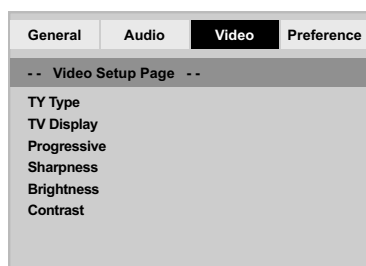

### TV Type

This menu contains the options for selecting the colour system that matches the connected TV. For details, see page 15.

### Setting the TV Display

Set the aspect ratio of the DVD Player according to the TV you have connected. The format you select must be available on the disc. If it is not, the setting for TV display will not affect the picture during playback.

- ① In 'VIDEO SETUP PAGE', press ▲▼ to highlight {TV DISPLAY}, then press ▶.
- ② Press ▲▼ to highlight one of the options below:

#### 4:3 PAN SCAN –

Select this if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.



#### 4:3 LETTER BOX –

Select this if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.



**16:9** – Select this if you have a wide-screen TV.



- ③ Select an item and press **OK**.

**TIPS:** To return to the previous menu, press ◀.  
To remove the menu, press **SYSTEM MENU**.



## DVD Setup Menu Options

### Progressive - turning on/off

In the progressive scan mode, you can enjoy the high quality picture with less flickers. It only works when you have connected the DVD player's Y Pb Pr jacks to your TV that supports the progressive video input. Otherwise, the a distorted picture will appear on the TV. For proper progressive scan set up, see page 14.

- 1 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {PROGRESSIVE}, then press ►.

#### **OFF**

To disable Progressive Scan function.

#### **ON**

To enable Progressive Scan function.

- 2 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.  
→ Follow the instructions shown on the TV to confirm the selection (if any).  
→ If a distorted picture appears on the TV screen, wait for 15 seconds for auto recovery.

### Sharpness

You can personalize your picture colour by adjusting sharpness.

- 1 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {SHARPNESS}, then press ►.

#### **HIGH**

Choose high to make the picture's edge sharper.

#### **MEDIUM**

Choose medium to get a standard picture.

#### **LOW**

Choose low to make the picture's edge softer.

- 2 Press ▲ ▼ to select a setting, then press **OK** to confirm your selection.

### Brightness / Contrast

Increasing the value will brighten the picture or vice versa. Choose zero (0) for average setting.

- 1 In 'VIDEO SETUP PAGE', press ▲ ▼ to highlight {BRIGHTNESS} or {CONTRAST}, then press ►.  
→ The menu appears.

Brightness 0

Contrast 0


- 2 Press ◀ ▶ to adjust the setting that best suit your personal preference.
- 3 Press **OK** to confirm.

**TIPS:** To return to the previous menu, press ◀.  
To remove the menu, press **SYSTEM MENU**.

## DVD Setup Menu Options

### Preference Page

- 1 Press **■** twice to stop playback (if any), then press **SYSTEM MENU**.
- 2 Press **◀▶** to select the 'Preference Page' icon.
- 3 Press **OK** to confirm.

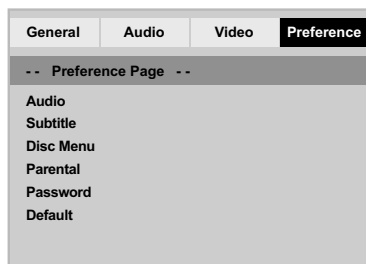


### Audio, Subtitle, Disc Menu

These menus contain various language options for audio, subtitle and disc menu which may be recorded on the DVD. For details, see page 16.

### Restricting playback by Parental Control

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- 1 In 'PREFERENCE PAGE', press **▲▼** to highlight {PARENTAL}, then press **▶**.

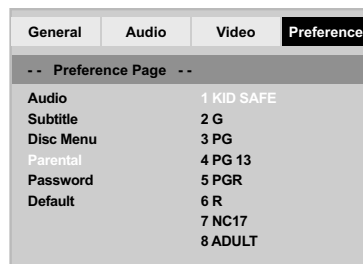

- 2 Press **▲▼** to highlight a rating level for the disc inserted and press **OK**.  
→ To disable Parental controls and have all Discs play, select {8 ADULT}.
- 3 Use the **numeric keypad (0-9)** to enter the six-digit password (see page 27 "Changing the password").  
→ DVDs that are rated above the level you selected will not play unless you enter your six-digit password.

#### Helpful Hints:

- VCD, SVCD, CD have no level indication, so parental control function has no effect on these type of discs. This applies to most illegal DVD discs.
- Some DVDs are not encoded with a rating though the movie rating may be printed on the Disc cover. The rating level feature does not work for such Discs.


**TIPS:** To return to the previous menu, press **◀**.  
To remove the menu, press **SYSTEM MENU**.

## DVD Setup Menu Options

### Changing the Password

This feature is used for Parental Control. Enter your six-digit password when prompted on the screen. The default password is 136900.

- ① In 'PREFERENCE PAGE', press ▲ ▼ to highlight {PASSWORD}, then press ► to select {CHANGE}.

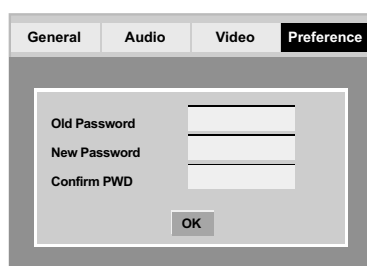

- ② Use the **numeric keypad (0-9)** to enter your old six-digit password.
  - When doing this for the first time, key in '136900'.
  - If you forget your old six-digit password, key in '136 900'.
- ③ Enter the new six-digit password.
- ④ Enter the new six-digit password a second time to confirm.
  - The new six-digit password will now take effect.
- ⑤ Press **OK** to confirm.

### Restoring to original settings

Setting the DEFAULT function will reset all options and your personal settings to the factory defaults, except your password for Parental Control.

- ① In 'PREFERENCE PAGE', press ▲ ▼ to highlight {DEFAULT}, then press ► to select {RESET}.
- ② Press **OK** to confirm.
  - All settings will now reset to factory defaults.

**TIPS:** To return to the previous menu, press ◀.  
To remove the menu, press **SYSTEM MENU**.

## Troubleshooting

### WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

| Problem  | Solution  |
|--|---|
| <b>No power</b>  | <ul style="list-style-type: none"> <li>– Check if the AC power cord is properly connected.</li> <li>– Press the STANDBY ON on the front of the DVD system to turn on the power.</li> </ul>  |
| <b>No picture</b>  | <ul style="list-style-type: none"> <li>– Refer to your TV's manual for correct Video In channel selection. Change the TV channel until you see the DVD screen.</li> <li>– Check if the TV is switched on.</li> <li>– If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see page 14 for proper progressive scan set up or deactivate the progressive scan feature as below:               <ol style="list-style-type: none"> <li>1) Turn off your TV progressive scan mode or turn on to interlaced mode.</li> <li>2) Press OPEN/CLOSE to open the disc tray.</li> <li>3) Press numeric keypad '1' on the remote control for few seconds.</li> </ol> </li> </ul> |
| <b>Distorted picture</b>   | <ul style="list-style-type: none"> <li>– Sometimes a small amount of picture distortion may appear depending on the disc being played back. This is not a malfunction.</li> </ul>   |
| <b>Completely distorted picture or black/white picture with DVD</b>                                  | <ul style="list-style-type: none"> <li>– Connect DVD Player directly to the TV.</li> <li>– Make sure the disc is compatible with the DVD/ Player.</li> <li>– Ensure that the DVD Player's TV Type is set to match that of the Disc and your TV.</li> </ul>  |
| <b>No sound or distorted sound</b>   | <ul style="list-style-type: none"> <li>– Adjust the volume.</li> <li>– Check that the speakers are connected correctly.</li> </ul>  |
| <b>No audio at digital output</b>  | <ul style="list-style-type: none"> <li>– Check the digital connections.</li> <li>– Check if your receiver can decode MPEG-2 or DTS and if not, please make sure the digital output is set to PCM.</li> <li>– Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>  |
| Visit us at <a href="http://www.philips.com/support">www.philips.com/support</a> for service support |   |

## Troubleshooting

English

| Problem  | Solution   |
|--|--|
| <b>Disc can't be played</b>  | <ul style="list-style-type: none"> <li>– The DVD+R/CD-R must be finalised.</li> <li>– Ensure the disc label is facing up.</li> <li>– Check if the disc is defective by trying another disc.</li> <li>– If you have recorded a Picture CD or MP3 CD yourself, ensure that your disc contains at least 10 pictures or 5 MP3 tracks.</li> <li>– Region code incorrect.</li> </ul> |
| <b>Picture freezes momentarily during playback</b>                         | <ul style="list-style-type: none"> <li>– Check the disc for fingerprints/scratches and clean with a soft cloth wiping from centre to edge.</li> </ul>  |
| <b>No return to start-up screen when disc is removed</b>                   | <ul style="list-style-type: none"> <li>– Reset the unit by switching the player off, then on again.</li> </ul>   |
| <b>The player does not respond to the Remote Control</b>                   | <ul style="list-style-type: none"> <li>– Aim the Remote Control directly at the sensor on the front of the player.</li> <li>– Reduce the distance to the player.</li> <li>– Replace the batteries in the Remote Control.</li> <li>– Re-insert the batteries with their polarities (+/– signs) as indicated.</li> </ul>   |
| <b>Buttons do not work</b>   | <ul style="list-style-type: none"> <li>– To completely reset the player, unplug the AC cord from the AC outlet for 5-10 seconds.</li> </ul>  |
| <b>Player does not respond to some operating commands during playback.</b> | <ul style="list-style-type: none"> <li>– Operations may not be permitted by the disc. Refer to the instructions of the disc jacket.</li> </ul>   |
| <b>DVD Player cannot read CDs/DVDs</b>                                     | <ul style="list-style-type: none"> <li>– Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD Player for repair.</li> </ul>   |
| <b>Menu items cannot be selected</b>                                       | <ul style="list-style-type: none"> <li>– Press STOP twice before selecting System Menu.</li> <li>– Depending on the disc availability, some menu items cannot be selected.</li> </ul>  |

Visit us at [www.philips.com/support](http://www.philips.com/support) for service support

## Specifications

### TV STANDARD (PAL/50Hz) (NTSC/60Hz)

|                 |               |            |
|-----------------|---------------|------------|
| Number of lines | 625           | 525        |
| Playback        | Multistandard | (PAL/NTSC) |

### VIDEO PERFORMANCE

|              |                  |
|--------------|------------------|
| DA Converter | 12 bit, 108 mHz  |
| YPbPr        | 0.7 Vpp — 75 ohm |
| Video Output | 1 Vpp — 75 ohm   |

### VIDEO FORMAT

|                     |                      |
|---------------------|----------------------|
| Digital Compression | MPEG 2 for DVD, SVCD |
|                     | MPEG 1 for VCD       |

| DVD                 | 50Hz       | 60Hz       |
|---------------------|------------|------------|
| Horiz. resolution   | 720 pixels | 720 pixels |
| Vertical resolution | 576 lines  | 480 lines  |

| VCD                 | 50Hz       | 60Hz       |
|---------------------|------------|------------|
| Horiz. resolution   | 352 pixels | 352 pixels |
| Vertical resolution | 288 lines  | 240 lines  |

### AUDIO FORMAT

|         |                    |  |
|---------|--------------------|--|
| Digital | MPEG/ AC-3/<br>PCM | compressed Digital<br>16, 20, 24 bits<br>fs, 44.1, 48, 96 kHz            |
|         | MP3(ISO 9660)      | 96, 112, 128, 256<br>kbps & variable<br>bit rate fs, 32, 44.1,<br>48 kHz |

Analog Sound Stereo  
Dolby Surround compatible downmix from Dolby Digital  
multi-channel sound

### AUDIO PERFORMANCE

|                         |   |
|-------------------------|---|
| DA Converter            | 24 bit, 192 kHz                               |
| DVD                     | fs 96 kHz 4Hz- 44kHz<br>fs 48 kHz 4Hz- 22kHz  |
| SVCD                    | fs 48 kHz 4Hz- 22kHz<br>fs 44.1kHz 4Hz- 20kHz |
| CD/VCD                  | fs 44.1kHz 4Hz- 20kHz                         |
| Signal-Noise (1kHz)     | > 90 dB                                       |
| Dynamic range(1kHz)     | > 90 dB                                       |
| Crosstalk (1kHz)        | > 80 dB                                       |
| Distortion/noise (1kHz) | > 70 dB                                       |
| MPEG MP3                | MPEG Audio L3                                 |

### CONNECTIONS

|                   |  |
|-------------------|--|
| YPbPr Output      | Cinch 3x   |
| Video Output      | Cinch (yellow)   |
| Audio Output(L+R) | Cinch (white/red)  |
| Digital Output    | 1 coaxial<br>IEC60958 for CDDA / LPCM<br>IEC61937 for MPEG 1/2,<br>Dolby Digital |

### CABINET

|                        |                      |
|------------------------|----------------------|
| Dimensions (w x h x d) | 360 x 37 x 265 mm    |
| Weight                 | Approximately 2.0 kg |

### POWER CONSUMPTION

|                                   |                      |
|-----------------------------------|----------------------|
| Power Supply Rating               | 110-240V;<br>50/60Hz |
| Power consumption                 | < 10 W               |
| Power consumption in Standby mode | < 0.8 W              |

*Specifications subject to change without prior notice*

## Glossary

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

**Aspect ratio:** The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

**AUDIO OUT Jacks:** Jacks on the back of the DVD System that send audio to another system (TV, Stereo, etc.).

**Bit Rate:** The amount of data used to hold a given length of music; measured in kilobits per seconds, or kbps. Or, the speed at which you record. Generally, the higher the bit rate, or the higher the recording speed, the better the sound quality. However, higher bit rates use more space on a Disc.

**Chapter:** Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

**Component Video Out Jacks:** Jacks on the back of the DVD System that send high-quality video to a TV that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

**Disc menu:** A screen display prepared for allowing selection of images, sounds, subtitles, multi-angles, etc recorded on a DVD.

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

**Dolby Digital:** A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right, center and subwoofer).

**DTS:** Digital Theatre Systems. This is a surround sound system, but it is different from Dolby Digital. The formats were developed by different companies.

**JPEG:** A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

**MP3:** A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

**Multichannel:** DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

**Parental Control:** A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

**PCM (Pulse Code Modulation):** A system for converting analog sound signal to digital signal for later processing, with no data compression used in conversion.

**Playback control (PBC):** Refers to the signal recorded on video CDs or SVCDs for controlling reproduction. By using menu screens recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

**Progressive Scan:** It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert the interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution.

**Region code:** A system for allowing discs to be played back only in the region designated beforehand. This unit will only play discs that have compatible region codes. You can find the region code of your unit by looking on the product label. Some discs are compatible with more than one region (or ALL regions).

**Title:** The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

**VIDEO OUT jack:** Jack on the back of the DVD System that sends video to a TV.