

Register your product and get support at
www.philips.com/welcome



CD250

CD255

SE250

SE255

Quick start guide

1 Connect

2 Install

3 Enjoy

PHILIPS

What's in the box



Handset



Base station
OR



Base station with
answering machine



 
Battery door



2 AAA rechargeable
batteries




Power supply

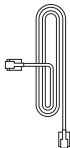

Line cord*



 User manual

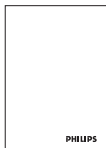

Guarantee



Quick Start Guide

*You may find in the box the line adaptor delivered separately from the line cord. **In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.**

In multihandset packs, you will find one or more additional handsets, battery doors, chargers with power supply units and additional rechargeable batteries.



WARNING: Always use the line cord, power supply and batteries that came with your phone.



Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

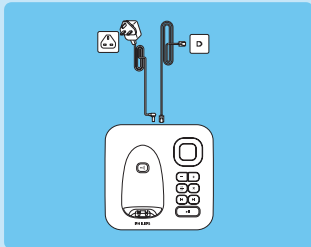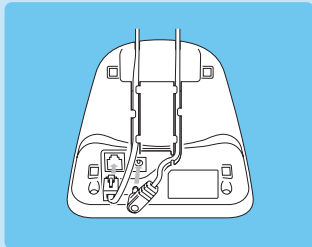

2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.




Install

Insert rechargeable batteries and charge


A

Insert batteries

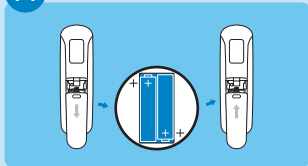

B

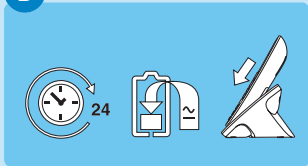

Charge handset for 24 hours





Configure your phone (if necessary)

1. Press to display the current country selection.
2. Scroll up and down to find your country.
3. Press to confirm your selection.
(**WAITING** will be displayed while the default line settings and menu language for the selected country are automatically configured.)
4. The product now goes to the **DATE/TIME** selection menu. Enter the current date (DD/MM) and press to confirm.
5. Enter the time (HH-MM) and press to confirm.



Make a call

Dial the number (maximum 24 digits) and press  or .

OR

Press  or  to take the line, and dial the number.

Answer a call

When the phone rings, press  or .

End a call



 

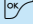 

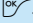 


To end a conversation, press .

Adjust earpiece or speaker volume

During a call, press  to select from **LEVEL 1** to **LEVEL 5**.

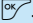

 
 
 
 
Set the ring melody

There are 10 ring melodies available on your handset.

1. Press  in idle mode, scroll  to **PERSONAL SET** and press .
2. Scroll  to **HANDSET TONE** and press , then scroll  to **RING TONES** and press .
3. Scroll  to your desired melody to play the melody.
4. Press  to set the ring melody.

A validation tone is emitted and the screen returns to the previous menu.

Store a contact in the phonebook

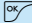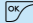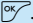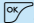


1. Press  in idle mode, scroll  to **PHONEBOOK** and press , press  to enter **NEW ENTRY**.
2. **ENTER NAME** is displayed on the screen.
3. Enter the name of the contact (maximum 12 characters) and press .
4. **ENTER NUMBER** is displayed on the screen.
5. Enter the number (maximum 24 digits) and press .

A validation tone is emitted.


Access phonebook


1. Press  in idle mode and scroll  to browse the phonebook.
2. To view the details, press the . Press  to display the remaining digits if the entry is more than 12 digits.


Call from the phonebook


1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press .
 - The call is initiated.


Listen to messages recorded on the answering machine (for CD255/SE255 only)


Press  on the base station to turn on the answering machine (the LED is turned on). The outgoing message is played.


Press  on the base station to play phone messages (the first recorded message will be played first).

Press  to skip the current message and play the next message.


Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).

Press   to adjust speaker volume during message playback.

Press  to delete the current message.

Long press  to delete all old messages.

Press  again to turn off the answering machine (the LED is turned off).

Refer to your User Manual for details about the answering machine functions.

Troubleshooting

For more information, please refer to the User Manual that came with your phone.

Problem

- There's no dialling tone!
- Caller does not hear me clearly!
- **SEARCHING** is displayed on handset and **Y** icon is blinking!
- Caller number is not displayed!

Solution

- No power: Check the connections.
- Batteries are empty: Charge the batteries.
- Move closer to the base station.
- Wrong line cord used: Use the line cord provided.
- Line adaptor may be required: If applicable, connect the line adaptor to the line cord.
- Move closer to the base station.
- Move the base station at least one metre away from any electronic appliances.
- Move closer to the base station.
- Make sure that your base station is on.
- Reset your unit and restart handset registration.
- Service is not activated: Check your subscription with your network operator.

Welcome to Philips!

Register your product and get support at
www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your phone.

Online Help

www.philips.com/support

©2008 Koninklijke Philips Electronics N.V.

All rights reserved

Reproduction in whole or in part is prohibited without the written consent of the copyright owner

CE 0168 

Printed in China

3111 285 41351 (GB)

UCZZ69927AZ(I)