

Quick Start Guide



 
Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?


You should find these items upon opening the box.



Remote Control



 1 x MP3 link cable



1 x AC power cable



Quick Start Guide



 
User Manual

Step A *Connect*

- 1 Connect the speaker cables.
- 2 Connect the AC power cable to the main unit and the wall socket.

Tip


See the User Manual for how to connect other equipment to this system.

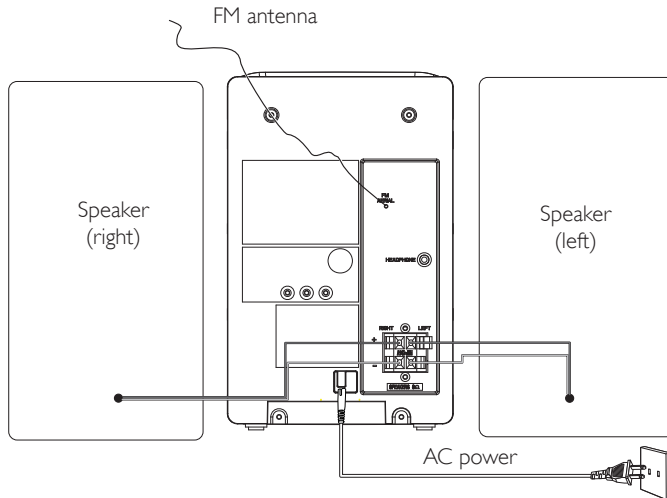

Step B *Setup*

Set clock

 
- 1 In the standby mode, press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to activate the clock setting mode.
- 2 Press **PRESET/ALBUM+/-** (or **ALB/PRESET+/-** on the remote control) repeatedly to select 12 hour or 24 hour format.
- 3 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.
→ The hour digits are displayed and begin to blink.
- 4 Press **PRESET/ALBUM+/-** (or **ALB/PRESET+/-** on the remote control) to set the hour.
- 5 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.
→ The minute digits are displayed and begin to blink.
- 6 Press **PRESET/ALBUM+/-** (or **ALB/PRESET+/-** on the remote control) to set the minute.
- 7 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.

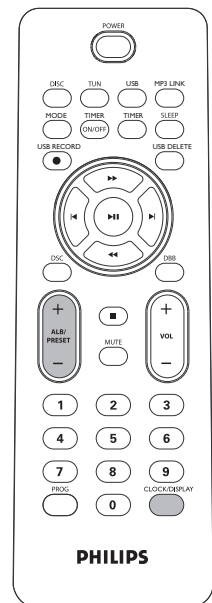

Step C *Enjoy*


Play disc

- 1 Press **SOURCE** (or **DISC** on the remote control) to select the disc source.
- 2 Lift the disc compartment door on the top panel to open the disc compartment.
- 3 Insert a disc with the printed side facing up, then close the disc compartment.
- 4 If the disc doesn't play, press **▶||**.
- 5 To stop play, press **■**.

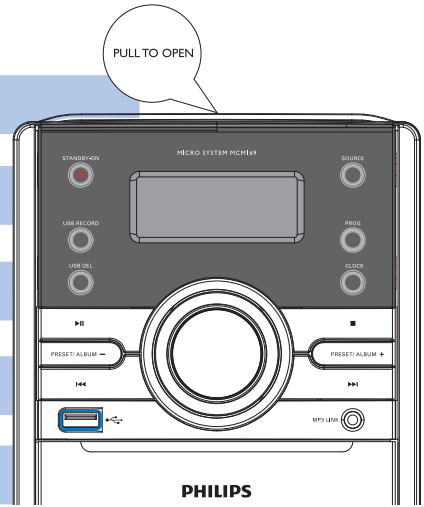 

Play from USB

 
With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select the USB source.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.igna commy nosto odiam

Step C *Enjoy*

Listen to radio

- 1 Press **SOURCE** (or **TUN** on the remote control) repeatedly to select FM or MW.
- 2 Press **PROG** for more than two seconds to program all available stations in order of waveband.
- 3 In tuner mode, press **PRESET/ALBUM +/-** (or **ALB/PRESET +/-** on the remote control) to select a preset number:

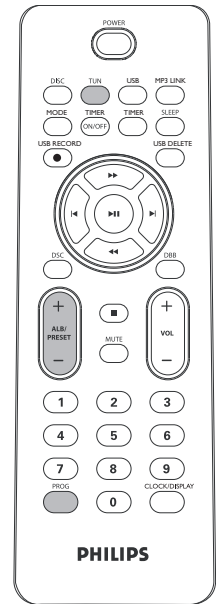

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



© Royal Philips Electronics N.V. 2009
All rights reserved.

<http://www.philips.com>

