

# Quick Start Guide

## DIGITAL VIDEO DISC RECORDER WITH DIGITAL TUNER DVDR3505/37

### Playable Discs

This unit is compatible to play back the following discs / files.

**DVD** is a trademark of DVD Format/Logo Licensing Corporation.

Playable discs	Logos	Playable discs	Logos
DVD-video		CD-DA (audio CD)	
DVD+RW		video CD	
DVD+R		CD-RW	
DVD+R Double Layer		CD-R	
DVD-RW (Finalized video mode discs only)		<b>Playable files</b>	<b>Media</b>
DVD-R (Finalized video mode discs only)		CD-DA	CD-RW/-R
		MP3	
		Windows Media™ Audio	
		JPEG	
		DivX*	CD-RW/-R DVD+RW/+R DVD-RW/-R

### Region Codes

The number inside the globe refers to region of the world. This unit can play back DVDs that are labeled for ALL regions or for region 1.



### Recordable Discs

This unit can record to DVD+RW, DVD+R, DVD-RW and DVD-R. DVD+R/DVD-R can only be recorded to once. DVD+RW/DVD-RW can be recorded to and erased many times.

• Following discs are recommended for good recording quality and are proven to be compatible with this unit. However, depending on the media condition the unit may not read the disc properly.

Verbatim DVD+R 8x, DVD+RW 4x, DVD-R 8x, DVD-RW 2x, JVC DVD-RW 4x, Maxell DVD+R 4x/8x/16x, DVD-R 8x/16x, SONY DVD+R 4x/8x/16x, DVD+RW 4x, TDK DVD+R 4x/8x/16x

Performance of any other discs are not guaranteed.

• You can play back DVD+RW on most DVD players without finalizing. However, if you have added or deleted chapters, or made chapters hidden, you must perform "Make Edits Compatible" before being able to see those effects on other units (see page 83 in the user manual). To play back discs other than DVD+RW on other DVD players, you will need to finalize.

### Unrecordable Discs

- DVD-RW recorded in the mode other than +VR is not recordable on this unit unless you erase all contents in the disc (see page 82 in the user manual).
- DVD-R recorded in the mode other than +VR is not recordable on this unit.


Logo	Attributes
	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SLP mode): 360 minutes (4.7GB) (for 12cm) 108 minutes (1.4GB) (for 8cm)
	8cm/12cm, single-sided, single layer disc Approx. max. recording time (SLP mode): 360 minutes (4.7GB) (for 12cm) 108 minutes (1.4GB) (for 8cm)

## 1

## Connections

### Basic Connection


- 1) Disconnect the power cord of your TV from the AC outlet.
- 2) Disconnect RF coaxial cable from antenna input jack of your TV.
- 3) Make the connection as illustrated below.

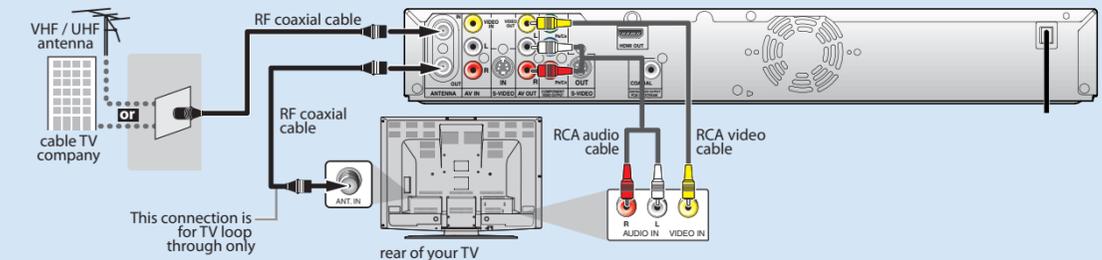

- 4) Plug in the power cords of the devices to the AC outlet.

### Connection Using RF Modulator

- 1) Disconnect the power cords of the devices from the AC outlet.
- 2) Make the connection as illustrated below.

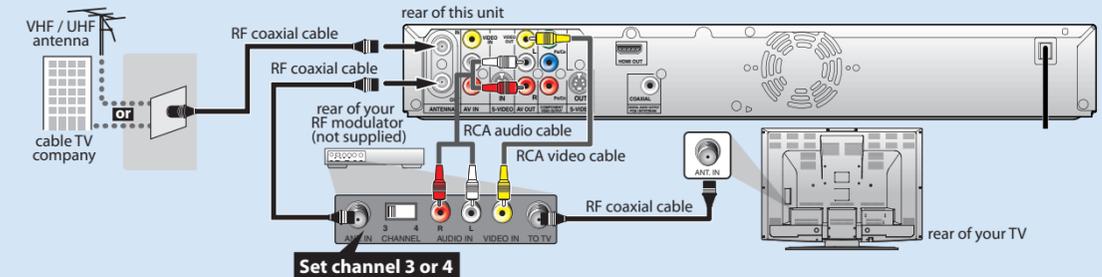


Set channel 3 or 4

- 3) Set your RF modulator's channel 3/4 switch to either 3 or 4.
  - 4) Plug in the power cords of the devices to the AC outlet.
  - 5) Turn on your TV and choose the same channel as you set the RF modulator's channel 3/4 switch to.
- RF modulator is not supplied with this unit. You need to purchase it at your local store.

### Connection to a Cable / Satellite Box

- 1) Disconnect the power cords of the devices from the AC outlet.
- 2) Make the connection as illustrated below.

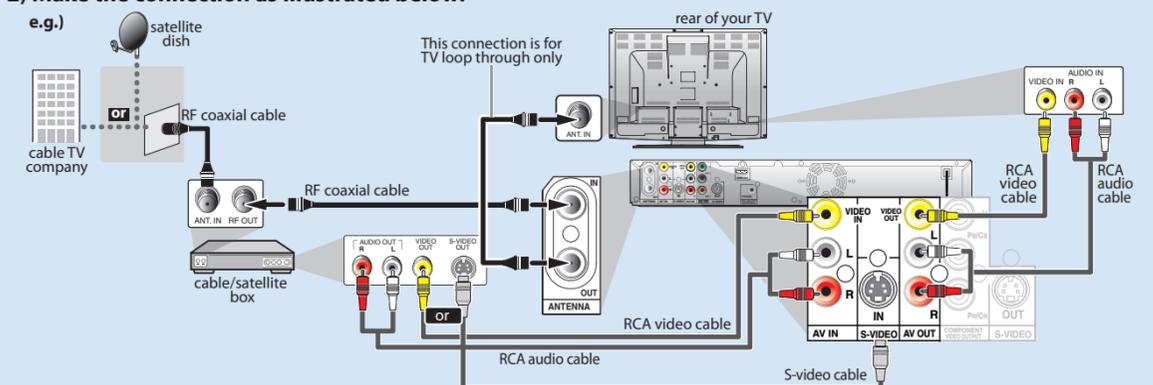

- 3) Plug in the power cords of the devices to the AC outlet.
- \* Refer to the user manual for other connection methods.

### Finding the Viewing Channel

- 1) Press [STANDBY-ON] to turn on the unit.
- 2) Turn on your TV. If connected to your VCR, make sure it is switched off or in standby mode before proceeding.
- 3) Press "2" on the TV's remote control, then press channel down button repeatedly until you see the "Initial Setup" menu. This is the correct viewing channel (external input channel) for the recorder. For some TVs, there may be a button on the TV's remote control that accesses the external input channel. It may be labeled "SOURCE", "AV", or "SELECT". In such case, press it repeatedly.

Follow to the back side of this sheet.

## 2

## Initial Setting

You need to follow these steps when you turn on this unit for the first time.

Press [STANDBY-ON ].

 
Turn the TV on. Select the input to which the unit is connected.

Use [▲ / ▼] to select your desired language, then press [OK] to set language.

Use [▲ / ▼] to select the type of broadcasting signal, then press [OK]. The unit will start getting channels available in your area.

Press [OK] to activate "Clock Setting".

Use [◀ / ▶] to select an item to set, and use [▲ / ▼] to select the contents to suit your preference, then press [OK].



## 3

## Switching Analog Mode / Digital Mode

Press [DTV/TV] on the remote control.

The analog mode and digital mode switch alternately.

- When you switch the analog mode to the digital mode, it may take about 10 seconds until the digital channel selection is completed.

## 4

## Channel Selection

Select channels by using [CH + / -] or [the Number buttons] found on remote control.

- It may take up to 5 to 7 seconds to switch the digital TV channels.

## 5


## DVD Recording

### 5-1 Basic Recording

1 Press [OPEN/CLOSE ] to open the disc tray and insert your disc with its label facing up.

Align the disc to the disc tray guide.

\* Make sure the disc is compatible with this unit. (Refer to page 35 in the user manual for the list of compatible discs.)

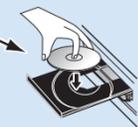

2 Press [REC MODE] to select a recording mode.

#### Recording Mode

Recording mode	Recording time		Video/sound quality
	8cm Disc	12cm Disc	
HQ (1Hr)	18 min	60 min	Good ↑ ↓ Poor
SP (2Hr)	36 min	120 min	
SPP (2.5Hr)	45 min	150 min	
LP (3Hr)	54 min	180 min	
EP (4Hr)	72 min	240 min	
SLP (6Hr)	108 min	360 min	

3 Use [CH + / -] or [the Number buttons] to select a desired channel to record.

4 Press [REC ] to start recording.

5 Press [STOP ] to stop recording.

#### To set one-touch timer recording (OTR)...

This is a simple way to set the recording time in blocks of 30 minutes.

Press [REC ] repeatedly until the desired recording time (30 minutes to 6 hours) appears on the TV screen. One-touch timer recording will start.

- To cancel one-touch timer recording within the specified time, press [STOP ].

### 5-2 Timer Recording

You can program the unit to record up to 12 programs within a month in advance. Daily or weekly program recordings are also available.

**Before recording, make sure**

- Set the clock before setting a timer programming.
- Insert a recordable disc with enough recordable space.


1 Press [TIMER].

2 Use [▲ / ▼] to select "New Program", then press [OK].


3 Set a timer programming.

4 Press [OK].


5 Press [STANDBY-ON ] to set a timer programming.

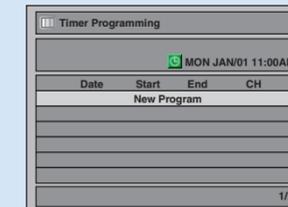


Set the date.

 

Set start and end time.

 

 Select a desired input mode and the channel to record.



Select a recording mode.



Refer to "How to select a channel number for the timer recording" on page 41 in the user manual for more details.

## 6

## Playback

1 Press [OPEN/CLOSE ].

2 Insert your disc with its label facing up.

3 Press [PLAY ] to start playback.

4 Press [STOP ] to stop playback.



You will need to finalize DVD+R, DVD-RW or DVD-R to play them back on other DVD players (see page 51 in the user manual).