


Quick start guide


- A Setup
- B Connect
- C Enjoy



What's in the box

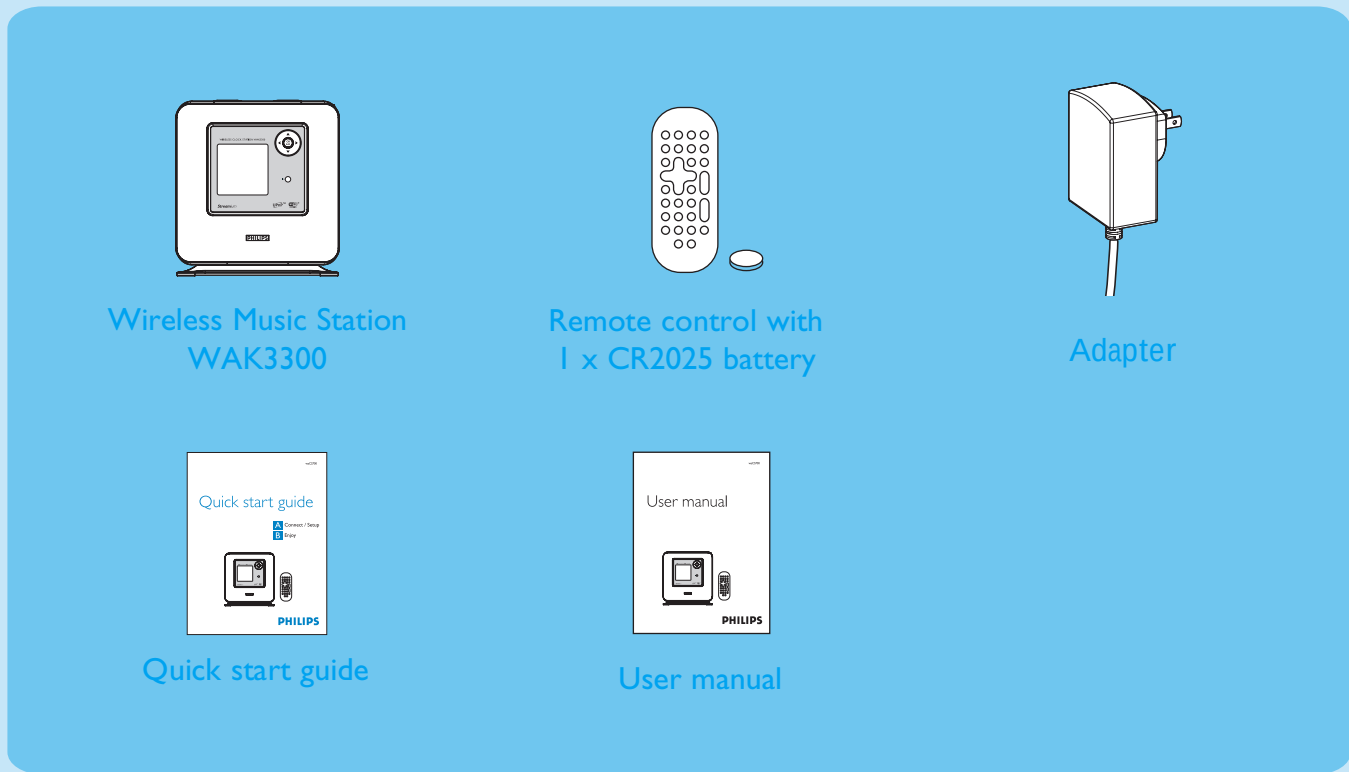

What else you'll need

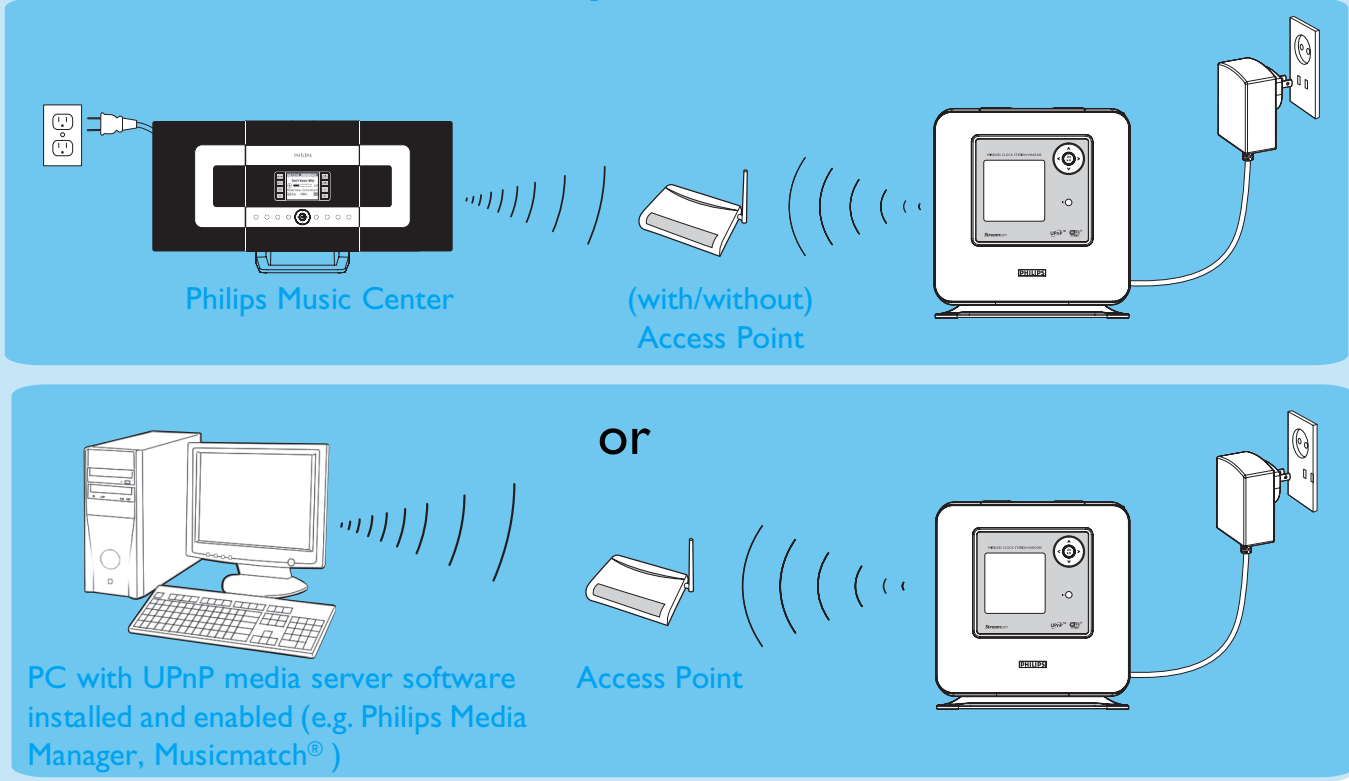

A

Setup

Select languages & Set clock

1

Connect to power supply

a. To connect to Philips Music Center, place the WAK3300 beside it;
To connect to a UPnP-enabled music server through an Ethernet cable, see **User Manual**

b. Connect power cord of the WAK3300 to the wall outlet

1

Select languages

Press the navigation controls ▲ or ▼ and ► to select your desired language

1

Set clock

Press the navigation controls ▲ or ▼ and ► to select current **Month, Date** and **Year**

2

Press ▲ or ▼ and ► to select current day of the week

3

Press ▲ or ▼ and ► to select 24-hour or 12-hour clock

4

Press ▲ or ▼ and ► to set the hour, followed by the minute

• The display shows **Philips Music Center** (see **B₁**)

UPnP Music Server (see **B₂**)

B₁

Connect

Connect to Philips Music Center

1

Press the navigation controls ▲ or ▼ and ► to select **Philips Music Center**

• The display shows **Searching for Center**

2

Check that the Center is switched on and is using the **HD** source

3

On Center

Select **Add New Station**

a. Press **MENU** to enter the MENU screen

b. Press the navigation controls ▲ or ▼ and ► to enter **Station Mgmt** menu

c. Press ▲ or ▼ and ► to select **Add New Station**

• You will enter **Installation Mode**. Searching for the new Station starts

4

On the Center, press **STOP** ■ when all the Stations are found

On **WAK3300**

Press ▲ or ▼ and ► to select

• The display shows the connected music source (e.g. WAC700)

5

Unplug the WAK3300 and relocate it as desired

IMPORTANT!

• Avoid installing the set between thick walls. Separating the Center and WAK3300 by 2 or more walls may result in poor streaming connection.

• For better Wi-Fi reception, you can adjust the Wi-Fi antenna or the location of the Center and WAK3300 (e.g. shorten the distance between Center and WAK3300).

B₂

Connect

Connect to a UPnP-enabled music server

1

a. Check that you have turned on a wireless Access Point (not supplied)

b. Check that the UPnP device is connected to the Access Point

2

On the WAK3300, press the navigation controls ▲ or ▼ and ► to select **UPnP Music Server**

• The **Select Network** screen appears

• **Searching...** appears on the display when the set is searching for available networks

• The list of available networks appears

3

a. Press the navigation controls ▲ or ▼ and ► to select the network where the UPnP device is located

b. Input the WEP key using the alphanumeric keys if you have already set a WEP key for the UPnP device's network

c. Select **Auto (DHCP)**

d. Select **No** when the **Enable Proxy Server** screen appears

e. Select **Yes** to apply the settings

• The WAK3300 will be restarted

f. Press ▲ or ▼ and ► to select

• The display shows the connected music source (e.g. my PC)

4

To select another network

a. Press **HOME** to enter the main menu

b. Press the navigation controls ▲ or ▼ and ► to select **Setting**

c. Use the navigation controls ▲ or ▼ and ► to select **Network** followed by **Quick Setup**

5

Follow the above **Step 3**

Tips:

• Check that IP broadcasting and DHCP are enabled in your Access Point.

* Universal Plug and Play (UPnP™) builds on standard networking technologies and provides standardized protocols for a wide variety of home and small business devices. It allows easy interoperability of all the devices supporting the networking technologies.



Enjoy

Stream music between WAK3300 and connected music source

1 On Center / the UPnP device

Check that Philips Music Center or the UPnP music server is switched on

2 On WAK3300

a. Press **HOME** to switch on the set

b. Press **MUSIC** to select music source

The display shows the connected music source

3

Press **▶** to enter the music source

The display shows the music library on the music source

4

Use the navigation controls **▲** or **▼** and **▶** to select your playback options

5

Press **OK/II** to start playback

Playback starts from current selection

6

To change your playback options,

a. Press **▲** to return to the previous screen of option list

b. Press **◀** repeatedly to enter previous option lists

c. Press **▲** or **▼** repeatedly and **▶** to select an option

7

Press and hold **STANDBY-ON** to switch off the set

Tips:

The display shows the music library on the music source

Turn off the firewall running on the UPnP-enabled PC.



Listen to FM radio

1

a. Press **HOME** to switch on the set

b. Press **TUNER** to select FM radio source

2

Select **Autostore**,

a. Press **MENU** to enter the function menu

b. Use the navigation controls **▲** or **▼** and **▶** to select **Autostore**

Display shows **Autostore**

After all the available stations are stored, the display shows the total number of stored stations

The last selected station resumes playback

3

Press **▶** to enter the list of preset stations

4

Use the navigation controls **▲** or **▼** and **▶** to select the desired station

5

Press and hold **STANDBY-ON** to switch off the set



Use alarm

Set the alarm

1

Check that the clock settings on the WAK3300 are correct

2

a. Press **HOME** to enter the main menu

b. Press the navigation controls **▲** or **▼** and **▶** to enter the **Alarm** menu

3

In **Alarm on**, press **▲** or **▼** and **▶** to turn on the alarm

The icon appears

4

In **Alarm time**, Press the navigation controls **▲** or **▼** repeatedly to set the hour, and then the minute

5

In **Repeat**, Press the navigation controls **▲** or **▼** repeatedly to choose to repeat the alarm only once (**Once**), every day (**Daily**), on each weekday (**Weekdays**) or on each weekend (**Weekend**)



Use alarm

6

In **Source**, Press the navigation controls **▲** or **▼** repeatedly to select the alarm sound source: music from the **Music** source, a preset radio station from the **Radio** source, or just a buzzer alarm

Music:

a. Use the navigation controls **▲** or **▼** and **▶** to select your desired track

b. Create an alarm music library:

Fill all days: uses the selected song for all days

Auto Select: uses the selected song for the first day; and for the other days, randomly assigns different songs

c. Press **OK** to confirm

Radio:

a. Use the navigation controls **▲** or **▼** and **▶** to select your desired preset radio station (see **User Manual, FM radio: Programming radio stations**)

b. Press **OK** to confirm

To deactivate the alarm

1

When the alarm sounds, press **SNOOZE**

The alarm will be muted for 8 minutes

Or

When the alarm sounds, press **REPEAT ALARM** on the remote control

The alarm stops and repeats itself after a set period (see **User Manual, Setting alarm: Set repeat mode**)

Or

Press the **ALARM ON/OFF** button on the set

The icon disappears

Need help?

Visit us at www.philips.com/support or call our helpdesk

Country	Helpdesk	Tariff / min	Keep ready
österreich	0820 901115	€0.20	Das Kaufdatum, Modellnummer und Seriennummer
Belgique	070 253 010	€0.17	La date d'achat la référence et le numéro de série du produit
Canada	1-800-661-6162 (Francophone) 1-888-744-5477 (English / Spanish)	Free	Date of Purchase, Model number and Serial number
Danmark	3525 8761	Local tariff	Forbrugeren's indkøbsdato, type/model-og serienummer
Suomi	09 2290 1908	Local tariff	Ostopäivä ja tarkka mallinnumero ja sarjanumero
France	08 9165 0006	€0.23	La date d'achat la référence et le numéro de série du produit
Deutschland	0180 5 007 532	€0.20	Kaufdatum, Modellnummer, Seriennummer
Ελλάδα	0 0800 3122 1223	Free	Την ημερομηνία αγοράς και Τον ακριβή κωδικό μοντέλου και Τον αριθμό σειράς του προϊόντος σας
Ireland	01 601 1161	Local tariff	Date of Purchase, Model number and Serial number
Italia	199 404 042	€0.21	La data di acquisto, numero di modello e numero di serie
Luxembourg	26 84 30 00	Local tariff	La date d'achat, la référence et le numéro de série du produit
Nederland	0900 0400 063	€0.20	De datum van aankoop, modelnummer en serienummer
Norge	2270 8250	Local tariff	Datoen da du kjøpte produktet & modellnummer & serienummeret
Portugal	2 1359 1440	Local tariff	A data de compra, número do modelo e número de série
España	902 888 785	€0.15	Fecha de compra, número de modelo y número de serie
Sweden	08 632 0016	Local tariff	Inköpsdatum, modellnummer och serienummer
Schweiz	02 2310 2116		Das Kaufdatum und Modellnummer und Seriennummer
UK	0906 1010 017	£0.15	Date of Purchase, Model number and Serial number
USA	1-888-744-5477	Free	Date of Purchase, Model number and Serial number

2006 © Koninklijke Philips Electronics N.V.
All rights reserved.

www.philips.com