

Philips  
CD Soundmachine

Red

AZ100R



## Enjoy music wherever you go

You take pleasure in the simple things in life and delight in convenience. The compact and portable Philips CD soundmachine lets you indulge in the pleasures of enjoying your favorite music with the help of easy-to-use functions.

### Enjoy your music from multiple sources

- Play CD, CD-R and CD-RW
- FM tuner for radio enjoyment

### Easy to use

- CD Shuffle/Repeat for personalized music enjoyment
- MP3 Link for portable music playback

# PHILIPS

# Specifications

## Audio playback

- Playback media: CD, CD-R, CD-RW
- Disc playback modes: fast forward/backward, next/previous track search, repeat/shuffle/program

## Convenience

- Loader type: top

## Tuner/Reception/Transmission

- Tuner bands: FM
- Antenna: FM antenna

## Sound

- Volume control: rotary (analogue)
- Output power: 2 x 1 W RMS

## Loudspeakers

- No. of built-in speakers: 2

## Rewritable



## Connectivity

- MP3 Link: 3.5mm stereo line in

## Power

- Battery type: C size (LR14)
- Battery voltage: 1.5 V
- Number of batteries: 6
- Power type: AC Input

## Dimensions

- Packaging depth: 159 mm
- Packaging height: 244 mm
- Packaging width: 262 mm
- Main unit depth: 212 mm
- Main unit height: 131 mm
- Main unit width: 245 mm
- Weight incl. Packaging: 1.5 kg
- Weight: 1.1 kg

# Highlights

## CD Shuffle/Repeat



The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music played in the same order all the time. After loading your favorite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

## MP3 Link



The MP3 link connectivity allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the MP3 link is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

