


Quick start guide
快速入门指南

SA3CNT08
SA3CNT16

Quick start guide


Register your product and get support at
www.philips.com/welcome

PHILIPS

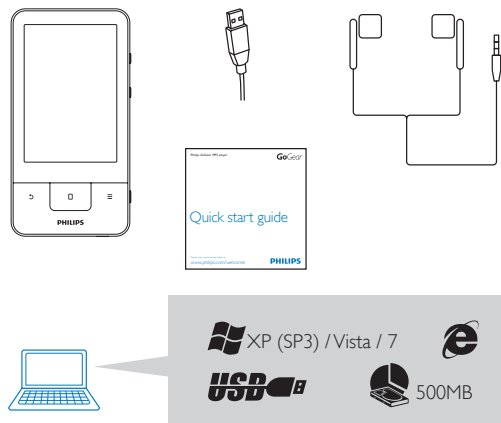


Navigate

页面导航

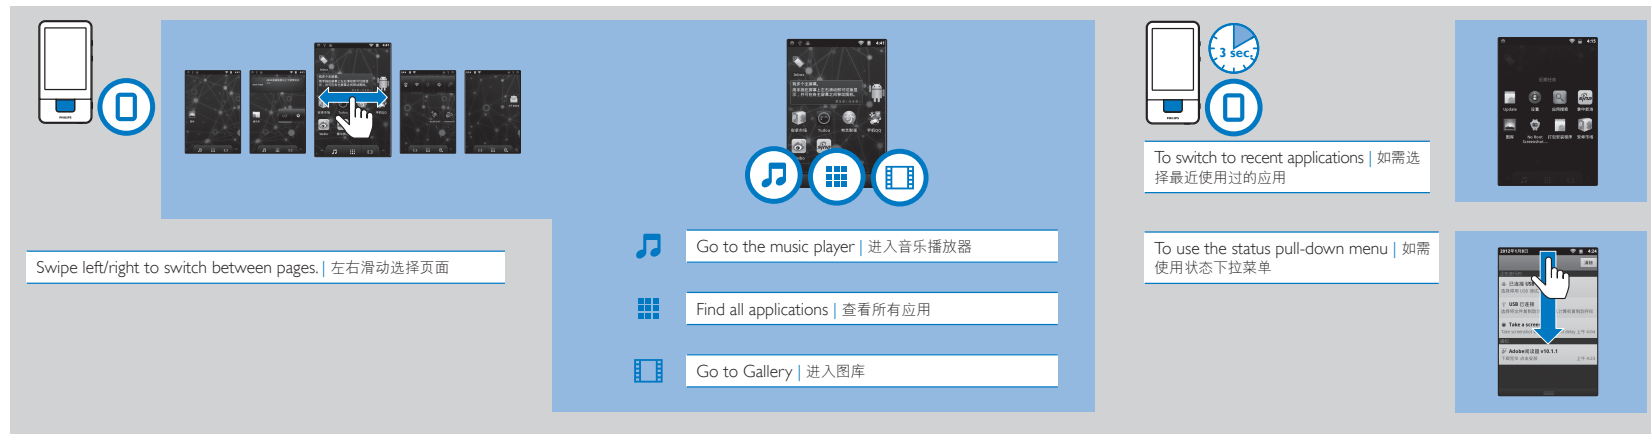


Organize 页面管理

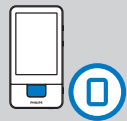

To organize and manage icons, shortcuts, widgets, and wallpapers | 如需管理主屏幕上的图标、捷径、工具窗口及墙纸

Relocate | 移动

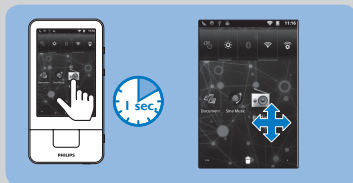


Remove | 移除



Add | 添加



Connect to Wi-Fi 连接Wi-Fi

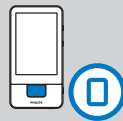

Tap to switch on Wi-Fi. Tap to connect to an available Wi-Fi network. | 点击 开启Wi-Fi。点击 连接到一个可用的Wi-Fi网络。

Connect to PC 连接PC电脑



Switch on the device. Tap on the pop-up screen to switch on the USB storage. | 开启本机。点击弹出屏幕开启USB存储设备。


HiMarket 安卓市场

To download applications | 如需下载应用





Go to to search for, download, and install applications. | 进入 搜索、下载、安装应用。

To remove applications | 如需删除应用

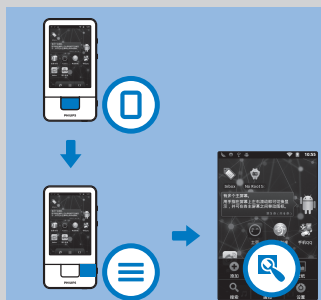


More information 更多信息

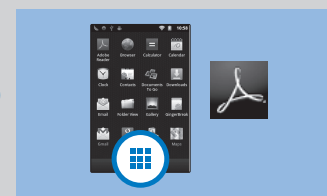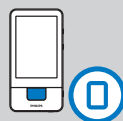

To read the User Manual, go to > User Manuals. | 如需阅读用户手册，点击选择 > User Manuals (用户手册)。

? Help 帮助

Device does not respond to the pressing of keys | 本机对按键操作无反应

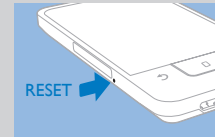

See support information in the user manual for more. | 详情请参阅用户手册中的支持信息。