



AZ1308



PHILIPS

1 Choosing Power Supply

a Connect the AC power cord to the **AC MAINS** inlet and the wall socket.

-OR-

b Open the battery door and insert **6 x C batteries** (not included).

2 Listening to the Radio

a Push the **source selector** to **TUNER**.

b Push **BAND** to **FM** or **MW**.

c Press and hold **PROG** until **Aut** flashes.

- Available stations are programmed.

d Press **ALB/PRE +, -** until the desired preset station is displayed.

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW and MP3.



a Push the **source selector** to **CD/MP3**.

b Lift the disc door at **LIFT TO OPEN** to open.


c Insert a disc with the printed side facing up and close the door.

d Press **▶||** to start playback.

e To stop disc playback, press **■**.

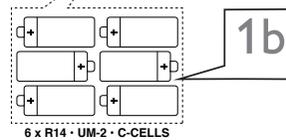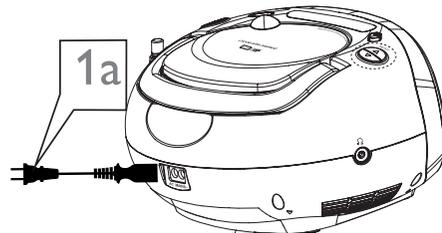

R-14, UM-2 or C-cells (not included)

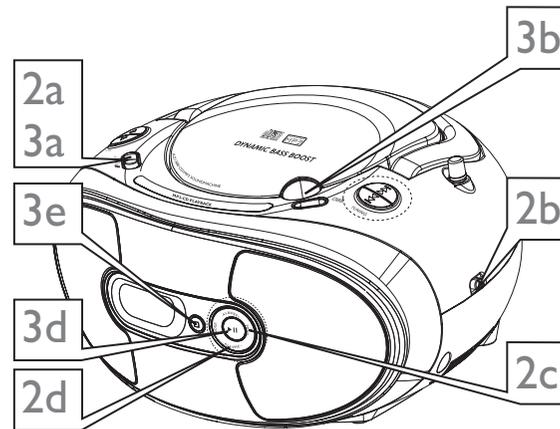

Source selector
Slide to select functions: **CD/MP3** or **TUNER**.

■
Press to stop disc playback or erase a disc program.

Display
Shows disc/tuner functions.

MODE
Press to select different play modes, such as **REPEAT** or **SHUFFLE** (random order).

PROG
Use to program disc tracks, or preset radio stations.

ALB/PRE +, -
Press to select an album, or preset radio station.

▶||
Press to start or pause disc playback.

AC MAINS
Inlet for power cord.

Battery door

LIFT TO OPEN
Lift to open the disc door.

Telescopic antenna
Improves FM reception.

TUNING ◀◀ ▶▶
Skips & searches disc tracks backwards/ forwards;
Tunes to radio stations.

BAND
Selects **FM** or **MW**.

DBB
Press to turn the bass enhancement on/off.

VOLUME ▲, ▼
Press to adjust volume level.

3.5mm stereo headphone jack.

