

Quick Start Guide










Step A Connect

Step B Setup

Step C Enjoy

What's in the Box?

You should find these items upon opening the box.

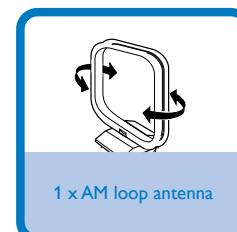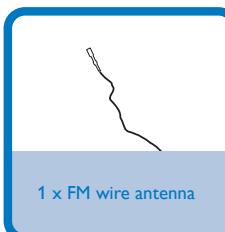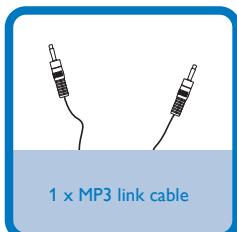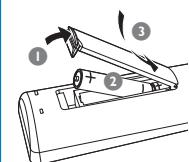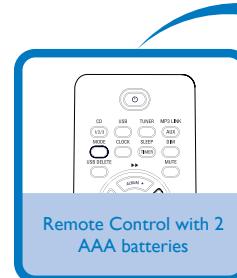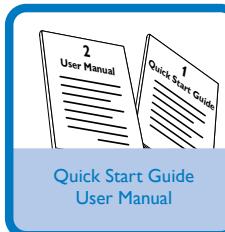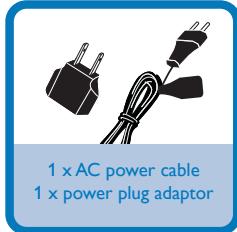

PHILIPS

Step A Connect

1 Connect the speaker cables.

2 Connect the AM and FM antennas.


3 Connect the supplied AC power cable to the main unit and the wall socket.

Note

If your power supply voltage is 110V-127V, adjust the voltage selector (on the back of the main unit) to 110V-127V.

Tip

See the User Manual on how to connect other equipment to this Mini Hi-Fi.

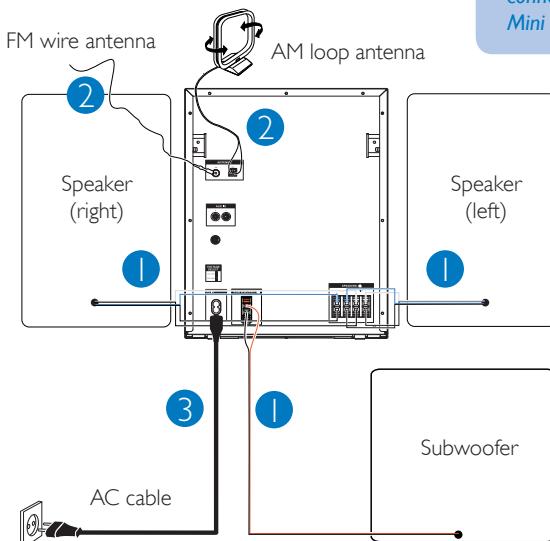

Step B Setup

Set clock

1 In the standby mode, press PROG/CLOCK (or CLOCK on the remote control) to activate the clock setting mode.
→ The 12 hour or 24 hour format is displayed.


2 Press ALBUM/PRESET +/- (or ALBUM +/-◀▶ on the remote control) repeatedly to select 12 hour or 24 hour format.

3 Press PROG/CLOCK (or CLOCK on the remote control) to confirm.
→ The clock digits are displayed and begin to blink.

4 Press ALBUM/PRESET +/- (or ALBUM +/-◀▶ on the remote control) to set the hour.

5 Press ▲▼ (or TITLE+/-◀▶ on the remote control) to set the minute.


6 Press PROG/CLOCK (or CLOCK on the remote control) to confirm.

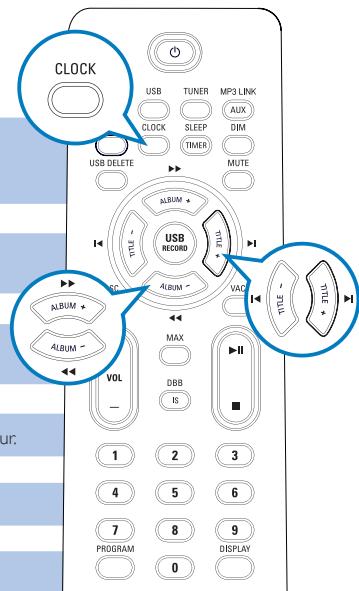

Step C Enjoy

Play disc

- 1 Press **DISC 1/2/3** (or **CD 1/2/3** on the remote control) to select the disc source.

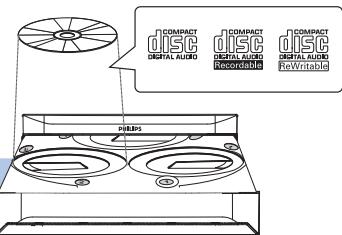


- 2 Press **OPEN/CLOSE** on the main unit to open the disc compartment.

- 3 Load up to two discs on the disc trays, with the printed side facing up
→ To load the third disc, press **DISC CHANGE** on the main unit to rotate to the disc tray.

- 4 Press **OPEN/CLOSE** to close the disc compartment.

- 5 Press **▶ II** to start play.

- 6 To stop play, press **■**.
To select a disc, press **DISC 1/2/3** (or **CD 1/2/3** on the remote control).

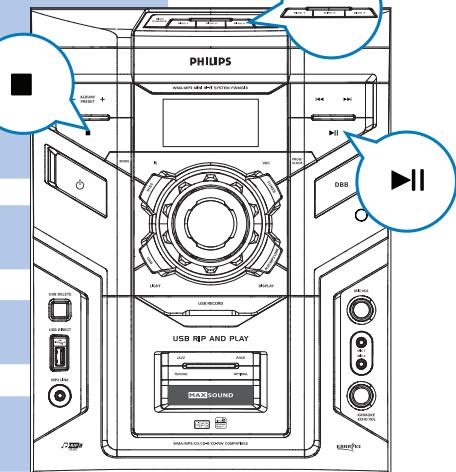


Listen to radio

- 1 Press **TUNER** repeatedly to select FM or AM.

- 2 Press **PROG/CLOCK** (or **PROGRAM** on the remote control) for more than two seconds to program all available stations in order of waveband.

- 3 Press **ALBUM/PRESET +/-** (or **TITLE +/-** on the remote control) to select a preset number.

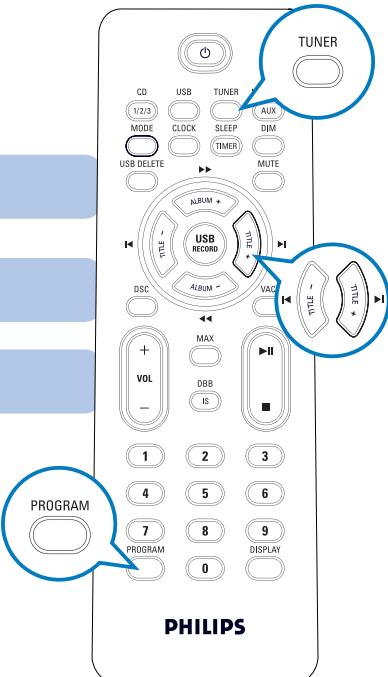

Play USB

With this Mini Hi-Fi, you can use USB flash memory (USB 2.0 or USB1.1),
USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Mini Hi-Fi).

- 1 Insert the USB device's USB plug into the socket  on the main unit.

- 2 Press **USB** to select the USB source.

- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

USB record

- 1 Insert the USB device's USB plug into the socket  on the main unit.

- 2 Prepare the source to record from.

- 3 Press **USB RECORD** to start recording.

- 4 To stop recording, press .

Tip

Detailed play features and additional functions are described in the supplied user manual.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>

