Always there to help you

Register your product and get support at www.philips.com/support



User manual



Contents

1	Important Safety	2 2 3 3 3
	3D health warning	3
	Care for your product	3
	Care of the environment	3
	Care of the environment	J
2	Your home theater	5 5 5
	Main unit	5
	Connectors	5
	Remote control	6
3	Connect and set up	8
	Speakers	8
	Connect to TV	9
	Connect audio from TV and other	
	devices	10
	Set up EasyLink (HDMI-CEC control)	11
	Connect and set up a home network	12
4	Use your home theater	13
	Access the home menu	13
	Discs	13
	Data files	15
	USB storage devices	15
	Audio, video, and picture options	16
	Radio	17
	MP3 player	18
	YouTube videos	18
	Picasa web albums	19
	Smartphone control	19
	Browse PC through DLNA	20
	Choose sound	22
5	Change settings	23
J	Change settings Picture	23
		23
	Sound	23
	Language	25
	Parental control	25
	Energy saving Apply factory settings	25
	ADDIV IACTORY SETTINGS	/h

6	Lladata coftwara	27
0	Update software Check software version	27
	Update software through the Internet	27
	Update software through USB	27
_		
7	Product specifications	29
8	Troubleshooting	32
9	Notice	34
	Copyright	34
	Open source software	34
	Compliance	34
	Trademarks	34
10	Language code	36
11	Index	37

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

 For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the

- wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
 Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

 The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer



This is CLASS II apparatus with double insulation, and no protective earth provided.

3D health warning

If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.

To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first.

Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six

years of age as their visual system is not fully developed yet.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.




Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit

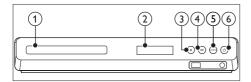


- Disc compartment
- 2 Display panel
- ③ ▲ (Open/Close)
 Open or close the disc compartment, or eject the disc.
- (4) ►II (Play/Pause)
 Start, pause or resume play.
- (5) SOURCE Select an audio or video source for the home theater.
- 6 Φ (Standby-On) Switch the home theater on or to standby.

Connectors

This section includes an overview of the connectors available on your home theater.

Front connectors

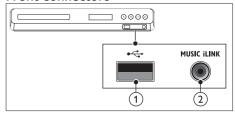


① •<→ (USB)

Audio, video or picture input from a USB storage device.

2 MUSIC iLINK Audio input from an MP3 player.

Rear connectors

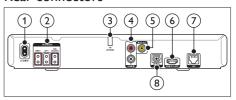

- 1 AC MAINS
 Connect to the power supply.
- SPEAKERS
 Connect to the supplied speakers and subwoofer.
- 3 ANTENNA FM
 Fixed FM antenna.
- AUDIO IN-AUX
 Connect to an analog audio output on the TV or an analog device.
- (5) VIDEO OUT

 Connect to the composite video input on the TV.
- 6 HDMI OUT (ARC)
 Connect to the HDMI input on the TV.

(7) LAN


Connect to the LAN input on a broadband modem or router.

(8) DIGITAL IN-OPTICAL

Connect to an optical audio output on the TV or a digital device.

Remote control

This section includes an overview of the remote control.

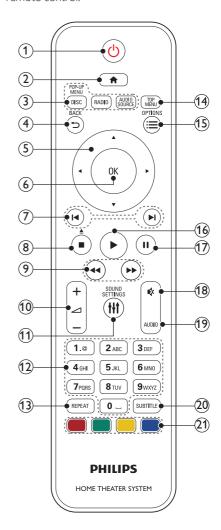

(1) \circlearrowleft (Standby-On)

- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds

to switch all connected HDMI CEC compliant devices to standby.

(2) ♠ (Home)

Access the home menu.

Source buttons

- DISC/POP-UP MENU: Switch to disc source. Access or exit the disc menu when you play a disc.
- RADIO: Switch to FM radio.
- AUDIO SOURCE : Select an audio input source.

(4) → BACK

- · Return to a previous menu screen.
- In radio mode, press and hold to erase the current preset radio stations.

5 Navigation buttons

- · Navigate menus.
- In radio mode, press left or right to start auto search.
- In radio mode, press up or down to tune the radio frequency.

6 OK

Confirm an entry or selection.

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.

8 ■ (Stop) / ≜ (Eject/Open/Close)

- Stop play.
- Press and hold for three seconds to open or close the disc compartment, or eject the disc.
- (10) 4+/- (Volume)
 Increase or decrease volume.
- (1) III SOUND SETTINGS
 Access or exit sound options.

(2) Alphanumeric buttons Enter values or letters (using SMS style entry).

13 REPEAT

Select or turn off repeat mode.

(14) TOP MENU

Access the main menu of a disc.

(15) **≡** OPTIONS

- Access more play options while playing a disc or a USB storage device.
- In radio mode, set a radio station.

16 ► (Play)

Start or resume play.

(17) **■ (**Pause)

Pause play.

18 **♦** (Mute)

Mute or restore volume.

(19) AUDIO

Select an audio language or channel.

(20) SUBTITLE

Select subtitle language for video.

(21) Color buttons

Select tasks or options for Blu-ray discs.

EasyLink controls

With Easylink, you can control your home theater and the TV with the following buttons on your home theater remote control.

- O (Standby-On): Press and hold to switch your home theater, TV and the connected devices to standby.
- (Play): When a video disc is in the disc compartment, wake up the TV from standby, and then play a disc.

3 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.



Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.


Speakers

Position, connect, and set up your speakers for best surround sound.

Position

Speaker position plays a critical role in setting up a surround sound effect.

For best results, place your speakers and the subwoofer as shown below.

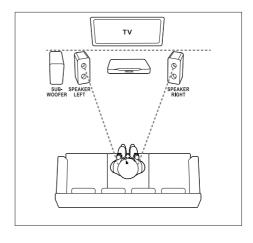



Note

 Surround sound depends on various factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics.

Follow these general guidelines, and then set up your speakers.

- 1 Seating position:
 This is the center of your listening area.
- 2 SPEAKER LEFT (speaker left) and SPEAKER RIGHT (speaker right) speakers: Place the left and right speakers in the front, and equidistant from the main unit in an arc, so that the two speakers are at same distance from your seating position. For best effect, point the speakers towards the seating position and place the speakers close to the ear level (when seated).
- 3 SUBWOOFER (subwoofer):
 Place the subwoofer at least one meter to the left or right of the TV. Leave about ten centimeter clearance from the wall.

Connect

Connect your speakers and the subwoofer to your home theater as described in the quick start guide.

Connect to TV

Connect your home theater to a TV to watch videos. You can listen to audio from TV programs through your home theater speakers. Use the best quality connection available on your home theater and TV.


Option 1: Connect to TV through HDMI (ARC)

Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, connect your home theater to the TV through the HDMI ARC connection for easy and quick setup. With HDMI ARC, you do not need an additional audio cable to play audio from TV through your home theater.

1 Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.

The **HDMI ARC** connector on the TV might be labeled **HDMI IN** or **HDMI**. For details on TV connectors, see the TV user manual.

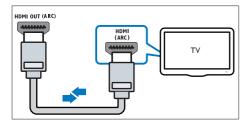

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
 - → When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.

If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up the audio' on page 11).

Option 2: Connect to TV through HDMI


Best quality video

If yourTV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

With a standard HDMI connection, you need an additional audio cable to play the audio from the TV through your home theater.

1 Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.

The HDMI connector on the TV might be labeled **HDMI IN**.

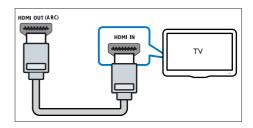

- 2 On your TV, turn on HDMI-CEC. For details, see the TV user manual.
 - When you play a disc on your home theater, the video is automatically displayed on TV and the audio is automatically played on the home theater.
- 3 To play audio from TV programs through your home theater, connect an additional audio cable.
- 4 If audio from the TV does not play automatically on your home theater, set up the audio manually (see 'Set up the audio' on page 11).



 If yourTV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV.


Option 3: Connect to the TV through composite video

Basic quality video

If your TV does not have HDMI connectors, connect your home theater to the TV through a composite connection. A composite connection does not support high-definition video. With a composite connection, you need an additional audio cable to play the audio from the TV through your home theater.

1 Using a composite video cable, connect the VIDEO OUT connector on your home theater to the composite video connector on the TV.

The composite video connector might be labeled AV IN, VIDEO IN, COMPOSITE, or BASEBAND.

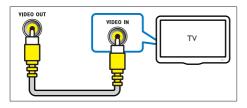

- 2 On your TV, switch to the correct video input.
- 3 To play audio from TV programs through your home theater, connect an additional audio cable.

On your home theater, press **SOURCE** repeatedly to select the correct audio input.

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.

Use the best quality connection available on your TV, home theater, and other devices.




Note

 When your home theater and TV are connected through HDMI ARC, an audio connection is not required.

Option 1: Connect audio through a digital optical cable

Best quality audio


- Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device.
 - The digital optical connector might be labeled **SPDIF** or **SPDIF OUT**.

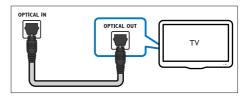

Option 2: Connect audio through analog audio cables

Basic quality audio

1 Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device.

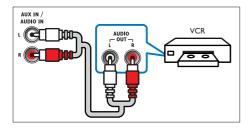

Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.



Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [EasyLink] > [On].
- 4 On your TV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.

 On your TV, set the audio output to 'Amplifier' (instead of TV speakers).
 For details, see the TV user manual.

EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): When a video disc is in the disc compartment, press ▶ (Play) to wake up the TV from standby, and then play a disc.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [System Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Input Mapping] (Audio input mapping): If system audio control does not work, map the connected device to the correct audio input connector on your home theater (see 'Set up the audio' on page 11).



Note

To change the EasyLink control settings, press
 (Home), select [Setup] > [EasyLink].

Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, check that you have enabled Easylink on all the devices (see 'Enable EasyLink' on page 11). Then, set up the EasyLink audio control.

1 Press ♠ (Home).

- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [System Audio Control] > [On].
 - To play the audio from the TV speakers, select [Off], and skip the following steps.
- 4 Select [EasyLink] > [Audio Input Mapping].
- Follow the onscreen instructions to map the connected device to the audio inputs on your home theater:
 - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

Connect and set up a home network

Connect your home theater to a home network with internet access and enjoy:

- YouTube leanback
- Picasa web albums
- BD-Live applications
- Software update



Caution

 Familiarize yourself with the network router and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.


Before you start

- For software updates, make sure that the network router has access to the Internet with high-speed connection and is not restricted by firewalls or other security systems.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

Set up the wired network

What you need

- A network cable (RJ45 straight cable).
- A network router (with DHCP enabled).

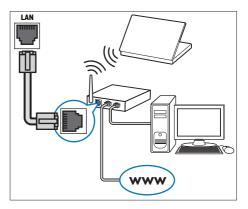

- 1 Using a network cable, connect the LAN connector on your home theater to the network router.
- Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Network] > [Network Installation] > [Wired (Ethernet)].
- Follow the onscreen instructions to complete the setup.
 - If connection fails, select [Retry], and then press OK.
- 6 Select [Finish], and then press OK to exit.
 - To view the network settings, select [Setup] > [Network] > [View Network Settings].

4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater.

Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

- 1 Press ♠ (Home).
 - → The home menu is displayed.
- Press the Navigation buttons and OK to select the following:
 - [play Disc]: Start disc play.
 - [browse USB]: Access the USB content browser
 - [Picasa]: Access Picasa web albums.
 - [YouTube]: Access YouTube Leanback page.
 - [browse PC]: Access the computer content browser.
 - [Setup]: Access menus to change video, audio and other settings.
- 3 Press ♠ (Home) to exit.

Discs

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos, videos, and music.

1 Insert a disc into the home theater.

- 2 If the disc does not play automatically, press DISC or select [play Disc] from the home menu.
- 3 Use the remote control to control play (see 'Remote control' on page 6).
 - It is normal to hear a little noise when you play a Blu-ray disc. This does not mean that your home theater is faulty.

Play buttons

Button	Action	
Navigation buttons	Navigate menus.	
OK	Confirm an entry or selection.	
► (Play)	Start or resume play.	
II	Pause play.	
	Stop play.	
 ◀ / ▶	Skip to the previous or next track, chapter or file.	
44 / >>	Fast backward or fast forward. Press repeatedly to change the search speed.	
AUDIO	Select an audio language or channel.	
SUBTITLE	Select subtitle language for video.	
DISC/ POP-UP MENU	Access or exit the disc menu.	
≡ OPTIONS	Access the advanced options when you play your audio, video, or media files.	
REPEAT	Select or turn off repeat mode.	

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press III SOUND SETTINGS.
- 2 Select AUD SYNC, and then press OK.
- 3 Press the Navigation buttons (up/down) to synchronize the audio with the video.
- 4 Press OK to confirm.

Play Blu-ray 3D disc

Your home theater can play Blu-ray 3D video. Read the 3D health warning before playing a 3D disc.

What you need

- A 3DTV
- A pair of 3D glasses that are compatible with your 3DTV
- A 3D Blu-ray video
- A high speed HDMI cable
- 1 Using the high speed HDMI cable, connect your home theater to a 3D compatible TV.
- 2 Make sure that the 3D video setting is enabled. Press ♠ (Home), select [Setup] > [Video] > [Watch 3D video] > [Auto].
 - To play 3D discs in 2D mode, select [Off].
- 3 Play a Blu-ray 3D disc and put on the 3D glasses.
 - During video search and in certain play modes, the video is displayed in 2D.
 The video display returns to 3D when you resume play.

Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content such as commentaries in a small screen window. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View in the Blu-ray disc menu.
- While you play the movie, press OPTIONS.
 - → The options menu is displayed.
- 3 Select [PIP Selection] > [PIP].
 - Depending on the video, PIP menu [1] or [2] is displayed.
 - To disable Bonus View, select [Off].
- 4 Select [2nd Audio Language] or [2nd Subtitle Language].
- 5 Select the language, and then press OK.

BD-Live on Blu-ray

Access additional features on the Blu-ray discs with BD-Live content, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.
BD-Live services and content vary from disc to disc

What you need

- Blu-ray disc with BD-Live content
- a USB storage device, with at least 1 GB of memory
- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 12).
- 2 Connect a USB storage device to your home theater:
- 3 Press ♠ (Home) and select [Setup].
- 4 Select [Advanced] > [BD-Live Security] > [Off] to enable BD-Live.
 - To disable BD-Live, select [On].
- 5 Select the BD-Live icon in the disc menu, and then press **OK**.
 - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 6 Press the Navigation buttons to navigate BD-Live, and then press OK to select an option.



Note

To clear the memory on the storage device, press
 (Home), select [Setup] > [Advanced] > [Clear memory].

Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 29).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
 - To resume the video from where you stopped, press ► (Play).
 - To play the video from the start, press OK.



Note

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



Note

- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 While playing video, press **SUBTITLE** to select a language.
- 2 For DivX videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press OPTIONS.
 - → The options menu is displayed.
- 4 Select [Character set], and then select a character set that supports the subtitle.

Europe, India, LATAM, and Russia

Character	Language	
Set		
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish,	
	Swedish and Turkish	
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian	
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian	
[Greek]	Greek	
[Baltic]	Estonian, Latvian and Lithuanian	

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- Select [Advanced] > [DivX®VOD Code].

 → The DivX VOD registration code for your home theater is displayed.

USB storage devices

Enjoy pictures, audio and video on a USB storage device.

What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A USB extension cable, if the USB storage device does not fit into the connector.



Note

- You can use digital cameras connected by USB if they can play the files without using a special computer program.
- To play DivX DRM protected files from a USB storage device, connect your home theater to a TV through an HDMI cable.

Play files

- 1 Connect the USB storage device to the home theater.
- 2 Press ♠ (Home).
 - → The home menu is displayed.
- 3 Select [browse USB], and then press OK.→ A content browser is displayed.
- 4 Select a file, and then press **OK**.
- 5 Press the playback buttons to control play.

Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

Audio options

While playing audio, repeat an audio track, a disc, or a folder.

- Press : OPTIONS repeatedly to cycle through the following functions:
 - RPT TRACK / RPT FILE: Repeat the current track or file.
 - RPT DISC / RPT FOLDER: Repeat all the tracks on the disc or the folder.
 - RPT RANDOM: Play audio tracks in random order.
 - RPT OFF: Turn off the repeat mode.

Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

- 1 Press **≡** OPTIONS.
 - → The video options menu is displayed.
- 2 Press the Navigation buttons and OK to select and change:
 - [Audio Language]: Select audio language for video.
 - [Subtitle Language]: Select subtitle language for video.
 - [Subtitle Shift]: Change the subtitle position on the screen.
 - [Info]: Display information about what is playing.
 - [Character Set]: Select a character set that supports the DivX subtitle.
 - [Time Search]: Skip to a specific part of the video by entering the time of the scene.
 - [2nd Audio Language]: Select the second audio language for Blu-ray video.
 - [2nd Subtitle Language]: Select the second subtitle language for Blu-ray video.
 - **[Titles]**: Select a specific title.
 - [Chapters]: Select a specific chapter.
 - [Angle List]: Select a different camera angle.
 - [Menus]: Display the disc menu.
 - [PIP Selection]: Display Picture-in-Picture window when playing a Blu-ray disc that supports the Bonus View.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Repeat]: Repeat a chapter or title.
 - [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
 - [Picture Settings]: Select a predefined color setting.

Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

- 1 Press **≡ OPTIONS**.
 - → The picture options menu appears.
- Press the Navigation buttons and OK to select and change the following settings:
 - [Rotate +90]: Rotate the picture 90 degree clockwise.
 - [Rotate -90]: Rotate the picture 90 degree counter-clockwise.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Info]: Display picture information.
 - [Duration per slide]: Select the display speed for each picture in a slide show.
 - [Slide Animation]: Select animation for the slide show.
 - [Picture Settings]: Select a predefined color setting.
 - [Repeat]: Repeat a selected folder.

Slideshows

While playing audio, access fun features such as picture and musical slideshows.

Picture slideshows

View a slideshow of your pictures stored in your disc or a USB storage device.

- 1 Select a picture from a disc or USB storage device, and then press ► (Play).
- 2 Press **≡ OPTIONS**.
- Press Navigation buttons and OK to select the following settings:
 - [Slide Animation]: Select an animation for the slideshow.
 - [Duration per slide]: Select a display speed for each picture in a slideshow.
- 4 Press to stop the slideshow.

Musical slideshows

Create a musical slideshow to play music and pictures at the same time.

- 1 Select a music track, and then press **OK**.
- 2 Press SACK, and go to the picture folder.
- 3 Select a picture, and then press ► (Play) to start the slideshow.
- **4** Press to stop slideshow.
- 5 Press again to stop music.

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.

What you need

FM antenna.



Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

Tune stations

- 1 Connect the FM antenna as described in the Quick start guide.
- 2 Press RADIO.
 - → If you have already installed the radio stations, the last channel that you listened to is played.
 - If you have not installed any radio stations, the message AUTO
 INSTALL...PRESS PLAY appears on the display panel. Press ▶ (Play).
- Press the following buttons to listen or to change radio stations:

Button	Action	
I ⊲ / ▶I	Select a preset radio station.	
or		
Alphanumeric		
buttons		
Navigation	Search for a radio station.	
buttons (left/		
right)		
Navigation	Fine tune a radio frequency.	
buttons (up/		
down)		
	Press to stop the installation	
	of radio stations.	
→ BACK	Press and hold to erase the	
	preset radio station.	
≡ OPTIONS	Manual:	
	 Press ≡ OPTIONS. 	
	2) Press I / ▶I to select your	
	preset.	
	3) Press ≡ OPTIONS again	
	to store the radio station.	
	Automatic: Press and hold	
	for three seconds to reinstall	
	the radio stations.	

Listen to radio

- Press RADIO.
 - To listen to a preset station, press **◄** or ▶I.
 - To search for a radio station, and then listen, press Navigation buttons (left/ right).
- Press +/- (Volume) to change the volume.

MP3 player

Connect your MP3 player to play your audio files or music.

What you need

- An MP3 player.
- A 35mm stereo audio cable

Play music

- Connect the MP3 player to the home theater as described in the Quick start guide.
- Press AUDIO SOURCE repeatedly until 'MUSIC I-LINK' appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files or music.

YouTube videos

Enjoy YouTube videos through your home theater.

- Connect your home theater to a home network with a high-speed Internet access (see 'Connect and set up a home network' on page 12).
- Press **(Home)**.
- Select [YouTube], and then press OK.
 - → The YouTube Leanback page is displayed.
- 4 Follow the onscreen instructions to browse the YouTube page.
- Use the remote control to select and navigate the application.

Button	Action	
Navigation	Up: Access the onscreen	
buttons	keyboard.	
	Down: Access the onscreen	
	playback buttons.	
	Left/Right: Select a video from the	
	playlist.	

- If you do not press a button within few seconds, the onscreen buttons and menu exit automatically.
- Press ♠ (Home) to exit YouTube page.

Picasa web albums

Access Picasa Web Albums through your home theater.

What you need

- An account with Picasa Web Albums.
- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 12).
- 2 Press ♠ (Home).
- 3 Select [Picasa], and then press OK.
- 4 Log in to your Picasa web account.
 - The first time you log in, select [New user], and then enter your user name and password. Save your login information for subsequent use.
 - If you have logged in before, select a stored user name and enter the password.
- 5 Select the onscreen options to view the albums or photos.
- 6 Press ♠ (Home) to exit Picasa menu.

View slideshow

- 1 Select [My photos] from the Picasa menu, and then press OK.
 - → The photo albums in your Picasa Web Albums are displayed.
- Select a photo, and then press OK to view the photo in full screen.
- 3 Press OK again to view the photos in a slideshow.
- While viewing a slideshow, press OPTIONS to access more play options.
- 5 Press SACK to return to the previous screen.

Smartphone control

Use your mobile device such as iPhone (iOS 3.1.3 and above), Android phone (2.1 and above), iPad, or tablet to:

- Control your home theater
- Browse a data disc or USB storage device
- Personalize your sound settings
- Stream and share content from the devices on your home network

Before you start

- Connect your home theater, mobile device, and other DLNA-compatible devices to the same home network (see 'Connect and set up a home network' on page 12).
 - For better video quality, use wired connection whenever possible.
- Personalize the network name for your home theater.
- Download Philips MyRemote application on your mobile device.
 - For iPhone or iPad, search for the app in **App Store** (App Store).
 - For Android based phone or tablet, search for the app in Market (Market).

Control your home theater

- 1 On the mobile device, access MyRemote application.
- 2 Select your home theater (by its network name) from the home screen.
 - → A browsing bar is displayed at the bottom of the screen.
 - If your home theater is not found, check the network connection or tap the **Devices** tab on your mobile device to search again.
- 3 Select one of the following tabs to access more options.
 - To return to the previous screen, press back button.

Option	Action
Арр	Return to the home screen of your
Home	device.
Media	DISC: Browse and play a file stored
	on a data disc.
	USB: Browse and play a file stored
	on a USB storage device.
Remote	Access the remote control on your
	mobile device. Swipe the screen
	to the left or right to access more
	buttons. Only the relevant buttons
	are enabled on your mobile device.
	Some functions such as standby and
	long press, are not available on the
	mobile device.

4 Follow the onscreen instructions to select an option or complete the set up.

Browse PC through DLNA

Access and play the pictures, audio and video files from a computer or media server on the home network through your home theater:

Before you start

- Install a DLNA-compliant media server application on your device. Make sure that you download an application that works best for you. For example,
 - Windows Media Player 11 or higher for PC
 - Twonky Media Server for Mac or PC
- Enable media sharing of files. For ease of use, we have included the steps for the following applications:
 - Windows Media Player 11 (see 'Microsoft Windows Media Player 11' on page 20)
 - Windows Media Player 12 (see 'Microsoft Windows Media Player 12' on page 21)
 - Twonky Media for Mac (see 'Macintosh OS X Twonky Media (v4.4.2)' on page 21)



Note

 For additional help on these applications or other media servers, check the user manual of the media server software software.

Set up media server software

To enable media sharing, set up the media server software.

Before you start

- Connect your home theater to a home network (see 'Connect and set up a home network' on page 12). For better video quality, use wired connection whenever possible.
- Connect the computer and other DLNAcompatible devices to the same home network.
- Make sure that your PC firewall allows you to run Media Player programs (or the firewall's exemption list has the media server software included).
- Switch on your computer and the router.

Microsoft Windows Media Player 11

- 1 Start Windows Media Player on your PC.
- 2 Click the Library tab, and then select Media Sharing.
- The first time you select Media Sharing on your PC,a pop-up screen appears. Check the Share my media box and click OK.
 - \hookrightarrow The Media Sharing screen is displayed.
- 4 In the Media Sharing screen, make sure that you see a device marked as Unknown Device.
 - → If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection.
- 5 Select the unknown device and click Allow.
 - → A green tick appears next to the device.

- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.
 - → The Add to Library screen is displayed.
 - If necessary, select Advanced options to display a list of monitored folders.
- 7 Select My folders and those of others I can access, and then click Add.
- Follow the onscreen instructions to add the other folders that contain your media files.

Microsoft Windows Media Player 12

- 1 Start Windows Media Player on your PC.
- In Windows Media Player, click the Stream tab, and then select Turn on media streaming.
 - → The **Media streaming options** screen is displayed.
- 3 Click Turn on media streaming.
 - You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
 - → The Media streaming options screen is displayed.
- 5 Make sure that you see a media program in the **Local network** screen.
 - If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
 - → A green arrow appears next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
 - → The Music Library Locations screen is displayed.

Follow the onscreen instructions to add the other folders that contain your media files.

Macintosh OS X Twonky Media (v4.4.2)

- 1 Visit www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- 2 Start Twonky Media on the Macintosh.
- In the Twonky Media Server screen, select Basic Setup and First Steps.
 - → The First steps screen is displayed.
- 4 Type a name for your media server, and then click Save changes.
- Back in the Twonky Media screen, select Basic Setup and Sharing.
 - → The **Sharing** screen is displayed.
- 6 Browse and select folders to share, and then select **Save Changes**.
 - → Your Macintosh rescans the folders automatically so that they are ready to share.

Play files from your PC



Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Press ♠ (Home).
- 2 Select [browse PC], and then press OK.

 → A content browser is displayed.
- 3 Select a device on the network.
 - → The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
 - If you cannot see the folders, check that you have enabled media sharing on the selected device so that the content is available for sharing.

- 4 Select a file, and then press OK.
 - Some media files may not play due to compatibility issues. Check the file formats supported by your home theater
- Press the play buttons to control play (see 'Play buttons' on page 13).

Choose sound

This section helps you choose the ideal sound for your video or music.

- 1 Press ## SOUND SETTINGS.
- Press the Navigation buttons (left/ right) to access the sound options on the display.

Sound settings	Description	
SOUND	Select a sound mode.	
SURROUND	Select surround sound or	
	stereo sound.	
TREBLE	Change the high frequency	
	output.	
MID	Change the middle frequency	
	output.	
BASS	Change the low frequency	
	output.	
AUD SYNC	Delay the audio to match the	
	video.	

- 3 Select an option, and then press **OK**.
- 4 Press → BACK to exit.
 If you do not press a button within a minute, the menu exits automatically.

Sound mode

Select predefined sound modes to suit your video or music.

- 1 Press ## SOUND SETTINGS.
- 2 Select **SOUND**, and then press **OK**.
- Press the Navigation buttons (up/down) to select a setting on the display:

- MOVIE: Enjoy a cinematic audio experience, specially enhanced for movies.
- MUSIC: Recreate the original recording environment of your music, in the studio or at a concert.
- ORIGINAL: Experience the original sound of your movies and music, without added sound effects.
- NEWS: Hear every word with optimized speech and clear vocals.
- GAMING: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.
- 4 Press **OK** to confirm.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press ## SOUND SETTINGS.
- 2 Select **SURROUND**, and then press **OK**.
- 3 Press the Navigation buttons (up/down) to select the following settings:
 - AUTO: Surround sound based on the audio stream.
 - **DOLBY VS**: Dolby Virtual Speaker technology creates a highly compelling 5.1-channel listening experience from as few as two speakers.
 - STEREO:Two-channel stereo sound. Ideal for listening to music.
- 4 Press **OK** to confirm.

Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater.

- 1 Press Ht SOUND SETTINGS.
- 2 Select TREBLE, MID or BASS, and then press OK.
- Press the Navigation buttons (up/down) to change the frequency.
- 4 Press OK to confirm.

5 Change settings

This section helps you to change the settings of your home theater.



Caution

 Most of the settings are already configured with the best value for your home theater. Unless you have a reason to change a setting, it is best to leave it at the default value.



Note

- You cannot change a setting that is grayed out.
- To return to the previous menu, press → BACK. To exit the menu, press ↑ (Home).

Picture

Change the picture settings to suit your preferences.



Note

 The best setting is automatically selected for the TV. If you change the setting, make sure that the TV supports the new settings.

Picture settings and format

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- **3** Select [Video], and then press **OK**.
- 4 Change the following settings, and then press **OK**:
 - [TV Display]: Picture format.
 - [Picture Settings]: Predefined color settings.

Picture color

Deep Color recreates the natural world on your TV screen and displays vivid images in over a billion of colors.

If your TV supports Deep Color and is connected to your home theater through an HDMI cable, you can change the Deep Color.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Deep Color], and then press OK.
- 4 Select the following options, and then press **OK**:
 - [Auto]: Automatically select HDMI Deep Color:
 - [On]: View vivid images.
 - [Off]: Display standard 24-bit color.

Picture resolution

For HDMI video settings, connect your home theater to the TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video] > [HDMI Video], and then press OK.
- 4 Change the HDMI resolution setting, and then press **OK**.

Subtitle position

Automatically change the position of the subtitles to fit your TV screen.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Auto Subtitle Shift] > [On], and then press OK.

Sound

Change the sound settings to suit your preference.

23

HDMI audio

To hear an HDMI audio output from your TV, connect your home theater to the TV through an HDMI cable.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [HDMI Audio], and then press OK.
- 4 Select the following options, and then press **OK**:
 - [Bitstream]: Enable bitstream output over HDMI.
 - [Auto]: Automatically select the best supported audio format.
 - [Off]: Disable audio from the TV.

Audio post processing

To select a predefined sound mode, enable audio post processing at the speaker (see 'Sound mode' on page 22).

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Enhanced Audio] > [On], and then press OK.



• To play the original audio of the disc, select [Off].

Night mode

For quiet listening, decrease the volume of loud sounds when you play discs. Night mode is only available for Dolby-encoded DVD and Blu-ray discs.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Night Mode] > [On], and then press OK.

Restore sound mode settings

Restore the equalizer settings of all the sound modes to the default values.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Default sound settings], and then press OK.

Language

Select a language for the home menu, audio, and subtitles.

Menu language

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Menu language], and then press OK.
- 4 Select a menu language, and then press OK.

Disc audio

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Audio], and then press OK.
- 4 Select an audio language for discs, and then press **OK**.



Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 36).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Disc subtitle

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Subtitle], and then press OK.
- 4 Select a subtitle language for discs, and then press **OK**.

Disc menu

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Disc Menu], and then press OK.
- 4 Select a menu language for discs, and then press **OK**.



Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the the end of this user manual (see 'Language code' on page 36).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Parental control

Restrict access to discs that are recorded with ratings.

Password

You can set or change your password to play a restricted disc.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Change Password], and then press OK.
 - → A change password menu is displayed.

- 4 Follow the instructions on the TV to set or change password.
 - If you do not have a password or you have forgotten, enter **0000**.
- 5 Press OK.

Ratings

Some discs are recorded with ratings according to age. You can set up your home theater to play only discs with an age rating lower than your child's age.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Parental Control], and then press OK.
 - → A message prompts you to enter the password.
- 4 Enter the password with the Numeric buttons.
- 5 Select an age rating, and then press OK.
 - To play all discs irrespective of the rating, select level 8 or [Off].

Energy saving

Save energy by changing the following settings.

Auto standby

When playing a disc or a USB storage device, automatically switch your home theater to standby if:

- it is in pause or stop mode, and
- no button is pressed for 30 minutes.
- 1 Press **♠** (**Home**).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Auto Standby] > [On], and then press OK.

Sleep timer

Set timers to switch the home theater to standby after a specified time.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Sleep Timer], and then press OK.
- 4 Select the duration of the sleep timer.
 - → The sleep timer can be set up to 60 minutes. If the sleep timer is set to [Off], it switches off.
- **5** Press **OK** to activate.
 - → The home theater switches to standby after the specified time.

Screen saver

Automatically switch your home theater to screen saver mode if:

- it is in pause or stop mode, and
- no button is pressed for 10 minutes.
- 1 Press **♠** (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Screen Saver] > [On], and then press OK.

Display panel

Change the brightness of the home theater display panel.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference] > [Display Panel], and then press OK.
- 4 Select the brightness, and then press **OK**.

Apply factory settings

Reset your home theater to the default settings. You cannot reset the parental control settings.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Restore default settings], and then press OK.
- 4 Select [OK], and then press OK.

6 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.



Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

4 Select [Advanced] > [Software Update] > [Network].

- → If an upgrade media is detected, you are prompted to start or cancel the update.
- 5 Follow the instruction on the TV to confirm the update.
 - When the software update is complete, the home theater automatically switches off. If it does not, disconnect the power cord for a few seconds and then reconnect it.



- If the home theater cannot connect to the Philips server, press (Home).
- Select [Setup] > [Network] > [Network Installation] to set up the network.

Check software version

Check the version of the current software installed on your home theater.

- 1 Press **A** (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version Info.], and then press OK.
 - ightharpoonup The software version is displayed.

Update software through USB

What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 75MB of memory.
 Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

Update software through the Internet

- 1 Connect your home theater to a home network with a high-speed Internet access. (see 'Connect and set up a home network' on page 12)
- Press ♠ (Home).
- 3 Select [Setup], and then press OK.

Step 1: Download the latest software

- 1 Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips.com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
 - → The software update is available as a zip file.

27

- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
 - → The files are extracted under the UPG_ALL folder of your USB flash drive.
- 6 Disconnect the USB flash drive from your computer.

Step 2: Update the software



Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
 - Make sure that the disc compartment is closed and no disc inside.
- 2 Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software Update] > [USB].
- Follow the onscreen instructions to confirm the update.
 - Once complete, the home theater automatically switches off. If it does not, disconnect the power cord for a few seconds and then reconnect it.

7 Product specifications



Note

 Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		
China		

Media formats

 AVCHD, BD, BD-R/ BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

File formats

- Audio: .aac, .mka, .mp3, .wma, .wav
- Video: .avi, .divx, .mp4, .mkv, .mpg, .mpeg
- Picture: .jpg, .jpeg, .gif, .png

Audio formats

Your home theater supports the following audio files.

Extension	Container	Audio codec	Bit rate
.mp3	MP3	MP3	32 kbps ~ 320 kbps
.wma	ASF	WMA	64 kbps ~ 160 kbps
.aac	AAC	AAC, HE- AAC	192 kbps
.wav	WAV	PCM	1.4 Mbps
.m4a	MKV	AAC	192 kbps
.mka	MKA	PCM	
.mka	MKA	Dolby Digital	640 kbps
.mka	MKA	DTS core	1.54 Mbps
.mka	MKA	MPEG	912 kbps
.mka	MKA	MP3	32 kbps ~ 320 kbps
.mka	MKA	WMA	64 kbps ~ 160 kbps
.mka	MKA	AAC, HE- AAC	192 kbps

Video formats

If you have a high definition TV, your home theater allows you to play your video files with:

- Resolution: 1920 x 1080 pixels at
- Frame rate: 6 ~ 30 frames per second.

avi files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS	DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.x	10 Mbps max
core, MP3,		
WMA		
	MPEG 1, MPEG 2	20Mbps(peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC	20Mbps(peak
	HP@4.1/4.0;	40 Mbps)
	MP@3.2/3.1/3.0	

.divx files in AVI container

Audio	Video codec	Bit rate
codec		
PCM,	DivX 3.11,	10 Mbps max
Dolby	DivX 4.x,	
Digital,	DivX 5.x, DivX 6.x	
MP3,		
WMA		
	MPEG 1, MPEG 2	20Mbps(peak
		40 Mbps)
	MPEG 4 ASP	10 Mbps max

.mp4 or .m4v files in MP4 container

Audio codec	Video codec	Bit rate
Dolby Digital, MPEG, MP3, AAC, HE-AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC	20 Mbps (peak
	HP@4.1/4.0; MP@3.2/3.1/3.0	40 Mbps)

.mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE- AAC	MPEG 1, MPEG 2	20 Mbps (peak 40 Mbps)
	MPEG 4 ASP	10 Mbps max
	H.264/AVC HP@4.1/4.0; MP@3.2/3.1/3.0	20 Mbps (peak 40 Mbps)

Amplifier

- Total output power: 300W RMS (30%THD)
- Frequency response: 20 Hz-20 kHz /
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V
 - Music iLink: 1 V

Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

Audio

- S/PDIF Digital audio input:
 - Optical:TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44,1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 32 kbps 320 kbps
 - WMA: 48 kbps 192 kbps

Radio

- Tuning range:
 - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 200 Hz-12.5 kHz / ±6 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- Maximum memory support: < 160 GB

Main unit

- Power supply:
 - Europe/China/Russia/India: 220-240 V~, 50 Hz
 - Latin America/Asia Pacific: 110-127 V/220-240 V~. 50-60 Hz
- Power consumption: 60 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.5 kg

Subwoofer

- Output power: 150 W RMS (30% THD)
- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): 195 x 265 x 265 mm
- Weight: 3.20 kg

Speakers

- Output power: 2 x 75 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 63.5 mm (2.5") woofer

- Dimensions (WxHxD): 84.5 x 159 x 80 mm
- Weight: 0.35 kg/each

Remote control batteries

2 x AAA-R03-1.5 V

Laser

- LaserType (Diode): InGaN/AlGaN (BD), AlGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max, ratings): 20 mW (BD), 6 mW (DVD), 7 mW (CD)

8 Troubleshooting



Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

Main unit

The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

 Make sure that the TV is switched to the correct source for the home theater.

No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV. Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Press (Home) and then 731 on the remote control to restore the default picture resolution.
- Change the HDMI video setting, or wait for 10 seconds for auto recovery.

Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices. You do not need a separate audio connection when the home theater and TV are connected through an HDMI ARC connection.
- Set up the audio for the connected device (see 'Set up the audio' on page 11).
- Reset your home theater to its factory settings (see 'Apply factory settings' on page 26), then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted.

Audio and video are not synchronized.

- 1) Press III SOUND SETTINGS.
 - Press the Navigation buttons (left/right) to select AUD SYNC, and then press OK.
 - Press the Navigation buttons (up/ down) to synchronize the audio with the video.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 29).

- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 29).
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized

Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'HomeTheater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

DivX or RMVB/RM subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 15).
- Select the correct character set:
 - 1) Press **≡ OPTIONS**.
 - 2) Select [Character Set].
 - 3) Select the supported character set.
 - 4) Press OK.

Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater
- Make sure that the file system on the USB storage device is supported by the home theater:

'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink does not work.

 Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is on.

When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

Cannot access BD-Live features.

 Make sure that the home theater is connected a home network with internet

- access (see 'Connect and set up a home network' on page 12).
- Make sure that the network is set up. Use a wired network installation (see 'Set up the wired network' on page 12).
- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage (see 'BD-Live on Blu-ray' on page 14).

My 3D video played in 2D mode.

- Make sure that your home theater is connected to a 3DTV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on (see 'Play Blu-ray 3D disc' on page 14).

TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV

Poor playback on YouTube Leanback or Picasa.

- Make sure that the home theater is connected to a home network and is properly set up (see 'Connect and set up a home network' on page 12).
- Make sure that the internet connection speed is higher than 2 MBPS to obtain optimum performance.

9 Notice

This section contains the legal and trademark notices.

Copyright



Be responsible Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Cinavia notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open. source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands". If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included on a separate leaflet.

Compliance



This product complies with the radio interference requirements of the European Community.

Trademarks



"Blu-ray 3DTM" and "Blu-ray 3DTM" logo are trademarks of Blu-ray Disc Association.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

DOLBY. TRUETE DIGITAL PLUS

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

DIVX:+

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7.519,274.

DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX PLUS® HD: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video, including DivX® Plus HD video (H.264/. MKV) up to 1080p and premium content.

Visit www.divx.com for more information and software tools to convert your files into DivX video,

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

HDMI

HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



10 Language code

Abhtazian 6566 Inupiaq 7375 Pushto 8083 Afar 6565 Irish 7165 Russian 8285 Afrikaans 6570 Islenska 7383 Quechua 8185 Amharic 6577 Italiano 7384 Racto-Romance 8277 Arabic 6581 Jayanese 7465 Rundi 8278 Armenia 6583 Jayanese 7486 Rundi 8278 Avestan 6589 Kahallisut 7576 Sango 8371 Ayerhajani 6590 Kashmiri 7583 Sardinian 8365 Azerhajani 6590 Kashmiri 7583 Sardinian 8367 Bahkir 6666 Khmer 7577 Shap Sardinian 8387 Belarusia 6667 Kimyarwanda 8287 Sindhi 8388 Bilama 6672 Kirjarvanda 8287 Sindhi 8378 Bokmäli 6678 Komi						
Afrikaans 6570 Islenska 7383 Quechua 8185 Arnharic 6577 Italiano 7384 Raeto-Romance 8277 Arrabic 6582 Ivrit 7259 Romanian 8279 Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Avestan 6569 Kalallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaljani 6590 Kashmiri 7583 Sardinian 83878 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6678 Kirghiz 7589 Sinhalese 8373 Bilani 6672 Kirghiz 7589 Sinhalese 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovensky 8373 Brezhoneg 66812 Kurdish	Abkhazian	6566	Inupiaq	7375	Pushto	8083
Arnharic 6572 Italiano 7384 Raeto-Romance 8277 Arabic 6582 Ivrit 7269 Romanian 8278 Armenian 7289 Japanese 7486 Samoan 8377 Assamese 6589 Kalalisut 7576 Sango 8371 Aymara 6589 Kashmiri 7583 Sardinian 8365 Azerhajini 6590 Kashmiri 7583 Sardinian 8365 Bahsa Melayu 7783 Kazakh 7575 Serbian 8382 Belarusian 6665 Kernewek 7587 Shona 8378 Belarusian 6678 Kimyarwanda 8287 Sindhi 8381 Belarusian 6673 Kiriyarwanda 8287 Sindhi 8388 Bilarian 6672 Kirghiz 7589 Slovenish 3373 Bokmål, Norwegian 7866 Korean 7579 Slovenish 3373 Bokmål, Norwegian 7866	Afar	6565	Irish	7165	Russian	8285
Arabic 6582 Ivrit 72.69 Romanian 82.79 Armenian 7289 Japanese 7465 Rundi 92.78 Assamese 6583 Javanese 7465 Samoan 83.77 Avestan 6589 Kalaalilisut 7576 Sango 83.71 Aymara 6589 Kananda 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Belarusian 6672 Kirghiz 7586 Slovensky 8373 Bishari 6672 Kirghiz 7586 Slovensky 8373 Bosanski 6683 Kuaryama; Kwanyama 7574 Somali 8376 Brezhoneg 6671 Lao 7679 Slovenian 8373 Brezhoneg 6682 Kurdish <td< td=""><td>Afrikaans</td><td>6570</td><td>Íslenska</td><td>7383</td><td>Quechua</td><td>8185</td></td<>	Afrikaans	6570	Íslenska	7383	Quechua	8185
Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Averstan 6589 Kalaallisut 7576 Sango 8371 Aymara 6589 Kahmiri 7578 Sanskrit 8365 Sambalisa 7578 Sanskrit 8365 Sambalisa 7578 Sanskrit 8365 Sambalisa 7583 Sardinian 8367 Sansakrit 8365 Sambalisa Sansakrit 8365 Sansakrit 8365 Sansakrit 8365 Sansakrit 8365 Sansakrit 8367 Sansakrit 8367 Sansakrit 8367 Sansakrit 8367 Sansakrit 8368 Sansakrit 8368 Sansakrit 8378 S	Amharic	6577	Italiano	7384	Raeto-Romance	8277
Assamese 6589 Kalaalisut 7576 Samoon 8377 Avestan 6589 Kalaalisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashas Melayu 7783 Kazakh 7575 Scrbian 8382 Bashkir 6669 Khene 7587 Shona 8378 Belarusian 6678 Kirghiz 7589 Sindhi 3368 Bihari 6673 Komi 7586 Slovensky 3373 Bishama 6673 Komi 7586 Slovensky 3373 Bosanski 6683 Kuaryama: Kwanyama 7579 Slovenian 3376 Brezhoneg 6681 Kurdish Sundianese 3385 Brezhoneg 6682 Kurdish Sundianese 3385 Carelalano, Español 6983 Latvian 7686 Suomi	Arabic	6582	lvrit	7269	Romanian	8279
Avestan 6569 Kalaallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhajjani 6590 Kashmiri 7383 Sardinian 3367 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bahasa Melayu 7686 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Ship 8381 Belarusian 6672 Kirghiz 7589 Sindhi 8368 Bihari 6673 Komi 7586 Slovensky 8373 Bosanski 6681 Kurdish 7589 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sovensky 8378 Burmese 7789 Latina 7665 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Castellano, Español 6981 Latvian	Armenian	7289	Japanese	7465	Rundi	8278
Aymara 6589 Kannada 7578 Sanskrit 3365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Serbian 8382 Bashkir 6665 Kernewek 7587 Shqip 8381 Bengali 6678 Kinyarwanda 8287 Sindhi 8368 Bishari 6672 Kirghiz 7589 Sinhalese 3373 Bishari 6672 Kirghiz 7589 Sinhalese 3373 Bokmali, Norwegian 7866 Korean 7579 Slovensky 8373 Bosanski 6681 Kuanyama: Kwanyama 7574 Sombilanese 8387 Brezhoneg 6682 Kurdish 7585 Sonto: Southern 8384 Bulgarian 6671 Lao 7679 South Mdebele 7882 Burmese 7789 Latvian 7665 Suomi 7073 Castellano, Español 6983	Assamese	6583	Javanese	7486	Samoan	8377
Azerhaijani 65 90 Kashmiri 7583 Sardinian 8367 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bahasa Melayu 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shop 8381 Bihari 6678 Kinyarwanda 8287 Sindhi 8368 Bihari 6673 Komi 7589 Sinhalese 8373 Bokmali, Norwegian 7866 Korean 7589 Sinhalese 8373 Bosanski 6681 Kurdish 7589 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sototho; Southern 8384 Bulgarian 6671 Lao 7679 South Mebele 7882 Burmese 7789 Latina 7665 Sundanese 3385 Castalano, Español 6983 Latvian 7686 Suomi 7073 Swati 8383 Ch	Avestan	6569	Kalaallisut	7576	Sango	8371
Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kimyarwanda 8287 Shqip 8381 Bengali 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Komi 7586 Slovensky 8373 Bokmali, Norwegian 7866 Korean 7579 Slovensky 8373 Bosanski 6683 Kuanyama: Kwanyama 7574 Sombil 8379 Brezhoneg 6682 Kurdish 7585 South: Notebele 8385 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Swati 8383 Chekene: Chicheva: Nyanja 7889 Lithuanian 7686 Swati 8383 Chekeni, Chicheva: Nyanja 7889 <t< td=""><td>Aymara</td><td>6589</td><td>Kannada</td><td>7578</td><td>Sanskrit</td><td>8365</td></t<>	Aymara	6589	Kannada	7578	Sanskrit	8365
Bahsas Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kinyarwanda 8287 Shaip 8381 Bengali 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Korni 7586 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6680 Kurdish 7585 Sovenian 8376 Bugraria 6671 Lao 7679 South Mebele 7882 Burmese 7789 Latina 7665 Suadinaese 3385 Castellano, Español 6983 Latvian 7666 Swahili 8387 Charlán 6765 Letzeburgesch; 7666 Swahili 8387 Cheken 6769 L	Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bashkir 6665 Kenrewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Bihari 6678 Kinyarvanda 8287 Sindhie 83373 Bislama 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Bosanski 6681 Kuanyama; Kwanyama 7574 Somali 8379 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Suchanese 8385 Castalán 6765 Letzeburgesch; 7666 Suomi 7073 Cheden 6772 Limburgan; Limburger 7673 Swati 8385 Chewa; Chichewa; Nyanja; 7889 Lithuanian 7684 Tagalog 8476 Chuard, Zhuang 9065 Luxembourgish; 7666 Tahitian 8489 Chuard, Siavei; Slavonic <t< td=""><td></td><td>7783</td><td>Kazakh</td><td>7575</td><td>Serbian</td><td>8382</td></t<>		7783	Kazakh	7575	Serbian	8382
Bengali 6672 Kirghiz 7589 Sindhi 8368 83173 83175 83173 83175 83173 83175 8		6665	Kernewek	7587	Shona	8378
Bengali 6672	Belarusian	6669	Khmer	7577	Shaip	8381
Bislama 6673 Komi 7586 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 83779 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7665 Suomi 7073 Castellano 6765 Larvian 7666 Suomi 7073 Castellano 6767 Limburgan; Limburger 7673 Swati 8383 Chewa; Chichewa; Nyanja 7889 Lingala 7678 Svenska 8386 Pt 文 9072 Luxembourgish; 7666 Tabritian 8489 Pt X 9072 Luxembourgish; 7666 Tabritian 8489 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Marathi 7782 Tonga Tonga Tonga Ray Deutsch 6890 Marathi 7782 Tonga Turkmen 8473 Dzongkha 6890 Marathi 7782 Tonga Turkmen 8478 Esperanto 6979 Moldavian 7779 Tigrinya 8473 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Euskara 6985 Nauru 7865 Turkmen 8475 Euskara 6998 Navaho; Navajo 7886 Turkmen 8475 Erosee 7079 Ndebele, North 7882 Ukrainian 8571 Français 7082 Ndebele, South 7882 Weish 6789 Gaelic; Scottish Gaelic 7168 Norther Sami 8369 Welsh 6789 Gaelic; Scottish Gaelic 7168 Norther Sami 8369 Welsh 6789 Gaelic; Scottish Gaelic 7178 Northernami 7879 Volapuk 8582 Gaelic; Scottish Gaelic 7178 Northernami 7185 Occitan; Provencal 7967 7982 7900 Hird Motu 7273 Oromo 7977 7982 7900 7917 Hird Motu 7273 Oromo 7977 7982 7900 7917 Hird Motu 7273 Polski 8005 7965 79618 79	Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Borezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Summi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Tajalog 8477 Tajalog 8478 Tajalog 8478	Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuaryama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundianese 8385 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Cheken 6769 Lingala T678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lirbuanian 7684 Tagalog 8476 Chewa; Chichewa; Slavonic 6785 Macedonian 7775 Tajik 8471 Churash Slavic; Slavonic 6785 Malagasy 7721 Tamil 8465 Churash Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465	Bislama	6673	Komi	7586	Slovensky	8373
Bosanski 6682 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Burmese 7789 Latina 7665 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahil 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 chwż 9072 Luxembourgish; 7666 Tahitian 8489 Churdonian 7775 Tajik 8471 141 Churagi Zhuang 9065 Macedonian 7775 Tajik 8471 Churash 6786 Magyar 7285 Tatar 8484 Chursh 6869 Maltese <td>Bokmål, Norwegian</td> <td>7866</td> <td>Korean</td> <td>7579</td> <td></td> <td>8376</td>	Bokmål, Norwegian	7866	Korean	7579		8376
Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384		6683	Kuanyama: Kwanyama	7574	Somali	8379
Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Sumin 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Tahitian 8489 Third 1889 Third 1		6682		7585	Sotho: Southern	8384
Burmese 7789		6671	Lao	7679	South Ndebele	7882
Castellano, Español 6983 Latvian 7686 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7666 Swahili 8383 Chevan; Chichewa; Nyanja 7889 Lingala 7678 Svenska 8386 Chevan; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 ф 文 9072 Luxembourgish; 7666 Tahititan 8489 Churash 6785 Maredonian 7775 Tajik 8471 Churash 6785 Macedonian 7775 Tajik 8471 Churash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malagasy 7771 Tamil 8465 Casky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Marshilese <td< td=""><td>•</td><td>7789</td><td>Latina</td><td>7665</td><td>Sundanese</td><td>8385</td></td<>	•	7789	Latina	7665	Sundanese	8385
Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 th x 9072 Luxembourgish; 7666 Tahitian 8489 Chunds Church Slavic; Slavonic 6785 Macedonian 7775 Tajiik 8471 Churds 6786 Magyar 7285 Tatar 8465 Chuvash 6786 Magyar 7285 Tatar 8464 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Martese 7784 Thai 8472 Dansk 6865 Manx 7186 Tiperina 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 English 6978 Ma		6983	Latvian	7686	Suomi	7073
Chamorro 6772		6765			Swahili	
Chechen			•		Swati	8383
Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 中文 9072 Luxembourgish; 7666 Tahitian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Corsican 6779 Malayalam 7776 Telugu 8469 Corsican 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8472 Deutsch 6869 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian	Chechen	6769		7678	Svenska	8386
中文 9072 Luxembourgish; 7666 Tahittian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Exbληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Gaurani 7178 North Nedele 7868 Welsh 6789 Guarani 7178 North Nedele 7868 Welsh 6789 Guarani 7178 North Norsk 7879 Volapuk 8679 Guijarati 7185 Occitan; Provencal 7967 Xhosa 8872 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Interlingue 7365 Polski 8076				7684		8476
Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 77778 Tisvana 8478 Estonian 6984 Mongolian 7778 Tivkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho: Navajo						
Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6869 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 9478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 9475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, South						
Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6978 Marshallese 7772 Tsonga 8483 Esperanto 6978 Mongolian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Eukara 6985 Nauru 7865 Turkmen 8475 Eachira 6985 Nauru 7865 Twitkmen 8475 Faroese 7079 Ndebele, North 7888		6785		7771		8465
Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Esperanto 6985 Nauru 7865 Turkmen 8475 Euskara 6985 Nauru 7865 Turkmen 8475 EAhyuká 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Fracais 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871<			0 ,			
Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7778 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Türkmen 8475 Eληγικά 6976 Navaho; Navajo 7886 Twi 9487 Faroese 7079 Ndebele, North 7886 Twi 9487 Faroese 7079 Ndebele, South 7882 Ukrainian 9575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876		6779				8469
Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho: Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Frjijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Guijarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Interlingua (International) 7365 Persian 7065 Interlingua (International) 7365 Persian 7065 Interlingua (International) 7365 Polski 8076		6783				8472
Deutsch			Manx	7186	Tibetan	6679
Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 EAληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 No		6869	Maori	7773		8473
English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estenian 6984 Mongolian 7778 Tirkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hirri Motu 7279 Ossetian; Ossetic 7983 Herwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue 7365 Polski 8076						
Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 9482 Euskara 6985 Nauru 7865 Türkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 9487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7118 Nor						
Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, South 7882 Ukrainian 8571 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Gujarati 7185 Occi	•	6979	Moldavian			8478
Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265	•					
Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue (International) 7365 Persian 7065 Interlingue 7365 Polski 8076						
Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hiridi 7273 Oromo 7977 Zulu 9085 Hiri Motu	Ελληνικά	6976	Navaho: Navaio	7886	Twi	8487
Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hiridi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Prolishi 8073 Interlingua (Interna		7079		7868	Uighur	8571
Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Valu 9085 Hrwatski 6779 Pali 8073 North Malesele 8073 North Malesele 7065		7082		7882		8575
Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hirero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Arbital 7065 Hrwatski 6779 Pali 8073 8065 Interlingue (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076	Frysk	7089	Ndonga	7871	Urdu	8582
Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Yoruba 879 Hrwatski 6779 Pali 8073 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076	Fijian	7074	Nederlands	7876	Uzbek	8590
Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International) 7365 Persian 7065 Interlingue 7365 Polski 8076	Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076		7176		7879	Volapuk	8679
Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingue (International)7365 Persian 7065 Interlingue 7365 Polski 8076			Northern Sami	8369	Walloon	8765
Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Tulu 9085 Hrwatski 6779 Pali 8073 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076		7573	North Ndebele	7868	Welsh	6789
Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Yoruba 708 Hrwatski 6779 Pali 8073 8065 108 Interlingua (International)7365 Persian 7065 7065 108 Interlingue 7365 Polski 8076 7065 7065	, ,				Wolof	
Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Video Vide		7185		7967	Xhosa	8872
Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076		7265		6785	Yiddish	8973
Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076	Herero	7290			Yoruba	8979
Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076	Hindi	7273			Zulu	
Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Interlingue 7365 Polski 8076				7065		
			Polski	8076		
	0					
			- U			

11 Index

		audio post processing	24
Α		discs	
advanced		audio	16
enhanced audio	24	audio language	24
restore default settings	26	menu language	25
amplifier	30	options	16
audio	30	picture	17
HDMI audio	24	subtitle	25
night mode	24	synchronize picture and sound	13
post processing	24	time search	16
predefined modes	22	titles	16
settings	23	display panel	5
specifications	30		
audio formats	29	E	
audio language	24	_	
audio options	16	EasyLink (HDMI-CEC)	7
auto standby	25	control buttons	7
auto standby	23	eject disc	5
		enable	25
В		auto standby	25
bass	22	auto subtitle shift	23
Blu-ray	13	predefined sound mode	24
brightness	26	screen saver	26
browse		energy	0.5
USB storage device	15	auto standby	25
9		brightness	26
С		screen saver	26
		sleep timer	26
care	_		
environment	3	F	
product	3	factory settings	26
close disc compartment	5	factory settings	20
compliance	34	 	
connect		Н	
speakers	8	HDMI	
TV (Composite)	10	audio	24
TV (HDMI ARC)	9	Deep color	23
TV (HDMI)	9	TV (HDMI ARC)	9
control		video	23
Easylink (HDMI-CEC)	7		
main unit	5	ī	
parental control	25	I .	
radio	17	Internet	
copyright protection	34	update software	27

disable

1		picture	
<u>L</u>		options	17
language		rotate	17
audio	24	settings	23
disc menu	25	slideshows	17
language code	36	troubleshooting	32
subtitle	25	zoom	17
legal notices	34	picture options	17
		play	
M		from PC	21
main unit		MP3	18
overview	5	radio	31
specifications	31	slideshows	17
troubleshooting	32	troubleshooting	32
media formats	29	USB	15
Microsoft Windows Media Player 11	20	position	
Microsoft Windows Media Player 12	21	position	8
MP3	۷1	subtitle	23
play	18	power options	
multimedia content	10	auto standby	25
from disc	13	brightness	26
from USB storage device	15	screen saver	26
HOITI ODD Stolage device	13	sleep timer	26
		preference	
N		audio	23
network		auto standby	25
update software	27	auto subtitle shift	23
night mode	24	change password	25
		disc menu	25
		display panel	26
U	_	parental control	25
open disc compartment	5	screen saver	26
open source software	34	sleep timer	26
options	4.4	subtitle	25
audio	16	product specifications	29
picture	17		
video	16	R	
overview	-		
main unit	5	radio	4=
remote control	6	control buttons	17
settings	23	listen to radio	18
		specifications	31
P		tune stations	17
parental control		ratings	25
password	25	recycling	3
ratings	25	region codes	29
password	25	remote control	
F			

batteries	31	surround sound	22
overview	6	specifications	29
repeat	16	subtitle	
		language	25
S		position	23
		subwoofer	
safety		specifications	31
disposal	3	synchronize picture and sound	13
use of the product	2	,	
screen saver	26		
settings		Т	
audio	23	time search	16
auto standby	25	titles	16
auto subtitle shift	23	trademarks	34
default	26	treble	22
disc language	25	troubleshooting	
HDMI audio	24	connection	32
HDMI video	23	main unit	32
parental rating	25	picture	32
password	25	play	32
picture	23	sound	32
power	25		
resolution	23	U	
restore	26	•	
screen saver	26	update software	
sleep timer	26	from network	27
subtitle language	25	USB	
video	23	format	31
sleep timer	26	USB storage device	
slideshows		options	16
animation	17	play	16
duration	17	specifications	31
musical	17		
picture	17	V	
sound		video	
bass	22	HDMI deep color	23
default sound mode	24	·	23
equalizer	22	picture resolution	23
predefined sound mode	22	picture settings	13
surround sound	22	synchronize picture and sound	30
synchronize picture and sound	13	video formats	
treble	22	video options	16
troubleshooting	32		
speakers	32		
connect	8		
position	8		
specifications	31		
Sp 3064.01.13	٠.		



Specifications are subject to change without notice © 2016 Koninklijke Philips N.V. All rights reserved.

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

