

MP3-CD / CD Player

Finding a passage within a track

- During playback press and hold down **◀** or **▶**.
- The disc is played at high speed and low volume.
- When you recognize the passage you want, release **◀** or **▶** to resume normal playback.

Programming tracks

- You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.
- In the stop position, press **PROG** to activate programming.
- Display shows *PG 1*, indicating the start of the program and **PROG** flashes. (See [6])
- Press **◀** or **▶** to select your desired track number.
- For MP3-CD/WMA:** First press **ALBUM**, once or more to find your album. Press **PROG** → Display shows *PG 2*, indicating the next program location available.
- Repeat steps **2** to **3** to select and store all desired tracks.
- Press **▶** to play the program.
- In the stop position, press and hold **PROG** 3 seconds.
- The display shows all the stored tracks in sequence.

Helpful hints:

- Display shows *PG 1*; if no track is programmed.
- If you try to store more than 20 tracks, no track can be stored and the display will show --- with "PROG".

Erasing a program

- You can erase a program by:
- pressing **■** (twice during playback or once in the stop position);
 - selecting **FM MW OFF** position;
 - opening the disc door.
- Display, **PROG** disappears.

Selecting different play modes (See [7])

- You can select and change the various play modes before or during playback, and combine **REP** or **REP ALL** play modes with **PROG**.
- REP** – plays the current track continuously.
- REP ALL** – plays the entire disc/program continuously.
- SHUF** – plays all tracks in random order (not available with **PROG**).
- 1** To select play modes, press **MODE** once or more.
- 2** Press **▶** to start playback if in the stop position.
- 3** To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
- You can also press **■** to cancel your play modes.

USB Connection

Using USB connectivity

- AZ1833 is fitted with a USB port in the front panel, offering a plug and play feature which allows you to play from your AZ1833, digital music and spoken contents stored on a USB mass storage device.

- Using a USB mass storage device, you can also enjoy all the features offered by AZ1833 which are explained and instructed in the sections of disc operation.

Compatible USB mass storage devices

- With the AZ1833, you can use
 - USB flash memory (USB 2.0 or USB 1.1)
 - USB *flash* player (USB 2.0 or USB 1.1)

- USB device which requires driver installation under Windows XP is not supported.

Note:

- In some USB flash players (or memory devices), the stored contents are recorded using copyright protection technology. Such protected contents will be unplayable on any other devices (such as AZ1833 device).

Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size 512 - 4096 bytes)
- MP3 bit rate (data rate) 32-320 kbps and variable bit rate
- WMA, v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums: maximum 500
- Number of tracks: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 30 bytes)

The system will not play or support the following:

- Empty albums or an empty album is an album that does not contain MP3/WMA files, and will not be shown in the display.

Troubleshooting

If a fault occurs, first check the points listed below before taking the set for repair.

WARNING: Do not open the set as there is a risk of electric shock. Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

No sound, power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Disc contains non-audio files
- Insert a suitable disc or press **◀** or **▶** once or more skip to an audio track, instead of the data files.

Display does not function properly/No reaction to operation of any of the controls

- Electronic discharge
- Switch off and unplug the set. Reconnect after a few seconds.

No indication

- It is set in the USB mode.
- Press **CD** to select CD mode.
- No disc inserted
- Disc badly scratched or dry
- Replace/clean CD (See Maintenance)
- CD/RW is blank or the disc is not finalized
- Use a finalized CD-RW)
- Laser lens steam up
- Wait until lens has cleared.

Note:


Make sure the CD is not encoded with Copyright protection technologies, as some do not conform to the Compact Disc standard.

The disc skips tracks

- Disc damaged or dry
- Replace or clean disc
- Shuffle or program is active
- Quit shuffle/program

INFORMATION REGARDING USB DIRECT:

- Compatibility of the USB connection on this product:
 - This product supports most USB Mass storage devices (MSD) that these devices are compliant to the USB MSD standards.
 - Most common Mass storage class devices are flash drives, memory sticks, jump drives and etc.
 - If you see a "Disc Drive" showing up on your computer after you have plugged the mass storage device into your computer, most likely it is MSD compliant and it will work with this product.
 - If your Mass storage device requires a battery/power source, please make sure you have a fresh battery in it or charge the USB device first and then plug it into this product again.
- Supported Music type:
 - This device only supports unprotected music with file extension: .mp3, .wma
 - Music bought from on-line music stores are not supported because they are secured by Digital Rights Management protection (DRM).
 - File name extensions that ended with the following are not supported: .wav, .m4a, .m4p, .mp4, .aac and etc.
- No Direct connection can be made from a Computer USB port to this product even you have either or both mp3 or wma file in your computer.

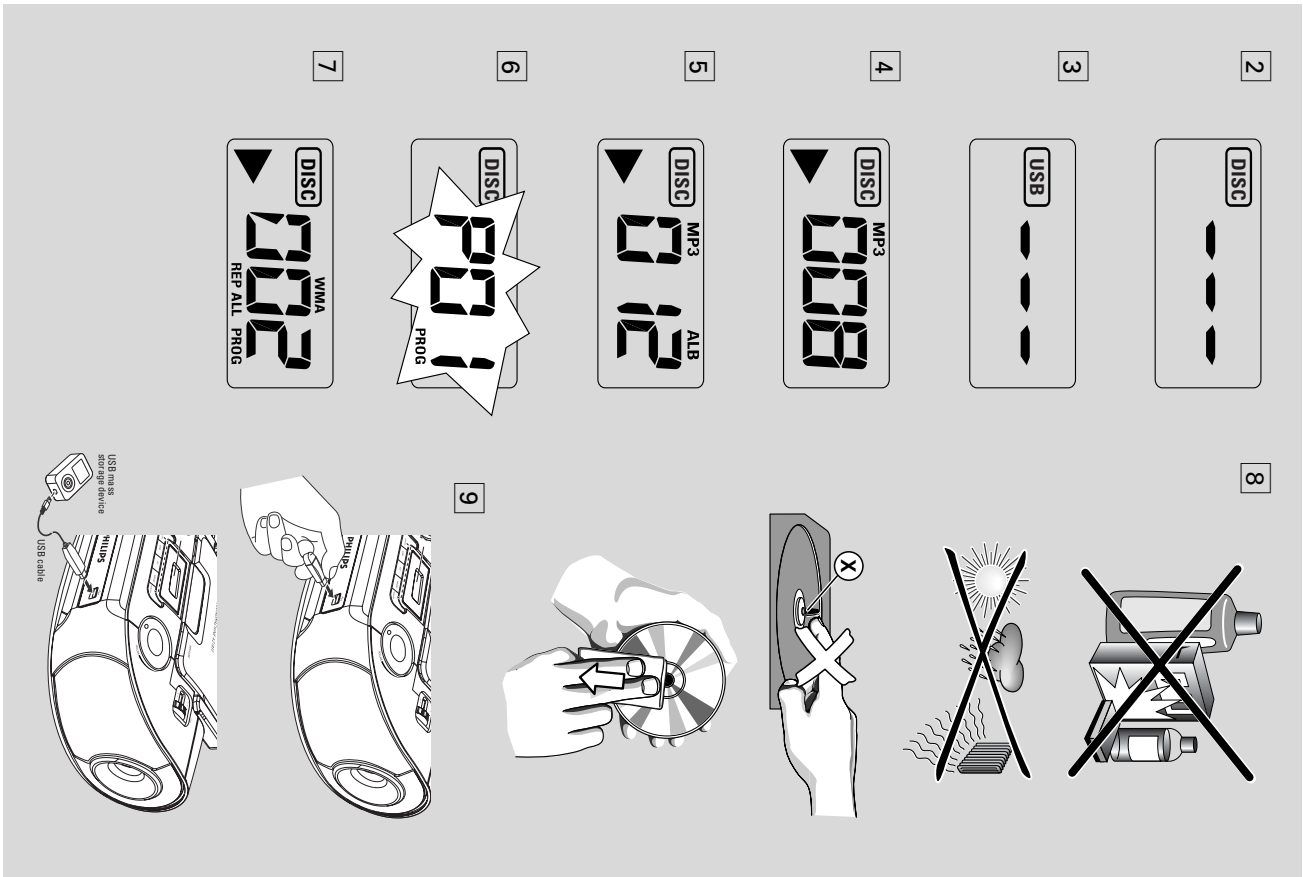

Safety & Maintenance (See [8])

Safety information

- Place the set on a hard, flat and stable surface so that the system does not tilt.
- Do not expose the set, batteries, CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- The apparatus shall not be exposed to dripping or splashing.
- Adequate ventilation with a minimum gap of 15 cm between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc..
- No objects filled with liquids such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

CD player and CD handling

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.