

**AZ1038**

**1 Choosing Power Supply**  
 a Connect the AC power cord to the **AC MAINS ~** inlet and the wall socket.  
 -OR-  
 b Open the battery door and insert 6 x **C batteries** (not included)

**2 Listening to the Radio**  
 a Push the **source selector** to **TUNER**  
 b Push **BAND** to **MW** or **FM**  
 c Turn **TUNING** to tune to a station

**3 Playing a disc**  
 This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.  
**IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.**  
 a Lift the CD door at **LIFT TO OPEN**.  
 b Insert a CD with the printed facing up and press the CD door gently.  
 c Adjust the **source selector** to **CD/MP3**.  
 d Press **▶/||** to start playback.  
 e To stop disc playback, press **■**.

